



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for OLYMPUS DP-20. You'll find the answers to all your questions on the OLYMPUS DP-20 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual OLYMPUS DP-20
User guide OLYMPUS DP-20
Operating instructions OLYMPUS DP-20
Instructions for use OLYMPUS DP-20
Instruction manual OLYMPUS DP-20

OLYMPUS®
VOICE RECORDER
NOTE CORDER DP-20

INSTRUCTIONS

EN

Register your product on www.olympus-consumer.com/register and get additional benefits from Olympus!



[You're reading an excerpt. Click here to read official OLYMPUS DP-20 user guide](http://yourpdfguides.com/dref/3607064)
<http://yourpdfguides.com/dref/3607064>

Manual abstract:

olympus-consumer.com/register and get additional benefits from Olympus! EN EN Introduction Thank you for purchasing an Olympus Digital Voice Recorder. Please read these instructions for information about using the product correctly and safely. Keep the instructions handy for future reference. To ensure successful recordings, we recommend that you test the record function and volume before use. In the unlikely event that a questionable item, error, or omission is found, please contact our Customer Support Center. Any liability for passive damages or damage of any kind occurred due to data loss incurred by a defect of the product, repair performed by the third party other than Olympus or an Olympus authorized service station, or any other reason is excluded. Avoid sand or dirt. These can cause irreparable damage. Avoid strong vibrations or shocks. Do not disassemble, repair or modify the unit yourself. Do not operate the unit while operating a vehicle (such as a bicycle, motorcycle, or gocart). Keep the unit out of the reach of children. Warning regarding data loss: Recorded content in memory may be destroyed or erased by operating mistakes, unit malfunction, or during repair work. For important recorded content, we recommend you to write it down some where. Any liability for passive damages or damage of any kind occurred due to data loss incurred by a defect of the product, repair performed by the third party other than Olympus or an Olympus authorized service station, or any other reasons is excluded from Olympus's liability. Batteries: f Danger: Batteries should never be exposed to flame, heat, short-circuited or disassembled. Never store batteries where they will be exposed to direct sunlight, or subjected to high temperatures in a hot vehicle, near a heat source, etc. f Warning: Do not solder lead wires or terminals directly onto a battery or modify it. Do not connect the = and - terminals together. This may cause fire, overheating or electric shock. When carrying or storing the batteries, be sure to put them in the provided case to protect their terminals. Do not carry or store the batteries with any metal objects (such as key rings). If this warning is not followed, fire, overheating or electric shock may occur. Do not insert the batteries with their = and - terminals reversed. If any liquid from a battery gets into your eyes, promptly wash it off with clean water and consult your doctor at once. Safe and proper usage General precautions: Do not leave the recorder in hot, humid locations such as inside a closed automobile under direct sunlight or on the beach in the summer. Never use any batteries with a torn or cracked outer cover. Keep batteries out of the reach of children. Do not expose the batteries to water. Do not allow water to contact the terminals. Do not remove or damage the batteries insulating sheet. Keep batteries away from fire. f Caution: Do not subject batteries to strong shocks. Rechargeable batteries have a limited lifetime. To exit power save mode, press any button. (AH) Low This is the standard level of microphone sensitivity. Delete any unnecessary files before recording any further. When the recording time is decreasing to 30 or 10 seconds, the light flashes faster. Playback a b c d Changing the playback speed Playback speed can be changed to the following settings: 0.5x, 0.75x, normal, 1.25x, and 1.5x. s the 0 or 9 button is pressed and held while the recorder is in playback If mode, the file advances with sound. s the 0 or 9 button is pressed while the recorder is in stop mode, the If recorder moves to the beginning of the file. s forwarding and rewinding are possible beyond the date. Fast When the earphone is used, the recorder speaker will be switched-off. Playback is in monaural. Volume Low High Earphone is not supplied. a Recording date/ b Current file number/ c Elapsed playback time/ d Playback position bar indicator Fast e e Approximate file length Slow Noise cancel On Noise will be reduced in the file when it's played back for better sound quality. To avoid irritation to the ear, insert the earphone after turning down the volume level. When you listen with the earphone during playback, do not raise the volume too much. It may cause hearing impairment and a decrease in hearing ability. Noise Cancel indicator Off The file is played back as it was recorded. When the NOISE CANCEL switch is set to [ON], playback speed returns to normal playback. File search Search for files by the date they were recorded. Recorder status indicator M : During playback MF : During fast playback MS : During slow playback While the recorder is in stop mode, press and hold the STOP (z) button to display the [Time & Date] and [Remain]. The date display appears. s When searching for a file recorded on October 15. Select October 15. The first file is played back. If the file is skipped, the recorder switches to the next file. Erase To delete all files of the displayed date, use the SEARCH/MENU button to switch the date display. s Select the file you want to delete and stop playback ahead of time. Erase in Date File Erase Cancel If [Cancel] is selected and the PLAY/OK (y) button is pressed, the recorder returns to stop status. Select Set An erased file cannot be restored. Take care when deleting files. If an action is not selected within 8 seconds, the recorder will return to stop status. It may take over 10 seconds to complete processing. Never remove batteries during this time because data may be corrupted. In addition, carefully check the remaining battery level in order to ensure that the battery will not run out while processing. Menu setting method 1 Press and hold the SEARCH/MENU button for 1 second or longer. 2 Press the 0 or 9 button to move the item you want to set. Time & Date Rec Mode Language Set Changing the display language English Deutsch Franais Espaol Italiano Polski Setting time and date Setting the time and date beforehand enables easier file management. The clock will start from the set date and time. Press the PLAY/OK (y) button according to the time signal. Changing the recording mode Recommended settings by recording condition Recording condition Dictation with a lot of background noise. Recordings for lessons and meetings. Lengthy recordings. A1: The batteries may be depleted. The batteries may be inserted incorrectly. Check = and - before inserting new batteries. Are the terminals of the batteries soiled? If so, clean them with a dry cloth.



[You're reading an excerpt. Click here to read official OLYMPUS](#)

[DP-20 user guide](#)

<http://yourpdfguides.com/dref/3607064>

Q2: Nothing happens when a button is pressed. A2: · The POWER switch may be set to [OFF/ HOLD] position. Slide the POWER switch to the [ON] position. @@A3: The earphone plug may be plugged into the recorder. The volume may be set to the minimum level. Q4: Noise is audible through the recording monitor.

A4: Acoustic feedback is occurring. @@Q5: Recording is not possible. @@ · Check if the display shows [Maximum File Size is reached]. Delete any unnecessary files before recording any further. A maximum of 99 files can be recorded within a single day. Q6: The playback speed is too fast (slow). A6: The recorder may be set to fast (slow) Playback. Use the PLAY SPEED button to set to normal playback. Specifications Recording medium: Built-in flash memory (1GB) Overall frequency: HQ mode: 70 to 13,000 Hz SP mode: 70 to 8,000 Hz Guide to recording times: HQ mode: Approx. 67 h. SP mode: Approx. 131 h. Microphone: Electret Condenser Microphone (monaural) Speaker: Built-in ø 36 mm round dynamic speaker Maximum power: 200 mW Earphone jack (monaural): ø 3.5 mm diameter, impedance 8 or more Power supply: Two AAA (LR03) batteries or Two Ni-MH rechargeable batteries Continuous battery: Guide to alkaline battery life Recording mode During recording mode During playback mode (Built-in speakers) During playback mode (Earphone) HQ approx. 51 h. approx. 21 h. approx. 69 h. SP approx. 63 h. approx. 21 h. approx. 69 h. · Your record.



[You're reading an excerpt. Click here to read official OLYMPUS](#)

[DP-20 user guide](#)

<http://yourpdfguides.com/dref/3607064>