



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for OLYMPUS FL-600R. You'll find the answers to all your questions on the OLYMPUS FL-600R in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual OLYMPUS FL-600R  
User guide OLYMPUS FL-600R  
Operating instructions OLYMPUS FL-600R  
Instructions for use OLYMPUS FL-600R  
Instruction manual OLYMPUS FL-600R

**OLYMPUS**

**OLYMPUS**

**FL-600R**

CE

EN	INSTRUCTIONS	7
CS	NÁVOD K POUŽITÍ	25
DE	BEDIENUNGSANLEITUNG	43
ES	INSTRUCCIONES	61
FI	KÄYTTÖOHJEET	79
FR	MODE D'EMPLOI	97
NL	AANWIJZINGEN	115
PL	INSTRUKCJA	133
RU	ИНСТРУКЦИЯ	151
UK	ІНСТРУКЦІЯ	169

© 2012 OLYMPUS IMAGING CORP.

VM315001  
Printed in China



[You're reading an excerpt. Click here to read official OLYMPUS FL-600R user guide](http://yourpdfguides.com/dref/4308382)  
<http://yourpdfguides.com/dref/4308382>

### Manual abstract:

Close supervision is necessary when any flash is used by or near children. Do not leave flash unattended while in use. Care must be taken as burns can occur from touching hot parts. 5 Do not operate if the flash has been dropped or damaged - until it has been examined by qualified service personnel. Let flash cool completely before putting away. To reduce the risk of electric shock, do not immerse this flash in water or other liquids. To reduce the risk of electric shock, do not disassemble this flash, but take it to qualified service personnel when service or repair work is required. Incorrect reassembly can cause electric shock when the flash is used subsequently. The use of an accessory attachment not recommended by the manufacturer may cause a risk of fire, electric shock, or injury to persons. SAVE THESE INSTRUCTIONS 6 Thank you for purchasing this Olympus product.

To ensure your safety, please read this instruction manual before use, and keep it handy for future reference. 3) Continuous Firing The flash may become hot when fired many times in succession, resulting in damage or malfunction. 3 Close the battery compartment cover. 4 Attaching or removing the electronic flash while either the flash or the camera is on may result in malfunction. 1 2 the direction 1 Slide the latch in [LOCK] icon opposite to that indicated by the (1).

3 the ash 2 Slide place fl(2). 4 To turn the flash off, press the ON/OFF button again. Replace the batteries if the CHARGE lamp does not light after: 30 seconds (Alkaline batteries) 10 seconds (NiMH batteries) · If the CHARGE lamp and AUTO CHECK lamp blink simultaneously, batteries are running low. The flash will enter sleep mode whenever the camera enters sleep mode. If no operations are performed for approximately 60 minutes, the flash will turn off automatically.

Press the ON/OFF button to turn it on. EN 9 Shooting Firing angle Displayed according to the focal length of the lens. Shooting The flash will exchange information and the flash range will be displayed in the control panel. Light control range AUTO CHECK lamp 4 Press the shutter button the rest of the way down to take the picture. The AUTO CHECK lamp blinks for about 5 s after shooting to indicate that the flash has fired successfully. When using a flash, flash light may be blocked by the lens body, lens hood, etc. Use the wide panel to prevent overexposure at ranges of less than 1 m (3 ft. ). 4 To select a mode, press the MODE (F) button and rotate the dial. 4 Usually use this mode with a camera with communication capability.

4). 4 Rotate the dial to choose the guide number. 4 super FP flash. This mode allows you to use flash photography even at shutter speeds faster than the flash synchronization speed of the camera. The flash fires at the selected guide number. Rotate the dial to choose the guide number. 4 fP TTL AUTO FP MANUAL 12 EN Button Functions Button Function Adjust flash level by up to  $\pm 5$  EV. This value is combined with adjustments to flash compensation made using the camera. LED 1 Before shooting, set the (17) light to manual. g "Other settings" (p.

Manually turn the LED light on or off. To Press 2 Press (1) turn the LED light on. View the (1) again to the LED light off. To LED brightness setting, press and hold for 2 s while the LED light is on. 4 Will blink once when settings are reset. 4 The unit is controlled by means of a flash mounted on the camera. 4 Set the camera and flash to the same channel. 4 See the camera manual for details.

4 2 Position the flash with the remote sensor facing the camera. We recommend using a single group of up to three remote flash units. 4 will not be correct; point the flash down. 4 The angle of illumination can be set to 10 mm and 8 mm only. Do not tilt the wide panel up. 4 180°

Using the Catch Light Plate The catch light plate reflects light from the flash to create a catch light effect. Using the Wide Panel Use for angles of illumination wider than 12 mm (24 mm in 135 format). The ZOOM display will blink if the lens focal length is under 12 mm. Slide out the 1 light-emitting wide panel and place it on the area (Fig. 1 Slide out the catch light plate (Fig.

Point the flash directly upward with the plate toward the subject. 16 EN Other Settings The following options can be selected in the control panel. 3 Rotate the dial to change the highlighted item. 13 Choose whether the LED lights automatically or manually. a: Lights automatically as required. M: Lights when the LED light button is pressed. Choose a group for RC mode (p. Choose a channel for RC mode (p. Press the OK button for more than s. 3 Rotate the dial to change the highlighted item.

4 Press the OK button for more than 2 s to save changes. Distance units Guide number display Auto light sensing m: Distances displayed in meters. 4 OFF: Show the current aperture and ISO sensitivity. 4 Position to the focal length of the lens. 4 "Flash 11) Adjust other flash settings as for AUTO or MANUAL mode.

2 See the camera manual for more information. The flash can not be used with cameras that require a pre-flash. The flash may fire in response to flash units used by other photographers. eN 21 Safety precautions Read WARNINGS and CAUTIONS thoroughly to ensure safe usage. These safety precautions protect the users and others and prevent property damage.

WARNING injury or death. Failure to observe the precautions indicated by this symbol may result in · Do not use flash in places where it may be exposed to flammable or explosive gas. Otherwise, fire ignition or explosion may result. Do not directly solder the product or modify, remodel, or disassemble. Do not cover the light emitting area of the flash with your hand, and do not touch the light emitting area after continuous firing. It may burn your skin. 4 To prevent a traffic accident, do not direct the flash at a person operating a motor vehicle. Do not use the flash or AF illuminator in close proximity to others (especially infants). Keep the flash out of reach of children. Light from the flash can cause visual impairment.

Do not use batteries that are not specified for use. 4 250 times (using AA (R6) alkaline batteries) (at full activation)\* Approx. 370 times (using AA (R6) NiMH batteries) Recharge time : Approx. 2 seconds (using AA (R6) NiMH batteries) (from full activation to CHARGE lamp lighting)\* AF illuminator : Effective range: Approximately 15 m (varies with camera and lens used) Operating : Temperature: 10 to 42°C (14 to 108°F) environment Humidity: 20 to 90% Dimensions : 62 (W) × 104 (H) × 98 (D) mm/2. Actual figures may vary depending on shooting conditions. Specifications are subject to change without any notice or obligation on the part of the manufacturer. eN 23 MODEL NO. Product type Guide number Firing angle : : : CAUTION injury or property damage.



[You're reading an excerpt. Click here to read official OLYMPUS FL-600R user guide](http://yourpdfguides.com/dref/4308382)  
<http://yourpdfguides.com/dref/4308382>

*Failure to observe the precautions indicated by this symbol may result in . If you notice any abnormalities such as odor, noise, or smoke, stop using this device. Otherwise a fire or burn may result.*

*Remove the .*



[You're reading an excerpt. Click here to read official OLYMPUS  
FL-600R user guide](http://yourpdfguides.com/dref/4308382)

<http://yourpdfguides.com/dref/4308382>