



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for OLYMPUS MJU 700. You'll find the answers to all your questions on the OLYMPUS MJU 700 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual OLYMPUS MJU 700
User guide OLYMPUS MJU 700
Operating instructions OLYMPUS MJU 700
Instructions for use OLYMPUS MJU 700
Instruction manual OLYMPUS MJU 700

OLYMPUS[®]
DIGITAL CAMERA
Stylus 710/*μ* 710
Stylus 700/*μ* 700

Basic Manual

ENGLISH	2
FRANÇAIS	28
ESPAÑOL	54



[You're reading an excerpt. Click here to read official OLYMPUS MJU 700 user guide](http://yourpdfguides.com/dref/2441706)
<http://yourpdfguides.com/dref/2441706>

Manual abstract:

We recommend that you take test shots to get accustomed to your camera before taking important photographs. Please observe the safety precautions at the end of this manual. The screen and camera illustrations shown in this manual were produced during the development stages and may differ from the actual product. Unless otherwise specified, the explanation about these illustrations is provided in Stylus710/μ710. Charging Indicator Red light on: Charging Light off: Charging complete (Charging time: Approx. Pull the strap tight so that it does not come loose. Take the picture 1 Press the shutter Button completely to take the picture. Pictures can also be recorded to an optional xDPicture Card (It is called just "card" in the attached instruction manual. Take a closer look

Set the mode dial to K to return to shooting mode. Your PC will now recognize your camera as a removable storage drive.

If the [Transfer Images] window is not displayed automatically: a. For more details on using the OLYMPUS Master software, please refer to the (electronic) reference manual located in the OLYMPUS Master folder on your hard drive. Pictures can sometimes appear blurred as the result of moving the camera while the shutter button is being pressed. To prevent the camera from moving, hold the camera firmly with both hands while keeping your elbows at your sides. @@Keep your fingers and the strap away from the lens and flash.

You may select the desired mode before or during use. @@@@This function allows you to set the target items by following the shooting guide displayed on the screen. This function lets you record movies. This function allows you to play back still pictures or movies. You can also play back sound.

While in shooting mode, use these buttons for quick access to some of the more commonly used features. Use macro or super macro mode when taking close-up pictures such as of a flower. Displays the function menu and sets the functions often used in shooting mode. Select the self-timer to delay the shot approximately 12 seconds from when the shutter button is pressed. This function allows you to switch the s (scene mode) according to the subject. & % This mode lets you take pictures as close as 20 cm/8 in. To your subject (when the optical zoom is at the greatest wide-angle). Use this mode to take pictures as close as 8 cm/3. The self-timer lamp lights for approximately 10 seconds after the shutter button is pressed, then starts blinking. After blinking for approximately 2 seconds, the picture is taken.

4 Press the shutter button completely to take the picture. The red-eye reduction flash mode significantly reduces this phenomenon by emitting pre-flashes before firing the regular flash. the flash fires regardless of the available light. The flash does not fire even in low light conditions. To save battery power, the camera automatically enters sleep mode and stops operating if not used for 3 minutes in shooting mode. press the shutter button or zoom button to reactivate the camera. If the camera is not operated for 15 minutes after the camera enters sleep mode, it automatically retracts the lens and turns off. To resume operation, turn on the power again. IMAGE QUALITY Set the image quality of the picture you will shoot according to its intended purpose. RESET Return the changed shooting functions back to default settings.

cAMERA MENU Adjust various shooting settings. SETUP Set the date, time, language, and operation sound, etc. S (Scene) Select the scene according to the subject and shooting condition when the s mode is selected. You can select a language for on-screen display. Available languages vary depending on the area where you purchased this camera.

Still picture Items 1 Self-timer 2 Shooting modes 3 Battery check 4 Green lamp Flash standby 5 Camera movement warning/ flash charge 6 White balance 7 ISO 8 Drive 9 Spot metering Macro mode 10 Super macro mode 11 Image Quality 12 Image size 13 AF target mark Number of storable still pictures 14 Remaining recording time 15 Memory gauge 16 Current memory 17 Sound record 18 Dual time 19 Alarm 20 Flash mode 21 Exposure compensation E = full power, f = low power = Auto Focus Lock # (Lit) # (Blinks) 5, 3, 1, w y ISO 64 ISO 1600 o, j, i 5 & % SHQ, HQ, SQ1, SQ2, SQ 3072 × 2304, 2560 × 1920, 640 × 480, etc. Movie Indications e = full power, f = low power [IN] (internal memory), [xD] (card) <×10 n H 9 SHQ, HQ, SQ1, SQ2, SQ 3072 × 2304, 2560 × 1920, 640 × 480, etc. 5 Sound Record 6 Protect 7 Image Quality 8 Image size 9 Exposure compensation 10 White balance 11 ISO 12 Date and time 13 File number 14 Number of frames Elapsed time/Total recording time This function lets you show several pictures at the same time on the monitor when reviewing pictures. Use the arrow pad (124 3) to select a picture and press o to display it in single frame playback. @@Both still pictures and movies can be played back.

1 Make sure that the TV and camera are turned off. Use the arrow pad (124 3) to select the picture you want to display. @@@@And the other end into the printer's USB connector. @@@@This camera is weatherproof, but it cannot be used underwater.

@@@Observe the following precautions when using the camera. Do not wash the camera with water. Do not drop the camera into water. Do not take pictures underwater. @@@@If the product is used without observing the information given under this symbol, injury or death may result. If the product is used without observing the information given under this symbol, minor personal injury, damage to the equipment, or loss of valuable data may result.

Read All Instructions -- Before you use the product, read all operating instructions. Save all manuals and documentation for future reference. Cleaning -- Always unplug this product from the wall outlet before cleaning. use only a damp cloth for cleaning. Never use any type of liquid or aerosol cleaner, or any type of organic solvent to clean this product. Attachments -- For your safety, and to avoid damaging the product, use only accessories recommended by Olympus. Water and Moisture -- For precautions on products with weatherproof designs, read the weatherproofing sections. location -- To avoid damage to the product, mount the product securely on a stable tripod, stand, or bracket. Power Source -- Connect this product only to the power source described on the product label. Lightning -- If a lightning storm occurs while using an AC adapter, remove it from the wall outlet immediately.

Foreign Objects -- To avoid personal injury, never insert a metal object into the product. Heat -- Never use or store this product near any heat source such as a radiator, heat register, stove, or any type of equipment or appliance that generates heat, including stereo amplifiers. (Do not use the camera near flammable or explosive gases. (Do not use the flash on people (infants, small children, etc.) at close range.

(Keep young children and infants away from the camera.



[You're reading an excerpt. Click here to read official OLYMPUS MJU 700 user guide](http://yourpdfguides.com/dref/2441706)
<http://yourpdfguides.com/dref/2441706>

You must be at least 1 m (3 ft.) away from the faces of your subjects. Firing the flash too close to the subject's eyes could cause a momentary loss of vision. Always use and store the camera out of the reach of young children and infants to prevent the following dangerous situations which could cause serious injury: · Accidentally swallowing the battery, cards or other small parts.

Accidentally firing the flash into their own eyes or those of another child. Accidentally being injured by the moving parts of the camera. (Do not look at the sun or strong lights with the camera. (Do not use or store the camera in dusty or humid places. (Do not cover the flash with a hand while firing. (Stop using the camera immediately if you notice any unusual odors, noise, or smoke around it. (Never hold or operate the camera with wet hands. (Do not leave the camera in places where it may be subject to extremely high temperatures. @@@@ @@@@ When the camera contains metal parts, overheating can result in a lowtemperature burn. pay attention to the following: · When used for a long period, the camera will get hot.

If you hold on to the camera in this state, a low-temperature burn may be caused. In places subject to extremely cold temperatures, the temperature of the camera's body may be lower than the environmental temperature. If possible, wear gloves when handling the camera in cold temperatures. Be careful with the strap when you carry the camera. It could easily catch on stray objects - and cause serious damage. Follow these important guidelines to prevent batteries from leaking, overheating, burning, .



[You're reading an excerpt. Click here to read official OLYMPUS MJU 700 user guide](http://yourpdfguides.com/dref/2441706)
<http://yourpdfguides.com/dref/2441706>