



**Manual abstract:**

5 Press the + or button to set. · Follow the same steps by pressing the 9 or 0 button to elect the next item, and press the + or button to set.

hLCD Display Information You can select an option for the display of the recorder. This will help review and confirm different recorder settings and file information.

hLocating the Beginning of the File While the recorder is during playback mode (playback or playback in slow/fast mode), press the 9 or 0 button. · Jumps to the beginning of the next file or the file being played back.

EN INSTRUCTIONS Thank you for purchasing an Olympus Digital Voice Recorder. Please read these instructions for information about using the product correctly and safely. Keep the instructions handy for future reference. To ensure successful recordings, we recommend that you test the record function and volume before use.

VN-6200PC VN-5200PC VN-3200PC · The contents of this document may be changed in the future without advanced notice. Contact our Customer Support Center for the latest information relating to product names and model numbers. · The utmost care has been taken to ensure the integrity of the contents of this document. In the unlikely event that a questionable item, error, or omission is found, please contact our Customer Support Center. · Any liability for passed damage of any kind occurred due to a loss incurred by a defect of the product, repair performed by the third party other than Olympus or an Olympus authorized service station, or any other reason is excluded.

1. 1 08 12:00 AM 6 Press the PLAY/OK ( ) button to complete the setup screen. 2 Insert two size-AAA alkaline batteries, observing the correct polarity. · The clock will start from the set date and time. · Press the PLAY/OK ( ) button according to the time signal.

State of the recorder While in stop mode Operation Press and hold the STOP (4) button Press the DISP/ MENU button Press the DISP/ MENU button Display While holding the button down, "Remaining recording time" and "Remaining memory" are displayed. Each press switches the display in the order of "Recording elapsed time", "Remaining recording time" and "Recording level meter". @ @ · Macintosh is the trademark of Apple Inc. @ @ Follow the next step without regard to it. @ @ @ @ Tel. +81 (0)3-3340-2111 <http://www.olympus.com> Before using your new recorder, read this manual carefully to ensure that you know how to operate it safely and correctly. Keep this manual in an easily accessible location for future reference. · The warning symbols indicate important safety related information.

To protect yourself and others from personal injury or damage to property, it is essential that you always read the warnings and information provided.

Recording hNotes on the Folders The recorder provides five folders, [F], [G], [I] and [J]. To [H], change the folder selection, press the FOLDER/INDEX button while 2 the recorder is stopped. 3 Note: · Up to a total of 200 files can be recorded in each folder. 4 Current folder a 5 Replacing the Batteries: When [N] appears on the display, replace the batteries as soon as possible. Size-AAA alkaline batteries are recommended. When the batteries are depleted, [O] appears on the display, and the recorder shuts off. · To replace the battery, make sure that you set the HOLD switch to the opposite direction of the arrow before replacing. 3500 Corporate Parkway, P.O. Box 610, Center Valley, PA 18034-0610, U.S.A. Tel. 1-888-553-4448 <http://www.olympusamerica.com>

Getting Started hIdentification of Parts 1 Built-in Microphone 2 MIC (Microphone) jack 3 HOLD switch 4 USB terminal 5 STOP (4) button 6 PLAY/OK ( ) button 7 0 (Rewind) button 8 Battery cover 9 FOLDER/INDEX button 6 7 2 Press the 9 or 0 button to select the file to playback. Notes: · When the slow playback mode is selected, the [J] appears and, for the fast playback mode, [K] appears on the display. · Even if playback is stopped, the changed playback speed will be retained. · The next playback will be at that speed.

1 2 For customers in North and South America: Declaration of Conformity VN-6200PC/VN-5200PC/VN-3200PC DIGITAL VOICE RECORDER OLYMPUS IMAGING AMERICA INC. 3500 Corporate Parkway, P.O. Box 610, Center Valley, PA 18034-0610, U.S.A. Telephone Number: 1-888-553-4448 This device Complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Model Number: Trade Name: Responsible Party: Address: 3 4 5 6 7 8 9 jack ! Display (LCD panel) @ Record/play indicator light # REC(s) button \$ + button ! % 9 (Fast Forward) button ^ button & DISP/MENU button @ \* ERASE(s) button ( Straphole 0 0 EAR (Earphone) hPower Supply Power on: Slide the HOLD switch in the direction opposite that indicated by the arrow. Power off: Slide the HOLD switch in the direction indicated by the arrow while the recorder is not in operation.

Erase a hRecording 1 Press the FOLDER/INDEX button to select the desired folder. a Current folder 3 Press the PLAY/OK ( ) button to start playback. · The record/play indicator light turns green, and the elapsed playing time is indicated on the display. a Current file number b Playing time You can easily erase unnecessary files. Sequential file numbers are reassigned automatically. hErasing One File at a Time 15m15s 14m25s a b Standby Mode and Display Shut Off: If the recorder is stopped for 5 minutes or longer during recording or playing, it goes into Standby (power-save) mode, and the display shuts off. To exit Standby mode and turn on the display, press any button. 15m15s 14m15s 1 Press the FOLDER/INDEX button to select folder. # \$ % ^ & \* 2 Press the REC (s) button to start recording. · The record/play indicator light turns red, and recording starts.

· If you start recording after inserting the earphone into the earphone jack on the recorder, you can hear the sound being recorded. The sound volume on the recording monitor can be adjusted by pressing the + or button. b Current recording mode c Current file number d Recording time e Remaining recording time f Recording level meter 4 Press the + or button to select the proper sound volume. · The display shows the volume level. You can choose between [00] to [30]. a hHold Setting the HOLD switch to the direction of the arrow holds the current status, and all button operations are disabled. Remember to release the HOLD switch to use the recorder. 15m15s bc 14m15s d hCanceling Playback To Stop: Press the STOP (4) button. · The recorder stops in the middle of the file being played. 2 Press the 9 or 0 button to select the file to be erased.

3 Press the ERASE ( s ) button. a File to be erased ( · Strap is not supplied. Use the optional accessory. hSetting Time and Date [Time & Date] Remain 22h52m46s e If you have set the time and date, information as to when a sound file was recorded is stored automatically with that file.



[You're reading an excerpt. Click here to read official OLYMPUS VN-6200PC user guide](http://yourpdfguides.com/dref/2391501)  
<http://yourpdfguides.com/dref/2391501>

@@@ Press the PLAY/OK ( ) button. @@@ Pressing and holding it continues fast-forwarding or fast-rewinding. @@@@ Recording, [SP] (standard recording), and [LP] (long-term recording). Beep: On hViewingSystemInformation [System] You can check the recorder's information on the menu screen. Remote Sending the date Recorder's Version Troubleshooting N othing happens when a button is pressed. T he HOLD switch may be set to [HOLD] position.

The batteries may be depleted. The batteries may be inserted incorrectly. No sound or quiet sound is heard from the speaker while playing back. The earphone plug may be plugged into the recorder. The volume may be set to the minimum level. Recording is not possible. @T - h number of files is 200. Check if the display shows [Memory Full] by pressing the REC ( s ) button. Q4: The playback speed is too fast (slow). A4: here recorder may be set to fast (slow) Playback. @70 h. 55 min. Approx. 35 h. 20 min. Approx. 8 h. @139 h. 35 min. Approx. 69 h. 35 min. Approx. 17 h. 10 min Mode: LP Approx. 444 h. Approx. 221 h. 30 min. Approx.

54 h. @70 h. 55 min. SP mode: Approx. 139 h. 35 min. LP mode: Approx. 444 h. VN-5200PC: 512 MB HQ mode: Approx. 35 h. 20 min. SP mode: Approx. 69 h. 35 min. LP mode: Approx. 221 h. 30 min. VN-3200PC: 128 MB HQ mode: Approx. 8 h. 40 min.

SP mode: Approx. 17 h. 10 min. LP mode: Approx. 54 h. 40 min. @37 h. Ni-MH rechargeable batteries: Approx. 25 h. @ Complete the menu mode setting.

(If pressed while the setting screen is displayed, the item being selected will not be set.) In Menu mode selection: Lang.: English Lang.: Français Idioma: español Clearing an Index Mark: Compatible PC's: Apple Macintosh series equipped with more than one free USB port The support service will not cover if your PC has been updated from Windows 95 or 98 to Windows 2000/XP/Vista. Any failure on a self-modified PC will not be covered under the operational warranty.

Notes: · NEVER disconnect the USB while the record/play indicator light is flashing in red. If you do so, the data may be destroyed. · Refer to the user's manual for your PC regarding the USB port or USB hub on your PC. · As the noise may cause adverse effects on electronics devices nearby the recorder, unplug the earphone when you connect the recorder to a PC. · Do not use USB connecting cables other than the supplied cable.

Switch the items of the setting screen in the main menu or sub menu screen. 0 or 9 STOP (4) or REC (s) hUsing the Variable Control Voice Actuator [VCVA] When the microphone senses that sound has reached a preset volume, the built-in Variable Control Voice Actuator (VCVA) starts recording automatically, and stops it when the volume drops. Lang.: English In Menu mode selection: VCVA indicator hFormatting the Recorder [Format] If you format the recorder, all files will be removed and all function settings will return to defaults except date and time settings. Transfer any important files to a computer before formatting the recorder.

1 Locate the index you want to clear. 2 Press the 9 or 0 button to select the index mark to delete. 3 Press the ERASE (s) button. Index 02 hBasic Operation of the Menu Mode 1 While the recorder is during stop mode, press and hold the DISP/MENU button for 1 second or longer. 2 Press the 9 or 0 to select the menu item.

VCVA: Off VCVA: On General Precautions Index 02 Clear Read this manual carefully to ensure that you know how to operate it safely and correctly. Keep this manual in an easily accessible location for future reference. · The warning symbols indicate important safety related information. To protect yourself and others from personal injury or damage to property, it is essential that you always read the warnings and information provided. · The above-noted recording times indicate times Adjust the Start/Stop Actuation Level: 05m35s a 00m00s Menu Guide icon: Tells you the next button to use by flashing. 1 While the recorder is during recording mode, press the 9 or 0 button to adjust the pause sound level. · The VCVA level can be set to any of 15 different values. a VCVA Level b Start level (moves to the right/left according to the set level) 1 The Sub Menu opens. 2 Press the 9 or 0 to 5 1 select [Format]. 3 Press the PLAY/OK ( ) 2 button.

6 3 4 Format: Cancel · Go to the setting screen of the selected menu item. · To set the sub menu, select the [Sub Menu] from the main menu screen. And select and 1 set the menu item from 5 the 5 sub menu screen in the same 5 2 11 manner. 22 3 6 [ ] and [Cancel] flashes 7 alternately. 05m35s 00m00s 4 Press the 9 button to select [Start]. 5 Press the PLAY/OK ( ) button. · After the [Data All Cleared] message is on for 2 seconds, [Sure? Cancel] will turn on. Notes: · Index marks cannot be placed on files created on machines other than Olympus IC recorders, but temp marks can be placed instead to temporarily remember desired locations. · Temp marks are temporary markings, so if you move to another file, or connect the recorder to a computer, they will be automatically erased. · Up to 16 index and temp marks can be set in a file.

· Index or temp marks cannot be set or erased in a locked file. Warning regarding data loss: · Recorded content in memory may be destroyed or erased by operating mistakes, unit malfunction, or during repair work. · For important recorded content, we recommend you to write it down somewhere or make a back-up by downloading to a PC. · Any liability for passive damages or damage of any kind occurred due to data loss incurred by a defect of the product, repair performed by the third party other than Olympus or an Olympus authorized service station, or any other reasons is excluded from Olympus's liability. after deletion of the manual data stored in the recorder.

· The manual data can be deleted by connecting to a computer and deleting or by formatting the recorder. For details, please see "Formatting the Recorder [Format]". · Before deleting the data, please make a backup file of the PDF data of the manual. · Battery life is measured by Olympus. @@@@ Do not use your earphone at a high volume for an extended period of time as hearing impairment and/or hearing disorders may occur.

· Be sure to stop the recorder before replacing the batteries. Unloading the batteries while the recorder is in use may corrupt the file. · Do not leave the recorder in hot, humid locations such as inside a closed automobile under direct sunlight or on the beach in the summer. hAccessories (Optional): Ni-MH Rechargeable Battery Charger: BU-400 (Europe only) Ni-MH Rechargeable Battery: BR401 Connecting cord (Earphone jack Microphone jack): KA333 - 12 Noise-Cancellation microphone: ME52 Electret condenser microphone: ME15 Dual monaural earphone: E20 Telephone pickup: TP7 Neck Strap: ST26 a [ ]: Press the PLAY/OK ( ) button (Goes to the next screen). 7 6 3 3 or 0 button (Changes the 4 b [ ] or [ ]: Press the 9 7 7 4 4 item).



[You're reading an excerpt. Click here to read official OLYMPUS VN-6200PC user guide](http://yourpdfguides.com/dref/2391501)  
<http://yourpdfguides.com/dref/2391501>

3 Press the PLAY/OK ( ) button. 7 Note: · The record/play indicator light is lit during recording. When the recorder is in Standby mode, the Record/Play indicator light flashes and [VCVA] flashes on the display. b - - 8 - - 9 - - 10 - - 11 - .



[You're reading an excerpt. Click here to read official OLYMPUS  
VN-6200PC user guide  
http://yourpdfguides.com/dref/2391501](http://yourpdfguides.com/dref/2391501)