



# Your PDF Guides


You can read the recommendations in the user guide, the technical guide or the installation guide for OLYMPUS VN-7700. You'll find the answers to all your questions on the OLYMPUS VN-7700 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual OLYMPUS VN-7700**  
**User guide OLYMPUS VN-7700**  
**Operating instructions OLYMPUS VN-7700**  
**Instructions for use OLYMPUS VN-7700**  
**Instruction manual OLYMPUS VN-7700**

**OLYMPUS®**

**DIGITAL VOICE RECORDER**  
**VN-7700/VN-7600**

**INSTRUCTIONS**

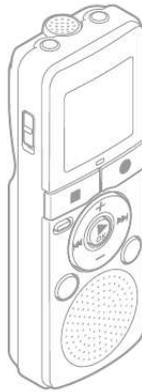

Register your product on [www.olympus-consumer.com/register](http://www.olympus-consumer.com/register)  
and get additional benefits from Olympus!

EN



[You're reading an excerpt. Click here to read official OLYMPUS VN-7700 user guide](http://yourpdfguides.com/dref/4293033)  
<http://yourpdfguides.com/dref/4293033>

**Manual abstract:**

@@@ Contact our Customer Support Center for the latest information relating to product names and model numbers. · The illustration of the screen and the recorder shown in this manual may differ from the actual product. The utmost care has been taken to ensure the integrity of this document but if you find a questionable item, error or omission, please contact our Customer Support Center. · Any liability for passive damages or damage of any kind occurred due to data loss incurred by a defect of the product, repair performed by the third party other than Olympus or an Olympus authorized service station, or any other reason is excluded. f Danger If the product is used without observing the information given under this symbol, serious injury or death may result. f Warning If the product is used without observing the information given under this symbol, injury or death may result. f Caution · Avoid recording or playing back near cellular phones or other wireless equipment, as they may cause interference and noise. If you experience noise, move to another place, or move the recorder further away from such equipment. · Do not use organic solvents such as alcohol and lacquer thinner to clean the unit. Warning regarding data loss: ·

Recorded content in memory may be destroyed or erased by operating mistakes, unit malfunction, or during repair work.

· @@ · Any liability for passive damages or damage of any kind occurred due to data loss incurred by a defect of the product, repair performed by the third party other than Olympus or an Olympus authorized service station, or any other reasons is excluded from the Olympus' liability. If the product is used without observing the information given under this symbol, minor personal injury, damage to the equipment, or loss of valuable data may result. Caution for usage environment · To protect the high-precision technology contained in this product, never leave the recorder in the places listed below, no matter if in use or storage: · Places where temperatures and/or humidity are high or go through extreme changes. Direct sunlight, beaches, locked cars, or near other heat sources (stove, radiator, etc.) or humidifiers.

· In sandy or dusty environments. · Near flammable items or explosives. · In wet places, such as bathrooms or in the rain. When using products with weatherproof designs, read their manuals as well. · In places prone to strong vibrations.

· Never drop the recorder or subject it to severe shocks or vibrations. · The recorder may malfunction if it is used in a location where it is subject to a magnetic/ electromagnetic field, radio waves, or high voltage, such as near a TV set, microwave, video game, loud speakers, large monitor unit, TV/radio tower, or transmission towers. In such cases, turn the recorder off and on again before further operation. Handling the recorder f Warning: · Do not use the recorder near flammable or explosive gases. · Keep young children and infants away from the recorder. @@2 Accidentally swallowing the battery, cards or other small parts. 3 Accidentally being injured by the moving parts of the recorder. · Do not use or store the recorder in dusty or humid places. · Do not disassemble, repair or modify the unit yourself. @@@@ · The warning symbols indicate important safety related information.

To protect yourself and others from personal injury or damage to property, it is essential that you always read the warnings and information provided. EN f Caution: · Stop using the recorder immediately if you notice any unusual odors, noise, or smoke around it. Never remove the batteries with bare hands, which may cause a fire or burn your hands. · Be careful with the strap. Be careful with the strap when you carry the recorder. It could easily catch on stray objects and cause serious damage. · Handle the recorder with care to avoid getting a low-temperature burn. · When the recorder contains metal parts, overheating can result in a low-temperature burn. Pay attention to the following: · When used for a long period, the recorder will get hot. If you hold on to the recorder in this state, a low-temperature burn may be caused.

· In places subject to extremely cold temperatures, the temperature of the recorder's body may be lower than the environmental temperature. If possible, wear gloves when handling the recorder in cold temperatures. · To prevent causing battery leaks or damaging their terminals, carefully follow all instructions regarding the use of batteries. Never attempt to disassemble a battery or modify it in any way, solder, etc. · If a battery fluid gets into your eyes, flush your eyes immediately with clear, cold running water and seek medical attention immediately.

f Warning: · Keep batteries dry at all times. · Do not use a battery if it is cracked or broken. · Never subject batteries to strong shocks or continuous vibration. · If a battery leaks, becomes discolored or deformed, or becomes abnormal in any other way during operation, stop using the recorder. @@ If the fluid burns your skin, seek medical attention immediately.

· Keep battery out of the reach of children. @@@@ · Never heat or incinerate batteries. @@@@ To exit power save mode, press any button. 6 Press the STOP (4) button to close the menu screen. Recording The recorder provides four folders, [&], ['], [(] and [)]. To change the folder selection, press the FOLDER/INDEX button while the recorder is stopped. These four folders can be selectively used to distinguish the kind of recording; for example, Folder [&] might be used to store private information, while Folder ['] might be dedicated to store business information. HOLD: If you slide the POWER switch to the [OFF/HOLD] position, the current conditions will be preserved, and all buttons will be disabled. Setting time and date [dATE] If you set the time and date beforehand, the information will be stored automatically when the file is recorded. This function enables easier file management.

" When you install batteries for the first time or each time you replace the batteries, the "hour" indicator will flash. When the "hour" is flashing, conduct the setup from step 4. 1 Press the FOLDER/INDEX button to select the desired folder. · Newly recorded audio will be saved as the last file in the selected folder. Strap hole (Strap is not supplied.) When [ ] appears on the display, replace the batteries as soon as possible. When the batteries are too weak, [ ], [LO] and [bATT] appears on the display and the recorder shuts down. " · Remove the batteries if you are not going to use the recorder for an extended period of time. Press the REC (s) button to start recording. Recording mode Current folder File number Microphone sensitivity Elapsed recording time · The recording indicator light will turn on.



[You're reading an excerpt. Click here to read official OLYMPUS](http://yourpdfguides.com/dref/4293033)

[VN-7700 user guide](http://yourpdfguides.com/dref/4293033)

<http://yourpdfguides.com/dref/4293033>

· Turn the microphone in the direction of the source to be recorded. Turning on the power Slide the POWER switch to the [ON] position. 1 While the recorder is during stop mode, press and hold the DISP/MENU button. Press the + or - button to select [dATE]. Press the OK button.

· The "hour" will flash on the display. ON Press the + or - button to change the setting. 5 Press the OK or 9 button to set. Press the STOP (4) button to stop recording. Pause: If the recorder is in recording mode and the REC (s) button is pressed, recording pauses.

If the REC (s) button is pressed again, recording resumes. " · To ensure recording from the beginning, start recording after you see the display and the recording indicator light turning on. OFF · Repeat step 4 and 5 to set "minute", "year", "month" and "day". After the "day" has been set, the recorder's clock will start working. · You can select between 12 and 24 hours display by pressing the DISP/MENU button while setting the hour and minute. EN · If the number of files inside the recording folder reached 200 or the memory becomes full, you will not be able to record any further, and [FULL] will be displayed. Select another folder or delete any unnecessary file before recording. · When the remaining recording time is less than 60 seconds, the recording indicator light starts flashing. @@@@ [0.5 PLAY] [0.

9 PLAY]: Playback speed slows down. @@Microphones supported by plug-in power can also be used. @@@@ · Up to 16 index marks can be set in a file. @@@@ Press the + or - button to move to the item you want to set. Press the 9 or 0 button to change the setting. Press the OK or +/- button to set. @@ · While the recorder is during stop mode, press the ERASE button. @@@@ · Locked files cannot be erased. @@ · It may take over 10 seconds to complete processing. @@@@ [SP]: Standard recording.

[LP]: Long-term recording. @@[LO]: Standard recording sensitivity suitable for dictation. @@@@ [OFF]: Disables this function. Variable Control Voice Actuator [VCVA] When the microphone senses that sounds have reached a preset threshold volume level, the built-in Variable Control Voice Actuator (VCVA) starts recording automatically, and stops when the volume drops below the destination folder is full (200 files), [FULL] appears on the display, and you cannot move the file to that folder. · A file cannot be moved to the same folder.

· Do not remove the batteries during moving. @@@@ [yES]: Enables the file division. @@@@ [yES]: Starts formatting the recorder. @@[DAILY]: Alarm playback will be performed at the specified time every day. 5 Press the OK or 9 button to set.

" · The alarm tone stops automatically if no button is pressed within 5 minutes after the alarm starts. The file is not played back in this case. · If the starting times for timer recording and alarm playback are set for the same time, timer recording will have priority. 1 Select [yES] and press the OK button. · File division begins and [DIVIDE] flashes on the display. 1 Select [yES] and press the OK button. · [NO] will flash on the display. " · The recorder cannot divide files when the number of files in the folder reached 200. · Locked files cannot be divided. · Do not remove the battery while dividing a file.

This may damage the data. Select [yES] again and press the OK button. · Formatting begins and [FORMAT] flashes on the display. @@@@ The moved file is added to the end of the destination folder. Select a file for the function before moving. [yES]: Enables the file movement. @@[ON]: Enables the beep function. [OFF]: Disables this function. @@@@ In addition, replace the batteries with new ones in order to ensure that the batteries will not run out while processing. · When the recorder is formatted, all the saved data, including locked files, are erased.

1 Select [yES] and press the OK button. Troubleshooting Q1: The power cannot be turned on. A1: · The batteries may be depleted. · The batteries may be inserted incorrectly. Check = and - before inserting new batteries.

· Are the terminals of the batteries soiled? If so, clean them with a dry cloth. · Current folder and file number will flash on the display. Press the 9 or 0 button to select a destination folder. Press the OK button. · The destination folder and the number of the moved file appear on the display, and moving is completed. EN Q2: Nothing happens when a button is pressed. A2: · The POWER switch may be set to the [OFF/HOLD] position. Slide the POWER switch to the [ON] position. Q3: No sound or quiet sound is heard from the speaker while playing back. A3: The earphone plug may be plugged into the recorder. The volume may be set to the minimum level. Q4: Recording is not possible. A4: By pressing the REC (s) button: · Check if the display shows [FULL]. Select another folder or delete any unnecessary file before recording. A maximum of 200 files can be recorded within a folder.

Q5: The playback speed is too fast (slow). A5: The recorder may be set to fast (slow) playback. Playback speed is set to [1.0 PLAY]. VN-7600 HQ mode: Approx. 39 h. SP mode: Approx. 100 h. LP mode: Approx. 573 h.

Input power requirement: Two AAA (LR03) batteries Guide to battery life: During recording mode (Built-in microphone) HQ mode: Approx. 68 h. SP mode: Approx. 86 h. LP mode: Approx.

57 h. During playback mode (Built-in speakers) HQ mode: Approx. 20 h. SP mode: Approx. 21 h. LP mode: Approx. 21 h. (Earphone) HQ mode: Approx. 49 h. SP mode: Approx. 53 h. LP mode: Approx. 57 h. @@ · Battery life is measured by Olympus. @@@@ It is prohibited to record copyrighted material without permission of the copyright holders according to copyright law.

· Specifications and design are subject to change without notice for improvement of performance. Specifications Recording medium: Built-in flash memory VN-7700 (2 GB)/VN-7600 (1 GB) Input level: -- 70 dBv Maximum headphone output: 3 mW (at load of 8 ) Speaker: Built-in ø 28 mm round dynamic speaker MIC jack: ø 3.5 mm mini-jack, impedance 2 k EAR jack: ø 3.5 mm mini-jack, impedance 8 or more Maximum working output: 190 mW (8 speaker) Overall frequency response: HQ mode: 150 Hz to 7.9 kHz SP mode: 300 Hz to 4.7 kHz LP mode: 300 Hz to 2.9 kHz Guide to recording times: VN-7700 HQ mode: Approx. 78 h. 30 min. SP mode: Approx.

202 h. LP mode: Approx. 1151 h. "CE" mark indicates that this product complies with the European requirements for safety, health, environment and customer protection. This symbol [crossed-out wheeled bin WEEE Annex IV] indicates separate collection of waste electrical and electronic equipment in the EU countries.

Please do not throw the equipment into the domestic refuse. Please use the return and collection systems available in your country for the disposal of this product.



[You're reading an excerpt. Click here to read official OLYMPUS](http://yourpdfguides.com/dref/4293033)

[VN-7700 user guide](http://yourpdfguides.com/dref/4293033)

<http://yourpdfguides.com/dref/4293033>

*Applicable Product: VN-7700/VN-7600 This symbol [crossed-out wheeled bin Directive 2006/66/EC Annex II] indicates separate collection of waste batteries in the EU countries. Please do not throw the batteries into the domestic refuse. Please use the return and collection systems available in your country for the disposal of the waste batteries.*

*Accessories (optional) s Compact zoom microphone (unidirectional): ME32 s Highly sensitive noise-cancellation monaural microphone (unidirectional): ME52W s Tie clip microphone (omni-directional): ME15 s Telephone pickup: TP7 s Connecting cord: KA333 EN OLYMPUS IMAGING CORP. Shinjuku Monolith, 3-1 Nishi-Shinjuku 2-chome, Shinjuku-ku, Tokyo 163-0914, Japan. Tel. +81 (0)3-3340-2111 <http://www.olympus.com> OLYMPUS EUROPA HOLDING GMBH (Premises/Goods delivery) Wendenstrasse 14-18, 20097 Hamburg, Germany. Tel. +49 (0)40-237730 (Letters) Postfach 10 49 08. 20034 Hamburg, Germany. <http://www.olympus-europa.com> EN-BS0752-01 AP1104 .*



[You're reading an excerpt. Click here to read official OLYMPUS VN-7700 user guide](http://yourpdfguides.com/dref/4293033)  
<http://yourpdfguides.com/dref/4293033>