



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ONKYO C-7030. You'll find the answers to all your questions on the ONKYO C-7030 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual ONKYO C-7030
User guide ONKYO C-7030
Operating instructions ONKYO C-7030
Instructions for use ONKYO C-7030
Instruction manual ONKYO C-7030

ONKYO.

COMPACT DISC PLAYER

C-7030

Instruction Manual

Thank you for purchasing an Onkyo product. Please read this manual carefully before making any connections or using this product. By following these instructions, you'll get the best audio performance and the most listening pleasure from your Onkyo product. Keep this manual for future reference.



Getting Started En-2

Connections En-13

Basic Operation En-15

Disc Playback En-16

Various Playback Modes ... En-21

Setting for MP3/WMA En-24

Troubleshooting En-26

Specifications En-27



[You're reading an excerpt. Click here to read official ONKYO C-7030 user guide](http://yourpdfguides.com/dref/5224892)
<http://yourpdfguides.com/dref/5224892>

Manual abstract:

.....
.....
.....
.. En-15 Disc Playback

.....
.....
.... En-16 Various Playback Modes .
.... En-21 Setting for MP3/WMA

..... En-24 Thank you for purchasing an Onkyo product. @@@@En-26 Specifications ...

.... En-27 En **WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE. WARNING RISK OF ELECTRIC SHOCK DO NOT OPEN AVIS RISQUE DE CHOC ELECTRIQUE NE PAS OUVRIR CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.** The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons. The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Important Safety Instructions 1. 2. 3. 4. 5.

6. 7. 8. Read these instructions. Keep these instructions.

Heed all warnings. Follow all instructions. Do not use this apparatus near water. Clean only with dry cloth. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong.

The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus. Only use attachments/accessories specified by the manufacturer. Use only with the cart, stand, PORTABLE CART WARNING tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/ apparatus combination to avoid injury from tip-over. S3125A Unplug this apparatus during lightning storms or when unused for long periods of time. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped. 15.

Damage Requiring Service Unplug the apparatus from the wall outlet and refer servicing to qualified service personnel under the following conditions: A. When the power-supply cord or plug is damaged, B. If liquid has been spilled, or objects have fallen into the apparatus, C. If the apparatus has been exposed to rain or water, D. If the apparatus does not operate normally by following the operating instructions.

Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the apparatus to its normal operation, E. If the apparatus has been dropped or damaged in any way, and F. When the apparatus exhibits a distinct change in performance this indicates a need for service. 16. Object and Liquid Entry Never push objects of any kind into the apparatus through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock.

The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases shall be placed on the apparatus. Don't put candles or other burning objects on top of this unit. 17. Batteries Always consider the environmental issues and follow local regulations when disposing of batteries. 18. If you install the apparatus in a built-in installation, such as a bookcase or rack, ensure that there is adequate ventilation. Leave 20 cm (8") of free space at the top and sides and 10 cm (4") at the rear. The rear edge of the shelf or board above the apparatus shall be set 10 cm (4") away from the rear panel or wall, creating a fluelike gap for warm air to escape. 9. 10.

11. 12. 13. 14. En-2 Precautions 1. Recording Copyright—Unless it's for personal use only, recording copyrighted material is illegal without the permission of the copyright holder. 2. AC Fuse—The AC fuse inside the unit is not userserviceable. If you cannot turn on the unit, contact your Onkyo dealer. 3.

Care—Occasionally you should dust the unit all over with a soft cloth. For stubborn stains, use a soft cloth dampened with a weak solution of mild detergent and water. Dry the unit immediately afterwards with a clean cloth. Don't use abrasive cloths, thinners, alcohol, or other chemical solvents, because they may damage the finish or remove the panel lettering. 4.

Power WARNING BEFORE PLUGGING IN THE UNIT FOR THE FIRST TIME, READ THE FOLLOWING SECTION CAREFULLY. AC outlet voltages vary from country to country. Make sure that the voltage in your area meets the voltage requirements printed on the unit's rear panel (e.g., AC 230 V, 50 Hz or AC 120 V, 60 Hz).

The power cord plug is used to disconnect this unit from the AC power source. Make sure that the plug is readily operable (easily accessible) at all times.

Pressing the [ON/STANDBY] button to select Standby mode does not fully disconnect from the mains. If you do not intend to use the unit for an extended period, remove the power cord from the AC outlet. Preventing Hearing Loss Caution Excessive sound pressure from earphones and headphones can cause hearing loss. Batteries and Heat Exposure Warning Batteries (battery pack or batteries installed) shall not be exposed to excessive heat as sunshine, fire or the like. Never Touch this Unit with Wet Hands—Never handle this unit or its power cord while your hands are wet or damp. If water or any other liquid gets inside this unit, have it checked by your Onkyo dealer. Handling Notes • If you need to transport this unit, use the original packaging to pack it how it was when you originally bought it. • Do not leave rubber or plastic items on this unit for a long time, because they may leave marks on the case.

• This unit's top and rear panels may get warm after prolonged use. This is normal. • If you do not use this unit for a long time, it may not work properly the next time you turn it on, so be sure to use it occasionally. • When you've finished using this unit, remove all discs and turn off the power. 9. Installing this Unit
• Install this unit in a well-ventilated location. • Ensure that there's adequate ventilation all around this unit, especially if it's installed in an audio rack.



[You're reading an excerpt. Click here to read official ONKYO C-7030 user guide](http://yourpdfguides.com/dref/5224892)

<http://yourpdfguides.com/dref/5224892>

If the ventilation is inadequate, the unit may overheat, leading to malfunction. • Do not expose this unit to direct sunlight or heat sources, because its internal temperature may rise, shortening the life of the optical pickup. • Avoid damp and dusty places, and places subject to vibrations from loudspeakers.

Never put the unit on top of, or directly above a loudspeaker. • Install this unit horizontally. Never use it on its side or on a sloping surface, because it may cause a malfunction. • If you install this unit near a TV, radio, or VCR, the picture and sound quality may be affected. If this occurs, move this unit away from the TV, radio, or VCR.

10. Moisture Condensation Moisture condensation may damage this unit. Read the following carefully: Moisture may condense on the lens of the optical pickup, one of the most important parts inside this unit. • Moisture condensation can occur in the following situations: – The unit is moved from a cold place to a warm place. – A heater is turned on, or cold air from an air conditioner is hitting the unit.

– In the summer, when this unit is moved from an air conditioned room to a hot and humid place. – The unit is used in a humid place. • Do not use this unit when there's the possibility of moisture condensation occurring. Doing so may damage your discs and certain parts inside this unit. If condensation does occur, unplug the power cord and leave the unit for two to three hours in the room temperature. This unit contains a semiconductor laser system and is classified as a "CLASS 1 LASER PRODUCT". So, to use this model properly, read this Instruction Manual carefully. In case of any trouble, please contact the store where you purchased the unit. To prevent being exposed to the laser beam, do not try to open the enclosure. 5.

6. 7. 8. CAUTION: CLASS 1M VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN. DO NOT VIEW DIRECTLY WITH OPTICAL INSTRUMENTS. THIS PRODUCT UTILIZES A LASER. USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. En-3 Precautions—Continued The label on the right is applied on the rear panel. 1. This unit is a CLASS 1 LASER PRODUCT and employs a laser inside the cabinet.

2. To prevent the laser from being exposed, do not remove the cover. Refer servicing to qualified personnel. For British models Replacement and mounting of an AC plug on the power supply cord of this unit should be performed only by qualified service personnel. IMPORTANT The wires in the mains lead are coloured in accordance with the following code: Blue: Neutral Brown: Live As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows: The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.

The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red. For U.S. models FCC Information for User CAUTION: The user changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: • Reorient or relocate the receiving antenna. • Increase the separation between the equipment and receiver. • Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. • Consult the dealer or an experienced radio/TV technician for help.

IMPORTANT The plug is fitted with an appropriate fuse. If the fuse needs to be replaced, the replacement fuse must be approved by ASTA or BSI to BS1362 and have the same ampere rating as that indicated on the plug. Check for the ASTA mark or the BSI mark on the body of the fuse.

If the power cord's plug is not suitable for your socket outlets, cut it off and fit a suitable plug. Fit a suitable fuse in the plug. For European Models Declaration of Conformity We, ONKYO EUROPE ELECTRONICS GmbH LIEGNITZERSTRASSE 6, 82194 GROEBENZELL, GERMANY declare in own responsibility, that the ONKYO product described in this instruction manual is in compliance with the corresponding technical standards such as EN60065, EN55013, EN55020 and EN61000-3-2, -3-3. GROEBENZELL, GERMANY K. MIYAGI For Canadian Models NOTE: THIS CLASS B DIGITAL APPARATUS COMPLIE.....

.....
.....
.....

..... 24 Setting MP3/WMA Preferences

.....
.....
.....

.....24 Troubleshooting....

.....
.....
.....

.....
.....
.....
... 26 Specifications.....

.....
.....
.....

.... 27 En-6 Getting to Know the CD Player Front Panel 1 2 3 4 5 6 7 8 9 : A B C a □ ON/STANDBY button (15) Press to turn on or standby the C-7030. h PHONES LEVEL knob (15) Use to control the phones level. Turn the knob clockwise to increase the phones level and counterclockwise to decrease it. b

Disc tray (16) The CD is loaded here. c Open/Close [] button (16) Press to open and close the disc tray. i DISPLAY button (17, 20, 21) Press to change the displayed information.

d Pause [] button (16, 17) Press to pause playback. j Remote control sensor (10) Receives control signals from the remote controller. e Stop [] button (16 – 19, 24) Press to stop playback. k Display (8) See next page. f Play [] button (16 – 19, 21, 22) Press to start playback. l []/[] buttons (16, 17, 19, 21) Press to select the previous or next track. Hold down the buttons to fast-reverse or fastforward during playback. g PHONES jack (15) This is a standard stereo jack for connecting stereo headphones. m REPEAT button (23) Press to set the repeat playback or 1-repeat playback mode. En-7 Getting to Know the CD Player—Continued Display 1 2 3 4 5 6 7 a []/[] indicators The [] indicator lights up for playback.

The [] indicator lights up while playback is paused. 8 9 : b MP3, WMA indicators Lights up when an MP3 or WMA CD is loaded. REPEAT lights up when repeat playback is selected for all tracks. REPEAT 1 lights up when repeat playback is selected for one track. g Message area Various information is displayed here. c FOLDER indicator Lights up when folder playback is selected. h TITLE, ARTIST, and ALBUM indicators TITLE lights up when the title (ID3 tag) of an MP3/WMA track is being displayed.



[You're reading an excerpt. Click here to read official ONKYO C-7030 user guide](http://yourpdfguides.com/dref/5224892)

<http://yourpdfguides.com/dref/5224892>

ARTIST lights up when the artist name from an MP3/WMA track (ID3 tag) is being displayed. ALBUM lights up when the album name from an MP3/WMA track (ID3 tag) is being displayed. d FILE indicator Lights up when an MP3 or WMA file number is being displayed.

e TRACK indicator Lights up when a CD track number is being displayed. f Playback mode indicators MEMORY lights up when memory playback is selected. RANDOM lights up when random playback is selected. i DISC, TOTAL indicators These indicators light up when the total disc time or track time is being displayed. j REMAIN indicator This indicator lights up when the remaining disc time or track time is being displayed.

Rear Panel 1 2 3 a ANALOG AUDIO OUTPUT jacks (13, 14) These analog audio outputs can be connected to an amplifier's analog inputs by using the supplied audio cable. Onkyo components for interactive control. To use □, the C-7030 must be connected with an □□ cable and an audio cable. c DIGITAL AUDIO OUTPUT OPTICAL/ COAXIAL jacks These two digital audio outputs can be connected to a digital audio input on an amplifier or recorder. b □□ REMOTE CONTROL jacks (14) These two identical □□(Remote Interactive) jacks can be connected to the □ jacks on your other En-8 Getting to Know the CD Player—Continued Remote Controller The page numbers in parentheses show where you can find the main explanation for each item.

d RANDOM button (21) 1 2 DIMMER DISPLAY m n Select the Random playback mode. e Play [□] button (16 – 19, 21, 22) Press to start playback. f [□]/[□] buttons (16, 17, 19, 21) Press to select the previous or next track. g Stop [□] button (16, 18, 19, 24) Press to stop playback. 3 4 5 6 7 h □/□/□/□ buttons (15, 18, 19, 21, 22, 24) RANDOM REPEAT o p Press the Arrow buttons to configure various settings, and then press the ENTER button to set them. These buttons can be also used to select a track. i ENTER button (15, 19, 21 – 24) Press to set a selected preference. j SEARCH button (19) For MP3, WMA CDs, this button is used to search and select a file number or a folder number. 8 9 ENTER k SETUP button (24) Press to access various settings. l Number buttons (17, 19) Use to enter track numbers.

m Open/Close [□] button (16) Press to open and close the disc tray. j k SETUP SEARCH MEMORY n DISPLAY button (17, 20) Press to change the displayed information. q o REPEAT button (23) Select the repeat playback or 1-repeat playback mode. 1 2 3 p [□]/[□] buttons (17, 21) l 4 5 6 Hold down to fast-reverse or fast-forward during playback. 7 8 9 CLEAR q MEMORY button (21, 22) >10 0 r Select the Memory playback mode. r CLEAR button (21) Use to clear any numbers that have been entered during numeric input. When making a memory setting, the selected track is erased. RC-822C a [□] button (15) Press to turn on or standby the C-7030. b DIMMER button (15) Press to adjust the display brightness. c Pause [□] button (16, 17) Press to pause playback. En-9 Getting to Know the CD Player—Continued Installing the Batteries Aiming the Remote Controller When you operate the remote controller, point it at the CD Player's remote control sensor, as shown below. Remote control sensor x. 5 pro Ap.ft.) (16 m 1 To open the battery compartment, press the small hollow and slide open the cover. DIMMER DISPLAY RANDOM REPEAT ENTER SETUP SEARCH 1 4 7 >10 CH MEMORY 2 5 8 6 CLEAR 3 0 RC-82 2C 9 R 2 Insert two batteries (R03/AAA) into the compartment.

Carefully follow the polarity diagram (positive (+) and negative (–) symbols) inside the battery compartment. Batteries are not supplied with products for China. 3 Replace the cover and slide it shut. Notes: • The remote controller may not work reliably if the CD Player is subjected to bright light, such as direct sunlight or inverter-type fluorescent lights. Keep this in mind when installing.

- If another remote controller of the same type is used in the same room, or the CD Player is installed close to equipment that uses infrared rays, the remote controller may not work reliably.
- Don't put anything, such as a book, on the remote controller because the buttons may be pressed inadvertently, thereby draining the batteries.
- The remote controller may not work reliably if the CD Player is installed in a rack behind colored glass doors. Keep this in mind when installing.
- The remote controller will not work if there's an obstacle between it and CD Player's remote control sensor. Notes: • If the remote controller doesn't work reliably, try replacing the batteries.
- Don't mix new and old batteries or different types of batteries.
- If you intend not to use the remote controller for a long time, remove the batteries to prevent damage from leakage or corrosion.
- Expired batteries should be removed as soon as possible to prevent damage from leakage or corrosion. En-10 Disc Notes Precautions for Playback Compact discs (CDs) with the following logo on the label surface can be used.

Do not use discs designed for purposes other than audio, such as CD-ROMs for PC use. Abnormal noise could damage the speakers or amplifier. Playback of MP3 Discs • Only MP3 files with the extension ".MP3" or ".mp3" are supported. • This CD player supports files recorded in MPEG 1 Audio Layer 3 (32-320kbps), with a sampling frequency of 32/44.1/48 kHz. • Variable bitrates (VBR) between 32kbps and 320kbps are supported. The time information during VBR playback may not display correctly. Playback of WMA Discs * This CD player supports CD-R and CD-RW discs.

Note that some discs may not play back because of the disc characteristics, scratches, contamination or the recording state. A disc recorded with an audio CD recorder will not play back unless it is finalized. Never use discs which have an unusual shape (such as hearts or octagons). These types of discs could jam and damage the CD player. CD Playback with Copy-control Function Some audio CDs with copy-control functionality do not comply with official CD standards.

These are special discs and cannot be played with this CD player. • WMA stands for "Windows Media® Audio"; an audio compression technology developed by Microsoft Corporation USA. • Only WMA files with the extension ".WMA" or ".wma" are supported.

- Encode the WMA file with an application approved □ by Microsoft Corporation USA. The file may not □ play back correctly if encoded with an unapproved □ application.
- Variable bitrates (VBR) between 32kbps and □ 192kbps (32/44.1/48 kHz) are supported.
- Copyright-protected WMA files cannot be played □ back.
- WMA Pro, Lossless and Voice are not supported. * Windows Media is a registered trademark or trademark of Microsoft Corporation in the United States and/or in other countries. Handling Discs Playback of MP3 and WMA Discs MP3 and WMA files recorded on a CD-R/CD-RW can be played with this CD player.



[You're reading an excerpt. Click here to read official ONKYO C-7030 user guide](http://yourpdfguides.com/dref/5224892)
<http://yourpdfguides.com/dref/5224892>

• Use discs which have been recorded following the ISO9660 Level 2 file system. (The supported directory depth is eight levels, the same as ISO9660 Level 1)
• Discs recorded with the hierarchical file system (HFS) cannot be played.

• Up to 99 folders (including the root folder), and up to 499 files (including root) and files can be recognized and played. Notes: • A disc recorded with a recorder or personal computer may not play in some cases. (Cause: Disc's characteristics, damaged or dirty disc, dirt on player's lens, dew condensation, etc.) • A disc recorded on a personal computer may not play because of the application settings or environment. Record the disc with the proper format. (Contact the application maker for details.) • A disc with insufficient storage capacity may not play back properly. Hold discs by the edge, or by the center hole and edge. Avoid touching the playback surface (surface with nothing printed on it). Label surface (printed surface) Playback surface Do not attach paper or stickers, or write on the playback or label surface of the disc.

Take care not to scratch or damage the disc. En-11 Disc Notes—Continued Precautions for Rental Discs Do not use discs with residue from cellophane tape, rental discs with labels which are peeling off, or discs with decorative labels. This type of disc could get stuck in the CD player, or could damage the CD player. Precautions for Inkjet Printable Discs Do not leave a CD-R/CR-RW having a label printed with an inkjet printer in the CD player for a long time. The disc could get stuck in the CD player, or could damage the CD player.

Remove the disc from the CD player when not being played, and store it in a case. A freshly printed disc will stick easily, and should not be played immediately. Caring for Discs If the disc is dirty, the C-7030 will have a hard time reading signals, and the audio quality may drop. If the disc is dirty, gently wipe off fingerprints and dust with a soft cloth. Lightly wipe from the center outwards.

To remove stubborn dust or dirt, wipe the disc with a soft cloth dampened with water, and then dry it with a dry cloth. Do not use cleaning spray for analog records or antistatic agents, etc. Never use volatile chemicals such as benzine or paint thinner as they can impregnate the disc surface. En-12 Connecting the CD Player Audio Connections • Before making any connections, read the manuals supplied with your other components. • Push the plug in all the way. • See the amplifier's instruction manual for details. • Use only cables for connections. • The C-7030 has two connectors. You can connect either one to your Onkyo hi-fi amp or AV receiver. • On the European model: The default setting is "On".

• Place the CD on the tray with the label-side facing up. • To start playback, press the Play button. The disc tray closes and playback starts. Selecting Tracks To return to the beginning of the track that's currently playing or paused, press the Previous button. Press the Previous button repeatedly to select earlier tracks. Press the Next button repeatedly to select subsequent tracks. • To Fast-Forward or Fast-Reverse 3 The contents of the disc are displayed when you use the Open/Close button to load a disc and when you press the Stop button during playback. Example displays: • Audio CD "DISC TOTAL" lights up. During playback or while playback is paused, hold down the button on the CD Player to fastforward or the button on the CD Player to fastreverse. If you use the remote controller, use the buttons.

On MP3/WMA CDs, fast-reverse only works within the MP3/WMA file that's currently playing. • To Pause Playback Press the Pause button. The Pause indicator appears. To resume playback, press the Play or Pause button again. • To Stop Playback Total number of tracks • MP3/WMA Discs Total playing time Press the Stop button.

• To Eject the CD Disc name or Format Press the Open/Close button to open the disc tray. Notes: - MP3/WMA CDs If you press the button during playback or while playback is paused, the beginning of the current file is selected. If you select a file while playback is stopped, press the Play button to start playback. You can select MP3/WMA files in other folders by using the buttons. Total number of folders Total number of files En-16 Disc Playback—Continued Using the Remote Controller DIMMER DISPLAY Press to pause playback Press to start playback RANDOM REPEAT [DISPLAY] Press repeatedly to display CD information See below for details.

Press to select tracks • Press the Previous button to locate the beginning of the currently playing or paused track. Press it repeatedly to select earlier tracks. • Press the Next button repeatedly to select subsequent tracks. For MP3/WMA files, you can select files in other folders. 1 2 3 Press to fast-forward or fastreverse During playback or while playback is paused, press and hold the Fast Forward button to fast-forward, or the Fast Reverse button to fastreverse. SETUP SEARCH MEMORY Use the number buttons as shown in the examples below to select tracks. To select: Track #8 Track #10 Track #34 >10 Press to stop playback 4 5 6 Press: 8 0 >10 7 8 9 CLEAR >10 0 3 4 Used to enter numbers over 9. RC-822C With MP3/WMA CDs, you can select files in the current folder using these buttons. Displaying CD Information Press the CD Player's or the remote controller's [DISPLAY] button (repeatedly) to show the following CD information. On the unit Remote controller DISPLAY During Playback or While Playback is Paused No indicator.

While Playback is Stopped The elapsed time is normally displayed. "REMAIN" Total number of tracks Total playing time Lights up while the remaining track time is being displayed. "TOTAL REMAIN" Lights up while the remaining disc time is being displayed. If the total time is more than 99 minutes and 59 seconds, "--:--" is displayed. See page 20 for details on displaying MP3/WMA information. En-17 Disc Playback—Continued Selecting Files (MP3/WMA CDs) For MP3/WMA CDs, files (MP3/WMA files) may be organized in a hierarchy, with folders containing files and subfolders, as shown below. • In this manual, MP3/WMA files are referred to as files. Likewise, folders (directories) are referred to as folders. Root Folder #1 File #1 DIMMER DISPLAY Selecting Files in Navigation Mode In Navigation mode, you can select files by navigating through the folder hierarchy. This mode can only be used while playback is stopped.

J U File #10 Q/R Folder #2 Folder #3 Folder #4 RANDOM REPEAT File #11 File #14 ENTER ENTER File #12 File #13 File #18 If you don't select a specific MP3/WMA file or folder for playback, all of the MP3/WMA files on the CD will be played in numerical order starting with file #1.



[You're reading an excerpt. Click here to read official ONKYO C-7030 user guide](http://yourpdfguides.com/dref/5224892)
<http://yourpdfguides.com/dref/5224892>

On this CD Player, there are two modes for selecting files (MP3/WMA files): Navigation mode and All Folder mode. In Navigation mode, you can select files (MP3/WMA files) by navigating through the folder hierarchy, moving in and out of folders and subfolders. In All Folder mode, all folders appear at the same level, making it easy to select folders regardless of the hierarchy. While playback is stopped, press the remote controller's [] or [] button to enter

Navigation mode, the [] or [] button to enter All Folder mode.

If you use the CD Player's button, press the [] button to enter Navigation mode, press and hold the [] button to enter All Folder mode. You can change the way in which these buttons change the playback mode. This lets you disable the file selection methods described in Navigation mode or All Folder mode. (See "STOP KEY" in "Setting MP3/WMA Preferences" on page 25.) 1 While playback is stopped, press the [] or [] button.

The compact disc player enters Navigation mode and "[ROOT]" appears on the display. 2 Press the [] or [ENTER] button (front panel: []). The first folder name in ROOT appears on the display. If the disc contains no folders, the first file name appears. Use the []/[] or []/[] buttons to select other folders and files at the same level. To move up a level, press the [] or [] button (front panel: []). Folders that don't contain files or subfolders can't be selected. Press the [ENTER] or [] button to move down a level (front panel: []). Use the []/[] or []/[] buttons to select a file in the folder. 3 4 5 En-18 Disc Playback—Continued 6 Press the [ENTER] or [] button.

Playback will start with the specified file or folder and continue until all of the files on the disc have been played. To cancel the procedure at any point, press the [] on the remote controller. Note: • The behavior of the [] on the CD Player can be set from "STOP KEY" preference (page 25). Use the []/[] or []/[] buttons to select the files within the folder. To select another folder, press the [] button again (front panel: []), and then use the []/[] buttons to select it. Press the [ENTER] or [] button to start playback. Playback will start with the specified file or folder and continue until all of the file on the disc have been played. To cancel the procedure at any point, press the []. 4 Selecting Files in All Folder Mode In All Folder mode, you don't have to navigate the folder hierarchy because all folders that contain files appear at the same level. This mode can only be used while playback is stopped.

J U □ To Select Folders and Files by Number 1. Use the number buttons as shown in the examples below to enter folder/file numbers. To select: Folder/File #8 Folder/File #10 Folder/File #34 >10 Press: 8 0 >10 3 4 Used to enter numbers over 9. DIMMER DISPLAY Q/R □ RANDOM REPEAT 2. Playback starts. When you enter folder number, playback will start from the first file in the selected folder. If a folder contains more than 99 files, single and double-digit file numbers must be preceded by zeros. For example, to specify file #8, press >10, 0, 0, and 8. To specify file #34, press >10, 0, 3, and 4. To specify file #134, press >10, 1, 3, and 4.

Note: • The behavior of [] on the CD Player can be set from "STOP KEY" preference (page 25). □ □ □ ENTER ENTER □ □ Selecting a Folder during Playback (Search Mode) □ RANDOM REPEAT 1 While playback is stopped, press the [] or [] button (front panel: press and hold the []). The CD Player enters All Folder mode, and "1-" appears on the display. □ □ ENTER ENTER 2 3 Use the []/[] or []/[] buttons to select the other folders. You can select any folder that contains files. Press the [] button (front panel: []). The first file name inside the folder appears. SEARCH SETUP SEARCH MEMORY 1 2 3 4 6 1 Press the [SEARCH] button. The display blinks. En-19 Disc Playback—Continued 2 To select the previous folder, press the Previous [] button.

To select the next folder, press the Next [] button. Press the [ENTER] button to display the file name, and start playback the selected file. Title: Title of the current file (if ID3 tag is present). When there is no ID3 tag, "TITLE-NO DATA" appears. 3 4 Artist name: Name of the artist (if ID3 tag is present). When there is no ID3 tag, "TITLE-NO DATA" appears. Use the Previous [] and Next [] buttons to select the previous or next file, and start playback. Note: The [SEARCH] button cannot be used during "Random Playback" or "Memory Playback". Album name: Name of the album (if ID3 tag is present). When there is no ID3 tag, "TITLE-NO DATA" appears.

Displaying MP3/WMA Information Sampling rate and bit rate: Sampling rate and bit rate of the current file. DIMMER DISPLAY DISPLAY You can display various information about the MP3/WMA file currently playing, including ID3 tags such as title name, artist name, and album name. During playback, press the [DISPLAY] button repeatedly to display the following MP3/WMA information. Elapsed file time: The length of time that the current file has been playing (default display). If the elapsed time is more than 99 minutes and 59 seconds, "--:--" is displayed.

Notes: • To display the disc name, press the [DISPLAY] button while playback is stopped. • If a file or folder name contains any characters that cannot be displayed, an underscore will appear in place of those characters. Alternatively, you can set the CD Player so that names containing such characters are displayed as "FILE n" or "FOLDER n," "n" being the file or folder number (see "BAD NAME" on page 24). File name: Name of the current file. Folder name: Name of the current folder.

En-20 Various Playback Modes You can select the following playback modes: • Random playback • Memory playback • Repeat playback Memory Playback (For Audio CDs) In memory playback, you can create a playlist of up to 25 files. Random Playback With random playback, all of the files on the disc are played in random order. DISPLAY DIMMER DISPLAY RANDOM RANDOM REPEAT RANDOM REPEAT □ □ □ □ ENTER ENTER ENTER 1 While playback is stopped, press the [RANDOM] button; the RANDOM indicator appears. RANDOM indicator SETUP SEARCH MEMORY MEMORY 1 2 3 4 5 6 7 8 9 CLEAR >10 0 CLEAR RC-822C 2 To start random playback, press the Play [] button. Memory playback can be set only when playback is stopped. Track currently playing 1 Press the [MEMORY] button; the MEMORY indicator appears. MEMORY indicator □ To Cancel Random Playback • Stop playback, then press the [RANDOM] button to change the playback mode.



[You're reading an excerpt. Click here to read official ONKYO C-7030 user guide](http://yourpdfguides.com/dref/5224892)
<http://yourpdfguides.com/dref/5224892>

The RANDOM indicator disappears, and random playback is cancelled. • Random playback is cancelled when the disc is ejected. Playlist number En-21
Various Playback Modes—Continued 2 Use the Previous and Next []/[] buttons to select the first file you want to add to the playlist, and then press [ENTER] button.

□ To Cancel Memory Playback • Stop playback, then press the [MEMORY] button to change the playback mode. The MEMORY indicator disappears, and memory playback is cancelled. • Memory playback is cancelled when the disc is ejected. Memory Playback (For MP3/WMA CDs) Track to be added to the playlist Total time of playlist RANDOM REPEAT Repeat this step to add additional files to the playlist. Alternatively, you can use the number buttons on the remote controller to select files instead of the Previous and Next []/[] and the [ENTER] buttons. Notes: • If the total playing time is more than 99 minutes and 59 seconds, “-:-” appears. • You can add up to 25 files to the playlist. If you try to add more, the message “MEM FULL” appears. □ □ □/□ ENTER □ ENTER SETUP SEARCH MEMORY 3 To start memory playback, press the [ENTER] button. Memory playback starts.

Alternatively, you can start playback with the Play [] button. MEMORY 1 2 3 Memory Playback in Navigation Mode Memory playback can be set only when playback is stopped. Track currently playing □ To Change the Display While creating a playlist for memory playback, you can press the [DISPLAY] button to change the display information as follows: Total playback time of the memorized files Memory number Current playback time of the selected file 1 Press the [MEMORY] button; the MEMORY indicator appears. MEMORY indicator □ To Select Other Files During Memory Playback Use the Previous and Next []/[] buttons. □ To Check What’s on the Playlist While playback is stopped, use the Fast Reverse and Fast Forward []/[] buttons to scroll through the playlist.

□ To Remove Files from the Playlist • While memory playback is stopped, press the [CLEAR] button. Each press removes the last file from the playlist. • The playlist is deleted when you change the playback mode (i.e., when you press the [MEMORY] button after stopping playback).

2 3 4 Press the [] or [] button. The CD Player enters Navigation mode and “ROOT” appears on the display. Press the [ENTER] button. The first folder name in ROOT appears on the display. Use the []/[] buttons to select other folders and files at the same level. Folders that don’t contain files or subfolders can’t be selected. Repeat steps 3 and 4 to select the files and subfolders in that folder. Press the [ENTER] button. The first item is memorized in the playlist. 5 En-22 Various Playback Modes—Continued 6 Use the []/[]/[] buttons to continue selecting other items for memory playback.

To move up a level, press the [] button. To continue selecting items for memory playback, repeat steps 4 and 5. To memorize other items of the same folder in the playlist, use the []/[] buttons to select items, then press the [ENTER] button. Press the Play [] button. Memory playback starts. Repeat Playback In repeat playback, you can play an entire CD repeatedly, play one track repeatedly, or combine it with memory playback to play the playlist repeatedly, or random playback to play all of the tracks on the disc in random order repeatedly. 7 REPEAT RANDOM REPEAT Memory Playback in All Folder Mode Memory playback can be set only when playback is stopped. ENTER 1 2 3 4 5 6 7 Press the [MEMORY] button; the MEMORY indicator appears. Press the [] or [] button. The CD Player enters All Folder mode and “I-” appears on the display. Use the []/[] buttons to select the folder. Press the [ENTER] button. Use the []/[] buttons to select the file. Press the [ENTER] button. The first file is memorized in the playlist.

Press the [] button, then repeat steps 3 to 6. To memorize other files of the same folder in the playlist, repeat steps 5 to 6. Press the Play [] button. Memory playback starts. Press the [REPEAT] button; the “REPEAT” or “REPEAT I” indicator appears.

Repeat-1 playback can’t be combined with memory playback or random playback. □ To Cancel Repeat Playback • Press the [REPEAT] button repeatedly until “REPEAT OFF” appears. (The REPEAT indicator disappears.) • Repeat playback is cancelled when the disc is ejected. 8 □ To Change the Display While creating a playlist for memory playback, you can press the [DISPLAY] button to change the display information as follows: File name Folder name Memory number En-23 Setting for MP3/WMA Setting MP3/WMA Preferences The MP3/WMA preferences let you change the way MP3/WMA file information is displayed and the way MP3/WMA CDs are played. RANDOM REPEAT □ FOLDER NAME (Scroll/Not) This preference determines whether the folder name scrolls across the display when an MP3/WMA folder is selected. In Navigation mode (see page 18), the folder name scrolls across the display regardless of this setting. □ BAD NAME (Replace/Not) This preference determines whether file and folder names that contain undisplayable characters are replaced with “File n” or “Folder n,” “n” being the file or folder number. When set to Not Replace, displayable characters are displayed and underscore characters are used in place of any undisplayable characters. For ID3 tags, underscore characters are used in place of undisplayable characters regardless of this preference.

Note: File and folder names are scrolled in Navigation mode (page 18) regardless of the FILE NAME and FOLDER NAME preferences. □ ID3 VER. 1 (Read/Not Read) This preference determines whether version 1.0/1.1 tags are read and displayed. When set to Not Read, version 1.0/1.1 tags are not displayed. □ ID3 VER. 2 (Read/Not Read) This preference determines whether version 2.2/2.3/2.4 tags are read and displayed. When set to Not Read, version 2.2/2.3/2.4 tags are not displayed.

□ CD EXTRA (Audio/MP3) This preference applies to CD Extra discs and determines whether music in the audio session or MP3/WMA files in the data session are played. □ JOLIET (Use SVD/ISO9660) This preference applies to MP3/WMA discs in Joliet format and determines whether the CD-Player reads the SVD data or treats the disc as an ISO 9660 disc. Normally, this preference doesn’t need to be changed.

SVD (Supplementary Volume Descriptor) supports long file and folder names and characters other than letters and numbers. Some CD burning software refers to the Joliet format as “Windows format.” □ HIDE NUMBER (Disable/Enable) This preference determines whether the numbers at the beginning of file and folder names are hidden. When you create an MP3/WMA CD on a personal computer, you cannot normally determine the playback order of the files.



[You're reading an excerpt. Click here to read official ONKYO C-7030 user guide](http://yourpdfguides.com/dref/5224892)

<http://yourpdfguides.com/dref/5224892>

However, if you number the MP3/WMA files in order, starting with 01, 02, 03, and so on, they will play in that order. If you don't want these numbers to appear on the display, choose Enable. The following table shows a few examples of numbered file and folder names and how they will appear with the Disable and Enable options. □ □/□ ENTER ENTER SETUP SEARCH MEMORY SETUP 1 2 3 The MP3/WMA preferences can be set only when playback is stopped. 1 2 Press the [SETUP] button. Use the [□]/[□] buttons to select the preference you want to change.

The preferences are explained in the next column. 3 4 Press the [ENTER] button. Use the [□]/[□] buttons to select the preference's options. To cancel the procedure at any point, press the [□] button. Press the [ENTER] button. When the preference has been set, "COMPLETE" appears on the display. 5 Preferences Below, the name of each preference is followed by its options in parentheses, with the default option in bold. □ DISC NAME (Display/Not) This preference determines whether the disc name is displayed when an MP3/WMA disc is loaded. □ FILE NAME (Scroll/Not) This preference determines whether the file name scrolls across the display when an MP3/WMA file is selected. En-24 Setting for MP3/WMA—Continued File/folder name 01 Pops 10-Rock 16_Jazz 21st Century 05-07-20 Album Disable 01 Pops 10-Rock 16_Jazz 21st Century 05-07-20 Album Enable Pops Rock Jazz 21st Century Album □ STOP KEY (All Folder/Navigation/Disable) This preference determines how the Stop [□] button on the CD Player works.

When the ALL Folder option is selected, pressing the Stop[□] button once selects All Folder mode. When the Navigation option is selected, pressing the Stop[□] button once selects Navigation mode. When the Disable option is selected, the CD Player does not enter Navigation or All Folder mode when you press the Stop [□] button. □ ASb (On/Off) Please refer to "Setting Auto Standby (ASb)" (page 15) for details of the procedure. @ @ On the European model: The default setting is "On".

En-25 Troubleshooting If you have any trouble using the CD Player, look for a solution in this section. If you can't resolve the issue yourself, try resetting the CD Player before contacting your Onkyo dealer. @ @ "Clear" will appear on the display. @ @ @ @ @ Check all connections and correct as necessary. • The wrong input source is selected on your amplifier.

Check your amplifier's input source setting. Refer to your amplifier's manual. CD Can't play a CD. • The disc is upside down. Load the disc with the label-side facing up (page 16). • The disc is dirty. Remove the disc and clean it (page 12). • Condensation has formed inside the C-7030. Unplug the power cord and leave the unit for two to three hours in the room temperature until the condensation has evaporated. • The disc is nonstandard.

See "Disc Notes" on page 11. CD playback skips. • Install the C-7030 in a location that is free of vibration. • The disc is dirty. Remove the disc and clean it (page 12). • The disc is very scratched. Replace the disc. Can't enter track numbers for memory playback. • No such track on the CD. Enter another number (page 22).

It takes a long time to locate certain tracks. • The disc is dirty. Remove the disc and clean it (page 12). • The disc is very scratched. Replace the disc. SETUP Can't access the SETUP menu. • If any track has been selected even when the C-7030 is stopped, you must place it into the full stop state by pressing the [□] button before you can view all the SETUP menus. Remote Controller The remote controller does not work. • There are no batteries in the remote controller. Install new batteries (page 10).

• The batteries are expired. Replace with new batteries (page 10). • The batteries are installed incorrectly. Check the batteries and correct as necessary (page 10). En-26 Troubleshooting—Continued • You're not pointing the remote controller at the C-7030's remote sensor. Point the remote controller at the C-7030's remote sensor (page 10). • You're too far away from the C-7030. Move the remote controller closer to the C-7030 (page 10). The remote controller has a range of approximately 5 meters (16 ft.).

• A strong light source is interfering with the C-7030's remote sensor. Make sure that the C-7030 is not subjected to direct sunshine or inverter-type fluorescent lights. Relocate if necessary. • If the C-7030 is installed in a cabinet with colored glass doors, the remote controller may not work reliably when the doors are closed. Open the doors, or use a cabinet without colored glass. □ does not work. There's no analog audio connection. To use □ you must make an analog audio connection between the C-7030 and your Onkyo AV receiver, even if they are connected digitally. Onkyo is not responsible for damages (such as CD rental fees) due to unsuccessful recordings caused by malfunctions of the unit. Before you record important data, make sure that the material will be recorded correctly.

The C-7030 contains a microcomputer for signal processing and control functions. In very rare situations, severe interference, noise from an external source, or static electricity may cause it to lockup. In the unlikely event that this should happen, unplug the power cord, wait at least 10 seconds, and then plug it again. Specifications Frequency Response: Audio Dynamic Range: THD (Total Harmonic Distortion): Signal to Noise Ratio: Rated RCA Output Level and Impedance: 4 Hz – 20 kHz 100 dB 0.0029 % 107 dB 2.

0 V (rms) / 600 □ □ Others RI: 2 □ Audio Outputs Digital Outputs: Analog Outputs: 1 (OPTICAL), 1 (COAXIAL) 1 Audio Output (Digital/Optical): –22.5 dBm Audio Output/Impedance (Digital/Coaxial): 0.5 V p-p / 75 □ Operation Condition Temperature/Humidity: Power Supply North American: Other: AC 120 V, 60 Hz AC 220–240 V, 50/60 Hz 12 W 0.1 W 0.2 W 435 × 101 × 306 mm (17 1/8 × 4 × 12 3/64 inches) 5.

3 kg (11.7 lbs) 5 °C–35 °C / 5 %–85 % Specifications and features are subject to change without notice. Power Consumption: Stand-by Power Consumption North American: Other: Dimensions: (W × H × D) Weight: Disc Compatibility: * Audio CD, CD-R, CD-RW, MP3/WMA (CD-R, CD-RW) * Discs that have not been properly finalized may only be partially playable or not playable at all En-27 2-1, Nisshin-cho, Neyagawa-shi, OSAKA 572-8540, JAPAN Tel: 072-831-8023 Fax: 072-831-8163 <http://www.onkyo.com/> 18 Park Way, Upper Saddle River, N.J. 07458, U.S.A. Tel: 800-229-1687, 201-785-2600 Fax: 201-785-2650 <http://www.onkyo.com/>

www.onkyo.com/ Liegnitzerstrasse 6, 82194 Groebenzell, GERMANY Tel: +49-8142-4401-0 Fax: +49-8142-4401-555 <http://www.eu.onkyo.com/> The Coach House 81A High Street, Marlow, Buckinghamshire, SL7 1AB, UK Tel: +44-(0)1628-473-350 Fax: +44-(0)1628-401-700 Unit 1 & 12, 9/F, Ever Gain Plaza Tower 1, 88, Container Port Road, Kwai Chung, N.



[You're reading an excerpt. Click here to read official ONKYO C-7030 user guide](http://yourpdfguides.com/dref/5224892)
<http://yourpdfguides.com/dref/5224892>

T., Hong Kong. Tel: 852-2429-3118 Fax: 852-2428-9039 <http://www.ch.onkyo.com/> 1301, 555 Tower, No.555 West NanJin Road, Jin an, Shanghai, China 200041, Tel: 86-21-52131366 Fax: 86-21-52130396 11102-1 SN 29400669
(C) Copyright 2011 ONKYO SOUND & VISION CORPORATION Japan. All rights reserved. * 2 9 4 0 0 6 6 9 *.



[You're reading an excerpt. Click here to read official ONKYO C-7030 user guide](#)

<http://yourpdfguides.com/dref/5224892>