



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ONKYO CS-245. You'll find the answers to all your questions on the ONKYO CS-245 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual ONKYO CS-245
User guide ONKYO CS-245
Operating instructions ONKYO CS-245
Instructions for use ONKYO CS-245
Instruction manual ONKYO CS-245

The image shows the front cover of the ONKYO CS-245 instruction manual. The cover is white with black text. At the top left is the ONKYO logo. Below it, the text reads 'CD Receiver System', 'CS-245', 'CD Receiver (CR-245)', and 'Speakers (D-T05)'. Below that is 'Instruction Manual'. On the right side, there is a vertical table of contents with items like 'Getting Started', 'Connections', 'Basic Operation', 'Playing CDs', 'Playing Your iPod/iPhone', 'Listening to the Radio', 'Playing a USB Flash Drive', 'Clock and Timer', and 'Miscellaneous'. At the bottom left, there is a thank you message and a disclaimer. At the bottom center, there are logos for 'COMPACT disc DIGITAL AUDIO' and 'Made for iPod iPhone'. At the bottom right, there is an 'En' logo.



[You're reading an excerpt. Click here to read official ONKYO CS-245 user guide](http://yourpdfguides.com/dref/5224941)
<http://yourpdfguides.com/dref/5224941>

Manual abstract:

.. En-24 Listening to the Radio

.. En-26 Playing a USB Flash Drive...

En-29 Thank you for purchasing an Onkyo CD Receiver System. @@Following the instructions in this manual will enable you to obtain optimum performance and listening enjoyment from your new CD Receiver System. Please retain this manual for future reference. Clock and Timer ..

.....

.....

En-30 Miscellaneous

.....

.....

..... En-34 En WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE. WARNING RISK OF ELECTRIC SHOCK DO NOT OPEN AVIS RISQUE DE CHOC ELECTRIQUE NE PAS OUVRIR CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons. The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance. Important Safety Instructions 1. 2. 3.

4. 5. 6. 7. 8.

Read these instructions. Keep these instructions. Heed all warnings. Follow all instructions. Do not use this apparatus near water. Clean only with dry cloth. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat. Do not defeat the safety purpose of the polarized or grounding-type plug.

A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus. Only use attachments/accessories specified by the manufacturer. Use only with the cart, stand, PORTABLE CART WARNING tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/ apparatus combination to avoid injury from tip-over.

S3125A Unplug this apparatus during lightning storms or when unused for long periods of time. Refer all servicing to qualified service personnel.

Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped. 15. Damage Requiring Service Unplug the apparatus from the wall outlet and refer servicing to qualified service personnel under the following conditions: A. When the power-supply cord or plug is damaged, B. If liquid has been spilled, or objects have fallen into the apparatus, C.

If the apparatus has been exposed to rain or water, D. If the apparatus does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the apparatus to its normal operation, E. If the apparatus has been dropped or damaged in any way, and F. When the apparatus exhibits a distinct change in performance this indicates a need for service.

16. Object and Liquid Entry Never push objects of any kind into the apparatus through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases shall be placed on the apparatus. Don't put candles or other burning objects on top of this unit. 17. Batteries Always consider the environmental issues and follow local regulations when disposing of batteries. 18. If you install the apparatus in a built-in installation, such as a bookcase or rack, ensure that there is adequate ventilation. Leave 20 cm (8") of free space at the top and sides and 10 cm (4") at the rear. The rear edge of the shelf or board above the apparatus shall be set 10 cm (4") away from the rear panel or wall, creating a fluelike gap for warm air to escape.

9. 10. 11. 12. 13. 14. En-2 Precautions 1. Recording Copyright—Unless it's for personal use only, recording copyrighted material is illegal without the permission of the copyright holder. 2. AC Fuse—The AC fuse inside the unit is not userserviceable.

If you cannot turn on the unit, contact your Onkyo dealer. 3. Care—Occasionally you should dust the unit all over with a soft cloth. For stubborn stains, use a soft cloth dampened with a weak solution of mild detergent and water. Dry the unit immediately afterwards with a clean cloth.

Don't use abrasive cloths, thinners, alcohol, or other chemical solvents, because they may damage the finish or remove the panel lettering. 4. Power WARNING BEFORE PLUGGING IN THE UNIT FOR THE FIRST TIME, READ THE FOLLOWING SECTION CAREFULLY. AC outlet voltages vary from country to country. Make sure that the voltage in your area meets the voltage requirements printed on the unit's rear panel (e. g., AC 230 V, 50 Hz or AC 120 V, 60 Hz). The power cord plug is used to disconnect this unit from the AC power source. Make sure that the plug is readily operable (easily accessible) at all times. For models with [POWER] button, or with both [POWER] and [ON/STANDBY] buttons: Pressing the [POWER] button to select OFF mode does not fully disconnect from the mains. If you do not intend to use the unit for an extended period, remove the power cord from the AC outlet. For models with [ON/STANDBY] button only: Pressing the [ON/STANDBY] button to select Standby mode does not fully disconnect from the mains. If you do not intend to use the unit for an extended period, remove the power cord from the AC outlet. Preventing Hearing Loss Caution Excessive sound pressure from earphones and headphones can cause hearing loss. Batteries and Heat Exposure Warning Batteries (battery pack or batteries installed) shall not be exposed to excessive heat as sunshine, fire or the like.

Never Touch this Unit with Wet Hands—Never handle this unit or its power cord while your hands are wet or damp. If water or any other liquid gets inside this unit, have it checked by your Onkyo dealer. Handling Notes • If you need to transport this unit, use the original packaging to pack it how it was when you originally bought it. • Do not leave rubber or plastic items on this unit for a long time, because they may leave marks on the case.

[You're reading an excerpt. Click here to read official ONKYO CS-245](#)



[user guide](#)

<http://yourpdfguides.com/dref/5224941>

• This unit's top and rear panels may get warm after prolonged use. This is normal. • If you do not use this unit for a long time, it may not work properly the next time you turn it on, so be sure to use it occasionally. • When you've finished using this unit, remove all discs and turn off the power. 9. Installing this Unit

• Install this unit in a well-ventilated location.
• Ensure that there's adequate ventilation all around this unit, especially if it's installed in an audio rack. If the ventilation is inadequate, the unit may overheat, leading to malfunction. • Do not expose this unit to direct sunlight or heat sources, because its internal temperature may rise, shortening the life of the optical pickup. • Avoid damp and dusty places, and places subject to vibrations from loudspeakers. Never put the unit on top of, or directly above a loudspeaker.

• Install this unit horizontally. Never use it on its side or on a sloping surface, because it may cause a malfunction. • If you install this unit near a TV, radio, or VCR, the picture and sound quality may be affected. If this occurs, move this unit away from the TV, radio, or VCR. 10.

Moisture Condensation Moisture condensation may damage this unit. Read the following carefully: Moisture may condense on the lens of the optical pickup, one of the most important parts inside this unit. • Moisture condensation can occur in the following situations: – The unit is moved from a cold place to a warm place. – A heater is turned on, or cold air from an air conditioner is hitting the unit. – In the summer, when this unit is moved from an air conditioned room to a hot and humid place. – The unit is used in a humid place. • Do not use this unit when there's the possibility of moisture condensation occurring. Doing so may damage your discs and certain parts inside this unit. If condensation does occur, unplug the power cord and leave the unit for two to three hours in the room temperature. This unit contains a semiconductor laser system and is classified as a "CLASS 1 LASER PRODUCT".

So, to use this model properly, read this Instruction Manual carefully. In case of any trouble, please contact the store where you purchased the unit. To prevent being exposed to the laser beam, do not try to open the enclosure. 5. 6. 7. 8. CAUTION: CLASS 1M VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN. DO NOT VIEW DIRECTLY WITH OPTICAL INSTRUMENTS. En-3 Precautions—Continued THIS PRODUCT UTILIZES A LASER. USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. The label on the right is applied on the rear panel. 1. This unit is a CLASS 1 LASER PRODUCT and employs a laser inside the cabinet. 2.

To prevent the laser from being exposed, do not remove the cover. Refer servicing to qualified personnel. Before Using Your New Speakers • Place the speakers on sturdy, flat surfaces. Putting them on uneven or unstable surfaces where they may fall and cause damage will affect the sound quality. • Do not keep water or other liquids close to the speakers.

If a liquid is spilled over them, the woofer and tweeter inside may be damaged. • Do not handle the speakers with wet or damp hands. Speaker Precautions The speakers can handle the specified input power when used for normal music reproduction. If they're fed any of the following signals, even if the input power is within the specified rating, excessive current may flow in the speaker coils, causing burning or wire breakage: 1. Interstation noise from an untuned FM radio. 2. Audio from a cassette that's being fast-forwarded. 3. High-pitched sounds generated by an oscillator, electronic musical instrument, and so on. 4.

Amplifier oscillation. 5. Special test tones from audio test CDs and so on. 6. Thumps and clicks caused by connecting or disconnecting audio cables (always turn off your amplifier before connecting or disconnecting cables). 7. Microphone feedback. The speakers contain powerful magnets. Do not put metal items, such as screwdrivers, close to the speakers, as they may be attracted toward the magnet, causing injury, or damage to the tweeter diaphragm. For British models Replacement and mounting of an AC plug on the power supply cord of this unit should be performed only by qualified service personnel. IMPORTANT The wires in the mains lead are coloured in accordance with the following code: Blue: Neutral Brown: Live As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows: The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red. Using Close to a TV or Computer TVs and computer monitors are magnetically sensitive devices and as such are likely to suffer from discoloration or picture distortion when conventional speakers are placed nearby. To prevent this, the speakers feature internal magnetic shielding. In some situations, however, discoloration may still be an issue.

In this case, turn off your TV or monitor, wa.....

.....

.....

.....

.....

.....

3 Package Contents

.....

.....

.....

.....

.....

. 5 Features

.....

.....

.....

.....

.....

.....

.....

.....

... 6 Getting to Know the CD receiver ..

.....
.....

.....
.....
. 17 Using Headphones

.....
.....
.....
.....
.....
.....

. 17 Adjusting the Bass and Treble (remote controller only).....

.....
.....
.....

.....
. 18 Using Super Bass (remote controller only)...

.....
.....
.....
.....
.....

. 18 Changing the Display Brightness (remote controller only).....

.....
.....
.....
.....

. 18 Playing CDs.....

.....
.....
.....
.....
.....
.....

.....19 Using the CD receiver

.....
.....
.....
.....
.....

.19 Using the Remote Controller....

.....
.....
.....

.20 Displaying CD Information

.....
.....
.....
.....

...20 Selecting MP3 Files.....

.....
.....
.....
.....

.....
..21 Displaying MP3 Information...

.....
.....

.....
.....
..22 Random Playback ...

.....
.....
.....
.....
.....

.....22 Repeat Playback .

.....
.....
.....
.....
.....
.....

...23 Playing Your iPod/iPhone

.....
.....
.....

.....24 Installing the iPod Dock Adapters.....

.....
.....
.....

..24 Using the Top Panel Buttons

.....
.....
.....

.....24 Using the Remote Controller...

.....
.....
.....

.....
..25 Navigating the iPod Menus with the Remote Controller...

.....
.....

.....25 Playing video from the iPod/iPhone.....

.....
.....

....25 Listening to the Radio .

.....
.....
.....
.....

.....26 Tuning into FM Radio Stations ...

.....

.....
.....
.....26 Presetting FM Stations Automatically (Auto Preset) ..

.....
.....
.....
.....

.....
.....
.....
.....26 Presetting FM Stations Manually

.....
.....
.....

.....27 Selecting Preset Stations.....

.....
.....
.....

.....27 Receiving RDS (remote controller only).....

.....
.....

.....28 Erasing Presets.....

.....
.....
.....

.....28 Playing a USB Flash Drive .

.....

.....
.....
.....

29 Setting the Clock

.....
.....
.....

.....30 Setting the Clock

.....
.....
.....

.....
.....
.....

.....30 Using the Timer.

.....
.....
.....

.....
.....

.....31 Programming the Timer ..

.....

.....

.....

.....

31 Turning Timer On and Off

.....

.....

.....

.....32 Using the Sleep Timer .



[You're reading an excerpt. Click here to read official ONKYO CS-245 user guide](http://yourpdfguides.com/dref/5224941)

<http://yourpdfguides.com/dref/5224941>

function do not comply with official CD standards. These are special discs and cannot be played with the CD receiver.

Handling Discs Hold discs by the edge, or by the center hole and edge. Avoid touching the playback surface (surface with nothing printed on it). Label surface (printed surface) Playback of MP3 Discs MP3 files recorded on a CD-R/CD-RW can be played with the CD receiver. • Use discs which have been recorded following the ISO 9660 Level 2 file system. (The supported directory depth is eight levels, the same as ISO 9660 Level 1) • Discs recorded with the hierarchical file system (HFS) cannot be played. • Discs must be closed (finalized). • Only MP3 files with the extension “.MP3” or “. mp3” are supported. •

Files recorded using MPEG 1 audio layer 3 at sampling frequencies of 32/44.

1/48 kHz and a constant bit rate (CBR) of 32–320 kbps are supported. • A maximum of 299 folders can be recognized on a single CD. A maximum of 648 files can be recognized in a single folder. Playback surface Do not attach paper or stickers, or write on the playback or label surface of the disc. Take care not to scratch or damage the disc.

Precautions for Rental Discs Do not use discs with residue from cellophane tape, rental discs with labels which are peeling off, or discs with decorative labels. This type of disc could get stuck in the CD receiver, or could damage the CD receiver. En-12 Disc (Audio CD and MP3) and USB Flash Drive (MP3)

Notes—Continued Precautions for Inkjet Printable Discs Do not leave a CD-R/CR-RW having a label printed with an inkjet printer in the CD receiver for a long time.



[You're reading an excerpt. Click here to read official ONKYO CS-245 user guide](http://yourpdfguides.com/dref/5224941)

<http://yourpdfguides.com/dref/5224941>

The disc could get stuck in the CD receiver, or could damage the CD receiver. Remove the disc from the CD receiver when not being played, and store it in a case.

A freshly printed disc will stick easily, and should not be played immediately. Caring for Discs If the disc is dirty, the CD receiver will have a hard time reading signals, and the audio quality may drop. If the disc is dirty, gently wipe off fingerprints and dust with a soft cloth. Lightly wipe from the center outwards. To remove stubborn dust or dirt, wipe the disc with a soft cloth dampened with water, and then dry it with a dry cloth. Do not use cleaning spray for analog records or antistatic agents, etc. Never use volatile chemicals such as benzine or paint thinner as they can impregnate the disc surface. En-13 Connecting FM Antenna This section explains how to connect the supplied indoor FM antenna. The CD receiver won't pick up any radio signals if no antenna is connected, so you must connect the antenna to use the tuner. Note: • Once your CD receiver is ready for use, you'll need to tune into a radio station and position the antenna to achieve the best possible reception.

Tip: • If you cannot achieve good reception with the supplied indoor FM antenna, try a commercially available outdoor FM antenna instead. Insert the plug fully into the jack. Connecting Speakers Right speaker Left speaker Speaker cable Red line side • Connect the right speaker to the CD receiver's right (R) SPEAKERS terminals. Connect the left speaker to the left (L) SPEAKERS terminals. • Pay close attention to speaker wiring polarity. Connect positive (+) terminals to only positive (+) terminals, and negative (-) terminals to only negative (-) terminals. If you get them the wrong way around, the sound will be out of phase and will sound unnatural. • Use the red line wires to connect the positive (+) terminals. • Do not connect anything other than the included speakers (D-T05). We cannot take responsibility for malfunctions or poor results if this CD receiver is used with any other speakers.

• Do not connect both speaker cables to the same L or R terminals. Do not connect more than two speaker terminals to each speaker. CD receiver Remove the pre-cut insulation from the ends of the speaker cables, and twist the bare wires tightly. Push the lever to open the hole, insert the bare wire into the hole, and then release the lever. Make sure that the speaker terminals are gripping the bare wires, not the insulation.

• Be careful not to short the positive and negative wires. Doing so may damage the CD receiver and/or speakers. R En-14 Connecting Other Components VIDEO IN CD receiver Analog audio cable (RCA) Powered subwoofer TV, projector, etc. To wall outlet (Connector type varies from country to country.) e. g., cassette tape deck About Connections • Before making any connections, read the manuals supplied with your other components. • Don't connect the power cord until you've completed and double-checked all connections. Connecting a Powered Subwoofer Using a suitable cable, connect the CD receiver's AUDIO OUT: SUBWOOFER to the input on your powered subwoofer. If your subwoofer is unpowered and you're using an external amplifier, connect the AUDIO OUT: SUBWOOFER to the amp's input. Note: • Do not connect or disconnect the power cord while the subwoofer is powered-on. Doing so may damage the subwoofer. You must power-off the subwoofer before connecting or disconnecting the power cord. Connection Color Coding RCA-type audio connections are usually color-coded: red and white. Use red plugs to connect right-channel audio inputs and outputs (typically labeled "R").

Use white plugs to connect left-channel audio inputs and outputs (typically labeled "L"). Push plugs in all the way to make good connections (loose connections can cause noise or malfunctions). Right! Connecting an Audio Playback Device Using a suitable cable, connect the CD receiver's LINE IN jacks to the OUTPUT (PLAY) jacks of your cassette tape deck, TV, or other audio playback device. Wrong! Note: • Do not put anything on top of the CD receiver, as it may interfere with proper ventilation. Connecting a TV If you want to view the contents of videos from your iPod/iPhone on your TV, connect the CD receiver's VIDEO OUT jack to the VIDEO IN jack of your TV or projector. En-15 Connecting Other Components—Continued Connecting the Power Cord Connect the CD receiver's power cord to a suitable wall outlet. Notes: • Do not use any cord other than the included power cord. Do not connect the included power cord to any other device. Doing so may cause malfunctions or accidents. • Do not unplug the power cord from the AC INLET while the other end of the cord is still connected to an AC outlet.

You may receive an electric shock if you accidentally touch the internal terminals of the power cord. • Before connecting the power cord, connect all of your speakers and AV components. • Turning on the CD receiver may cause a momentary power surge that might interfere with other electrical equipment on the same circuit. If this is a problem, plug the receiver into a different branch circuit. • Plug the power cord into an AC outlet that is easily accessible so that you can quickly unplug it if necessary.

En-16 Basic Operation MUTING Input Selector buttons M INPUT M ON/STANDBY VOLUME [-]/[+] VOLUME [-]/[+] * Turning On the CD Receiver Press the [□ ON/STANDBY] button. Alternatively, press the remote controller's [□] button. The CD receiver comes on, and the display lights up. If an iPod/iPhone is connected to the CD receiver, the "Connecting" message will be shown and the iPod/iPhone will be charged. Even if the CD receiver is in standby mode, the "Charging" message will be shown and charging will occur.

Muting the CD Receiver (remote controller only) You can temporarily mute the output of the CD receiver. Press the remote controller's [MUTING] button. The CD receiver is muted. "Muting" appears on the display for a few seconds. The MUTING indicator flashes continuously while the CD receiver is muted. To unmute the receiver, press the [MUTING] button again. Notes: • Press the VOLUME [-]/[+] buttons on the CD receiver or pressing the VOLUME [-]/[+] buttons on the remote controller will unmute the CD receiver. • If you turn the CD receiver off, the next time you turn it on, the CD receiver will be unmuted.

Selecting the Input Source You can select CD, iPod (USB), FM, or LINE, which can be an external component. To select the input source, use the remote controller's Input Selector buttons.

On the CD receiver, press the [INPUT] button repeatedly. The input sources are selected in the following order. CD iPod (USB) FM LINE Using Headphones You can connect a pair of stereo headphones (ø3).



[You're reading an excerpt. Click here to read official ONKYO CS-245 user guide](http://yourpdfguides.com/dref/5224941)

<http://yourpdfguides.com/dref/5224941>

5 mm, 1/8-inch phone plug) to the receiver's headphones [□] jack for private listening. Notes: • Always turn down the volume before connecting your headphones. • While the headphones plug is inserted in the headphones [□] jack, the speakers are turned off. Adjusting the Volume Press the VOLUME [+] button to increase the volume or the VOLUME [-] button to decrease it. You can also use the remote controller's VOLUME [-]/[+] buttons. En-17 Basic Operation—Continued Using Super Bass (remote controller only) To turn on Super Bass, press the [S.BASS] button.

The setting will alternate between S.Bass Off, S.Bass 1, S.Bass 2, and S.Bass Off each time you press the button.

To turn off Super Bass, press the [S.BASS] button repeatedly until "S.Bass Off" appears. TREBLE BASS DIMMER S.BASS CLEAR F/H Changing the Display Brightness (remote controller only) You can adjust the brightness of the display.

Press the remote controller's [DIMMER] button repeatedly to select: dim, or normal brightness. Adjusting the Bass and Treble (remote controller only) Press the [BASS] or [TREBLE] button, and then use the [□]/[□] buttons to adjust the bass or treble, respectively. The default setting is "0." You can adjust the bass and treble from -5 to +5. While adjusting the bass or treble, you can press the [CLEAR] button to return the setting to "0." Note: • If you press no buttons for 5 seconds, the previous display will appear automatically. En-18 Playing CDs Using the CD receiver □ Information Displayed When Playback is Stopped: • Audio CD "DISC TOTAL" lights up CD ,, R Q J U/I ,, 19,, † ,, 67,, ‡29 Total playing time Total number of tracks Selecting Tracks To return to the beginning of the track currently playing, press the Previous [□] button. Press the Previous [□] button repeatedly to select earlier tracks. Press the Next [□] button repeatedly to select subsequent tracks. Disc tray [1 Press the [□] button to open the disc tray.

Note: • Operation using the remote controller is explained on the next page. Tip: • Pressing the [□] button while the CD receiver is on Standby will turn on the CD receiver and open the disc tray. 2 3 Place the CD on the tray with the label-side facing up. Place 8 cm CDs in the center of the tray. To start playback, press the [□/□] button. The disc tray closes and playback starts. Then the "□" indicator appears. To stop playback: Press the [□] button. Playback stops automatically when the last track has been played. To pause playback: Press the [□/□] button.

The Pause "□" indicator appears. To resume playback, press the [□/□] button again. To remove the CD: Press the [□] button to open the disc tray. En-19 Playing CDs—Continued Using the Remote Controller Press to start playback If you press this while the CD receiver is in standby mode, the CD receiver will power-on. If a CD had been selected before the receiver entered standby mode, the CD will begin playing.

Press to pause playback To resume playback, press the Play/ Pause [□/□] button. Press to fast forward or fast reverse During playback, press and hold the Fast Forward [□] button to fast forward, or the Fast Reverse [□] button to fast reverse. Press to adjust the volume Press the VOLUME [+] button to turn up the volume. Press the VOLUME [-] button to turn it down. Select folders/files (MP3 only) Press the [MODE] button; then press the [□] button to select the previous folder/file, or press the [□] button to select the next folder/file.

Press the [□] button to enter the folder. Press the [□] button to select a higher-level folder. Press the [□] button to view the files inside the selected folder. Press to select CD as the input source If a CD is already inserted, playback will start automatically. Press to stop playback Press to select tracks • Press the Previous [□] button to locate the beginning of the currently playing track. • Press it repeatedly to select earlier tracks. • Press the Next [□] button repeatedly to select subsequent tracks. Press to return to the root folder (MP3 only) Available only when the [MODE] button is pressed to choose folder/file select mode.

Press to show various information on the front panel display Displaying CD Information During playback or while playback is paused, press the remote controller's [DISPLAY] button repeatedly to display the following CD information. No indicator CD ,, CD ,, CD ,, ,, 1,, † ,, 0,, ‡13 ,, 1,, † ,, 4,, ‡38 ,, 12,, † ,, 67,, ‡16 The elapsed time is normally displayed.

"REMAIN" Lights up while the remaining track time is being displayed. "TOTAL REMAIN" Lights up while the remaining disc time is being displayed. Audio CD Note: • See page 22 for details on displaying MP3 information. Type of CD that is inserted. En-20 Playing CDs—Continued Selecting MP3 Files The files on an MP3 CD can be located at the disc's root level or within a folder. A folder can contain additional folders, with other folders inside them in a hierarchical structure as shown in the following illustration. A maximum of 648 files and folders (total) can be shown within a folder. Files and folders are listed alphabetically without distinction. 1 While playback is stopped, press the [MODE] button. "FOLDER" will light, and the name of the first folder will be shown.

MY ,, FA,,, VO,,, R,, IT,,, E 2 Use the arrow [□]/[□] buttons to select a folder. Root Folder #1 File #4 Son,,, gs,,, -1,,, ,, ,, File #10 Folder #2 Folder #3 Folder #4 Press the [ENTER] button or the [□] button to enter the folder. Repeat this operation to select the desired folder. When the " " message is shown, you can press the [ENTER] button to return to the upper-level folder. File #1 File #11 File #14 3 File #2 File #12 Use the arrow [□]/[□] buttons to select the MP3 files within the folder.

The name of the MP3 file inside the folder is displayed. File #3 File #13 File #18 Mus,,, ic,,, -1,,, ,, If you don't select a specific MP3 file or folder for playback, all of the MP3 files will be played in numerical order starting with file #1. ,, To select a different folder, press the [□]/[□] button, then use the [□]/[□] buttons to select the desired folder, and finally press the [ENTER] button. Use the [□]/[□] buttons to select the desired file. 4 U/I MENU F/H/C/U, ENTER MODE To start playback, press the [ENTER] button or Play/Pause [□/□] button.

@ @ @ @ @ To resume playback, press it again. @ @ @ @ @ Random playback can also be used in conjunction with repeat playback.



[You're reading an excerpt. Click here to read official ONKYO CS-245 user guide](http://yourpdfguides.com/dref/5224941)

<http://yourpdfguides.com/dref/5224941>

2 3 Tuning into weak stereo FM stations If the signal from a stereo FM station is weak, it may be impossible to get good reception. In this case, press the [MODE] button to switch to Mono mode and listen to the station in mono. Note: • Depending on your location, a preset may be stored with no station, and you'll hear only noise when you select it. In this case, delete the preset (see page 28).

En-26 Listening to the Radio—Continued Presetting FM Stations Manually With the Preset Write function, you can manually preset individual FM radio stations. Presets make it easy to select your favorite stations and eliminate the need to tune the radio manually each time you want to change stations. FM stations can also be preset automatically (see page 26). About Presets You can store up to 30 FM stations as presets. 1 2 Tune into the station that you want to store as a preset (see page 26).

Press and hold down the [PRESET MEMORY] button to the preset number flashes. When the preset has been stored, the preset number will change from blinking to steadily lit. Preset numbers are automatically stored starting with the lowest unused number. If all 30 presets have been set, the display will indicate "Preset FULL," and no further presets can be stored. You'll need to erase an existing preset before storing another one. Selecting Preset Stations TUNER PRESET C/U Q/R INPUT PRESET C/U, Q/R You must store some presets before you can select them (see pages 26 to 27). 1 Press the [TUNER] button, or the [INPUT] button on the top panel, repeatedly to select "FM". The preset you selected the last time you listened to the radio will be selected. Use the PRESET [□]/[□] buttons to select a preset. Press the Previous [□] button to select the previous preset.

Press the Next [□] button to select the next preset. Tip: • If you press the remote controller's [TUNER] button while the CD receiver is on Standby, it will turn on automatically and the station that you listened to last time will be heard. 2 En-27 Listening to the Radio—Continued CLEAR DISPLAY Receiving RDS (remote controller only) Press the [DISPLAY] button repeatedly to display the following RDS information. Erasing Presets 1 2 Select the preset you want to erase (see page 27). Press and hold down the [CLEAR] button to erase the preset. When the preset has been erased, presets following the erased preset will be renumbered forward and redisplayed. Frequency and preset number Program Service Name Radio Text (if available) RDS can be viewed on this unit only in areas where RDS broadcasts are available. What is RDS? RDS stands for Radio Data System and is a method of transmitting data in FM radio signals. It was developed within the European Broadcasting Union (EBU) and many European FM radio stations use it these days. The unit supports and displays Program Service Name (PS) and Radio Text (RT) RDS data.

The RDS indicator appears on the display when the unit is tuned to an FM station that supports RDS. Notes: • If the signal from an RDS station is weak, RDS data may be displayed intermittently or not at all. • The message "Waiting" may appear while the RT data is being received. En-28 Playing a USB Flash Drive iPod U/I INPUT U/I 1 Disconnect the iPod/iPhone from the iPod dock. A USB flash drive cannot be used if an iPod/ iPhone is inserted.

Press the [iPod] button, or the [INPUT] button on the top panel, repeatedly to select "iPod/USB". Insert a USB flash drive in the USB port. 2 3 Notes: • Do not connect your USB flash drive via a USB hub. • When connecting or disconnecting a USB flash drive, use your hand to support the CD receiver so that it does not move. • For details on the usable formats for a USB flash drive, refer to page 12 "Playback from USB Flash Drives".

• If you want to play your iPod/iPhone, disconnect the USB flash drive from the USB port. • The USB port is only for USB flash drives; do not connect your iPod/iPhone to it. @ • Do not connect the CD receiver's USB port to a USB port on your computer. Music on your computer cannot be played through the CD receiver in this way. 4 To start playback, press the [□/□] button. Selecting folders and files, and using the random play and repeat play functions, are the same as when playing back MP3 files from a CD (see page 21). En-29 Setting the Clock Setting the Clock CLOCK CALL TIMER Displaying the Time To display the time, press the remote controller's [CLOCK CALL] button. Press the button again or perform another operation to cancel the time display. If the CD receiver is on Standby, the day and time will be displayed for 8 seconds. While the CD receiver is on, the day and time are displayed continuously.

Change the time format To change the time format between 12-hour and 24-hour, press the [DISPLAY] button. F/H ENTER DISPLAY 1 Press the [TIMER] button repeatedly until "Clock" appears. C,,,lo,,,ck,,, , , , 2 Press [ENTER]. , , --,,: , --, , 3 Use the arrow [□]/[□] buttons to enter the current hour. When the CD receiver is shipped from the factory, the time display format is set to 24-hour time. Set the current hour as it would appear in 24-hour time. If you want to set the current hour as 12-hour time, press the [DISPLAY] button. Press [ENTER]. 4 , , , 19,,: , 00, , 5 6 Use the arrow [□]/[□] buttons to enter the current minute. Press [ENTER].

, , , 19,,: , 03, , , The clock is set and the second dot starts flashing. En-30 Using the Timer The CD receiver has a programmable timer for automated playback, and a sleep timer for turning the CD receiver off after a specified period. You can also use the alarm playback function of your iPod/iPhone to initiate timer playback on the CD receiver. The timer can be used to start FM, CD, iPod/USB, or LINE playback at a specified time.

You could, for example, use a timer to turn on the CD receiver every morning, just like a radio alarm clock. Note: • If iPod is selected as the input source for the timer settings, USB will play if only a USB flash drive is connected, and iPod/iPhone will play if an iPod/ iPhone is connected. disconnect the iPod/iPhone from the iPod dock (see page 29). If you want to play a device connected to LINE, make settings on the connected device so that it will start playing when the timer operates. 2 Press the [TIMER] button repeatedly until "Timer XX" appears.

"XX" indicates the source that was last selected for timer playback. Tim,,,er,,, F,,,M,,, , , 3 Programming the Timer Notes: • You must set the clock before you can program the timer. • If you don't operate any buttons for 5 seconds while programming a timer, the procedure will be cancelled and the previous display will reappear.



[You're reading an excerpt. Click here to read official ONKYO CS-245 user guide](http://yourpdfguides.com/dref/5224941)
<http://yourpdfguides.com/dref/5224941>

• When the CD receiver is turned on by the timer, playback will begin with the most recently received station in the case of FM, the first song in the case of a CD or iPod (USB), and the current state of the connected device in the case of LINE. • Only one timer can be set. Use the arrow []/[] buttons to select the source, and then press [ENTER]. You can select the following sources: FM, CD, iPod (USB), LINE. In the display, "TIMER" and a number indication will blink according to the input source you've selected. The number will be "1" for FM, "2" for CD, "3" for iPod (USB), and "4" for LINE. Use the arrow []/[] buttons to specify the "hour" at which you want the timer to play, and then press [ENTER].

4 Tim,,,er,,,--,,,;,, --,,, M TIMER 5 Use the arrow []/[] buttons to specify the "minute" at which you want to timer to play, and then press [ENTER]. Tim,,,er,,, 6,,,;,, 00,,, F/H ENTER 6 DISPLAY 1 Prepare the source that you want the timer to play. If you want FM to play, tune to the station you want to hear. If you want a CD to play, insert the disc. For an iPod/iPhone, place it in the dock. If you're using a USB flash drive rather than an iPod/iPhone, Use the arrow []/[] buttons to select "Timer On," and then press the [ENTER] button. When a timer is turned on, its TIMER and number appears on the display. If there is no operation for several seconds, the setting will be made with the currently-shown content. The display will return to its previous state except for "TIMER" and the number of the selected input source; the timer is now set. Press the [] ON/STANDBY button or the remote controller's [] button to set the CD receiver to Standby.

7 En-31 Using the Timer—Continued Tips: • If you decide to cancel during this procedure without making timer settings, press the [TIMER] button. • By pressing the [DISPLAY] button when specifying the time, you can switch between 12-hour and 24-hour displays. Notes: • Be sure to set the CD receiver to Standby, otherwise the timed operation will not work. If the timer has been set, timed operation will work even if the SLEEP timer caused the CD receiver to enter Standby mode. Once the timer has been turned on, playback will start at the same time every day.

Be sure to turn off the timer before leaving on vacation. • If the timer turns the power on, the "SLEEP" indication will light. If no operation is performed for one hour, the CD receiver will automatically enter Standby mode. If you perform any operation, the "SLEEP" indication will turn off, and the CD receiver will continue operating. If you specify Timer On (set), the "TIMER" indication and the number of the selected input source will light.

If you select Timer Off (i.e., turn off the timer), the "TIMER" indicator will disappear. Using the Sleep Timer With the sleep timer, you can set the CD receiver so that it automatically turns off after a specified period. Press the [SLEEP] button repeatedly to select the required sleep time. With the [SLEEP] button, you can set the sleep time from 90 to 10 minutes in 10 minute steps. When the sleep timer has been set, the SLEEP indicator appears on the display. The sleep time appears on the display for about 3 seconds, then the previous display reappears. Turning Timer On and Off Once a timer has been programmed, you can turn it on or off as necessary. For example, while you're on holiday, you may want to turn off the timer you use as an early morning alarm.

TIMER SLEEP Checking the Remaining Sleep Time To check the remaining sleep time, press the [SLEEP] button. Note that if you press the [SLEEP] button while the sleep time is being displayed, you'll shorten the sleep time by 10 minutes. For example if you press the [SLEEP] button and the remaining time is shown as 55 minutes, pressing the [SLEEP] button once again will shorten this time to 50, and each subsequent press will shorten the time in 10 minute increments. Canceling the Sleep Timer To cancel the sleep timer, press the [SLEEP] button repeatedly until "Sleep Off" appears. Note: • If the timer turns the power on, the "SLEEP" indication will light. If you perform any operation, the "SLEEP" indication will turn off. If you want to set the SLEEP timer, you'll need to make the setting again after the "SLEEP" indication turns off. F/H 1 2 Press the [TIMER] button repeatedly until "Timer On" or "Timer Off" appears.

Use the arrow []/[] buttons to select either "Time On" (set) or "Timer Off" (cancel), and then press the [ENTER] button. If there is no operation for several seconds, the setting will be made with the currently-shown content, and the display will return to its previous state.

En-32 Using the Timer—Continued Timer Playback using the Alarm Play Function of your iPod/iPhone When the alarm play function of the iPod/iPhone connected to the CD receiver starts playing a song, the CD receiver will power-on and switch to the iPod input. 4 Use the arrow []/[] buttons to select "iPodAlarmOn," and then press the [ENTER] button. If there is no operation for several seconds, the setting will be made with the currently-shown content, and the display will return to its previous state. Press the CD receiver's [] ON/STANDBY button or the remote controller's [] button to put the CD receiver in standby mode. When the alarm play function of the iPod/iPhone begins, the CD receiver will power-on and the input will be switched to iPod.

5 INPUT M ON/STANDBY M TIMER iPod Notes: • In order for the timer to work, the CD receiver must be in standby mode. • This function will not work if the iPod/iPhone is not connected. • Timer playback will not work with an alarm that merely plays a bell tone or similar sound on the iPod/ iPhone. It will work when the app plays a song or playlist. • This function might not work with some iPod/iPhone apps.

Tip: • This function will power-on the CD receiver and switch the input to iPod when it detects a song being played back by the iPod/iPhone. If you play back a song on the iPod/iPhone without using its alarm play function, the CD receiver will power-on and switch to the iPod input in the same way. F/H 1 2 On your iPod/iPhone, make settings for its alarm play function. Make sure that nothing is connected to the USB port, and then connect your iPod/ iPhone to the iPod dock. (see page 24) If the USB indication is shown, a USB flash drive is connected. Disconnect the USB flash drive. Repeatedly press the [TIMER] button to make the iPod alarm mode "iPodAlarmOff" message appear.



[You're reading an excerpt. Click here to read official ONKYO CS-245 user guide](http://yourpdfguides.com/dref/5224941)

3 En-33 Troubleshooting If you have any trouble using the CD receiver, look for a solution in this section. If you can't resolve the issue yourself, try resetting the CD receiver before contacting your Onkyo dealer. To reset the receiver to its factory defaults, turn it on and, while holding down the CD receiver's stop [] button, press the [] ON/STANDBY button.

When the display indicates "RESET," release the buttons. After a while, the CD receiver will enter standby mode. Note that resetting the CD receiver will delete your radio presets and custom settings. Power Can't turn on the CD receiver. • Make sure that the power cord is properly plugged into the wall outlet (see page 16). • Make sure that the power cord is properly plugged into the CD receiver's AC INLET (see page 16). • Unplug the power cord from the wall outlet, wait 30 minutes or more, then plug it in again. The CD receiver turns off unexpectedly. • If the sleep timer has been set and the SLEEP indicator is shown on the display, the CD receiver will turn off automatically after a specified period (see page 32). Audio There's no sound.

••••• Make sure the CD receiver's volume is not set too low (see page 17). Make sure the correct input source is selected (see page 17). Make sure the CD receiver is not muted (see page 17). Check all connections and correct as necessary (see pages 14 to 15). While headphones are connected, the speakers output no sound (see page 17).

If there's no sound from an external device connected to LINE IN, check whether the external device's audio output level (volume) might be too low. The sound quality is not good. • Make sure the speaker cables are connected with the correct polarity (see page 14). • Make sure all audio connecting plugs are pushed in all the way (see page 15). • The sound quality can be affected by strong magnetic fields, such as that from a TV.

Try moving any such devices away from the CD receiver. • If you have any devices that emit high-intensity radio waves near the CD receiver, such as a cellular phone that's being used to make a call, the CD receiver may output noise. • The CD receiver's precision drive mechanism may emit a faint hissing sound while reading discs during playback or when searching for tracks. You may be able to hear this noise in extremely quiet environments. Audio output is intermittent when the CD receiver is subjected to vibration. • The CD receiver is not a portable device. Use it in a location that's not subject to shock or vibration. • Make sure that the included cork floor pads are attached to the speakers (see page 11). Headphones output is intermittent or there's no sound. • This may be due to dirty contacts.

Clean the headphones plug. See your headphones' instruction manual for cleaning information. Also, make sure that the headphones cable is not broken or damaged. Audio performance. • Audio performance will be at its best about 10 to 30 minutes after the CD receiver has been turned on and had time to warm up. • Using cable ties to bundle audio cables with speaker or power cables may degrade the sound quality, so don't do it. En-34 Troubleshooting—Continued CD Playback The disc will not play. ••••• Make sure the disc has been loaded correctly, with the label-side facing up. Check to see if the surface of the disc is dirty (see page 12). If condensation is suspected, turn on the CD receiver and leave it for 2 to 3 hours before playing any discs.

Some CD-R/RW discs may not be playable (see page 12). It takes a long time for playback to start. • It may take the CD receiver a while to read CDs that contain many tracks or files. Playback jumps. • The CD receiver is being subjected to vibration or the disc is scratched or dirty (see page 13).

• The volume may be too loud. Turn down the volume (see page 17). Can't play MP3 Discs. ••••• Use only ISO 9660 Level 1 or Level 2 format discs (see page 12). The disc has not been finalized.

Finalize the disc. Check whether the file format is supported (see page 12). MP3 files without a ".MP3" or ".mp3" filename extension are not recognized. iPod/iPhone There's no sound. • Make sure that your iPod/iPhone is not connected to the USB port. The iPod/iPhone must be connected to the iPod dock. • Make sure your iPod/iPhone is properly seated in the CD receiver's iPod dock. Even very thin iPod/iPhone cases can prevent the iPod/iPhone from seating properly on the dock connector, so always remove any case before inserting your iPod/iPhone (see page 24).

• Make sure the CD receiver is turned on, the input source is set to iPod, and the volume is not set too low. • Make sure that your iPod/iPhone is compatible with the system (see page 6). No video output. • Hold down the [MODE] button to select "Video On" (see page 25). • Check the settings of your iPod/iPhone.

Even if the CD receiver is set to "Video On," the settings of the iPod/iPhone might take priority. No video on the screen of the iPod/iPhone when you play back a movie. • The video is output from the CD receiver's VIDEO output. Hold down the [MODE] button to select "Video Off." External output might also be selected on your iPod/iPhone.

Can't control your iPod/iPhone with the CD receiver's remote controller. • Make sure your iPod/iPhone is properly seated in the CD receiver's iPod dock. Even very thin iPod/iPhone cases can prevent the iPod/iPhone from seating properly on the dock connector, so always remove any case before inserting your iPod/iPhone (see page 24). • You may not be able to control your iPod/iPhone immediately after inserting it into the CD receiver's iPod dock. In this case, wait a few moments until your iPod/iPhone wakes up.

• Depending on your iPod/iPhone model, its software version, or the content you're playing, some functions may not work as expected (see pages 24 and 25). The iPod/iPhone might not be connected if its power is turned off, or if it is insufficiently charged. Check the state of your iPod/iPhone. Can't recharge the iPod/iPhone. • Check the iPod/iPhone connection.

• Depending on the state of your iPod/iPhone, the CD receiver might not be able to charge it. Try using the dedicated charging method provided for the iPod/iPhone. En-35 Troubleshooting—Continued USB Flash Drive Playback Can't access the music files on a USB flash drive. • Make sure that an iPod/iPhone is not connected to the iPod dock. If an iPod/iPhone is connected, disconnect it (see page 29). • The CD receiver supports USB flash drives only. Note, however, that playback may not be possible with some USB flash drives. • Make sure that the USB flash drive has been formatted as FAT16 or FAT32.



You're reading an excerpt. Click here to read official ONKYO CS-245 user guide
<http://yourpdfguides.com/dref/5224941>