



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ONKYO HT-S3505. You'll find the answers to all your questions on the ONKYO HT-S3505 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual ONKYO HT-S3505
User guide ONKYO HT-S3505
Operating instructions ONKYO HT-S3505
Instructions for use ONKYO HT-S3505
Instruction manual ONKYO HT-S3505


Quick Start Guide HT-S3505

Supplied Accessories


Make sure you have the following accessories:

- ① Indoor FM antenna
- ② AM loop antenna
- ③ Remote controller and two batteries (AA/R6)
- ④ Speaker Package

*1 Configuration of the rubber stoppers may be different from the figure, such as being 2 sheets instead of 1 sheet, but the total number will be same.

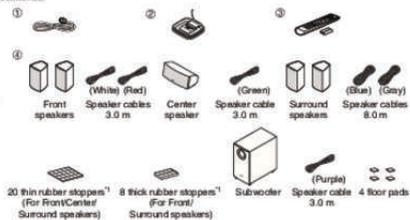


Using the Remote Controller

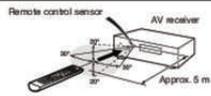 

Note

Before connecting the power cord, connect all of your speakers and AV components.


1. Connecting Your Speakers

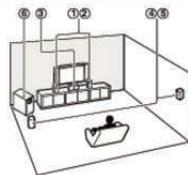

- ① ② Front speakers
- ③ Center speaker
- ④ ⑤ Surround speakers
- ⑥ Subwoofer

Speaker Configuration
5.1-channel: ① ② ③ ④ ⑤ ⑥

Please connect ①, ②, ③, ④, ⑤ and ⑥ for 5.1-channel surround.

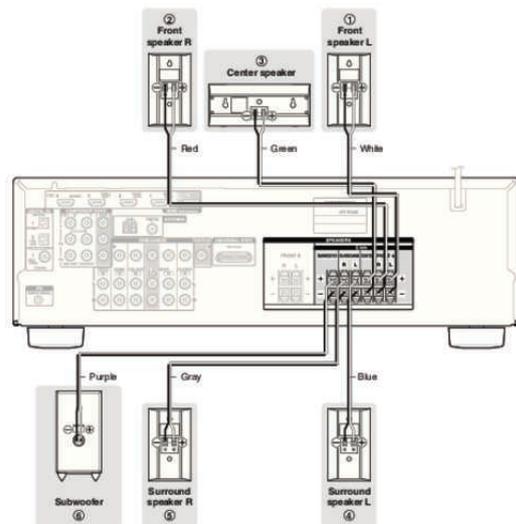

SN 29401062
(C) Copyright 2012 ONKYO SOUND & VISION CORPORATION Japan. All rights reserved.



[You're reading an excerpt. Click here to read official ONKYO HT-S3505 user guide](#)

<http://yourpdfguides.com/dref/5224971>

Manual abstract:

1. Connecting Your Speakers 6 3 1 2 4 5 1 2 Front speakers 3 6 Center speaker Subwoofer 4 5 Surround speakers Subwoofer 6 Surround speaker R 5 Surround speaker L 4 Speaker Configuration 5.1-channel: 1 2 3 4 5 6 En SN 29401062 (C) Copyright 2012 ONKYO SOUND & VISION CORPORATION Japan. All rights reserved. * 2 9 4 0 1 0 6 2 * -2- 2. Connecting Your Components Connecting Components with HDMI Connecting Components without HDMI HDMI OUT TV HDMI IN Blu-ray Disc/ DVD player HDMI OUT Please turn on "HDMI Control (RIHD)" from the setup menu. VIDEO IN TV AV OUT Game console Satellite/cable set-top box, etc. Game console HDMI OUT HDMI OUT VCR or DVD recorder/ digital video recorder The components connected to each terminal (BD/DVD, GAME, etc.) can be selected with the input selector buttons of the same name on the front panel. Note that these default assignments can be changed.

For details, please refer to the instruction manual. You can connect various Onkyo components to the UNIVERSAL PORT jack. □ Listening to TV audio (Optional) Dock for iPod UP-A1 HD Radio Tuner UP-HT1 DAB Tuner UP-DT1 AUDIO OUT DIGITAL OPTICAL OUT L TV HDMI IN R When using a TV that supports Audio Return Channel, both audio/video signals from the AV receiver and the audio output from the TV are carried bi-directionally on a single HDMI cable. The Onkyo Universal Port Options are sold separately and their availability depend on the region. Choose an audio connection that matches your TV (without Audio Return Channel).

-3- -4- 3. Turning On & Basic Operations 1 5 2 4 4. Using the Setup User Interface The on-screen menus appear only on a TV that is connected to the HDMI OUT. If your TV is connected to other video outputs, use the AV receiver's display when changing settings. Tip • If the menu doesn't appear, make sure the appropriate external input is selected on your TV.

Home Menu The Home menu provides you quick access to frequently used menus. This menu enables you to change settings and view the current information.

□ Opening the Home menu Setup Menu The Setup menu provides extended setup that includes settings for advanced users. @@2. 3. 4. 5. 6. 7. 8.

9. 10. @@Select the input source. Start playback on the source component. Adjust the volume. Select a listening mode and enjoy!

@@@@@@@@@b.Selects the remote controller modes or the input sources. c.Adjust the bass and treble. d.

Selecting Speakers A and B. e.Selects and adjusts settings. f.Accesses the setup menus.

g.Selects listening modes. h.Adjusts the display brightness. @@j.

Mutes or unmutes the AV receiver. k.Adjusts the volume. l.Returns to the previous menu. m.Accesses the HOME menu. @@Note that these default assignments can be changed. For details, please refer to the instruction manual. 6.

@@b Lights when the HDMI through function is enabled. @@@@e Selects listening modes. f Displays various information. g RT/PTY/TP: Used for RDS (Radio Data System) RDS works only in areas where RDS broadcasts are available. h Stores or deletes radio presets. i Selects the Auto or Manual tuning mode. j Displays various information about the currently selected input source. k Accesses the setup menus. l When the AM or FM input source is selected, w TUNING q are used to tune the tuner, and e PRESET r are used to select radio presets. When used with onscreen menus, they work as cursor buttons to select and set items.

ENTER is also used with onscreen menus. m Returns to the previous menu. n.Adjusts the volume. o The Music Optimizer function enhances the sound quality of compressed music files.

p Connects a standard pair of stereo headphones. q Adjusts the tone. r Selects the input sources. s Connects a camcorder or similar for audio/video playback. The AV receiver turns off unexpectedly.

g The AV receiver will automatically enter standby mode when Auto Standby is set and launched. There's no sound, or it's very quiet. Make sure that the proper digital source is selected. There's no picture. Make sure that all video connecting plugs are pushed in all the way. h n If you can't resolve the issue yourself, try resetting the AV receiver before contacting your Onkyo dealer. @@.



[You're reading an excerpt. Click here to read official ONKYO HT-S3505 user guide](http://yourpdfguides.com/dref/5224971)

<http://yourpdfguides.com/dref/5224971>