



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ONKYO PA-MC5501. You'll find the answers to all your questions on the ONKYO PA-MC5501 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual ONKYO PA-MC5501**  
**User guide ONKYO PA-MC5501**  
**Operating instructions ONKYO PA-MC5501**  
**Instructions for use ONKYO PA-MC5501**  
**Instruction manual ONKYO PA-MC5501**

**ONKYO®**

**9-Channel Amplifier**

***PA-MC5501***

**Instruction Manual**

## Contents

Before using .....2

Operations .....7

Connections .....11

Appendix .....18

Thank you for purchasing an Onkyo 9-Channel Amplifier. Please read this manual thoroughly before making connections and plugging in the unit. Following the instructions in this manual will enable you to obtain optimum performance and listening enjoyment from your new 9-Channel Amplifier. Please retain this manual for future reference.

En



[You're reading an excerpt. Click here to read official ONKYO PA-MC5501 user guide](#)

<http://yourpdfguides.com/dref/5225026>

**Manual abstract:**

*REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.* The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons. The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance. Important Safety Instructions 1. 2. 3. 4. 5. 6. 7.

8. Read these instructions. Keep these instructions. Heed all warnings. Follow all instructions.

Do not use this apparatus near water. Clean only with dry cloth. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus. Only use attachments/accessories specified by the manufacturer. Use only with the cart, stand, PORTABLE CART WARNING tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to S3125A avoid injury from tip-over. Unplug this apparatus during lightning storms or when unused for long periods of time.

Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped. 15. Damage Requiring Service Unplug the apparatus from the wall outlet and refer servicing to qualified service personnel under the following conditions: A. When the power-supply cord or plug is damaged, B. If liquid has been spilled, or objects have fallen into the apparatus, C. If the apparatus has been exposed to rain or water, D. If the apparatus does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the apparatus to its normal operation, E. If the apparatus has been dropped or damaged in any way, and F.

When the apparatus exhibits a distinct change in performance this indicates a need for service. 16. Object and Liquid Entry Never push objects of any kind into the apparatus through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases shall be placed on the apparatus. Don't put candles or other burning objects on top of this unit.

17. Batteries Always consider the environmental issues and follow local regulations when disposing of batteries. 18. If you install the apparatus in a built-in installation, such as a bookcase or rack, ensure that there is adequate ventilation. Leave 20 cm (8") of free space at the top and sides and 10 cm (4") at the rear.

The rear edge of the shelf or board above the apparatus shall be set 10 cm (4") away from the rear panel or wall, creating a flue-like gap for warm air to escape. 9. 10. 11. 12. 13. 14. En 2 Precautions 1. Recording Copyright—Unless it's for personal use only, recording copyrighted material is illegal without the permission of the copyright holder. 2.

AC Fuse—The AC fuse inside the unit is not userserviceable. If you cannot turn on the unit, contact your Onkyo dealer. 3. Care—Occasionally you should dust the unit all over with a soft cloth. For stubborn stains, use a soft cloth dampened with a weak solution of mild detergent and water. Dry the unit immediately afterwards with a clean cloth. Don't use abrasive cloths, thinners, alcohol, or other chemical solvents, because they may damage the finish or remove the panel lettering. 4. Power WARNING BEFORE PLUGGING IN THE UNIT FOR THE FIRST TIME, READ THE FOLLOWING SECTION CAREFULLY. AC outlet voltages vary from country to country.

Make sure that the voltage in your area meets the voltage requirements printed on the unit's rear panel (e.g., AC 230 V, 50 Hz or AC 120 V, 60 Hz). The power cord plug is used to disconnect this unit from the AC power source. Make sure that the plug is readily operable (easily accessible) at all times. For models with [POWER] button, or with both [POWER] and [ON/STANDBY] buttons: Pressing the [POWER] button to select OFF mode does not fully disconnect from the mains. If you do not intend to use the unit for an extended period, remove the power cord from the AC outlet. For models with [ON/STANDBY] button only: Pressing the [ON/STANDBY] button to select Standby mode does not fully disconnect from the mains. If you do not intend to use the unit for an extended period, remove the power cord from the AC outlet. Preventing Hearing Loss Caution Excessive sound pressure from earphones and headphones can cause hearing loss.

Batteries and Heat Exposure Warning Batteries (battery pack or batteries installed) shall not be exposed to excessive heat as sunshine, fire or the like. Never Touch this Unit with Wet Hands—Never handle this unit or its power cord while your hands are wet or damp. If water or any other liquid gets inside this unit, have it checked by your Onkyo dealer. Handling Notes • If you need to transport this unit, use the original packaging to pack it how it was when you originally bought it. • Do not leave rubber or plastic items on this unit for a long time, because they may leave marks on the case. • This unit's top and rear panels may get warm after prolonged use. This is normal. • If you do not use this unit for a long time, it may not work properly the next time you turn it on, so be sure to use it occasionally. For U.S.

models FCC Information for User CAUTION: The user changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.



[You're reading an excerpt. Click here to read official ONKYO PA-MC5501 user guide](http://yourpdfguides.com/dref/5225026)  
<http://yourpdfguides.com/dref/5225026>

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: • Reorient or relocate the receiving antenna. • Increase the separation between the equipment and receiver. • Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. • Consult the dealer or an experienced radio/TV technician for help. For Canadian Models NOTE: THIS CLASS B DIGITAL APPARATUS COMPLIES WITH CANADIAN ICES-003.

For models having a power cord with a polarized plug: CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT. 5. 6. Modèle pour les Canadien REMARQUE: CET APPAREIL NUMÉRIQUE DE LA CLASSE B EST CONFORME À LA NORME NMB003 DU CANADA. Sur les modèles dont la fiche est polarisée: ATTENTION: POUR ÉVITER LES CHOCS ÉLECTRIQUES, INTRODUIRE LA LAME LA PLUS LARGE DE LA FICHE DANS LA BORNE CORRESPONDANTE DE LA PRISE ET POUSSER JUSQU'AU FOND.

En 7. 8. 3 For British models Replacement and mounting of an AC plug on the power supply cord of this unit should be performed only by qualified service personnel. Features □ 150 Watts per channel, minimum RMS into 8 ohms, 2 channels driven, from 20 to 20,000 Hz with no more than 0.05 % total harmonic distortion □ THX™ Ultra2™ certified\*1 □ WRAT–Wide Range Amplifier Technology (5 Hz-100 kHz bandwidth) □ Push-Pull amplification design with three-stage inverted Darlington circuitry □ Massive toroidal transformer □ Customized 22,000 µF large capacitors for effective power supply □ Audio-tuned reference capacitors for each channel □ Low-impedance, copper bus plates for perfect ground potential □ Gold-plated, XLR and machined, solid brass RCA input terminals □ Custom-designed large power transistors to drive high currents □ High-current, low-impedance circuit board by using thick copper foil (70 µ) □ Gold-plated, color-coded, transparent speaker posts □ Auto Standby function □ Multi-zone capability (up to Zone 3)\*2 □ Bi-amping capability\*2 □ 12V trigger in □ Aluminum front panel □ Detachable power cord \*1 IMPORTANT The wires in the mains lead are coloured in accordance with the following code: Blue: Neutral Brown: Live As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows: The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.

The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red. IMPORTANT The plug is fitted with an appropriate fuse. If the fuse needs to be replaced, the replacement fuse must approved by ASTA or BSI to BS1362 and have the same ampere rating as that indicated on the plug. Check for the ASTA mark or the BSI mark on the body of the fuse. If the power cord's plug is not suitable for your socket outlets, cut it off and fit a suitable plug. Fit a suitable fuse in the plug. For European Models Declaration of Conformity We, ONKYO EUROPE ELECTRONICS GmbH LIEGNITZERSTRASSE 6, 82194 GROEBENZELL, GERMANY declare in own responsibility, that the ONKYO product described in this instruction manual is in compliance with the corresponding technical standards such as EN60065, EN55013, EN55020 and EN61000-3-2, -3-3. GROEBENZELL, GERMANY K. MIYAGI ONKYO EUROPE ELECTRONICS GmbH \*2 THX and Ultra2 are trademarks of THX Ltd. THX may be registered in some jurisdictions.

All rights reserved. Depends on AV controller. En 4 Contents Before using Important Safety Instructions .....

.....

.....

.....

.....

.....

... 2 Precautions..

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.... 3 Features .....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

4 Supplied Accessories.....

.....

.....

.....

.....

.....

.....

.....  
.... 5 Amplifier Precautions .....

.....  
.....

.....  
.....

..... 6 Supplied Accessories Check that the following accessories are supplied with the PA-MC5501. Operations Quick Operation Guide .

.....  
.....  
.....

.....  
.....

. 7 Front & Rear Panels.....

.....  
.....  
.....

.....  
.....

... 8 Front Panel..

.....  
.....  
.....  
.....  
.....  
.....  
.....

..... 8 Rear near TV or radio. This may cause noise or instable video on radio or TV respectively. Lightning storms During lightning storm, never touch the power cord, plug or cover of the PA-MC5501, and any devices connected to the PA-MC5501.

*Power cord Do not use a power cord other than the one supplied with the PA-MC5501. The power cord supplied is designed for use with the PA-MC5501 and should not be used with any other device. Be sure to only use wall sockets that properly fit the plug of the power cord. If the socket does not match the plug of the power cord, you will need to prepare an adapter. Always use an adapter that is properly certified for this application. Power WARNING: BEFORE PLUGGING IN THE UNIT FOR THE FIRST TIME, READ THE FOLLOWING SECTION CAREFULLY. AC outlet voltages vary from country to country. Make sure that the voltage in your area meets the voltage requirements printed on the unit's rear panel (e.g., AC 220-240 V, 50/60 Hz or AC 120 V, 60 Hz).*

*Speakers Connected speakers should have an impedance of 4 ohms or greater. If speakers with an impedance of less than 4 ohms are connected, it may damage the PA-MC5501. En 6 Operations Quick Operation Guide Here is a quick guide for those who want to listen to music or view their favorite movies as soon as possible. Connections and operations are explained briefly here for the purpose of just getting you started. For those of you who want to operate the PA-MC5501 (the amplifier) right away, follow the guide below.*

*However, this instruction manual contains a great deal of other information that you should know for the proper operation of the amplifier and for a more pleasurable experience with the amplifier. Be sure to read the rest of this manual as well after reading this quick guide. The procedures given below assume that the other system components are already connected and configured. (For example, that the source components are already connected to the control amplifier.) 1.*

*Lower the volume at the control amplifier. Lower the volume of the control amplifier to the minimum so that when the amplifier is turned on, you do not hear loud unwanted sounds. 2. Connect the speakers to the amplifier. Connect the speakers to the amplifier using the proper speaker cables. Be sure to match the channels and the positive (+) and negative (-) polarities between the speakers and the amplifier. If the connections are mistaken, the correct orientation will not be obtained. 3. Select balanced input (XLR) or unbalanced input (RCA) with the INPUT SELECT switch. @@@@Connect the control amplifier to the amplifier.*

@@@@Be sure to properly plug the power cord all the way in.



[You're reading an excerpt. Click here to read official ONKYO PA-MC5501 user guide](#)



6. Press the 8ON/STANDBY button. 7. Remove the power cord from the wall outlet immediately. After that, reconnect the power cord and turn the power on. COLD 2 2. Refer to the instruction manual supplied with the control amplifier and verify that its output terminal is compatible with the pin assignments for this terminal. The output terminal of Onkyo PR-SC5509 is compatible with the pin assignments for the terminal of the amplifier. The amplifier uses the European type XLR terminal.

Phase is reversed when an XLR cable is connected to the control amplifier that uses the USA type XLR terminal. In this case, swap pin 2 and pin 3 to set the polarity to the European type before connecting. Note • When using this balanced connection for a specific channel between the control amplifier and the amplifier, set the INPUT SELECT switch to the upper side (the balanced input side) to select balanced input. Next, use commercial XLR balanced cable and connect the balanced output from the control amplifier to the corresponding balanced input on the amplifier. • Do not connect anything to the RCA-type audio input jack.

En 9 b INPUT SELECT switch This switch is located between the balanced input and single-ended RCA input for each channel. Use this switch to select the input type for its channel. When setting the switch to the upper side, the balanced input is selected. When setting the switch to the lower side, the RCA audio input is selected. Note • Do not change the INPUT SELECT switch setting when the amplifier is turned on.

• Make sure that connections have been made only to the inputs selected with the INPUT SELECT switches and nothing is connected to the other ones. g 12V TRIGGER IN Connects to the 12V trigger output terminal on the other component to control the amplifier. This enables the amplifier to turn on or go into standby state based on the power on/standby status of the connected component. Use the supplied or commercially available 1/8-inch mono cable to connect to the 12V trigger output terminal on the other device. The tip polarity of the connectors are as shown below. 5 to 12 volts, positive tip polarity c Unbalanced Input (single end RCA input) Connect AV controllers or control amplifiers with single-ended outputs. RCA type h AC INLET Plug the supplied power cord into this AC INLET and then into the power outlet on the wall. Power cord (supplied) Note • When using this single-ended connection for a specific channel, set the INPUT SELECT switch to the lower side (the RCA audio input side), use commercial RCA audio pin cable and connect the single-ended outputs. • Do not connect anything to the balanced input jack. To an AC wall outlet d OUTPUT (Speaker output and binding post) These terminal posts are for connecting the front L/R, center, surround L/R, surround back L/R, and front high/wide L/R speakers.

The FRONT L/R and FRONT HIGH/WIDE L/R terminal posts can be used with front speakers and front high/wide respectively, or used to bi-amp the front speakers. See "Bi-amping the Front Speakers" (□ page 15). e SPEAKER IMPEDANCE switch Use this switch to select the speaker impedance. 4Ω: Select if the impedance of any speaker is 4 ohms or more but less than 6. 6Ω: Select if the impedances of all speakers are between 6 and 16 ohms. f AUTO STANDBY switch You can use the auto standby function. If the amplifier receives no signal for 3 hours, it will automatically enter standby mode. Once the auto standby function has been activated, the amplifier will not automatically turn on even if it receives the signal. To turn on the amplifier, press the 8ON/STANDBY button manually. You can also disable the function by setting this switch to OFF side.

Default setting: ON (European models), OFF (North American and Asian models) Note • Regardless of the position of this switch, this function will not work when the amplifier has been turned on by the 12V trigger. • Before entering standby mode by the auto standby function, the amplifier notifies you by flashing the ON indicator for 10 seconds. • Depending on some sources, the auto standby function may activate during playback. • Do not plug the amplifier into the AC outlet other than an AC wall socket. • Do not use a power cord other than the one supplied with the amplifier.

The power cord supplied is designed for use with the amplifier and should not be used with any other device. • Never have the power cord disconnected from the amplifier while the other end is plugged into the wall outlet. Doing so may cause an electric shock. Always connect by plugging into the wall outlet last and disconnect by unplugging from the wall outlet first. • Before you plug in the amplifier, confirm that all connections have been made properly.

• Turning on the power may cause a momentary power surge, which might interfere with other electrical equipment on the same circuit, such as computers. If this happens, use a wall outlet on a different circuit. En 10 Connections Connecting the Amplifier Connecting Your Speakers Before connecting the speakers, place them correctly by consulting the instruction manuals that came with them. For surround playback, the configuration and placement of your speakers are very important. Please note that connecting speakers with a low power input rating does not produce large sound volumes. For those speakers, large sound volumes causing excessive input level may damage the speakers. Note • Once you've completed speaker connections, you must turn on the AV controller or control amplifier and configure the output channels. Speaker Connection Precautions Read the following before connecting your speakers: • You can connect speakers with an impedance of between 4 and 16 ohms. If the impedance of any of the connected speakers is 4 ohms or more, but less than 6 ohms, be sure to set the minimum speaker impedance to "4Ω" (□ page 10). If you use speakers with a lower impedance, and use the amplifier at high volume levels for a long period of time, the built-in protection circuit may be activated.

• Disconnect the power cord from the wall outlet before making any connections. • Read the instructions supplied with your speakers. • Pay close attention to speaker wiring polarity. In other words, connect positive (+) terminals only to positive (+) terminals, and negative (-) terminals only to negative (-) terminals. If you get them the wrong way around, the sound will be out of phase and will sound unnatural. • Unnecessarily long, or very thin speaker cables may affect the sound quality and should be avoided. • If you use 4 or 5 speakers, connect each of the two surround speakers to the SURROUND L/R terminals. Do not connect them to the SURR BACK L/R or FRONT HIGH/WIDE L/R terminals. • Be careful not to short the positive and negative wires. Doing so may damage the amplifier.

• Make sure the metal core of the wire does not have contact with the amplifier's rear panel.



[You're reading an excerpt. Click here to read official ONKYO PA-MC5501 user guide](http://yourpdfguides.com/dref/5225026)  
<http://yourpdfguides.com/dref/5225026>



Doing so may damage the amplifier. Attaching the Speaker Labels The amplifier's positive (+) speaker terminals are all red (the negative (-) speaker terminals are all black). Speaker Front left Front right Center Surround left Surround right Surround back left Surround back right Front high/wide left Front high/wide right Color White Red Green Blue Gray Brown Tan White Red The supplied speaker cable labels are also color-coded and you should attach them to the positive (+) side of each speaker cable in accordance with the above table. Then all you need to do is to match the color of each label to the corresponding speaker terminal.

(North American models) • If you are using banana plugs, tighten the speaker terminal before inserting the banana plug. • Do not insert the speaker code directly into the center hole of the speaker terminal. • Don't connect more than one cable to each speaker terminal. Doing so may damage the amplifier. • Don't connect one speaker to several terminals.

En 11 Connecting the Speaker Cables 1 Strip about 1/2" to 5/8" (12 to 15 mm) of insulation from the ends of the speaker cables, and twist the bare wires tightly, as shown. Unscrew the terminal. 1/2" to 5/8" (12 to 15 mm) 3 4 Fully insert the bare wires. Screw the terminal tight. 2 The following illustration shows which speaker should be connected to each pair of terminals. If you're using only one surround back speaker, connect it to the SURR BACK L terminal.

Note • If you use front high or front wide speakers, you must turn on the AV controller and select the speakers to be used. @@The amplifier Select 4Ω or 6Ω. Surround right Front right Center Front left Surround left Front high/wide right Surround back right Surround back left Front high/wide left En 12 Connecting to an AV Controller with XLR output Since many users will purchase the amplifier together with the Onkyo AV controller PR-SC5509, here is an explanation of how to connect the amplifier to the PR-SC5509. Note • When using the balanced inputs, do not connect anything to the RCA inputs.

• Make sure that the balanced cable is not split. The split balanced cable may be the cause of noise. • If a device with the USA type terminal is connected, the phase will be reversed. In this case, swap the polarity of the XLR connector in order to set the polarity to the European type before connecting. The amplifier XLR type Balanced cable From the AV controller AV controller From the amplifier En 13 Connecting to an AV Controller with RCA output Since many users will purchase the amplifier together with the Onkyo AV controller PR-SC5509, here is an explanation of how to connect the amplifier to the PR-SC5509. Note •••• When using the RCA inputs, do not connect anything to the balanced inputs. Make sure that the pin cable is not split. The split pin cable may be the cause of noise. Push plugs in all the way to make good connections (loose connections can cause noise or malfunctions). To prevent interference, keep audio and video cables away from power cords and speaker cables.

The amplifier Right! Wrong! AV controller En 14 Bi-amping the Front Speakers The FRONT L/R and FRONT HIGH/WIDE L/R outputs can be used with front speakers and front high/wide speakers respectively, or bi-amped to provide separate tweeter and woofer feeds for a pair of front speakers that support bi-amping, providing improved bass and treble performance. Note •••• Please make sure that your AV controller supports bi-amping. When bi-amping is used, the amplifier is able to feed up to 7-channel speakers in the main room. When bi-amping is used, front high/wide speakers cannot be used. For bi-amping, the FRONT L/R outputs feed the front speakers' woofer terminals.

And the FRONT HIGH/WIDE L/R outputs feed the front speakers' tweeter terminals. • Once you've completed the bi-amping connections shown below, you must turn on the AV controller and configure it to enable bi-amping. @@@@The following examples are based on using the amplifier with the AV controller, PR-SC5509. Note • Please make sure that your AV controller has the multi-zone capability. • Once you've completed multi-zone connections shown below, you must turn on the AV controller and configure it to enable the multi-zone capability.

• If your AV controller has balanced outputs for multiroom versatility, you can also use the balanced inputs on the amplifier. □ Connection 1 Main room: You can enjoy up to 5-channel surround-sound playback. Zone 2: You can enjoy 2-channel stereo playback and video playback. Zone 3: You can enjoy 2-channel stereo playback. Zone 2 Make either connection. Zone 3 AV controller Right Left Right Left The amplifier See page 13 or 14 for the connection. Main room Surround right Front right Center Front left Surround left En 16 □ Connection 2 Main room: You can enjoy up to 7-channel surround-sound playback. Zone 2: You can enjoy 2-channel stereo playback and video playback. Zone 2 Make either connection. AV controller Right Left The amplifier See page 13 or 14 for the connection.

Main room Surround back Surround right right Front right Center Front left Surround left Surround back left En 17 Appendix Troubleshooting If the PA-MC5501 fails to function normally, first check the following points before contacting your Onkyo dealer. If the problem is not solved after going through the following list, unplug the power cord and contact your Onkyo dealer. □ No power Power cord is not correctly plugged into AC outlet/Inlet. → Plug the power cord into the AC outlet/Inlet properly. □ The 12V trigger of the PA-MC5501 does not react to that of the PR-SC5509 Connection between the 12V trigger terminals is incomplete. → Connect the cables to the terminals firmly. □ Humming or other noise is heard Input cable connection is incomplete. → Insert the input cable to pin jack or connector completely. Noise from power cord or power transformer affects the input cable. → Keep power cord or power transformer away from the input cable.

Power cord or speaker cables are bundled together with pin cords. → This may cause humming or noise. Do not bundle power cord or speaker cables with pin cables together. Connection to the input terminals is not complete or not appropriate. → For each channel's input terminals, connect cables or cords to either balanced input terminal or audio input terminal only and switch the INPUT SELECT switch accordingly.

Avoid connecting the cables or cords to the input terminals that will not be used. □ Power turns on but no sound Incomplete connections. → Check speaker cable connections. → Insert all plugs firmly into jacks. No input signal from AV controller.

→ Check for input signal from AV controller. Incorrect INPUT SELECT switch setting. → Set INPUT SELECT switch to correct setting.



[You're reading an excerpt. Click here to read official ONKYO PA-MC5501 user guide](http://yourpdfguides.com/dref/5225026)  
<http://yourpdfguides.com/dref/5225026>

□ The amplifier turns off and after restoring the power, it turns off again The protection circuit has been activated. Remove the power cord from the wall outlet immediately. @@After that, reconnect the power cord and turn the power on. @@WARNING If smoke, smell or abnormal noise is produced by the amplifier, unplug the power cord from the wall outlet immediately and contact your Onkyo dealer. En 18 Specifications Amplifier section Rated Output Power All channels: (North American) 150 watts minimum continuous power per channel, 8 ohm loads, 2 channels driven from 20 Hz to 20 kHz, with a maximum total harmonic distortion of 0.05% (FTC) 175 watts minimum continuous power per channel, 8 ohm loads, 2 channels driven at 1 kHz, with a maximum total harmonic distortion of 0.7% (FTC) 185 watts minimum continuous power per channel, 6 ohm loads, 2 channels driven at 1 kHz, with a maximum total harmonic distortion of 0.

1% (FTC) (Others) 9 ch × 220 W at 6 ohms, 1 kHz, 1 ch driven of 1 % (IEC) Maximum Effective Output Power (Asian) 9 ch × 280 W at 6 ohms, 1 kHz, 1 ch driven (JEITA) Dynamic Power\*\* IEC60268-Short-term maximum output power 400 W (3 Ω, Front) 300 W (4 Ω, Front) 180 W (8 Ω, Front) THD+N (Total Harmonic Distortion+Noise) 0.05 % (20 Hz - 20 kHz, half power) Damping Factor 60 (Front, 1 kHz, 8 Ω) 1 V, 47 kΩ (Unbalanced) 2 V, 22 kΩ (Balanced) Frequency Response Signal to Noise Ratio Speaker Impedance 5 Hz - 100 kHz/+1 dB, -3 dB (Unbalanced) 110 dB (Unbalanced, IHF-A) 4 Ω - 16 Ω Input Sensitivity and Impedance General Power Supply (North American) AC 120 V, 60 Hz (Others) AC 220 - 240 V, 50/60 Hz (North American) 11.7 A (Others) 1050 W (North American) 80 W (Others) 75 W Stand-by Power Consumption (North American) 0.2 W (Others) 0.3 W Dimensions (W × H × D) 435 mm × 198.5 mm × 446.5 mm 17-1/8" × 7-13/16" × 17-9/16" Weight 22.2 kg (48.9 lbs.) Power Consumption No-sound Power Consumption □ Audio Inputs Balance Inputs Unbalance Inputs 9 9 □ Speaker Outputs FL, FR, C, SL, SR, SBL, SBR, FHL/FWL, FHR/FWR □ Control Terminal 12 V Trigger In 1 Specifications and features are subject to change without notice.

En 19 2-1, Nisshin-cho, Neyagawa-shi, OSAKA 572-8540, JAPAN Tel: 072-831-8023 Fax: 072-831-8163 <http://www.onkyo.com/> 18 Park Way, Upper Saddle River, N.J. 07458, U.

S.A. Tel: 800-229-1687, 201-785-2600 Fax: 201-785-2650 <http://www.us.onkyo.com/>

<http://www.eu.onkyo.com/> Liegnitzerstrasse 6, 82194 Groebenzell, GERMANY Tel: +49-8142-4401-0 Fax: +49-8142-4401-555 <http://www.eu.onkyo.com/> The Coach House 81A High Street, Marlow, Buckinghamshire, SL7 1AB, UK Tel: +44-(0)1628-473-350 Fax: +44-(0)1628-401-700 Unit 1033, 10/F, Star House, No 3, Salisbury Road, Tsim Sha Tsui Kowloon, Hong Kong. Tel: 852-2429-3118 Fax: 852-2428-9039 <http://www.ch.onkyo.com/> 1301, 555 Tower, No.555 West NanJin Road, Jin an, Shanghai, China 200041, Tel: 86-21-52131366 Fax: 86-21-52130396 Y1107-1 SN 29400874 (C) Copyright 2011 ONKYO SOUND & VISION CORPORATION Japan. All rights reserved.

\* 2 9 4 0 0 8 7 4 \* .



[You're reading an excerpt. Click here to read official ONKYO PA-MC5501 user guide](#)

<http://yourpdfguides.com/dref/5225026>