



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for PANASONIC DMR-BWT735EB. You'll find the answers to all your questions on the PANASONIC DMR-BWT735EB in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual PANASONIC DMR-BWT735EB
User guide PANASONIC DMR-BWT735EB
Operating instructions PANASONIC DMR-BWT735EB
Instructions for use PANASONIC DMR-BWT735EB
Instruction manual PANASONIC DMR-BWT735EB

Panasonic

Operating Instructions
Blu-ray Disc™ Recorder
Model No. **DMR-BWT735**

DIGA
Blu-ray



Thank you for purchasing this product.
Please read these instructions carefully before using this product, and save this manual for future use.

- This Blu-ray Disc Recorder is for viewing and recording free-to-view channels only. It does not receive pay-TV or encrypted channels.

Region management information

BD-Video: This unit can play BD-Video discs supporting the region code "B".	DVD-Video: This unit can play DVD-Video discs supporting the region number "2" or "ALL".
--	---

* e.g.   * e.g.   

Web Site: <http://www.panasonic-europe.com>
Model number suffix "EB" denotes UK model.

EB VQT4W68



[You're reading an excerpt. Click here to read official PANASONIC DMR-BWT735EB user guide](http://yourpdfguides.com/dref/5330531)
<http://yourpdfguides.com/dref/5330531>

.....	.6 - Recording mode ..
.....
.....
.....	..8 - Notes.....
.....
.....
.....9 Unit care.....
.....
.....
.....	...11 Control reference guide.....
.....
.....	.12 Connection.....
.....
.....
.....14 - Basic connections ..
.....
.....
.....	.14 - Amplifier/receiver connections.....
.....
.....	.15 - Network connection.....
.....
.....17 Settings ..
.....
.....
.....18 - TV operation buttons ..
.....
.....
.....18 - Easy Setting .
.....
.....
.....19 - Easy Network Setting.....
.....
.....
.....	.21 FUNCTION MENU screen...
.....
.....	..23 Copying video Copying titles.....
.....
.....
.....50 - Copying from media other than HDD with DIRECT NAVIGATOR...
..... - Copying titles with copying list .
.....
.....	..52...
.....
.....	..52 - Notes for copying.....
.....
.....
.....55 - Copying a finalised disc....



[You're reading an excerpt. Click here to read official PANASONIC
DMR-BWT735EB user guide
http://yourpdfguides.com/dref/5330531](http://yourpdfguides.com/dref/5330531)

.....	
...28 - Operation during Recording ..	
.....	
.....	
29 Timer recording.....	
.....	
.....	
...30 - Various functions with Freeview	
.....31 - Manually programming timer recording ..	
.....	
...32 - Timer recording options ..	
.....	
.....33 - Timer recording from channel information ..	
.....	
.33 - Remote recording from outside	
.....	
.34 - Notes on timer recording	
.....	
.....	
34 - To confirm and edit a timer programme	
35 With Other Equipment Recording from external equipment66 - Manual Recording ..
.....	
.....	
.....	
.66 - Flexible Recording via AV input	
.....	
.66 - Linked timer recording (Set Top Box, etc.) –EXT LINK...	
.....	
..... Playing back video Playing titles on the HDD ..	
.....	
.....	
...36 - DIRECT NAVIGATOR (VIDEO) screen	
.....36 Playing titles on the media	
.....	
...39 - Notes for BD-Live discs ..	
.....	
.....41 Operation during play ..	
.....	
.....	
.....42 - General operations ..	
.....	
.....	
.....	
.42 - 3D video playback	
.....	
...44 ..	
.....	
.67 Copying the HD Video or the SD Video68 - Copying HD Video (AVCHD)
.....	
...68 - Copying SD Video (MPEG2) ...	
.....	
.....69 Smart Home Networking (DLNA) ..	
.....	
.....70 - Using this unit as Server ..	

Please use this unit in the manner in which it was intended and follow the following points: - Do not expose this unit to high temperatures or direct sunlight. - Do not bend, or subject this unit to strong impacts. - Keep this unit away from moisture. - Do not disassemble or alter this unit in any way.

LAN cable connection Internet Broadband router, etc. LAN (ethernet) cable • Use category 5 or above straight LAN cables (STP) when connecting to peripheral devices. • Inserting any cable other than a LAN cable in the LAN terminal can damage the unit. Wireless LAN connection Internet Wireless router, etc. • For up-to-date compatibility information on your Wireless router refer to <http://panasonic.jp/support/global/cs/> (This site is in English only.) • The unit is not compatible with public wireless LAN services. VQT4W68 17 DMR-BWT735EB_eng.book

18 Getting started Settings TV operation buttons The TV can be operated from the TV operation buttons of the remote control. • Perform the setting if you cannot operate the TV with the TV operation buttons.

While pressing [TV Í], enter the code with the number buttons. □ TV □ VOL CH PAGE DRIVE INPUT SELECT AV TV operation buttons (right) Manufacturer and Code No. Brand Panasonic AIWA AKAI BEKO BENQ BRANDT BUSH CENTREX CURTIS DAEWOO DESMET DUAL ELEMIS FERGUSON FINLUX FISHER FUJITSU FUNAI GOLDSTAR GOODMAN GRADIENTE GRUNDIG HITACHI IRRADIO ITT JVC KDS KOLIN KONKA LG MAG METZ MITSUBISHI MIVAR Code 01/02/03/04 35 27/30 05/71/72/73/74 58/59 10/15 05 66 05 64/65 05 05 05 10/34 61 21 53 63/67 05/50/51 05 36 09 05/22/23/40/41 30 25 17/30/39/70 52 45 62 05/50/51 52 05/28/79 05/19/20/47 24 Brand NEC NOBLEX NOKIA NORDMENDE OLEVIA ONWA ORION PEONY PHILCO PHILIPS PHONOLA PIONEER PROVIEW PYE RADIOLA SABA SALORA SAMSUNG SANSUI SANYO SCHNEIDER SEG SELECO SHARP SIEMENS SINUDYNE SONY TCL TELEFUNKEN TEVION THOMSON TOSHIBA WHITE WESTINGHOUSE YAMAHA Code 36 33 25/26/27/60/61 10 45 30/39/70 05 49/69 41/48/64 05/06/46 05 37/38 52 05 05 10 26 32/42/43/65/68 05 21/54/55/56 05/29/30 05/69/75/76/77/78 05/25 18 09 05 08 31/33/66/67/69 10/11/12/13/14 52 10/15/44 16/57 05 18/41 1 2abc 3def 4ghi 5jkl 6mno p w 7qrs 8 tuv 9xyz CH INTERNET 0 LAST VIEW RADIO/ TV SLOW/SEARCH REWIND LIVE TV PAUSE PLAY/x1.3 EXIT SKIP STOP STATUS PAUSE LIVE TV To exit the screen Select and enter buttons FUNCTION MENU (23) GUIDE N E C TIO M NU FUN DIRECT NAVIGATO R OK OPTION BACK/ RETURN REC REC MODE TEXT PROG/CHECK CHAPTER INPUT SELECT AD DEL STTL NETFLIX To return to the previous screen MANUAL SKIP -10s +60s • If the brand of your TV is not listed or the code number is invalid for the TV, this remote control is not compatible with your TV. • If your TV brand has more than one code listed, select the one that allows correct operation. 18 VQT4W68 DMR-BWT735EB_eng.book 19 Getting started Easy Setting 4 1 2 Turn on the TV, then select the appropriate AV input to suit the connections to this unit. Press [Í] on the remote control or [Í/I] on this unit. • The Easy Setting will start at the initial power on. Auto Setup starts.

(This operation may take some time.) e.g., DVB Auto Setup Progress CH 21 Type Free TV Free TV Quality 10 10 68 Set the Owner ID-Data Entry (“NAME”, “HOUSE NO” and “POSTCODE”). e.g., Owner ID-Data Entry PIN NAME HOUSE NO POSTCODE Select Change PIN RETURN 0000 1 Select the item, then press [OK]. 2 Select the character, then press [OK]. Repeat this step. 3 Press [BACK/RETURN].

4 Repeat steps 1-3 to enter all data. 5 Press [BACK/RETURN] to exit from the Owner ID-Data Entry screen. This will take about 3 minutes. Channel Name CH 35 35 Free TV: 2 Radio: 0 Data: 0 Searching Actual number of channels may differ due to channel duplication. Pay TV: 0 5 Enter the new PIN for parental control.

PIN Entry Enter a new 4-digit PIN, then press OK. This PIN will be used for controlling viewing and playback. PIN will be set to “0000” by pressing “RETURN” when there is no number input. RETURN After tuning has been completed, clock will be set automatically. • If the region selection screen appears, select repeatedly until you reach the available region.

• If the clock setting screen appears, set the time manually (94, Clock). - - - RETURN Number 0 9 • The default PIN is “0000”. 1 Enter the new 4-digit PIN with the number buttons. • Make a note of the PIN you have decided on in case you forget it. 2 Press [OK]. 3 Enter the PIN. This PIN will be used only for the Owner ID-Data Entry screen. You now have the opportunity to enter your details and help the police to crack crime. See Instruction Book. Owner ID Please enter new PIN PIN 0 RETURN * * * * 9 PIN entry 1 Press the number buttons to enter 4-digit PIN.

2 Repeat step 1 to confirm. • Make a note of PIN in case you forget it. The PIN number cannot be reset. • Steps 3 – 5 will be skipped in the Easy Setting after “Shipping Condition” (95) is performed. (go to step 6 on page 20) VQT4W68 19 DMR-BWT735EB_eng.book 20 Getting started Settings 6 Set “Quick Start” to “On”, “Off” or “Timer Setting for Quick Start”, then press [OK]. Quick Start On Off Timer Setting for Quick Start 6:00 23:00 To stop partway Press [BACK/RETURN]. • On It is possible to start quickly from standby mode. • Off Power consumption in standby mode is minimized. (110) However, startup time from standby mode will be longer.

• Timer Setting for Quick Start “Quick Start” is activated when the set time comes. (If the clock has not been set, this function is not activated at all hours.) When “Easy Setting has been completed.” appears, Easy Setting is complete. • Select “Yes” to proceed to “Easy Network Setting”.

(21) • Select “No” to finish the Easy Setting. To restart setup 1 Press [FUNCTION MENU]. (18) 2 Select “Setup” in “Others”, then press [OK]. 3 Select “Auto Setup” in “Tuning”, then press [OK]. 4 Select “Yes”, then press [OK].

To display the Owner ID information on TV 1 While the unit is on, press and hold [OK], the yellow button and the blue button on the remote control at the same time for more than 5 seconds. - “00 RET” is displayed on the unit’s display. 2 Repeatedly press [I] (right) on the remote control until “01 OID” is displayed on the unit’s display. 3 Press [OK] on the remote control. The PIN is not displayed. To confirm that channels have been tuned correctly Refer to “Using Channel List”. (24) To change PIN for parental control Refer to “PIN Entry”.



[You're reading an excerpt. Click here to read official PANASONIC DMR-BWT735EB user guide](http://yourpdfguides.com/dref/5330531)
<http://yourpdfguides.com/dref/5330531>

