



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for PANASONIC HC-V520. You'll find the answers to all your questions on the PANASONIC HC-V520 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

 
User manual PANASONIC HC-V520 User guide PANASONIC HC-V520 Operating instructions PANASONIC HC-V520 Instructions for use PANASONIC HC-V520 Instruction manual PANASONIC HC-V520

Panasonic

Wi-Fi connection guide

High Definition Video Camera

Model No. HC-X920/HC-X929/HC-X920M
HC-V720/HC-V727/HC-V720M
HC-V520/HC-V520M
VQC9469

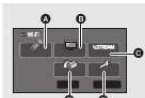

To use the Wi-Fi[®] function, it is required to connect this unit to a wireless access point or smartphone via Wi-Fi. This guide explains with Wi-Fi connection that allows using the [Remote Ctrl].
• [Remote Ctrl]
• [DLNA Play]
• [Live Cast]
• [Wi-Fi Setup]
• [Home Monitor]

Please refer to the operating instructions (PDF format) of this unit for details about the setting/operating of this unit.
Please refer to the operating instructions of the device in use for details about the setting/operating of the wireless access point or smartphone.

Step.1 Install the "Image App"

To connect this unit with the smartphone, it is required to install "Image App" in the smartphone to be used.

- 1 [Android[™]]: Select "Google Play[™] Store".
[iOS]: Select "App Store[™]".
- 2 Enter "Image App" into the search box.
- 3 Select "Image App" and install it.

Step.2 Confirm the Wi-Fi[®] connecting method

Confirm the wireless access point and smartphone used.



When connecting to a wireless access point (wireless LAN router)



- 1 Check if the wireless access point is compatible with IEEE802.11b/g/n.
Proceed to 2 once the compatibility is confirmed.
- 2 Check if the wireless access point is compatible with WPS[®].
Compatible with WPS:
Proceed to ④ [Easy Connection (WPS)] of Step.3
Not compatible with WPS:
Proceed to ⑤ [Manual Connection] of Step.3
* WPS is an abbreviation for Wi-Fi Protected Setup[™].

• Android and Google Play are trademarks or registered trademarks of Google Inc.
• App Store is a service mark of Apple Inc.
• "Wi-Fi", "Wi-Fi Protected Setup", "WPA" and "WPA2" are marks or registered marks of the Wi-Fi Alliance.
• QR Code is a registered trademark of DENSO WAVE INCORPORATED.

This unit cannot be used to connect to a public wireless LAN connection.

- Step.1 Install the "Image App"
- Step.2 Confirm the Wi-Fi[®] connecting method
- Step.3 Connect to Wi-Fi

Step.3 Connect to Wi-Fi

The setting screen for the wireless access point is displayed when the Wi-Fi button is pressed for the first time.

When connecting to a wireless access point (wireless LAN router)

④ [Easy Connection (WPS)]

- 1 Press the Wi-Fi button on this unit and setup the Wi-Fi.

[Wi-Fi Setup] → [Set Wireless Access Point]

- 2 Touch the part with no display of a wireless access point.
- 3 Touch [Easy Connection (WPS)].



- 4 Set the wireless access point to waiting for WPS.

• A message is displayed on this unit screen when the connection is complete.

- 5 Touch [Remote Ctrl] and start up the smartphone application "Image App".

• When the connection is complete, images of this unit is displayed on the smartphone screen.

⑤ [Manual Connection]

• Please refer to the operating instruction of the device in use for details about the setting and display of the wireless access point.

- 1 Press the Wi-Fi button on this unit and setup the Wi-Fi.

[Wi-Fi Setup] → [Set Wireless Access Point]

- 2 Touch the part with no display of a wireless access point.

- 3 Touch [Manual Connection].

- 4 Touch [Search].

• Please refer to the operating instructions (PDF format) of this unit for details about the setting when the [Set Manually] is selected.

- 5 Touch the wireless access point to be connected.

- 6 Touch [ENTER].

• If an Encryption key (Password) is not set, the connection is complete and a message is displayed.

- 7 (When there is an Encryption key (Password))

Touch [INPUT], then enter the Encryption key (Password) of the wireless access point.

• For details on how to enter characters, refer to the operating instructions (PDF format).

• When the entry is complete, touch [Enter].

- 8 (When there is an Encryption key (Password))

Touch [NEXT].

• A message is displayed when the connection is complete.

- 9 Touch [Remote Ctrl] and start up the smartphone application "Image App".

• When the connection is complete, images of this unit is displayed on the smartphone screen.

When connecting to a smartphone

④ [Direct Connection]

- 1 Press the Wi-Fi button on this unit and setup the Wi-Fi.

[Wi-Fi Setup] → [Direct Connection]

- 2 Touch [Change connection type].

- 3 Touch QR code.

• The QR code is displayed on this unit screen.

- 4 Start up the smartphone application "Image App".

- 5 Scan QR code displayed on this unit with the smartphone.

• When using an iOS device, the profile install screen will be displayed on the smartphone. After installing, close the displayed screen by pressing the Home button and start up "Image App" again.

• When the connection is complete, images of this unit is displayed on the smartphone screen.

Connect with using NFC

HC-V720/HC-V727/HC-V720M/HC-V520/HC-V520M

This function can be used with the NFC compatible device with Android (OS version 2.3.3 or later). (Except for some models)

NFC is an abbreviation for Near Field Communication.

• When this unit is registered in the wireless access point and the smartphone is connected to the wireless access point, the result is a wireless access point connection. All others are direct connections.

- 1 Start up the smartphone application "Image App".

- 2 Touch the smartphone on the back of this unit when a message to touch the NFC mark of the device is displayed on the smartphone screen.



• Proceed with the connection by following the smartphone screen instructions.

• When the connection is complete, images of this unit is displayed on the smartphone screen.

• If the unit is not recognized even when touching the smartphone, change positions and try again.

• The NFC function cannot be used on the smartphone in use when a message to touch the NFC mark of the device is not displayed. Try other connection methods.



You're reading an excerpt. Click here to read official PANASONIC HC-V520 user guide
<http://yourpdfguides.com/dref/4726556>

Manual abstract:

@@ ≥ Please refer to the operating instructions of the device in use for details about the setting/operating of the wireless access point or smartphone. Touch the part with no display of a wireless access point. Touch [Easy Connection (WPS)]. A B Touch [Change connection type]. Touch [QR code]. Start up the smartphone application "Image App". Scan QR code displayed on this unit with the smartphone. ≥ The QR code is displayed on this unit screen. □ [Delete] [EXIT] □ Set the wireless access point to waiting for WPS. 4 5 □ □ ≥ A message is displayed on this unit screen when the connection is complete.

Step.1 1 Install the "Image App" An environment that can connect to the network is required. Touch [Remote Ctrl] and start up the smartphone application "Image App". ≥ When using an iOS device, the profile install screen will be displayed on the smartphone. @@@@ (Except for some models) NFC is an abbreviation for Near Field Communication.

@@@@@ Touch [Manual Connection]. @@@@@@ ≥ The NFC function cannot be used on the smartphone in use when a message to touch the NFC mark of the device is not displayed. Try other connection methods. 1 2 Check if the wireless access point is compatible with IEEE802.11b/g/n. Check if the wireless access point is compatible with WPS*. Proceed to C [Direct Connection] of Step.3 ≥ If an Encryption key (Password) is not set, the connection is complete and a message is displayed. 7 (When there is an Encryption key (Password)) ≥ Proceed to 2 once the compatibility is confirmed. Touch [INPUT], then enter the Encryption key (Password) of the wireless access point. ≥ For details on how to enter characters, refer to the operating instructions (PDF format). @@@@ App Store is a service mark of Apple Inc. @@@@ Touch [Remote Ctrl] and start up the smartphone application "Image App". ≥ A message is displayed when the connection is complete. .



[You're reading an excerpt. Click here to read official PANASONIC HC-V520 user guide](http://yourpdfguides.com/dref/4726556)
<http://yourpdfguides.com/dref/4726556>