



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for PANASONIC KX-TG1611FX. You'll find the answers to all your questions on the PANASONIC KX-TG1611FX in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual PANASONIC KX-TG1611FX
User guide PANASONIC KX-TG1611FX
Operating instructions PANASONIC KX-TG1611FX
Instructions for use PANASONIC KX-TG1611FX
Instruction manual PANASONIC KX-TG1611FX



[You're reading an excerpt. Click here to read official PANASONIC KX-TG1611FX user guide](http://yourpdfguides.com/dref/3972930)
<http://yourpdfguides.com/dref/3972930>

Manual abstract:

@@(For Czech and Slovakia) This cordless telephone is possible to use according to General licence No.: VO-R/8/08.2005-23 (for Czech), VPR-7/2001 (for Slovakia). TG161x_171xFX(e).book Page 2 Monday, February 28, 2011 9:11 AM Table of Contents Introduction Model composition.

.

.

. 3 Accessory information

.

.

. 3 General information

.

.

4 Important Information For your safety.

.

.

. Important safety instructions

.

. For best performance

.

. Other information

.

. Specifications.

.

.

. 5 6 6 7 8 Getting Started Setting up.

.

.

.

. 9 Note when setting up

.

.

. 10 Controls

.

.

. 11 Display

.

.

. 13 Turning the power on/off.

.

.

. 13 Initial settings

.

.

. 13 Making/Answering Calls Making calls

.

.

. 15 Answering calls

.

.

. 15 Useful features during a call

.

. 16 Phonebook Handset phonebook.

.

.

. 17 Programming Programmable settings

.

.

. 19 Special programming

..... 21 Caller ID Service Using Caller ID service .

.....

.....

.... 22 Caller list

.....

.....

.....

22 Voice Mail Service Voice mail service

..... 24 Intercom/Locator Intercom.

.....

.....

.....

..... 25 Handset locator

.....

.....

..... 25 Transferring calls, conference calls ...

... 25 Useful Information Character entry

.....

.....

.... Error messages

.....

.....

Troubleshooting

.....

..... Wall mounting

.....

.....

..... 26 28 28 32 Index Index ..

.....

.....

.....

..... 33 2 TG161x_171xFX(e).book Page 3 Monday, February 28, 2011 9:11 AM Introduction Model composition Series KX-TG1611 series Model No. KX-TG1611 KX-TG1612 KX-TG1613 KX-TG1711 series KX-TG1711 KX-TG1712 Base unit Part No.

KX-TG1611 KX-TG1611 KX-TG1611 KX-TG1711 KX-TG1711 Handset Part No. KX-TGA161 KX-TGA161 KX-TGA161 KX-TGA171 KX-TGA171 Quantity 1 2 3 1 2 L The Intercom feature is only available for KX-TG1612, KX-TG1613, and KX-TG1712. @@@@*2 The handset cover comes attached to the handset.

@@@@L In the event of problems, you should contact your equipment supplier in the first instance. L For use in other countries, please contact your equipment supplier. Declaration of Conformity: L Panasonic System Networks Co., Ltd. declares that this equipment is in compliance with the essential requirements and other relevant provisions of Radio & Telecommunications Terminal Equipment (R&TTE) Directive 1999/5/EC. Declarations of Conformity for the relevant Panasonic products described in this manual are available for download by visiting: <http://www.doc.panasonic.de> Contact to Authorised Representative: Panasonic Testing Centre Panasonic Marketing Europe GmbH Winsbergring 15, 22525 Hamburg, Germany For your future reference We recommend keeping a record of the following information to assist with any repair under warranty. Serial No. (found on the bottom of the base unit) Name and address of dealer Date of purchase Attach your purchase receipt here. 4 TG161x_171xFX(e).

book Page 5 Monday, February 28, 2011 9:11 AM Important Information For your safety To prevent severe injury and loss of life/ property, read this section carefully before using the product to ensure proper and safe operation of your product. L Do not allow the AC adaptor or telephone line cord to be excessively pulled, bent or placed under heavy objects. Operating safeguards L Unplug the product from power outlets before cleaning. Do not use liquid or aerosol cleaners. L Do not disassemble the product.

L Do not spill liquids (detergents, cleansers, etc.) onto the telephone line cord plug, or allow it to become wet at all. This may cause a fire. If the telephone line cord plug becomes wet, immediately pull it from the telephone wall jack, and do not use. WARNING Power connection L Use only the power source marked on the product. L Do not overload power outlets and extension cords. This can result in the risk of fire or electric shock. L Completely insert the AC adaptor/power plug into the power outlet. Failure to do so may cause electric shock and/or excessive heat resulting in a fire. L Regularly remove any dust, etc.

L Do not spill liquids (detergents, cleansers, etc.) onto the telephone line cord plug, or allow it to become wet at all. This may cause a fire. If the telephone line cord plug becomes wet, immediately pull it from the telephone wall jack, and do not use. WARNING Power connection L Use only the power source marked on the product. L Do not overload power outlets and extension cords. This can result in the risk of fire or electric shock. L Completely insert the AC adaptor/power plug into the power outlet. Failure to do so may cause electric shock and/or excessive heat resulting in a fire. L Regularly remove any dust, etc.

from the AC adaptor/power plug by pulling it from the power outlet, then wiping with a dry cloth. Accumulated dust may cause an insulation defect from moisture, etc. resulting in a fire. L Unplug the product from power outlets if it emits smoke, an abnormal smell, or makes an unusual noise. These conditions can cause fire or electric shock. Confirm that smoke has stopped emitting and contact an authorised service centre. L Unplug from power outlets and never touch the inside of the product if its casing has been broken open. L Never touch the plug with wet hands. Danger of electric shock exists. Medical L Consult the manufacturer of any personal medical devices, such as pacemakers or hearing aids, to determine if they are adequately shielded from external RF (radio frequency) energy.

(The product operates in the frequency range of 1.88 GHz to 1.90 GHz, and the RF transmission power is 250 mW (max.)) L Do not use the product in health care facilities if any regulations posted in the area instruct you not to do so.

Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy. CAUTION Installation and location L Never install telephone wiring during an electrical storm. L Never install telephone line jacks in wet locations unless the jack is specifically designed for wet locations. L Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface. L Use caution when installing or modifying telephone lines.

L The AC adaptor is used as the main disconnect device. Ensure that the AC outlet is installed near the product and is easily accessible. Installation L To prevent the risk of fire or electrical shock, do not expose the product to rain or any type of moisture. L Do not place or use this product near automatically controlled devices such as automatic doors and fire alarms. Radio waves emitted from this product may cause such devices to malfunction resulting in an accident. 5 TG161x_171xFX(e).book Page 6 Monday, February 28, 2011 9:11 AM Important Information L This product is unable to make calls when: the handset batteries need recharging or have failed. there is a power failure. 4. Use only the power cord and batteries indicated in this manual.

Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions. SAVE THESE INSTRUCTIONS Battery L We recommend using the batteries noted on page 4. USE ONLY rechargeable NiMH batteries AAA (R03) size. L Do not mix old and new batteries. L Do not open or mutilate the batteries. Released electrolyte from the batteries is corrosive and may cause burns or injury to the eyes or skin.



[You're reading an excerpt. Click here to read official PANASONIC KX-TG1611FX user guide](http://yourpdfguides.com/dref/3972930)
<http://yourpdfguides.com/dref/3972930>

The electrolyte is toxic and may be harmful if swallowed. L Exercise care when handling the batteries.

Do not allow conductive materials such as rings, bracelets, or keys to touch the batteries, otherwise a short circuit may cause the batteries and/or the conductive material to overheat and cause burns. L Charge the batteries provided with or identified for use with this product only, in accordance with the instructions and limitations specified in this manual. L Only use a compatible base unit (or charger) to charge the batteries. Do not tamper with the base unit (or charger). Failure to follow these instructions may cause the batteries to swell or explode.

For best performance Base unit location/avoiding noise The base unit and other compatible Panasonic units use radio waves to communicate with each other. L For maximum coverage and noise-free communications, place your base unit: at a convenient, high, and central location with no obstructions between the handset and base unit in an indoor environment. away from electronic appliances such as TVs, radios, personal computers, wireless devices, or other phones. facing away from radio frequency transmitters, such as external antennas of mobile phone cell stations. (Avoid putting the base unit on a bay window or near a window.

) L Coverage and voice quality depends on the local environmental conditions. L If the reception for a base unit location is not satisfactory, move the base unit to another location for better reception. Important safety instructions When using your product, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following: 1. Do not use this product near water for example, near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement or near a swimming pool. 2. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning. 3. Do not use the telephone to report a gas leak in the vicinity of the leak.

Environment L Keep the product away from electrical noise generating devices, such as fluorescent lamps and motors.

L The product should be kept free from excessive smoke, dust, high temperature, and vibration. L The product should not be exposed to direct sunlight. L Do not place heavy objects on top of the product. L When you leave the product unused for a long period of time, unplug the product from the power outlet. 6 TG161x_171xFX(e).book Page 7 Monday, February 28, 2011 9:11 AM Important Information L The product should be kept away from heat sources such as radiators, cookers, etc. It should not be placed in rooms where the temperature is less than 0 °C or greater than 40 °C. Damp basements should also be avoided. L The maximum calling distance may be shortened when the product is used in the following places: Near obstacles such as hills, tunnels, underground, near metal objects such as wire fences, etc. L Operating the product near electrical appliances may cause interference.

Move away from the electrical appliances. mean that used electrical and electronic products and batteries should not be mixed with general household waste.

For proper treatment, recovery and recycling of old products and used batteries, please take them to applicable collection points, in accordance with your national legislation and the Directives 2002/96/EC and 2006/66/EC. By disposing of these products and batteries correctly, you wAC outlet, as the weight of the adaptor may cause it to become disconnected. During a power failure The unit will not work during a power failure.

We recommend connecting a corded-type telephone (without AC adaptor) to the same telephone line or to the same telephone line jack, if you have such a telephone jack in your house. Rechargeable Ni-MH ONLY Note for battery installation L Use the supplied rechargeable batteries. For replacement, we recommend using the Panasonic rechargeable batteries noted on page 4, 6. L Wipe the battery, change this setting according to your telephone line service.

The default setting is "Tone".

"Tone": For tone dial service. "Pulse": For rotary/pulse dial service. 1 2 3 4 5 {j/OK} {r}: "Setup" s {j/OK} {r}: "Dial Mode" s {j/OK} {r}: Select the desired setting. {j/OK} s {ic} 14 TG161x_171xFX(e).book Page 15 Monday, February 28, 2011 9:11 AM Making/Answering Calls Making calls 1 2 3 Lift the handset and dial the phone number. L To correct a digit, press {C}. {C} When you finish talking, press {ic} or place the handset on the base unit or charger. Note: L When editing: To erase a number, place the cursor to the right of where you want to erase the number, then press {C}. To insert a number, place the cursor to the right of where you want to insert the number, then press the appropriate dial key. Adjusting the receiver volume Press {^} or {V} repeatedly while talking.

Pause (for PBX/long distance service users) A pause is sometimes required when making calls using a PBX or long distance service. When storing a calling card access number and/or PIN in the phonebook, a pause is also needed (page 17). Example: If you need to dial the line access number "0" when making outside calls with a PBX: Making a call using the redial list The last 10 phone numbers dialled are stored in the redial list (each 24 digits max.). 1 {>} (R) 2 {r}: Select the desired phone number. L When the number matches a phone number stored in the phonebook, the stored name in the phonebook is displayed. 1 2) s {P} Dial the phone number. s {C} 3 {C} Note: L A 3 second pause is inserted each time {P} is pressed. Repeat as needed to create longer pauses.

Editing/erasing/storing numbers in the redial list 1 2 3 {>} (R) {r}: Select the desired phone number.

s {j/OK} Proceed with the desired operation. Editing a number before calling: {r}: "Edit & Call" s {j/OK} s Press {<} or {>} to move the cursor. s Edit the number. @@@@ @@@@ You do not need to press {C}. @@@@ @@@@ @@@@ @@@@ @@@@ @@@@ {r}: "Mute" s {j/OK} L T is displayed.

To return to the conversation, press {j/OK}. s {r}: "Mute" s {j/OK} Recall/flash {R} allows you to use the special features of your host PBX such as transferring an extension call, or accessing optional telephone services. Note: L To change the recall/flash time, see page 20. For call waiting or Call Waiting Caller ID service users To use call waiting or Call Waiting Caller ID, you must first subscribe with your service provider/telephone company.

@@@@ @@@@@@ @@@@@@ s Edit the number (page 15).

s {C} max.). @@@@ Enter the party's phone number (24 digits max.). @@@@@@ @@@@@@ L To view the phone number, press {j/OK}. s {r}: "Phone No." s {j/OK} To return, press {C}. {C} 1 2 3 During an outside call, press {k}. {r}: Select the desired entry. @@@@@@ @@@@ s {j/OK} 3 Press {V} or {^} to select the desired item in sub-menu 1.



[You're reading an excerpt. Click here to read official PANASONIC KX-TG1611FX user guide](http://yourpdfguides.com/dref/3972930)
<http://yourpdfguides.com/dref/3972930>

s {j/OK} L In some cases, you may need to select from sub-menu 2. s {j/OK} 4 Press {V} or {^} to select the desired setting. @@@@ To turn this feature on, select "Caller ID". To turn this feature off, select "Manual". @@*5 When this feature is set to off, the handset number is displayed. *6 If you subscribe to a Caller ID service and want to view the caller's information after lifting up the handset to answer a call, turn off this feature. *7 Turn this feature off if you prefer not to hear key tones while you are dialling or pressing any keys. *8 The recall/flash time depends on your telephone exchange or host PBX. Contact your PBX supplier if necessary. *9 When using the unit in Czech/Slovakia, select "100 msec." as the recall/flash time. *10 KX-TG1611/KX-TG1711: Although the handset displays these items, these features are not available for this model. *11 To prevent other users from joining your conversations with outside callers, turn this feature on. 20 TG161x_171xFX(e).book Page 21 Monday, February 28, 2011 9:11 AM Programming Special programming Alarm An alarm sounds at the set time (once or daily) for 2 minutes. You can also customise the repeat times and the repeat cycle (snooze function). Alarm can be set for each handset. Example: If you want the alarm to sound 3 times, repeating at 5 minute intervals from 7:00, you need to set the alarm as follows; Time: "07:00" "Repeat Times": "3 Times" "Repeat Cycle": "5 Minutes" Important: L Set the date and time beforehand (page 13). L We recommend selecting a different ringer tone from the one used for outside calls. 13 14 15 {r}: "Volume" s {j/OK} {r}: Select the desired volume.

s {j/OK} {ic} Note: L Press {ic} to stop the alarm completely. L Press any dial key from) to 9, *, or (to stop the sound but keep the set time and/or the snooze function activated. L When the handset is in use, the alarm will not sound until the handset is in standby mode. 1 2 3 4 5 {j/OK} {r}: "Set Time" s {j/OK} {r}: "Alarm" s {j/OK} {r}: "Alarm Mode" s {j/OK} {r}: Select the desired alarm option. s {j/OK} "Off" Turns alarm off. Go to step 15. "Once" An alarm sounds once at the set time. "Daily" An alarm sounds daily at the set time. 6 7 8 Set the desired time. s {j/OK} {r}: "Repeat Times" s {j/OK} {r}: Select the desired setting.

s {j/OK} L If you only want the alarm to sound 1 time, select "Off" and go to step 11. {r}: "Repeat Cycle" s {j/OK} {r}: Select the desired setting. s {j/OK} {r}: "Ringtone" s {j/OK} {r}: Select the desired alarm tone. s {j/OK} 9 10 11 12 21 TG161x_171xFX(e).book Page 22 Monday, February 28, 2011 9:11 AM Caller ID Service Using Caller ID service Important: L This unit is Caller ID compatible. To use Caller ID features, you must subscribe to a Caller ID service. Contact your service provider/telephone company for details. Caller list Important: L Only 1 person can access the caller list at a time. (KX-TG1612/KX-TG1613/KX-TG1712) L Make sure the unit's date and time setting is correct (page 13). Caller ID features When an outside call is being received, the caller's phone number is displayed. Caller information for the last 50 callers is logged in the caller list from the most recent call to the oldest. L If the unit cannot receive caller information, the following is displayed: "Out of Area": The caller dials from an area which does not provide a Caller ID service. @@@@ To switch the display from name to phone number, press {j/OK}. s {r}: "Phone No." s {j/OK} To return, press {C}. @@@@ To return, press {<}. To call back, press {C}. @@@@ s {j/OK} 3 {r}: "Save TEL No." s {j/OK} 4 To store the name, continue from step 3, "Adding entries", page 17. 23 TG161x_171xFX(e).book Page 24 Monday, February 28, 2011 9:11 AM Voice Mail Service Voice mail service Voice mail is an automatic answering service offered by your service provider/telephone company. After you subscribe to this service, your service provider/telephone company's voice mail system answers calls for you when you are unavailable to answer the phone or when your line is busy. Messages are recorded by your service provider/telephone company, not your telephone. When you have new messages, 0 is displayed on the handset if message indication service is available. Please contact your service provider/telephone company for details of this service. Important: L If 0 still remains on the display even after you have listened to new messages, turn it off by pressing and holding {C} for 2 seconds. 24 TG161x_171xFX(e).book Page 25 Monday, February 28, 2011 9:11 AM Intercom/Locator Intercom Available for: KX-TG1612/KX-TG1613/KX-TG1712 Intercom calls can be made between handsets. Note: L If you receive an outside call while talking on the intercom, you hear interrupt tones. To answer the call, press {ic}, then press {C}. L When paging the handset, the paged handset beeps for 1 minute. Transferring calls, conference calls Available for: KX-TG1612/KX-TG1613/KX-TG1712 Outside calls can be transferred or a conference call with an outside party can be made between 2 handsets. 1 2 3 4 5 During an outside call, press {j/OK}. {r}: "Intercom" s {j/OK} L C flashes to indicate the outside call is on hold. Enter the desired handset number you want to transfer to. Wait for the paged party to answer. L If the paged party does not answer, press {C} to return to the outside call. To complete the transfer: Press {ic}. L The outside call is being routed to the destination unit. To establish a conference call: Press {C}. L To leave the conference, press {ic}. The other 2 parties can continue the conversation. Making an intercom call 1 {j/OK} 2 {r}: "Intercom" s {j/OK} 3 To page a specific handset, enter the handset number. L To page all handsets, press *, or {j/OK} again. (KX-TG1613) L To stop paging, press {ic}. 4 When you finish talking, press {ic}. Answering an intercom call 1 Press {C} to answer the page. 2 When you finish talking, press {ic}. Transferring a call without speaking to the other handset user 1 Handset locator You can locate a misplaced handset by paging it. Perform step 1 to 3, "Transferring calls, conference calls", page 25. {ic} L The outside call rings at the other handset. 2 1 2 Base unit: Press {x}. L All registered handsets beep for 1 minute. To stop paging: Base unit: Press {x}. Handset: Press {ic}. Note: L If the other handset user does not answer the call within 30 seconds, the call rings at your handset again. Answering a transferred call Press {C} to answer the page. 25 TG161x_171xFX(e).book Page 26 Monday, February 28, 2011 9:11 AM Useful Information Character entry The dial keys are used to enter characters and numbers.



[You're reading an excerpt. Click here to read official PANASONIC KX-TG1611FX user guide](http://yourpdfguides.com/dref/3972930)
<http://yourpdfguides.com/dref/3972930>

Each dial key has multiple characters assigned to it.

The characters that can be entered depend on the character entry mode (page 26). Press {<} or {>} to move the cursor left or right. Press dial keys to enter characters and numbers. To erase a character or number, place the cursor to the right of where you want to erase the character or number, then press {C}. Press * (Aa) to switch between uppercase and lowercase. To enter another character located on the same dial key, press {>} to move the cursor to the next space, then press the appropriate dial key. If you do not press any dial key within 5 seconds after entering a character, the character is fixed and the cursor moves to the next space. Character entry modes The available character entry modes are Alphabet (ABC), Numeric (0-9), Greek (F), Extended 1 (o), Extended 2 (H), and Cyrillic (I). When in these entry modes except Numeric, you can select which character is entered by pressing a dial key repeatedly.

When the unit displays the character entry screen: {k} s {r}: Select a character entry mode.

s {j/OK} Note: L in the following tables represents a single space. Alphabet character table (ABC) Numeric entry table (0-9) Greek character table (M) 26 TG161x_171xFX(e).book Page 27 Monday, February 28, 2011 9:11 AM Useful Information Extended 1 character table (p) L The following are used for both uppercase and lowercase: Extended 2 character table (O) L The following are used for both uppercase and lowercase: Cyrillic character table (P) 27 TG161x_171xFX(e).book Page 28 Monday, February 28, 2011 9:11 AM Useful Information Error messages Display message Memory Full Cause/solution L

The phonebook memory is full. Erase unwanted entries (page 17).

Troubleshooting If you still have difficulties after following the instructions in this section, disconnect the base unit's AC adaptor and turn off the handset, then reconnect the base unit's AC adaptor and turn on the handset. General use Problem The handset does not turn on even after installing charged batteries.

The unit does not work. Cause/solution L Place the handset on the base unit or charger to turn on the handset. L Make sure the batteries are installed correctly (page 10).

L Fully charge the batteries (page 10). L Check the connections (page 9). L Unplug the base unit's AC adaptor to reset the unit and turn off the handset. Reconnect the adaptor, turn on the handset and try again. L Remove the batteries from the handset and install again. L The handset has not been registered to the base unit. Register the handset (page 31). L The handset is not turned on. Turn the power on (page 13). L Make sure that you are using the supplied telephone line cord.

Your old telephone line cord may have a different wiring configuration. L The base unit's AC adaptor or telephone line cord is not connected. Check the connections. L Disconnect the base unit from the telephone line and connect the line to a known working telephone. If the working telephone operates properly, contact our service personnel to have the unit repaired. If the working telephone does not operate properly, contact your service provider/telephone company. The handset display is blank. I cannot hear a dial tone. 28 TG161x_171xFX(e).book Page 29 Monday, February 28, 2011 9:11 AM Useful Information Problem I cannot use the intercom feature.

*I Cause/solution L This feature is shared between the handsets. @@@@ Cause/solution L Battery needs charging. Fully charge the batteries (page 10). @@@@ L It is time to replace the batteries (page 10). Making/answering calls, intercom Problem w is flashing.

Cause/solution L The handset is too far from the base unit. Move closer. L The base unit's AC adaptor is not properly connected. Reconnect AC adaptor to the base unit. L The handset is not registered to the base unit.

Register it (page 31). L You are using the handset or base unit in an area with high electrical interference. Re-position the base unit and use the handset away from sources of interference. L Move closer to the base unit. @@Contact your DSL/ADSL provider for details. L Unplug the base unit's AC adaptor to reset the unit and turn off the handset. Reconnect the adaptor, turn on the handset and try again. L The ringer volume is turned off. @@Cause/solution L The dialling mode may be set incorrectly. Change the setting (page 14).

L The handset is too far from the base unit. Move closer and try again. @@Cause/solution L You must subscribe to a Caller ID service. Contact your service provider/telephone company for details. @@@@Contact your DSL/ADSL provider for details. L Other telephone equipment may be interfering with this unit. Disconnect the other equipment and try again. L Depending on your service provider/ telephone company, the unit may display the caller's information at the 2nd ring or later. L Move closer to the base unit. L Incorrect time information from incoming Caller ID changes the time.

Set the time adjustment to "Manual" (off) (page 19). Caller information is slow to display. Time on the unit has shifted. Liquid damage Problem Liquid or other form of moisture has entered the handset/base unit. Cause/solution L Disconnect the AC adaptor and telephone line cord from the base unit.

Remove the batteries from the handset and leave to dry for at least 3 days. After the handset/base unit are completely dry, reconnect the AC adaptor and telephone line cord. Insert the batteries and charge fully before use. If the unit does not work properly, contact an authorised service centre. Caution: L To avoid permanent damage, do not use a microwave oven to speed up the drying process.

30 TG161x_171xFX(e).book Page 31 Monday, February 28, 2011 9:11 AM Useful Information Registering a handset to the base unit 1 2 3 4 Handset: {j/OK} {r}: "Setup" s {j/OK} {r}: "Register HS" s {j/OK} Base unit: Press and hold {x} for about 5 seconds. (No registration tone) L If all registered handsets start ringing, press {x} again to stop, then repeat this step. (KX-TG1612/KX-TG1613/KX-TG1712) Handset: Wait until "PIN: ____" is displayed. s Enter the base unit PIN (default: "0000"). s {j/OK} L If you forget your PIN, contact an authorised service centre. L The next step must be completed within 90 seconds. Wait until a long beep is heard and then enter the desired handset number you want to register. L When the handset has been registered successfully, w stops flashing. L If w is still flashing, start again from step 1.

5 6 Deregistering a handset A handset can cancel its own registration to the base unit, or other handsets registered to the same base unit. This allows the handset to end its wireless connection with the system. 1 {j/OK}(131 s Enter the base unit PIN (default: "0000"). L All handsets registered to the base unit are displayed. 2 3 Enter the desired handset number you want to cancel.



[You're reading an excerpt. Click here to read official PANASONIC KX-TG1611FX user guide](http://yourpdfguides.com/dref/3972930)
<http://yourpdfguides.com/dref/3972930>

s {j/OK} L A confirmation tone sounds. {ic} Changing the base unit PIN (Personal Identification Number) Important: L If you change the PIN, please make note of your new PIN. The unit will not reveal the PIN to you. If you forget your PIN, contact an authorised service centre. 1 2 3 4 5 6 {j/OK} {r}: "Setup" s {j/OK} {r}: "Change PIN" s {j/OK} Enter the current 4-digit base unit PIN (default: "0000").

Enter the new 4-digit base unit PIN. Enter the new 4-digit base unit PIN again. s {ic} 31 TG161x_171xFX(e).book Page 32 Monday, February 28, 2011 9:11 AM Useful Information Wall mounting Note: L Make sure that the wall and the fixing method are strong enough to support the weight of the unit. Base unit Available for: KX-TG1611/KX-TG1612/KX-TG1613 Charger 30 mm 25 mm Screws (Not supplied) Screws (Not supplied) Hook Hooks 32 TG161x_171xFX(e).

book Page 33 Monday, February 28, 2011 9:11 AM Index Index A B C Alarm: 21 Answering calls: 15 Auto talk: 15 Battery: 10 Caller ID service: 22 Caller list: 22 Caller list edit: 22 Call share: 16 Call waiting: 16 Call Waiting Caller ID: 16 Chain dial: 17 Character entry: 26 Conference calls: 25 Control type: 12 Date and time: 13 Dialling mode: 14 Display Contrast: 20 Language: 13 Error messages: 28 Handset Deregistration: 31 Locator: 25 Registration: 31 Intercom: 25 Keytones: 20 Making calls: 15 Missed calls: 22 Mute: 16 Pause: 15 Phonebook: 17 PIN: 31 Power failure: 10 Power on/off: 13 Privacy mode: 20 Recall/flash: 16 Redialling: 15 Ringer tone: 19 Temporary tone dialling: 16 Time adjustment: 19 Transferring calls: 25 Troubleshooting: 28 Voice mail: 24 Volume Receiver: 15 Ringer (Handset): 16 Wall mounting: 32 D E H I K M P R T V W 33 TG161x_171xFX(e).book Page 34 Monday, February 28, 2011 9:11 AM Notes 34 TG161x_171xFX(e).book Page 35 Monday, February 28, 2011 9:11 AM Notes 35 TG161x_171xFX(e).book Page 36 Monday, February 28, 2011 9:11 AM Sales Department: N Czech N Slovakia Thámova 289/13 (Palác Karlín) 186 00 Praha 8 +420-236 032 511 telefon: centrální fax: +420-236 032 411 zákaznická linka: +420-236 032 911 e-mail: panasonic.praha@eu.

panasonic.com e-mail: servis.praha@eu.panasonic.com aktuální info na www.panasonic.cz Stúrova 11, 811 02 Bratislava, Slovenská republika Telefón: +421-2-2062-2211 Fax: +421-2-2062-2313 zákaznická linka: +421-2-2062-2911 e-mail: servis.bratislava@eu.panasonic.com aktuálne info na www.

panasonic.sk N Romania B-dul Preciziei, Nr. 24, West Gate Park, Cldirea H3, Etaj 2, Sector 6, Bucureti, 062204, Romania Telefon: +40.21.316.31.61 Fax: +40.21.316.04.

46 e-mail: suport.clienti@eu.panasonic.com web: www.panasonic.

ro 1-62, 4-chome, Minoshima, Hakata-ku, Fukuoka 812-8531, Japan © Panasonic System Networks Co., Ltd. 2011 PNQX3223YA TC0211MU1021 (A) FX-2/3.



[You're reading an excerpt. Click here to read official PANASONIC KX-TG1611FX user guide](#)
<http://yourpdfguides.com/dref/3972930>