




# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for PANASONIC KX-TG8061E. You'll find the answers to all your questions on the PANASONIC KX-TG8061E in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual PANASONIC KX-TG8061E**  
**User guide PANASONIC KX-TG8061E**  
**Operating instructions PANASONIC KX-TG8061E**  
**Instructions for use PANASONIC KX-TG8061E**  
**Instruction manual PANASONIC KX-TG8061E**

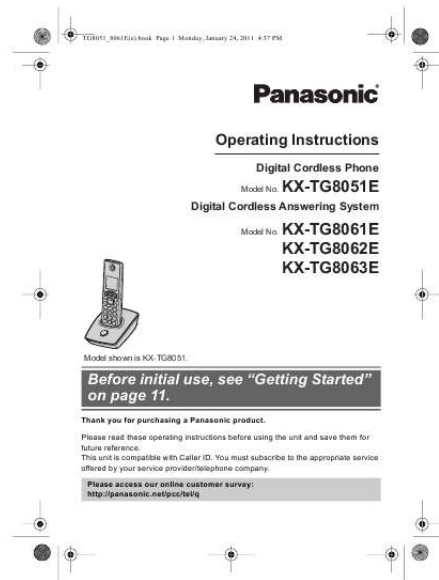

[You're reading an excerpt. Click here to read official PANASONIC KX-TG8061E user guide](http://yourpdfguides.com/dref/3972510)  
<http://yourpdfguides.com/dref/3972510>

**Manual abstract:**

@@@@.....  
.....  
... 3 Accessory information .  
.....  
..... 4 General information ....  
.....  
..... 6 Intercom/Locator Intercom .....  
.....  
.....  
.. 40 Handset locator.....  
.....  
... 40 Transferring calls, conference calls.  
.....  
. 40 Important Information For your safety. ....  
.....  
... 7 Important safety instructions .  
.....  
..... 8 For best performance ....  
.....  
... 8 Other information ..  
.....  
..... 9 Specifications. ....  
.....  
..... 10 Useful Information Character entry ...  
.....  
.....  
... 41 Error messages.  
.....  
.....  
. 43 Troubleshooting ....  
.....  
.....  
.. 44 Belt clip.....  
.....  
.....  
.....  
48 Wall mounting .....  
.....  
... 48 Conditions of guarantee .....  
.....  
..... 49 Getting Started Setting up..  
.....  
.....  
.....  
... Note when setting up .....  
.....  
.....  
. Controls .....

.....  
.....  
... *Display* ...  
.....

.....  
.....  
. *Screen saver mode* ....  
.....

..... *Turning the power on/off* .....  
.....  
... *Initial settings* ..  
.....

.....  
. *One touch eco mode* ....  
.....  
..... *Display mode* ..

.....  
.....  
.....  
. 11 12 13 14 16 16 17 17 18 18 19 20 *Index Index* .....

.....  
.....  
.....

50 *Making/Answering Calls Making calls* .....

.....  
... *Answering calls* .  
.....  
.....

..... *Useful features during a call* .....

.....  
. *Key lock* ....  
.....

.....  
... *Phonebook Handset phonebook.* .  
.....  
.....

. 21 *Copying phonebook entries* .....

... 22 *Programming Programmable settings* ..  
.....

..... 24 *Special programming* ..

.....  
.....

28 *Registering a unit.* ....  
.....

..... 30 *Caller ID Service Using Caller ID service* .....

.....  
.....

32 *Caller list* .....

.....  
.....

. 32 *Answering System Answering system* ....  
.....

..... *Turning the answering system on/off* .....

..... *Greeting message* .....

.....  
..... Listening to messages using the base unit Listening to messages using the handset .

Remote operation .....

.....  
.... Answering system settings .

.....

. 34 34 35 35 36 37 38 Voice Mail Service Voice mail service .....

.....

.....

39 2 TG8051\_8061E(e).book Page 3 Monday, January 24, 2011 4:37 PM Introduction Model composition Series KX-TG8051 series KX-TG8061 series Model No. KX-TG8051 KX-TG8061 KX-TG8062 KX-TG8063 Base unit Part No. KX-TG8051 KX-TG8061 KX-TG8061 KX-TG8061 Handset Part No. KX-TGA805 KX-TGA805 KX-TGA805 KX-TGA805 Quantity 1 1 2 3 L The suffix (E) in the following model numbers will be omitted in these instructions: KX-TG8051E/KX-TG8061E/KX-TG8062E/KX-TG8063E Feature differences Series KX-TG8051 series KX-TG8061 series Answering system r Intercom Between handsets r\*1 r\*1 \*1 Single handset models: Intercom calls can be made between handsets by purchasing and registering one or more optional handsets (page 5). Helpline Tel. No.: U.K. 0844 844 3898 Ireland 01289 8333 3 TG8051\_8061E(e).

book Page 4 Monday, January 24, 2011 4:37 PM Introduction Accessory information Supplied accessories Quantity No. 1 2 3 4 5 6 Accessory item/Part number AC adaptor/PNLV226EZ Telephone line cord/ PNJA1037Z (for U.K.) Rechargeable batteries\*1 Handset cover\*2 Belt clip/PNKE1105Z1 Charger/PNLC1019ZB KX-TG8051 KX-TG8061 1 1 2 1 1 -- KX-TG8062 2 1 4 2 2 1 KX-TG8063 3 1 6 3 3 2 \*1 See page 4 for replacement battery information. \*2 The handset cover comes attached to the handset. 1 2 3 4 5 6 Additional/replacement accessories Please contact your nearest Panasonic dealer for sales information. Accessory item Rechargeable batteries Model number HHR-4NGE (P03P) or HHR-4MRE (P03I)\*1 Battery type: Nickel metal hydride (Ni-MH) 2 x AAA (R03) size for each handset KX-TCA94EX, RP-TCA400, RP-TCA430 KX-A405 Headset DECT repeater \*1 Replacement batteries may have a different capacity from that of the supplied batteries. 4 Helpline Tel. No.: U.

K. 0844 844 3898 Ireland 01289 8333 TG8051\_8061E(e).book Page 5 Monday, January 24, 2011 4:37 PM Introduction Expanding your phone system You can expand your phone system by registering optional handsets (6 max.) to a single base unit. L Optional handsets may be a different colour from that of the supplied handsets.

Handset (optional): KX-TGA806E Sales and support information Customer Communication Centre L L L L For customers within the U.K.: 0844 844 3898 For customers within Ireland: 01289 8333 Visit our website for product information: [www.panasonic.co](http://www.panasonic.co).

uk E-mail: [customer.care@panasonic.co.uk](mailto:customer.care@panasonic.co.uk) Direct Sales at Panasonic U.K. L Order accessory and consumable items for your product with ease and confidence by phoning our Customer Communication Centre Monday - Thursday 9:00am - 5:30pm, Friday 9:30am 5:30pm (Excluding public holidays). L Or go on line through our Internet Accessory ordering application at [www.pas-europe.com](http://www.pas-europe.com) L Most major credit and debit cards accepted. L All enquiries transactions and distribution facilities are provided directly by Panasonic U.

K. Ltd. L It couldn't be simpler! L Also available through our Internet is direct shopping for a wide range of finished products, take a browse on our website for further details. Helpline Tel. No.: U.K. 0844 844 3898 Ireland 01289 8333 5 TG8051\_8061E(e).book Page 6 Monday, January 24, 2011 4:37 PM

Introduction General information L This equipment is designed for use on the U.K.

and Ireland analogue telephone network. L In the event of problems, you should contact your equipment supplier in the first instance. Declaration of Conformity: L Panasonic System Networks Co., Ltd. declares that this equipment is in compliance with the essential requirements and other relevant provisions of Radio & Telecommunications Terminal Equipment (R&TTE) Directive 1999/5/EC.

Declarations of Conformity for the relevant Panasonic products described in this manual are available for download by visiting:

<http://www.doc.panasonic.de> Contact to Authorised Representative: Panasonic Testing Centre Panasonic Marketing Europe GmbH Winsbergring 15, 22525 Hamburg, Germany For your future reference We recommend keeping a record of the following information to assist with any repair under warranty. Serial No.

(found on the bottom of the base unit) Name and address of dealer Date of purchase Attach your purchase receipt here. 6 Helpline Tel. No.: U.K. 0844 844 3898 Ireland 01289 8333 TG8051\_8061E(e).book Page 7 Monday, January 24, 2011 4:37 PM Important Information For your safety To prevent severe injury and loss of life/ property, read this section carefully before using the product to ensure proper and safe operation of your product. L Do not allow the AC adaptor or telephone line cord to be excessively pulled, bent or placed under heavy objects. Operating safeguards L Unplug the product from power outlets before cleaning. Do not use liquid or aerosol cleaners.

L Do not disassemble the product. L Do not spill liquids (detergents, cleansers, etc.) onto the telephone line cord plug, or allow it to become wet at all. This may cause a fire. If the telephone line cord plug becomes wet, immediately pull it from the telephone wall jack, and do not use.



[You're reading an excerpt. Click here to read official PANASONIC](#)

[KX-TG8061E user guide](#)

<http://yourpdfguides.com/dref/3972510>

L The use of excessive sound volume through earphones, headphones, or headsets may cause hearing loss. L Do not place a handset on the base unit with the headset jack cover opened. **WARNING** Power connection L Use only the power source marked on the product. L Do not overload power outlets and extension cords. This can result in the risk of fire or electric shock.

L Completely insert the AC adaptor/power plug into the power outlet. Failure to do so may cause electric shock and/or excessive heat resulting in a fire. L Regularly remove any dust, etc. from the AC adaptor/power plug by pulling it from the power outlet, then wiping with a dry cloth. Accumulated dust may cause an insulation defect from moisture, etc. resulting in a fire. L Unplug the product from power outlets if it emits smoke, an abnormal smell, or makes an unusual noise. These conditions can cause fire or electric shock. Confirm that smoke has stopped emitting and contact an authorised service centre. L Unplug from power outlets and never touch the inside of the product if its casing has been broken open.

L Never touch the plug with wet hands. Danger of electric shock exists. Medical L Consult the manufacturer of any personal medical devices, such as pacemakers or hearing aids, to determine if they are adequately shielded from external RF (radio frequency) energy. (The product operates in the frequency range of 1.88 GHz to 1.90 GHz, and the RF transmission power is 250 mW (max.)) L Do not use the product in health care facilities if any regulations posted in the area instruct you not to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy. Installation L To prevent the risk of fire or electrical shock, do not expose the product to rain or any type of moisture.

L Do not place or use this product near automatically controlled devices such as automatic doors and fire alarms. Radio waves emitted from this product may cause such devices to malfunction resulting in an accident. **CAUTION** Installation and location L Never install telephone wiring during an electrical storm. L Never install telephone line jacks in wet locations unless the jack is specifically designed for wet locations. L Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface. Helpline Tel. No.: U.K. 0844 844 3898 Ireland 01289 8333 7 TG8051\_8061E(e).

book Page 8 Monday, January 24, 2011 4:37 PM Important Information L Use caution when installing or modifying telephone lines. L The AC adaptor is used as the main disconnect device. Ensure that the AC outlet is installed near the product and is easily accessible. L This product is unable to make calls when: the handset batteries need recharging or have failed. there is a power failure.

the key lock feature is turned on. kitchen sink, or laundry tub, in a wet basement or near a swimming pool. 2. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.

3. Do not use the telephone to report a gas leak in the vicinity of the leak. 4. Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions. **SAVE THESE INSTRUCTIONS** Battery L We recommend using the batteries noted on page 4. **USE ONLY** rechargeable NiMH batteries AAA (R03) size. L Do not mix old and new batteries.

L Do not open or mutilate the batteries. Released electrolyte from the batteries is corrosive and may cause burns or injury to the eyes or skin. The electrolyte is toxic and may be harmful if swallowed. L Exercise care when handling the batteries. Do not allow conductive materials such as rings, bracelets, or keys to touch the batteries, otherwise a short circuit may cause the batteries and/or the conductive material to overheat and cause burns. L Charge the batteries provided with or identified for use with this product only, in accordance with the instructions and limitations specified in ton. For business users in the European Union If you wish to discard electrical and electronic equipment, please contact your dealer or supplier for further information. Information on Disposal in other Countries outside the European Union These symbols (1, 2, 3) are only valid in the European Union. If you wish to discard these items, please contact your local authorities or Helpline Tel. No.

: U.K. 0844 844 3898 Ireland 01289 8333 9 TG8051\_8061E(e).book Page 10 Monday, January 24, 2011 4:37 PM Important Information dealer and ask for the correct method of disposal. Note for the battery symbol This symbol (2) might be used in combination with a chemical symbol (3).

In this case it complies with the requirement set by the Directive for the chemical involved. Specifications Standard: DECT (Digital Enhanced Cordless Telecommunications), GAP (Generic Access Profile) Frequency range: 1.88 GHz to 1.90 GHz RF transmission power: Approx. 10 mW (average power per channel) Power source: 220/240 V AC, 50/60 Hz Power consumption: Base unit\*1: Standby: Approx.

0.4 W Maximum: Approx. 2.3 W Base unit\*2: Standby: Approx. 0.5 W Maximum: Approx. 2.4 W Charger: Standby: Approx. 0.1 W Maximum: Approx.

1.8 W Operating conditions: 0 °C/40 °C, 20 %/80 % relative air humidity (dry) \*1 KX-TG8051 \*2 KX-TG8061/KX-TG8062/KX-TG8063 Note: L Design and specifications are subject to change without notice. L The illustrations in these instructions may vary slightly from the actual product. 10 Helpline Tel. No.: U.K. 0844 844 3898 Ireland 01289 8333 TG8051\_8061E(e).book Page 11 Monday, January 24, 2011 4:37 PM Getting Started Setting up Connections L Use only the supplied Panasonic AC adaptor PNLV226E. L When mounting the unit on a wall, see page 48.

Base unit (KX-TG8051) Base unit (KX-TG8061/KX-TG8062/ KX-TG8063) Press plug firmly. "Click" Hook (220-240 V AC, 50/60 Hz) Use only the supplied telephone line cord. (DSL/ADSL filter\*) To telephone line Press plug firmly. "Click" Hook (220-240 V AC, 50/60 Hz) Correct Use only the supplied telephone line cord. (DSL/ADSL filter\*) To telephone line Wrong Correct Wrong \*DSL/ADSL filter (not supplied) is required if you have DSL/ADSL service.

Charger \*DSL/ADSL filter (not supplied) is required if you have DSL/ADSL service. Hooks (220-240 V AC, 50/60 Hz) Helpline Tel. No.: U.K. 0844 844 3898 Ireland 01289 8333 11 TG8051\_8061E(e).book Page 12 Monday, January 24, 2011 4:37 PM Getting Started Battery installation L **USE ONLY Ni-MH batteries AAA (R03) size.** L Do NOT use Alkaline/Manganese/Ni-Cd batteries. L Confirm correct polarities (S, T). Note when setting up Note for connections L The AC adaptor must remain connected at all times. (It is normal for the adaptor to feel warm during use.) L The AC adaptor should be connected to a vertically oriented or floor-mounted AC outlet.



[You're reading an excerpt. Click here to read official PANASONIC KX-TG8061E user guide](http://yourpdfguides.com/dref/3972510)  
<http://yourpdfguides.com/dref/3972510>

Do not connect the AC adaptor to a ceiling-mounted AC outlet, as the weight of the adaptor may cause it to become disconnected. During a power failure Rechargeable Ni-MH ONLY The unit will not work during a power failure. We recommend connecting a corded-type telephone (without AC adaptor) to the same telephone line or to the same telephone line jack using a T-adaptor.

Your Panasonic sales shop can offer you more information about connection possibilities. Note for battery installation L When the date and time setting is displayed, see page 16. L Use the supplied rechargeable batteries. For replacement, we recommend using the Panasonic rechargeable batteries noted on page 4, 8. L Wipe the battery ends (S, T) with a dry cloth. L Avoid touching the battery ends (S, T) or the unit contacts. Battery charging Charge for about 7 hours. L When the batteries are fully charged, the charge indicator goes off and "Fully charged" is displayed. Note for battery charging L It is normal for the handset to feel warm during charging. L Clean the charge contacts of the handset, base unit, and charger with a soft and dry cloth once a month.

Clean more often if the unit is exposed to grease, dust, or high humidity. Confirm "Charging" is displayed. Charge indicator 12 Helpline Tel. No.: U.K. 0844 844 3898 Ireland 01289 8333 TG8051\_8061E(e).book Page 13 Monday, January 24, 2011 4:37 PM Getting Started Battery level Icon & ( ) 0/4 Battery level High Medium Low Needs charging. Controls Base unit KX-TG8051 A B Panasonic Ni-MH battery performance (supplied batteries) Operation

In continuous use Not in use (standby) Operating time 13 hours max. 250 hours max.

A {x} (Locator) B Charge contacts KX-TG8061/KX-TG8062/KX-TG8063 Note: L It is normal for batteries not to reach full capacity at the initial charge. Maximum battery performance is reached after a few complete cycles of charge/discharge (use). L Actual battery performance depends on usage and ambient environment. L Even after the batteries are fully charged, the handset can be left on the base unit or charger without any ill effect on the batteries. L The battery level may not be displayed correctly after you replace the batteries. In this case, place the handset on the base unit or charger and let it charge for at least 7 hours. A B C D E F G A B C D E F G H I J H I J Message counter {4} (Erase) {6} (Play) Message indicator Charge contacts Speaker {} (Stop) {7}/{8} (Repeat/Skip) {+}/{-} (Volume up/down) {x} (Locator) {s} (Answer on) Answer on indicator Helpline Tel. No.: U.K.

0844 844 3898 Ireland 01289 8333 13 TG8051\_8061E(e).book Page 14 Monday, January 24, 2011 4:37 PM Getting Started Handset A H K {ECO/R} ECO: Eco mode shortcut key R: Recall/Flash L Microphone M Charge contacts Control type A Soft keys The handset features 3 soft keys. By pressing a soft key, you can select the feature shown directly above it on the display. B Navigator key {^}, {V}, {<}, or {>}: Scroll through various lists and items. ? (Volume: {^} or {V}): Adjust the receiver or speaker volume while talking. {<} (y: Caller list): View the caller list. {>} (R: Redial): View the redial list. L As all multiple items cannot be displayed on screen at the same time, you can quickly search the desired item to move screens by pressing {>} or {<}, instead of scrolling down or up line by line (page 17). I B C D E F G J K L M A Display Handset display items Item l Meaning Range status: The more bars visible, the closer the handset is to the base unit. Out of base unit range Paging, intercom mode Speakerphone is on.

(page 18) The line is in use. L When flashing slowly: The call is put on hold. L When flashing rapidly: An incoming call is now being received. Missed call\*1 (page 32) B A Charge indicator Ringer indicator B Secure grip L Secure grip offers support when you cradle the handset between your shoulder and ear. C

Speaker D Headset jack E {C} (Talk) F {s} (Speakerphone) G Dial keypad H Receiver I Display J {ic} (Off/Power) \_ x s C y 14 Helpline Tel. No.: U.K. 0844 844 3898 Ireland 01289 8333 TG8051\_8061E(e).book Page 15 Monday, January 24, 2011 4:37 PM Getting Started Item i Meaning The base unit transmission power is set to "Low".

(page 17) The key backlight is off. (page 26) L When displayed next to the battery icon: Answering system is on.\*2 (page 34) L When displayed with a number: New messages have been recorded.\*2 (page 36) Answering system answers calls with a greeting message and caller messages are not recorded.\*2 ("Selecting "Greeting Only"", page 38) Battery level Alarm is on. (page 28) Equalizer is set. (page 19) Privacy mode is on. (page 27) Ringer volume is off. (page 26) Night mode is on. (page 28) Blocked call\*1 (page 29, 33) New voice mail message received.

\*3 (page 39) Someone is using the line. Answering system is being used by another handset or the base unit.\*2 H n ~ m b ) / t 0 Base unit display items KX-TG8061/KX-TG8062/KX-TG8063 Item -Meaning Answering system answers calls with a greeting message and caller messages are not recorded. ("Selecting "Greeting Only"", page 38) k K Handset soft key icons Icon ^ 1 M j J L / Z Action Returns to the previous screen or outside call. Displays the menu. Accepts the current selection. Displays a previously dialled phone number. Makes a call. (page 18) Temporarily turns off the ringer for incoming calls. (page 18) Sets 24-hour or 12-hour clock format.

(page 17) Switches the wallpaper to display with or without date and time. (page 27) Places a call on hold. Opens the phonebook. Allows you to edit phone numbers. (page 30, 33) Adds new entry.

(page 21, 29) Displays the phonebook search menu. Turns the key lock feature off. (page 20) Selects a character entry mode. Selects categories or handsets. (page 29, 30) Plays a message.

\*1 d & z 6 x ~ f 7 t Line in use IN USE \*1 Caller ID subscribers only \*2 KX-TG8061/KX-TG8062/KX-TG8063 \*3 Voice mail subscribers only Helpline Tel. No.: U.K. 0844 844 3898 Ireland 01289 8333 15 TG8051\_8061E(e).book Page 16 Monday, January 24, 2011 4:37 PM Getting Started Icon O I I W a Action Stops recording or playback.\*1 Stores phone numbers. (page 29, 33). Inserts a dialling pause. Erases the selected item or returns to the outside call.

Switches display mode between single item and multiple items. (page 17) Allows you to make an intercom call. (page 40) Erases a number/character. Puts the call on mute. Turning the power on/off Power on Press {ic} for about 1 second. Power off Press {ic} for about 2 seconds. 4 ^ 1 Initial settings Direct command code: Programmable settings can be accessed by pressing 1 (middle soft key), ( and then the corresponding code on the dial keypad (page 24).

Example: Press 1 (middle soft key) (1)1. Symbol meaning: Example: {r}: "Off" Press {V} or {^} to select the words in quotations.



[You're reading an excerpt. Click here to read official PANASONIC KX-TG8061E user guide](http://yourpdfguides.com/dref/3972510)

<http://yourpdfguides.com/dref/3972510>

\*1 KX-TG8061/KX-TG8062/KX-TG8063 Handset main menu icons The following icons are shown when you press down on the middle soft key in standby mode.

Icon j s z x ( 7 E Feature Caller List Answer System\*1 Time Settings Intercom Ringer Setup Caller Barred\*2 Initial Setup Display language 1 1 (middle soft key) (1) 2 {r}: Select your desired language. s M 3 {ic} \*1 KX-TG8061/KX-TG8062/KX-TG8063 \*2 KX-TG8051 Date and time Important: L When you install the batteries for the first time, the handset may prompt you to set date and time. First press M, then proceed to step 2. Screen saver mode The backlight goes dark when on a call or turns off completely after 1 minute of inactivity if the handset is not on the base unit or charger. Activate the handset display again by: pressing {<} or {>} when on a call.

pressing {ic} at all other times. 1 2 1 (middle soft key) (1)1 Enter the current date, month, and year. sM Example: 15 July, 2011 15 )7 11 16 Helpline Tel. No.: U.

K. 0844 844 3898 Ireland 01289 8333 TG8051\_8061E(e).book Page 17 Monday, January 24, 2011 4:37 PM Getting Started L You can select the date format by pressing (: dd/mm/yy (date/month/year) yy/mm/dd Display mode You can select to display either a single item or multiple items on one screen at a time for the following features: handset main menu icons in function menu menu list, recorded message list\*1, phonebook list, caller list, and redial list \*1 KX-TG8061/KX-TG8062/KX-TG8063 Select the desired setting: "Multi Items": Multiple entries/all menu icons are shown on one screen at a time. "Single Item": An entry/a menu icon is shown on one screen in large characters at a time. The default setting is "Multi Items". 3 Enter the current hour and minute. Example: 9:30 )9 3) L You can select 24-hour or 12-hour clock format ("AM" or "PM") by pressing /. M s {ic} 4 Note: L The date and time may be incorrect after a power failure. In this case, set the date and time again. One touch eco mode The {ECO/R} button on the handset enables you to activate the eco function with one touch.

By activating eco mode, your unit can reduce the base unit transmission power by up to 90% in standby mode. You can turn on/off one touch eco mode by just pressing {ECO/R}. The default setting is "Normal". When the one touch eco mode is on: "Low" is temporarily displayed and i is shown on the handset display instead of w. When the one touch eco mode is off: "Normal" is temporarily displayed and i goes off from the handset display. Note: L When there is another cordless phone nearby and it is in use, the base unit transmission power may not be reduced. L Activating one touch eco mode reduces the range of the base unit in standby mode. L If you set the repeater mode to "On" (page 31): One touch eco mode is cancelled. "Eco Setup" is not shown in the display menu (page 26). Using soft key (Temporarily switching the display mode) You can temporarily switch the display mode by pressing a shown when viewing the lists or selecting menu icons.

Programming the display mode beforehand 1 2 1 (middle soft key) (192 {r}: Select the desired setting. s M s {ic} Note: L When in multiple items display mode, you can move screens by pressing {>} or {<}, without scrolling down or up through the list: Press {>} to go to the next screen. Press {<} to return to the previous screen. L When in multiple items display mode, you can switch the screen to confirm the detailed information by pressing a. Helpline Tel.

No.: U.K. 0844 844 3898 Ireland 01289 8333 17 TG8051\_8061E(e).book Page 18 Monday, January 24, 2011 4:37 PM Making/Answering Calls Making calls 1 2 3 Lift the handset and dial the phone number.

L To correct a digit, press ^ . Press {C} or ]. When you finish talking, press {ic} or place the handset on the base unit or charger. Example: If you need to dial the line access number "0" when making outside calls with a PBX: 1 2 )sl Dial the phone number. s {C} Note: L A 3 second pause is inserted each time l is pressed. Repeat as needed to create longer pauses. Using the speakerphone 1 2 Dial the phone number and press {s}. L Speak alternately with the other party. When you finish talking, press {ic}. Answering calls When a call is being received, the ringer indicator flashes rapidly.

Note: L For best performance, use the speakerphone in a quiet environment. L To switch back to the receiver, press {s}/{C}. 1 Lift the handset and press {C} or {s} when the unit rings. L You can also answer the call by pressing any dial key from ) to 9, \*, or (. (Any key answer feature) When you finish talking, press {ic} or place the handset on the base unit or charger. 2 Adjusting the receiver or speaker volume Press {^} or {V} repeatedly while talking. Auto talk You can answer calls simply by lifting the handset off the base unit or charger. You do not need to press {C}. To turn this feature on, see page 27. Making a call using the redial list The last 10 phone numbers dialled are stored in the redial list (each 24 digits max).

). 1 j (right soft key) or {>} (R) 2 {r}: Select the desired phone number. 3 {C} Adjusting the handset ringer volume While the handset is ringing for an incoming call: Press {^} or {V} repeatedly to select the desired volume. Programming the volume beforehand: 1 1 (middle soft key) (16) 2 {r}: Select the desired volume. 3 M s {ic} Erasing a number in the redial list 1 2 3 j (right soft key) or {>} (R) {r}: Select the desired phone number. sW {r}: "Yes" s M s {ic} Pause (for PBX/long distance service users) A pause is sometimes required when making calls using a PBX or long distance service. When storing a calling card access number and/or PIN in the phonebook, a pause is also needed (page 22). Temporary handset ringer off While the handset is ringing for a call, you can turn the ringer off temporarily by pressing L. 18 Helpline Tel. No.

: U.K. 0844 844 3898 Ireland 01289 8333 TG8051\_8061E(e).book Page 19 Monday, January 24, 2011 4:37 PM Making/Answering Calls Useful features during a call Hold This feature allows you to put an outside call on hold. This feature allows you to receive calls while you are already talking on the phone. If you receive a call while on the phone, you will hear a call waiting tone. If you subscribe to both Caller ID and Call Waiting with Caller ID services, the 2nd caller's information is displayed after you hear the call waiting tone on the handset. 1 2 3 Press 1 during an outside call. {r}: "Hold" s M To release hold, press {C}. L Another handset user can take the call by pressing {C}.

1 2 Press {ECO/R} to answer the 2nd call. To switch between calls, press {ECO/R}. Note: L Please contact your service provider/ telephone company for details and availability of this service in your area.



[You're reading an excerpt. Click here to read official PANASONIC KX-TG8061E user guide](http://yourpdfguides.com/dref/3972510)  
<http://yourpdfguides.com/dref/3972510>

Note: L If a call is kept on hold for more than 9 minutes, an alarm tone starts to sound and the ringer indicator flashes rapidly. After 1 additional minute on hold, the call is disconnected. L If another phone is connected to the same line, you can also take the call by lifting its handset. Handset equalizer This feature clarifies the voice of the person you are talking to, producing a more natural sounding voice that is easier to hear and understand. Mute While mute is turned on, you can hear the other party, but the other party cannot hear you. 1 2 3 4 Press 1 while talking. {r}: "Equalizer" s M {r}: Select the desired setting. Press M to exit. 1 2 Press 1 during conversation. L 1 flashes. To return to the conversation, press 1 again. Recall/flash (ECO/R) allows you to use the special features of your host PBX such as transferring an extension call, or accessing optional telephone services.

Note: L To change the recall/flash time, see page 27. Note: L When this feature is turned on, 6 is displayed while talking. L Depending on the condition and quality of your telephone line, this feature may emphasise existing line noise. If it becomes difficult to hear, turn this feature off. L This feature is not available while using the speakerphone.

Call share You can join an existing outside call. To join the conversation, press {C} when the other handset is on an outside call. Note: L To prevent other users from joining your conversations with outside callers, turn the privacy mode on (page 27). For call waiting or Call Waiting Caller ID service users To use call waiting or Call Waiting Caller ID, you must first subscribe with your service provider/telephone company. Helpline Tel. No.: U.K. 0844 844 3898 Ireland 01289 8333 19 TG8051\_8061E(e).book Page 20 Monday, January 24, 2011 4:37 PM Making/Answering Calls Key lock The handset can be locked so that no calls or settings can be made.

Incoming calls can be answered, but all other functions are disabled while key lock is on. To turn key lock on, press 1 for about 3 seconds. L ) is displayed. L To turn key lock off, press ) for about 3 seconds. Note: L Calls to emergency numbers cannot be made until key lock is turned off. 20 Helpline Tel. No.: U.K. 0844 844 3898 Ireland 01289 8333 TG8051\_8061E(e).

book Page 21 Monday, January 24, 2011 4:37 PM Phonebook Handset phonebook The phonebook allows you to make calls without having to dial manually.

You can add 200 names and phone numbers, assign each phonebook entry to the desired category. Finding and calling from a phonebook entry Scrolling through all entries Adding entries 1 n (left soft key) s m 2 Enter the party's name (16 characters 1 2 n (left soft key) {r}: Select the desired entry. L You can scroll through the phonebook entry by pressing and holding {V} or {^}. {C} max.

. s M L You can change the character entry mode by pressing / (page 41). Enter the party's phone number (24 digits max.). s M {r}: Select the desired category.

s M 2 times L To add other entries, repeat from step 2. {ic} 3 1 Searching by first character n (left soft key) L Change the character entry mode if necessary: b s {r}: "Character Set" s M s {r}: Select the character entry mode. s M Press the dial key ( ) to 9, or ( ) which contains the character you are searching for (page 41). L Press the same dial key repeatedly to display the first entry corresponding to each character located on that dial key. L If there is no entry corresponding to the character you selected, the next entry is displayed. {r}: Scroll through the phonebook if necessary. {C} 3 4 5 2 Categories Categories can help you find entries in the phonebook quickly and easily. When adding an entry to the phonebook, you can assign it to one of 9 categories. You can change the names of categories assigned for phonebook entries ("Friends", "Family", etc.) and then search for phonebook entries by category.

The category ringer tone feature is available for Caller ID subscribers (page 32). 3 4 1 2 3 4 5 Changing category names 1 2 3 4 5 n (left soft key) s 1 {r}: "Category" s M {r}: Select the desired category. s M {r}: "Category Name" s M Edit the name (10 characters max.; page 41). s M s {ic} Searching by category n (left soft key) s b {r}: "Category" s M {r}: Select the desired category. s M L If you select "All", the unit ends the category search. {r}: Scroll through the phonebook if necessary. {C} Helpline Tel. No.: U.

K. 0844 844 3898 Ireland 01289 8333 21 TG8051\_8061E(e).book Page 22 Monday, January 24, 2011 4:37 PM Phonebook Editing entries 1 Find the desired entry (page 21). s 1 2 {r}: "Edit" s M 3 Edit the name if necessary (16 characters max.; page 41).

s M Making a call using a speed dial key 1 Press and hold the desired speed dial key (1 to 9). L You can view other speed dial assignments by pressing {V} or {^}. {C} 4 5 Edit the phone number if necessary (24 digits max.). s M {r}: Select the desired category.

s M 2 times s {ic} 2 1 2 Cancelling a speed dial assignment Press and hold the desired speed dial key (1 to 9). s W {r}: "Yes" s M s {ic} Erasing entries Erasing an entry Chain dial This feature allows you to dial phone numbers in the phonebook while you are on a call. This feature can be used, for example, to dial a calling card access number or bank account PIN that you have stored in the phonebook, without having to dial manually. 1 2 1 2 3 4 Find the desired entry (page 21). W s {r}: "Yes" s M s {ic} Erasing all entries n (left soft key) s 1 {r}: "Erase All" s M {r}: "Yes" s M {r}: "Yes" s M s {ic} 1 2 3 4 During an outside call, press 1. {r}: "Phonebook" s M {r}: Select the desired entry. Press ] to dial the number. Speed dial Assigning an entry in the phonebook to a speed dial key Dial keys 1 to 9 can each be used as a speed dial key, allowing you to dial a number from the phonebook by simply pressing a dial key. 1 Find the desired entry (page 21). s 1 2 {r}: "Speed Dial" s M 3 {r}: Select the desired dial key number.

sM L Where a dial key is already being used for speed dialling, "Q" is displayed next to the dial key number. If you select this dial key, you can overwrite the previous assignment. Note: L When storing a calling card access number and your PIN in the phonebook as one phonebook entry, press 1 to add pauses after the number and PIN as necessary (page 18). Copying phonebook entries You can copy phonebook entries between 2 handsets.\*1 \*1 Panasonic compatible handset Note: L Category settings for phonebook entries are not copied. 4 M s {ic} Copying an entry 1 2 2 Find the desired entry (page 21). s 1 Helpline Tel. No.: U.K.

0844 844 3898 Ireland 01289 8333 TG8051\_8061E(e).book Page 23 Monday, January 24, 2011 4:37 PM Phonebook 2 3 {r}: "Copy" s M {r}: Select the handset you want to send the phonebook entry to.



[You're reading an excerpt. Click here to read official PANASONIC](http://yourpdfguides.com/dref/3972510)

[KX-TG8061E user guide](http://yourpdfguides.com/dref/3972510)

<http://yourpdfguides.com/dref/3972510>



s M L When an entry has been copied, "Completed" is displayed. L To continue copying another entry: {r}: "Yes" s M s {r}: Select the desired entry. s M {ic} 4 1 2 3 Copying all entries n (left soft key) s 1 {r}: "Copy All" s M {r}: Select the handset you want to send the phonebook entry to.

s M L When all entries have been copied, "Completed" is displayed. {ic} 4 Helpline Tel. No.: U.K.

0844 844 3898 Ireland 01289 8333 23 TG8051\_8061E(e).book Page 24 Monday, January 24, 2011 4:37 PM Programming Programmable settings You can customise the unit by programming the following features using the handset. To access the features, there are 2 methods. Scrolling through the display menus 1 1 (middle soft key) 2 Press {V}, {^}, {>}, or {<} to select the desired main menu. s M 3 Press {V} or {^} to select the desired item from the next sub-menus. s M 4 Press {V} or {^} to select the desired setting. s M L This step may vary depending on the feature being programmed. L To exit the operation, press {ic}. Using the direct command code 1 1 (middle soft key) s Enter the desired code. Example: Press 1 (middle soft key) (1)1.

2 Select the desired setting. s M L This step may vary depending on the feature being programmed. L To exit the operation, press {ic}. Note: L In the following table, < > indicates the default settings. L In the following table, + indicates the reference page number. L Display menu order and sub-menu may vary depending on your model. Display the menu tree and direct command code table Main menu: j "Caller List" Operation Viewing the caller list. Main menu: s "Answer Sub-menu 1 Message List Play New Msg. (Msg.: message) Play All Msg. Erase All Msg.\*2 Greeting System"\*1 Sub-menu 2 Start REC\*2 (Record greeting) Play Greeting Default\*2 (Reset to pre-recorded greeting) Settings Code #329 #323 #324 #325 #302 #303 #304 + 36 36 36 37 35 35 35 Code #213 + 32 24 Helpline Tel. No.: U.K.

0844 844 3898 Ireland 01289 8333 TG8051\_8061E(e).book Page 25 Monday, January 24, 2011 4:37 PM Programming Sub-menu 1 Settings Sub-menu 2 Number of Rings\*2 Recording Time\*2 Remote Code\*2 Call Screening Answer On\*2 Answer Off\*2 Main menu: z "Time Settings" Sub-menu 1 Set Date/Time\*2 Alarm Time Adjustment\*2, \*4 Main menu: x "Intercom" Operation Paging the desired unit. Main menu: ( "Ringer Setup" Sub-menu 1 Ringer Volume Ringtone\*6, \*7 (Handset) Night Mode On/Off Start/End Ring Delay Sub-menu 2 Handset\*5 Base Unit\*1, \*2 Settings 06: Off6 <6> 06: Off6 <3> <Ringtone 1> 1: On 0: <Off> <23:00/06:00> 1: 30 sec. 2: <60 sec.> 3: 90 sec.

4: 120 sec. 0: No Ringing 19: Category 1-9 Code #160 #\*160 #161 #238 #237 #239 + 18 28 28 29 Code #274 + 40 Sub-menu 2 1: Once 2: Daily 0: <Off> 1: <Caller ID> 0: Manual Settings Code #101 #720 + 16 28 Settings 29: 2-9 Rings 5: <5 Rings> 0: Auto 1: 1 Minute 3: <3 Minutes> 0: Greeting Only\*3 1: <On> 0: Off Code #211 + 38 #305 38 #306 #310 #327 #328 37 34 34 34 #226 Select Category #241 29 Helpline Tel. No.: U.K. 0844 844 3898 Ireland 01289 8333 25 TG8051\_8061E(e).book Page 26 Monday, January 24, 2011 4:37 PM Programming Main menu: 7 "Caller Barred"\*2, \*8 Operation Storing/Viewing bar call numbers. Main menu: E "Initial Setup" Sub-menu 1 Ringer Setup Sub-menu 2 Ringer Volume Handset\*5 Ringer Volume Base Unit\*1, \*2 Ringtone\*6, \*7 (Handset) Night Mode On/Off Night Mode Start/End Night Mode Ring Delay Settings 06: Off6 <6> 06: Off6 <3> <Ringtone 1> 1: On 0: <Off> <23:00/06:00> 1: 30 sec. 2: <60 sec.> 3: 90 sec.

4: 120 sec. 0: No Ringing 19: Category 1-9 1: Once 2: Daily 0: <Off> 1: <Caller ID> 0: Manual 1: <Normal> 2: Low <Wallpaper1> 12: Colour1-2 <Colour1> 1: <Multi Items> 0: Single Item 1: <On> 0: Off 1: <On> 0: Off 16: Contrast 1-6 <Contrast 3> Code #160 #\*160 #161 #238 #237 #239 + 18 28 28 29 Code #217 + 29 Night Mode Select Category Time Settings Set Date/Time\*2 Alarm Time Adjustment\*2, \*4 Handset Name Caller Barred\*2 Eco Setup Display Setup Transmission Power\*2 Wallpaper\*9 Display Colour Display Mode Key Backlight LCD in charging\*10 (LCD backlight) Contrast (Display contrast) #241 #101 #720 29 16 28 #226 #104 #217 #725 #181 #182 #192 #276 #191 #145 29 29 17 17 26 Helpline Tel. No.: U.K. 0844 844 3898 Ireland 01289 8333 TG8051\_8061E(e).book Page 27 Monday, January 24, 2011 4:37 PM Programming Sub-menu 1 Keytones\*11 Call Restrict\*2 Auto Talk\*12 Line Setup Sub-menu 2 Recall/Flash\*2, \*13 Settings 1: <On> 0: Off 1: On 0: <Off> 0: 900 msec. 1: 700 msec. 2: 600 msec. 3: 400 msec. 4: 300 msec. 5: 250 msec. \*: 200 msec. #: 160 msec. 6: 110 msec.

7: <100 msec.> 8: 90 msec. 9: 80 msec. 1: On 0: <Off> <0000> 1: On 0: <Off> <English> Code #165 #256 #200 #121 + 30 18 19 Privacy Mode\*2, \*14 Base Unit PIN\*2 Repeater Mode\*2 Register Register H.set (H.set: handset) Cancel Register\*3 Display #194 #132 #138 #130 #131 #110 30 31 30 31 16 Language \*1 KX-TG8061/KX-TG8062/KX-TG8063 \*2 If you program these settings using one of the handsets, you do not need to program the same item using another handset. \*3 This menu is not displayed when scrolling through the display menus. It is only available in direct command code. \*4 This feature allows the unit to automatically adjust the date and time each time caller information including date and time is received. To turn this feature on, select "Caller ID". To turn this feature off, select "Manual". (Caller ID subscribers only) To use this feature, set the date and time first (page 16). \*5 Ringer volume cannot be turned off for alarm, intercom calls, and paging. \*6 If you select one of the melody ringer tones, the ringer tone continues to play for several seconds even if the caller has already hung up. You may either hear a dial tone or no one on the line when you answer the call.

\*7 The preset melodies in this product are used with permission of © 2011 Copyrights Vision Inc. \*8 KX-TG8051 \*9 You can set the wallpaper to display with or without date and time by pressing Z. The default setting is with date and time displayed. \*10 You can set the handset display backlight while on charge. "On": Backlight is on (dimmed). "Off": Backlight turns off after 10 seconds of charging. \*11 Turn this feature off if you prefer not to hear key tones while you are dialling or pressing any keys, including confirmation tones and error tones.



[You're reading an excerpt. Click here to read official PANASONIC KX-TG8061E user guide](http://yourpdfguides.com/dref/3972510)  
<http://yourpdfguides.com/dref/3972510>

Helpline Tel. No.: U.

K. 0844 844 3898 Ireland 01289 8333 27 TG8051\_8061E(e).book Page 28 Monday, January 24, 2011 4:37 PM Programming \*12If you subscribe to a Caller ID service and want to view the caller's information after lifting up the handset to answer a call, turn off this feature. \*13The recall/flash time depends on your telephone exchange or host PBX. Contact your PBX supplier if necessary.

\*14To prevent other users from joining your conversations with outside callers, turn this feature on. Special programming Alarm An alarm sounds at the set time for 3 minutes once or daily. Alarm can be set for each handset. Important: L Set the date and time beforehand (page 16). Night mode Night mode allows you to select a period of time during which the handset will not ring for outside calls.

@@Night mode can be set for each handset. @@Important: L Set the date and time beforehand (page 16). @@@@s M "Off" Turns alarm off. Go to step 6. "Once" An alarm sounds once at the set time. "Daily" An alarm sounds daily at the set time. @s M Set the desired time. s M {r}: Select the desired alarm tone. @@@s M L If you select "Off", press {ic} to exit. Enter the desired hour and minute you wish to start this feature.

@@Enter the desired hour and minute you wish to end this feature. @@@@No.: U.K. @@@@After the selected amount of time passes, the handset rings. @1 1 (middle soft key) (239 2 {r}: Select the desired setting. @@@@L To cancel a selected category, press t again. "Q" disappears. @@@@s MsI 3 {r}: "Caller Barred" s M 4 {r}: "Yes" s M s {ic} By entering phone numbers: 1 1 (middle soft key) (217 s m 2 Enter the phone number (24 digits max.).

s M L To erase a digit, press ^. 3 Note: L You can also select the categories in step 2 as follows: Press 1 to 9. s M Changing the handset name Each handset can be given a customised name ("Bob", "Kitchen", etc.). This is useful when you make intercom calls between handsets.

You can also select whether or not the handset name is displayed in standby mode. The default setting is "No". If you select "Yes" without entering any handset name, "Handset 1" to "Handset 6" is displayed. 3 {ic} 1 2 3 1 (middle soft key) (1)4 Enter the desired name (max. 10 characters; page 41).

L If not required, go to step 3. M Viewing/editing/erasing bar call numbers 1 2 1 (middle soft key) (217 {r}: Select the desired entry. L To exit, press {ic}.

Helpline Tel. No.: U.K. 0844 844 3898 Ireland 01289 8333 29 TG8051\_8061E(e).book Page 30 Monday, January 24, 2011 4:37 PM Programming 3 To edit a number: ~ s Edit the phone number. s M s {ic} To erase a number: W s {r}: "Yes" s M s {ic} PIN to you.

If you forget your PIN, see page 45. 1 2 3 1 (middle soft key) (132 Enter the current 4-digit base unit PIN (default: "0000"). Enter the new 4-digit base unit PIN. s M s {ic} Note: L When editing, press the desired dial key to add, ^ to erase. Setting call restriction You can restrict selected handsets from dialling certain numbers. You can assign up to 6 phone numbers to be restricted, and select which handsets are to be restricted. Storing area codes here prevents the restricted handsets from dialling any phone number in that area code. Registering a unit Operating additional units Additional handsets Up to 6 handsets can be registered to the base unit. Important: L The additional handset model recommended for use with this unit is noted on page 5. If another handset model is used, certain operations (handset settings, base unit settings, etc.

) may not be available. 1 2 3 1 (middle soft key) (256 Enter the base unit PIN (default: "0000"). L If you forget your PIN, see page 45. {r}: Select the handsets to be restricted. st L All handsets registered to the base unit are displayed.

L "Q" is displayed next to the selected handset numbers. L To cancel a selected handset, press t again. "Q" disappears. M {r}: Select a memory location. s M Enter the phone number or area code to be restricted (8 digits max.

). s M s {ic} L To erase a restricted number, press ^. 4 5 6 Registering a handset to the base unit The supplied handset and base unit are preregistered. If for some reason the handset is not registered to the base unit (for example, \_ is displayed even when the handset is near the base unit), re-register the handset. 1

2 Handset: 1 (middle soft key) (13) Base unit: Proceed with the operation for your model. KX-TG8051 Press and hold {x} for about 5 seconds. (No registration tone) KX-TG8061/KX-TG8062/KX-TG8063 Press and hold {x} for about 5 seconds, until the registration tone sounds. L If all registered handsets start ringing, press {x} again to stop, then repeat this step. Note: L You can also select a memory location in step 5 as follows: Press 1 to 6. s M Changing the base unit PIN (Personal Identification Number) Important: L If you change the PIN, please make note of your new PIN.

The unit will not reveal the 30 Helpline Tel. No.: U.K. 0844 844 3898 Ireland 01289 8333 TG8051\_8061E(e).book Page 31 Monday, January 24, 2011 4:37 PM Programming L The next step must be completed within 90 seconds. Setting the repeater mode 3 Handset: M s Wait until "Base PIN" is displayed. s Enter the base unit PIN (default: "0000"). s M L If you forget your PIN, see page 45. L When the handset has been registered successfully, w is displayed.

1 2 1 (middle soft key) (138 {r}: Select the desired setting. s M s {ic} Note: L While registering, "Base in registering" is displayed on all registered handsets. L When you purchase an additional handset, refer to the additional handset's installation manual for registration. Note: L After turning the repeater mode on or off, \_ is displayed on the handset momentarily. This is normal and the handset can be used once w is displayed.

Registering the DECT repeater (KXA405) to the base unit Note: L Please use a repeater that has not yet been registered to another unit. If the repeater is registered to another unit, deregister it first, referring to the Installation Guide for the DECT repeater. Deregistering a handset A handset can cancel its own registration to the base unit, or other handsets registered to the same base unit. This allows the handset to end its wireless connection with the system. 1 1 (middle soft key) (131 L All handsets registered to the base unit are displayed.

1 2 3 {r}: Select the handset you want to cancel. s M {r}: "Yes" s M L A confirmation tone sounds. L The handset does not beep when cancelling its own registration. {ic} Base unit: Proceed with the operation for your model. KX-TG8051 Press and hold {x} for about 5 seconds. (No registration tone) KX-TG8061/KX-TG8062/KX-TG8063 Press and hold {x} for about 5 seconds, until the registration tone sounds.



[You're reading an excerpt. Click here to read official PANASONIC](#)

[KX-TG8061E user guide](#)

<http://yourpdfguides.com/dref/3972510>

L The next step must be completed within 90 seconds. 4 2 3 Increasing the range of the base unit You can increase the signal range of the base unit by using a DECT repeater. Please use only the Panasonic DECT repeater noted on page 4. Contact your Panasonic dealer for details.

Important: L Before registering the repeater to this base unit, you must turn the repeater mode on. L Do not use more than one repeater at a time. DECT repeater: Connect the AC adaptor, then wait until the & indicator lights green. Base unit: To exit the registration mode, press {x}. L The registration tone stops. (KX-TG8061/KX-TG8062/ KX-TG8063) Helpline Tel. No.: U.K. 0844 844 3898 Ireland 01289 8333 31 TG8051\_8061E(e).

book Page 32 Monday, January 24, 2011 4:37 PM Caller ID Service Using Caller ID service Important: L This unit is Caller ID compatible. To use Caller ID features, you must subscribe to a Caller ID service. Contact your service provider/telephone company for details. Phonebook name display When caller information is received and it matches a phone number stored in the phonebook, the stored name in the phonebook is displayed and logged in the caller list.

Category ringer tone This feature can help you identify who is calling by using different ringer tones for different categories of callers.

When adding an entry to the phonebook, you can assign it to the desired category (page 21). When a call is received from a caller assigned to a category, the ringer you selected for that category rings after caller information is displayed. If you select "Default Ringer", the unit uses the ringer tone you selected on page 26 when calls from this category are received. The default setting is "Default Ringer". Caller ID features When an outside call is being received, the caller's phone number is displayed.

Caller information for the last 50 callers is logged in the caller list from the most recent call to the oldest. L If the unit cannot receive caller information, the following is displayed: "Out of Area": The caller dials from an area which does not provide a Caller ID service. "Private Caller": The caller requests not to send caller information. L If the unit is connected to a PBX system, caller information may not be properly received. Contact your PBX supplier. 1 2 3 4 5 6 n

(left soft key) s 1 {r}: "Category" s M {r}: Select the desired category. s M {r}: Select the current setting of the category ringer tone. s M {r}: Select the desired ringer tone. s M {ic} Missed calls If a call is not answered, the unit treats it as a missed call and y is displayed. This lets you know if you should view the caller list to see who called while you were away.

Even if only one missed call in the caller list is viewed (page 32), y disappears from the display. When you receive another new call, y is displayed again.

Note: L Even when there are unviewed missed calls, y disappears from the standby display if the following operation is performed by one of the registered handsets: Being replaced on the base unit or charger. Pressing {ic}. Caller list Important: L Only 1 person can access the caller list at a time. L Make sure the unit's date and time setting is correct (page 16). Viewing the caller list and calling back 1 {<} (y) 2 Press {V} to search from the most recent call, or press {^} to search from the oldest call. 32 Helpline Tel. No.: U.

K. 0844 844 3898 Ireland 01289 8333 TG8051\_8061E(e).book Page 33 Monday, January 24, 2011 4:37 PM Caller ID Service L You can see the detailed information about the caller by pressing a when in multiple display mode. 3 To call back, press {C}. To exit, press {ic}.

Note: L If the entry has already been viewed or answered, "Q" is displayed, even if it was viewed or answered using another handset. L If the call matches an entry in the call barred list, the number is logged with 7 (page 29). Editing a caller's phone number before calling back 1 {<} (y) 2 {r}: Select the desired entry. s M 3 ~ s Edit the number. L Press dial key ( ) to add, ^ to delete.

4 {C} Erasing selected caller information 1 {<} (y) 2 {r}: Select the desired entry. 3 W s {r}: "Yes" s M s {ic} Erasing all caller information 1 {<} (y) 2 W s {r}: "Yes" s M s {ic} Storing caller information to the phonebook 1 {<} (y) 2 {r}: Select the desired entry. s M s 1 3 4 {r}: "Phonebook" s M To store the name, continue from step 2, "Adding entries", page 21. Helpline Tel. No.: U.K. 0844 844 3898 Ireland 01289 8333 33 TG8051\_8061E(e).book Page 34 Monday, January 24, 2011 4:37 PM Answering System Answering system Available for: KX-TG8061/KX-TG8062/KX-TG8063 The answering system can answer and record calls for you when you are unavailable to answer the phone. You can also set the unit to play a greeting message but not to record caller messages by selecting "Greeting Only" as the recording time setting (page 38).

Important: L Only 1 person can access the answering system (listen to messages, record a greeting message, etc.) at a time. L When callers leave messages, the unit records the day and time of each message. Make sure the date and time have been set correctly (page 16). announced to callers even though their messages are not recorded. Turning the answering system on/off The answering system is preset to on. Base unit Press {s} to turn on/off the answering system.

L When the answering system is turned on: The answer on indicator lights up. The message counter displays the total number of messages (old and new).

Handset 1 Memory capacity (including your greeting message) The total recording capacity is about 18 minutes.

A maximum of 64 messages can be recorded. Note: L When message memory becomes full: "Messages Full" is shown on the handset display. The answer on indicator on the base unit flashes rapidly if the answering system is turned on. The message counter on the base unit flashes if the answering system is turned on. K and the total number of new messages are not displayed on the handset even if the answering system is turned on.

If you use the pre-recorded greeting message, the unit automatically switches to another pre-recorded greeting message asking callers to call again later. If you recorded your own greeting message, the same message is still To turn on: 1 (middle soft key) (327 To turn off: 1 (middle soft key) (328 {ic} 2 Note: L When the answering system is turned on, K is displayed next to the battery icon. Call screening While a caller is leaving a message, you can listen to the call through the handset's speaker. To adjust the speaker volume, press {^} or {V} repeatedly. You can answer the call by pressing {C} on the handset.

Call screening can be set for each handset. The default setting is "On".



[You're reading an excerpt. Click here to read official PANASONIC KX-TG8061E user guide](http://yourpdfguides.com/dref/3972510)  
<http://yourpdfguides.com/dref/3972510>

1 2 1 (middle soft key) (31) {r}: Select the desired setting. s M s {ic} 34 Helpline Tel. No.: U.K. 0844 844 3898 Ireland 01289 8333 TG8051\_8061E(e).book Page 35 Monday, January 24, 2011 4:37 PM Answering System Greeting message When the unit answers a call, a greeting message is played to callers. You can use either: your own greeting message a pre-recorded greeting message Playing back the greeting message 1 1 (middle soft key) (3)3 2 {ic} Recording your greeting message 1 1 (middle soft key) (3)2 2 {r}: "Yes" s M 3 After a beep sounds, hold the handset Listening to messages using the base unit When new messages have been recorded, {6} on the base unit flashes.

Press {6}. L If new messages have been recorded, the base unit plays back new messages. L If there are no new messages, the base unit plays back all messages. about 20 cm away and speak clearly into the microphone (2 minutes and 30 seconds max.). Press O to stop recording. {ic} 4 5 Using a pre-recorded greeting message The unit provides 2 pre-recorded greeting messages: If you erase or do not record your own greeting message, the unit plays a prerecorded greeting asking callers to leave a message. If the message recording time (page 38) is set to "Greeting Only", callers' messages are not recorded and the unit plays a different pre-recorded greeting message asking callers to call again. Operating the answering system during playback Key {+} or {-} {7} {8} {} {4} Operation Adjust the speaker volume Repeat message\*1 Skip message Stop playback Erase currently playing message \*1 If pressed within the first 5 seconds of a message, the previous message is played. Resetting to a pre-recorded greeting message If you want to use a pre-recorded greeting message once you record your own greeting message, you need to erase your own greeting message.

1 1 (middle soft key) (3)4 2 M s {ic} Erasing all messages Press {4} 2 times while the unit is not in use. Helpline Tel. No.: U.K.

0844 844 3898 Ireland 01289 8333 35 TG8051\_8061E(e).book Page 36 Monday, January 24, 2011 4:37 PM Answering System Key Operation Enter the "Settings" menu Play new messages Play all messages Play greeting message Record greeting message Turn answering system on Pause message\*3 Stop recording Stop playback Turn answering system off Erase currently playing message Erase all messages Reset to a pre-recorded greeting message Listening to messages using the handset When new messages have been recorded, K is displayed on the handset with the total number of new messages. 3 4 5 6 7 6 8 1 9 or O ) \*4\*4 \*5 \*6 1 To listen to new messages: 1 (middle soft key) (3)2 3 To listen to all messages: 1 (middle soft key) (3)2 4 When finished, press {ic}. 2 Note: L

To switch to the receiver, press {C}. Listening to messages from the message list You can select the item to play back.

1 2 1 (middle soft key) (3)2 9 {r}: Select the desired item from the message list. s 0 L You can erase the selected message as follows: W s {r}: "Yes" s M When finished, press {ic}. 3 Note: L If the item has already been heard, "Q" is displayed, even if it was heard using another handset. L "Message" is displayed in the message list if the unit cannot receive caller information. \*1 If pressed within the first 5 seconds of a message, the previous message is played except when playing back from the message list. \*2 When you play a message from the message list, the unit stops message playback and the display goes back to the message list. \*3 To resume playback: {r}: "Play" s M \*4 You can also erase as follows: W s {r}: "Yes" s M Operating the answering system 1 (middle soft key) s s s M Key {^} or {V} 1 or {<} 2 or {>} Operation Adjust the receiver or speaker volume (during playback) Repeat message (during playback)\*1 Skip message (during playback)\*2 Calling back (Caller ID subscribers only) If caller information is received for the call, you can call the caller back while listening to a message. 1 2 Press 1 during playback. {r}: "Call Back" s M Editing the number before calling back 1 2 3 Press 1 during playback. {r}: "Edit & Call" s M Edit the number.

s {C} 36 Helpline Tel. No.: U.K. 0844 844 3898 Ireland 01289 8333 TG8051\_8061E(e).book Page 37 Monday, January 24, 2011 4:37 PM Answering System Erasing all messages 1 1 (middle soft key) (3)2 5 2 {r}: "Yes" s M s {ic} Voice guidance During remote operation, the unit's voice guidance starts and prompts you to press 1 to perform a specific operation, or press 2 to listen to more available operations. Note: L If you do not press any dial keys within 10 seconds after a voice guidance prompt, the unit disconnects your call. Remote operation Using a touch-tone phone, you can call your phone number from outside and access the unit to listen to messages or change answering system settings. The unit's voice guidance prompts you to press certain dial keys to perform different operations. Remote commands You can press dial keys to access certain answering system functions without waiting for the voice guidance to prompt you.

Key 1 2 4 5 6 7 9 ) \*4 \*5 \*6 Operation Repeat message (during playback)\*1 Skip message (during playback) Play new messages Play all messages Play greeting message Record greeting message Stop recording Stop playback Turn answering system off Erase currently playing message Erase all messages Reset to a pre-recorded greeting message (during greeting message playback) End remote operation (or hang up) Remote access code A 3-digit remote access code must be entered when operating the answering system remotely. This code prevents unauthorised parties from listening to your messages remotely. Important: L In order to operate the answering system remotely, you must first set a remote access code. 1 2 3 1 (middle soft key) (3)6 To turn on remote operation, enter the desired 3-digit remote access code. M s {ic} Deactivating remote operation Press \* in step 2 on "Remote access code", page 37.

L The entered remote access code is deleted. Using the answering system remotely 1 Dial your phone number from a touchtone phone. \*( \*1 If pressed within the first 5 seconds of a message, the previous message is played. 2 3 4 After the greeting message starts, enter your remote access code. Follow the voice guidance prompts as necessary or control the unit using remote commands (page 37).

When finished, hang up. Helpline Tel. No.: U.K. 0844 844 3898 Ireland 01289 8333 37 TG8051\_8061E(e).book Page 38 Monday, January 24, 2011 4:37 PM Answering System Turning on the answering system remotely If the answering system is off, you can turn it on remotely. answering system, turn off the answering system (page 34). L To use this unit's answering system rather than the voice mail service provided by your service provider/telephone company, please contact your service provider/ telephone company to deactivate your voice mail service.



[You're reading an excerpt. Click here to read official PANASONIC KX-TG8061E user guide](http://yourpdfguides.com/dref/3972510)  
<http://yourpdfguides.com/dref/3972510>