




# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for PANASONIC KX-TG8561E. You'll find the answers to all your questions on the PANASONIC KX-TG8561E in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual PANASONIC KX-TG8561E**  
**User guide PANASONIC KX-TG8561E**  
**Operating instructions PANASONIC KX-TG8561E**  
**Instructions for use PANASONIC KX-TG8561E**  
**Instruction manual PANASONIC KX-TG8561E**

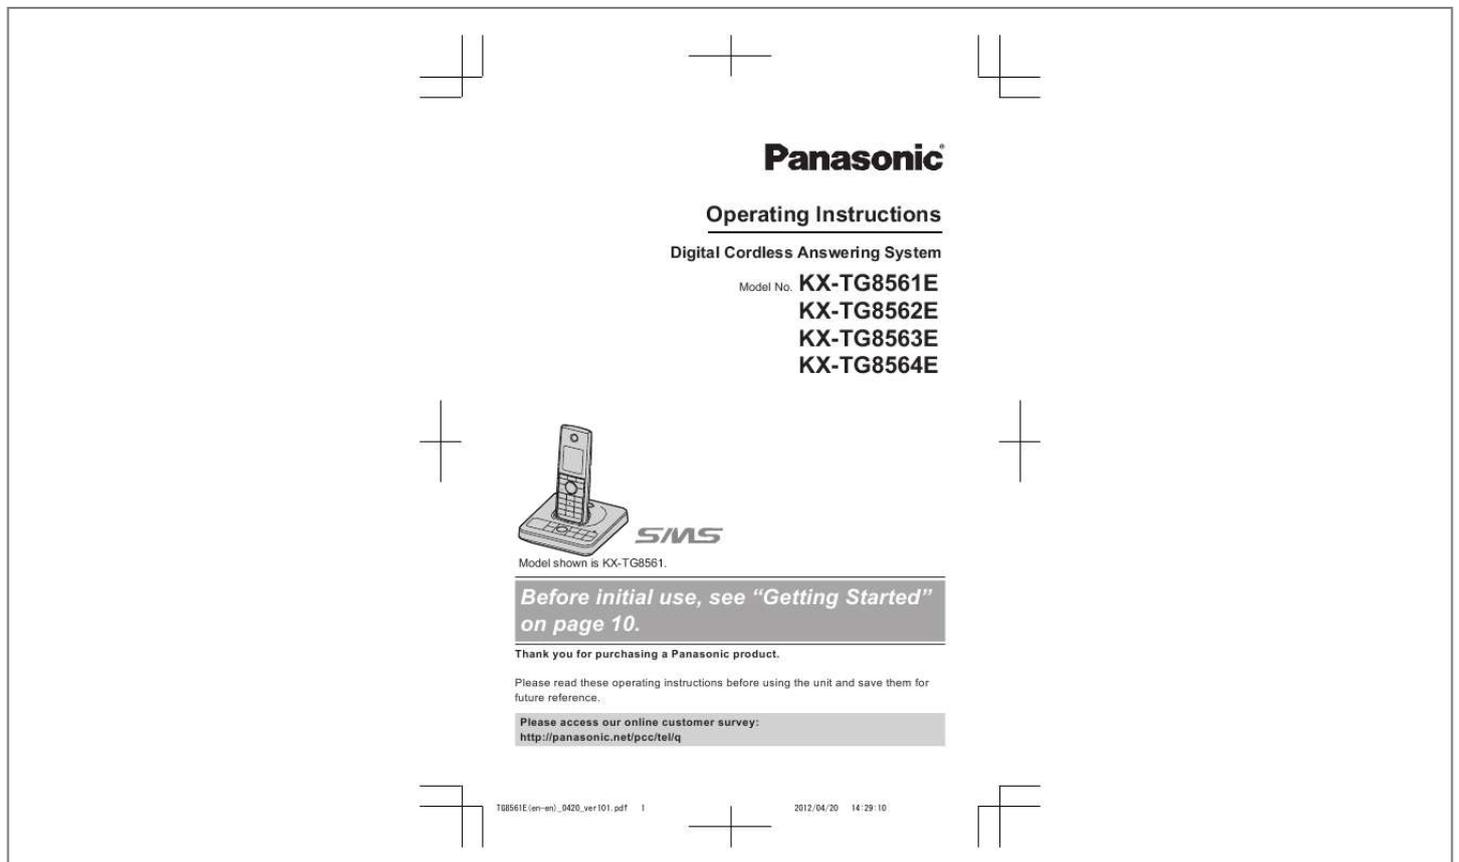

[You're reading an excerpt. Click here to read official PANASONIC KX-TG8561E user guide](http://yourpdfguides.com/dref/4311975)  
<http://yourpdfguides.com/dref/4311975>

### Manual abstract:

thank you for purchasing a Panasonic product. @@ Please access our online customer survey: <http://panasonic>. 46 Turning the answering system on/ off . 46 Greeting message . 46 Listening to messages using the base unit . 52 Transferring calls, conference calls . 17 Useful features during a call . @@@@The handset cover comes attached to the handset. Pdf 3 2012/04/20 14:29:10 Introduction Additional/replacement accessories Please contact your nearest Panasonic dealer for sales information. Accessory item Rechargeable batteries Model number HHR-4MVE\*1 Battery type: Â Nickel metal hydride (Ni-MH) Â 2 x AAA (R03) size for each handset KX-TCA89, KX-TCA94EX, RP-TCA400 KX-A405 Headset DECT repeater \*1 Replacement batteries may have a different capacity from that of the supplied batteries.

Expanding your phone system Handset (optional): KX-TGA855E You can expand your phone system by registering optional handsets (6 max. ) to a single base unit. R Optional handsets may be a different colour from that of the supplied handsets. @@ k. @@@@ @@@@ pas-europe.

Com R Most major credit and debit cards accepted. R Also available through our Internet is direct shopping for a wide range of finished products. Take a browse on our website for further details. Pdf 4 2012/04/20 14:29:10 Introduction General information R This equipment is designed for use on the U. R In the event of problems, you should contact your equipment supplier in the first instance.

Declares that this equipment is in compliance with the essential requirements and other relevant provisions of Radio & Telecommunications Terminal Equipment (R&TTE) Directive 1999/5/EC. Declarations of Conformity for the relevant Panasonic products described in this manual are available for download by visiting: <http://www>. De Contact to Authorised Representative: Panasonic Testing Centre Panasonic Marketing Europe GmbH Winsbergring 15, 22525 Hamburg, Germany For your future reference We recommend keeping a record of the following information to assist with any repair under warranty. serial No. (found on the bottom of the base unit) Name and address of dealer Date of purchase Attach your purchase receipt here. Pdf 5 2012/04/20 14:29:10 Important Information For your safety To prevent severe injury and loss of life/ property, read this section carefully before using the product to ensure proper and safe operation of your product. R Do not allow the AC adaptor or telephone line cord to be excessively pulled, bent or placed under heavy objects. Operating safeguards R Unplug the product from power outlets before cleaning. do not use liquid or aerosol cleaners. R Do not disassemble the product.

r Do not spill liquids (detergents , cleansers , etc. ) onto the telephone line cord plug, or allow it to become wet at all. this may cause a fire. If the telephone line cord plug becomes wet, immediately pull it from the telephone wall jack, and do not use. R The use of excessive sound volume through earphones, headphones, or headsets may cause hearing loss. R Do not place a handset on the base unit with the headset jack cover opened. WARNING Power connection R Use only the power source marked on the product. R Do not overload power outlets and extension cords. This can result in the risk of fire or electric shock. R Completely insert the AC adaptor/power plug into the power outlet.

Failure to do so may cause electric shock and/or excessive heat resulting in a fire. r Regularly remove any dust , etc. From the AC adaptor/power plug by pulling it from the power outlet, then wiping with a dry cloth. Accumulated dust may cause an insulation defect from moisture, etc. resulting in a fire. R Unplug the product from power outlets if it emits smoke, an abnormal smell, or makes an unusual noise. These conditions can cause fire or electric shock. Confirm that smoke has stopped emitting and contact an authorised service centre. R Unplug from power outlets and never touch the inside of the product if its casing has been broken open. R Never touch the plug with wet hands.

danger of electric shock exists. Medical R Consult the manufacturer of any personal medical devices, such as pacemakers or hearing aids, to determine if they are adequately shielded from external RF (radio frequency) energy. 90 GHz, and the RF transmission power is 250 mW (max. ). ) R Do not use the product in health care facilities if any regulations posted in the area instruct you not to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy. Installation R To prevent the risk of fire or electrical shock, do not expose the product to rain or any type of moisture. R Do not place or use this product near automatically controlled devices such as automatic doors and fire alarms. Radio waves emitted from this product may cause such devices to malfunction resulting in an accident. CAUTION Installation and location R Never install telephone wiring during an electrical storm.

R Never install telephone line jacks in wet locations unless the jack is specifically designed for wet locations. R Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface. R Use caution when installing or modifying telephone lines. Pdf 6 2012/04/20 14:29:10 Important Information R The AC adaptor is used as the main disconnect device. Ensure that the AC outlet is installed near the product and is easily accessible. R This product is unable to make calls when: Â the handset batteries need recharging or have failed. Â there is a power failure. Â the key lock feature is turned on. There may be a remote risk of electric shock from lightning. 3.

Do not use the telephone to report a gas leak in the vicinity of the leak. 4. Use only the power cord and batteries indicated in this manual. Check with local codes for possible special disposal instructions. R Do not mix old and new batteries.

R Do not open or mutilate the batteries. Released electrolyte from the batteries is corrosive and may cause burns or injury to the eyes or skin. The electrolyte is toxic and may be harmful if swallowed. R Exercise care when handling the batteries. Do not allow conductive materials such as rings, bracelets, or keys to touch the batteries, otherwise a short circuit may cause the batteries and/or the conductive material to overheat and cause burns.

R Charge the batteries provided with or identified for use with this product only, in accordance with the instructions and limitations specified in this manual. R Only use a compatible base unit (or charger) to charge the batteries. Do not tamper with the base unit (or charger). Failure to follow these instructions may cause the batteries to swell or explode. For best performance Base unit location/avoiding noise The base unit and other compatible Panasonic units use radio waves to communicate with each other. R For maximum coverage and noise-free communications, place your base unit: Â at a convenient, high, and central location with no obstructions between the handset and base unit in an indoor environment.



[You're reading an excerpt. Click here to read official PANASONIC](http://yourpdfguides.com/dref/4311975)

[KX-TG8561E user guide](http://yourpdfguides.com/dref/4311975)

<http://yourpdfguides.com/dref/4311975>

^ away from electronic appliances such as TVs, radios, personal computers, wireless devices, or other phones. ^ facing away from radio frequency transmitters, such as external antennas of mobile phone cell stations. (Avoid putting the base unit on a bay window or near a window. ) R Coverage and voice quality depends on the local environmental conditions.

R If the reception for a base unit location is not satisfactory, move the base unit to another location for better reception. Important safety instructions When using your product, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following: 1. Do not use this product near water for example, near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement or near a swimming pool. 2. Avoid using a telephone (other than a cordless type) during an electrical storm. Environment R Keep the product away from electrical noise generating devices, such as fluorescent lamps and motors. R The product should be kept free from excessive smoke, dust, high temperature, and vibration. r The product should not be exposed to direct sunlight. R Do not place heavy objects on top of the product. Pdf 7 2012/04/20 14:29:10 Important Information R When you leave the product unused for a long period of time, unplug the product from the power outlet.

R The product should be kept away from heat sources such as radiators, cookers, etc. It should not be placed in rooms where the temperature is less than 0 ^C or greater than 40 ^C. damp basements should also be avoided. R The maximum calling distance may be shortened when the product is used in the following places: Near obstacles such as hills, tunnels, underground, near metal objects such as wire fences, etc. R Operating the product near electrical appliances may cause interference.

Move away from the electrical appliances. Information for Users on Collection and Disposal of Old Equipment and used Batteries 1 2 3 Routine care R Wipe the outer surface of the product with a soft moist cloth. R Do not use benzene, thinner, or any abrasive powder. other information CAUTION: Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

Notice for product disposal, transfer, or return R This product can store your private/ confidential information. To protect your privacy/confidentiality, we recommend that you erase information such as phonebook or caller list entries from the memory before you dispose of, transfer, or return the product. These symbols (A, B, C) on the products, packaging, and/or accompanying documents mean that used electrical and electronic products and batteries should not be mixed with general household waste. For proper treatment, recovery and recycling of old products and used batteries, please take them to applicable collection points, in accordance with your national legislation and the Directives 2002/96/EC and 2006/66/EC. By disposing of these products and batteries correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling. For more information about collection and recycling of old products and batteries, please contact your local municipality, your waste disposal service or the point of sale where you purchased the items. Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation. For business users in the European Union If you wish to discard electrical and electronic equipment, please contact your dealer or supplier for further information. Information on Disposal in other Countries outside the European Union These symbols (A, B, C) are only valid in the European Union. If you wish to discard these items, please contact your local authorities or dealer and ask for the correct method of disposal.

Pdf 8 2012/04/20 14:29:10 Important Information Note for the battery symbol This symbol (B) might be used in combination with a chemical symbol (C). In this case it complies with the requirement set by the Directive for the chemical involved. 8 W R Operating conditions: 0 ^C-40 ^C, 20 %-80 % relative air humidity (dry) Note: R Design and specifications are subject to change without notice. R The illustrations in these instructions may vary slightly from the actual product. Use only the sut display items Item Meaning Range status: The more bars visible, the closer the handset is to the base unit. Out of base unit range Paging, intercom mode Speakerphone is on. (page 17) The line is in use. R When flashing slowly: The call is put on hold. R When flashing rapidly: An incoming call is now being received. Missed call\*1 (page 39) The base unit transmission power is set to "Low".

(page 15) The key backlight is off. (page 29) \*1 \*2 \*3 Caller ID subscribers only SMS users only Voice mail subscribers only Helpline Tel. Pdf 13 2012/04/20 14:29:10 Getting Started Base unit display items Item ns. Programming the display mode beforehand 1 2 (middle soft key) #192 MbN: Select the desired setting. A aM N Note: R When in multiple items display mode, you can move screens by pressing MEN or MFN, without scrolling down or up through the list: ^ Press MEN to go to the next screen.

Pdf 16 2012/04/20 14:29:11 Making/Answering Calls Making calls 1 2 3 Lift the handset and dial the phone number. When you finish talking, press M N or place the handset on the base unit or charger. 3 1 2 3 MbN: "Yes" a aM N Storing a number to the phonebook (right soft key) or MEN (T) MbN: Select the desired phone number. A To add entries to the shared phonebook: MbN: "Shared Phonebook" a To add entries to the personal phonebook: MbN: "Personal Phonebook" a To store the name, continue from step 3, "Editing entries", page 22. Using the speakerphone 1 2 Dial the phone number and press M N. r Speak alternately with the other party. When you finish talking, press M N. 4 Note: R For best performance, use the speakerphone in a quiet environment. R To switch back to the receiver, press M N/ M N. Pause (for PBX/long distance service users) A pause is sometimes required when making calls using a PBX or long distance service. When storing a calling card access number and/or PIN in the phonebook, a pause is also needed (page 22). Example: If you need to dial the line access number "0" when making outside calls with a PBX: Adjusting the receiver or speaker volume Press MDN or MCN repeatedly while talking. Making a call using the redial list The last 10 phone numbers dialled are stored in the redial list (each 24 digits max. A M N 1 2 3 (right soft key) or MEN (T) MbN: Select the desired phone number. M N/ M N R If M N is pressed and the other party's line is engaged, the unit automatically redials multiple times.



[You're reading an excerpt. Click here to read official PANASONIC KX-TG8561E user guide](http://yourpdfguides.com/dref/4311975)  
<http://yourpdfguides.com/dref/4311975>

While the handset is waiting to redial, the ringer indicator flashes. To cancel, press M N. Note: R A 3 second pause is inserted each time is pressed.

Answering calls When a call is being received, the ringer indicator flashes rapidly. 1 Erasing a number 1 2 (right soft key) or MEN (T) MbN: Select the desired phone number. A Lift the handset and press M N or M N when the unit rings. R You can also answer the call by pressing any dial key from 0 to 9, \*, or #. (Any key answer feature) When you finish talking, press M N or place the handset on the base unit or charger. Pdf 17 2012/04/20 14:29:11

Making/Answering Calls Auto talk You can answer calls simply by lifting the handset off the base unit or charger. You do not need to press M N. To turn this feature on, see page 29. Mute While mute is turned on, you can hear the other party, but the other party cannot hear you. 1 2 Adjusting the handset ringer volume n While the handset is ringing for an incoming call: Press MDN or MCN repeatedly to select the desired volume. N Programming the volume beforehand: (middle soft key) #160 1 Press R during conversation. flashes.

To return to the conversation, press again. Recall/flash MR/ECON allows you to use the special features of your host PBX such as transferring an extension call, or accessing optional telephone services. Note: R To change the recall/flash time, see page 29. 2 3 MbN: Select the desired volume. AM N Temporary handset ringer off While the handset is ringing for a call, you can turn the ringer off temporarily by pressing .

For call waiting or Call Waiting Caller ID service users To use call waiting or Call Waiting Caller ID, you must first subscribe with your service provider/telephone company. This feature allows you to receive calls while you are already talking on the phone. If you receive a call while on the phone, you will hear a call waiting tone. If you subscribe to both Caller ID and Call Waiting with Caller ID services, the 2nd caller's information is displayed after you hear the call waiting tone on the handset. Useful features during a call Hold This feature allows you to put an outside call on hold. R Another handset user can take the call by pressing M N. Note: R If a call is kept on hold for more than 9 minutes, an alarm tone starts to sound and the ringer indicator flashes rapidly. After 1 additional minute on hold, the call is disconnected. R If another phone is connected to the same line, you can also take the call by lifting its handset. Note: R Please contact your service provider/ telephone company for details and availability of this service in your area.

Handset equalizer This feature clarifies the voice of the person you are talking to, producing a more natural-sounding voice that is easier to hear and understand. Key lock The handset can be locked so that no calls or settings can be made. Incoming calls can be answered, but all other functions are disabled while key lock is on. For about 3 To turn key lock on, press seconds. r is displayed. R To turn key lock off, press for about 3 seconds. Note: R Calls to emergency numbers cannot be made until key lock is turned off. Note: R When this feature is turned on, is displayed while talking. R Depending on the condition and quality of your telephone line, this feature may emphasise existing line noise. If it becomes difficult to hear, turn this feature off. R This feature is not available while using the speakerphone. Recording a telephone conversation Important: R Before recording a conversation, you should inform the other party that the conversation is to be recorded. In case you record without informing the other party, it will cause the infringement of privacy and civil liability. R A beep sounds every 15 seconds and can be heard by the other party. to stop recording, press .

3 Note: R To listen to the recorded conversation, see page 47, 48. Call share You can join an existing outside call. To join the conversation, press M N when the other handset is on an outside call. Note: R A 2nd handset cannot join an outside call that is being recorded (page 19). R To prevent other users from joining your conversations with outside callers, turn the privacy mode on (page 29).

Pdf 19 2012/04/20 14:29:11 Phonebook Phonebook The phonebook allows you to make calls without having to dial manually. You can add names and phone numbers to the phonebook and assign each phonebook entry to the desired category. this unit provides 2 types of phonebooks. N Shared phonebook This phonebook entries can be shared by any handset registered to the same base unit. The following features can also be used with the shared phonebook: A Talking Caller ID (page 39) A Category ringer tone (page 40) Total number of entries is shown below\*1: 1 name + 1 phone number: 250 entries 1 name + 2 phone numbers: 125 entries 1 name + 3 phone numbers: 83 entries n Personal phonebook The personal phonebook entries can be stored by each handset. Using the personal phonebook, you can allow all entries in a category to be able to bypass your night mode and cause your handset to ring (page 31). Total number of entries is shown below\*1: 1 name + 1 phone number: 100 entries 1 name + 2 phone numbers: 50 entries 1 name + 3 phone numbers: 33 entries \*1 Up to 3 phone numbers for each entry can be stored. The total number of entries that can be stored for each phonebook varies depending on how many phone numbers you have stored for each entry. Important: R Only 1 person can access the phonebook at a time. 2 3 4 5 To add entries to the personal phonebook: (left soft key) a MbN: "New Entry" a MbN: "(Name)" a Enter the party's name (16 characters max.

). A R You can change the character entry mode by pressing (page 53). mbN: "(Phone No. 1)" a R You can store up to 3 phone numbers for each entry. Enter the party's phone number (24 digits max. A MbN: "<Save>" a R To add other entries, repeat from step 4. M N 6 7 8 9 10 11 Categories Categories can help you find entries in the phonebook quickly and easily. When adding an entry to the phonebook, you can assign it to one of 9 categories. You can change the names of categories assigned for phonebook entries ("Friends", "Family", etc. ) and then search for phonebook entries by category. Important: R Using categories, the following features also become available: A The category ringer tone is available for the shared phonebook category (Caller ID subscribers only: page 40). A Using the personal phonebook, you can allow all entries in a category to be able to bypass your night mode and cause your handset to ring (Caller ID subscribers only: page 31). Adding entries 1 To add entries to the shared phonebook: (left soft key) 20 Helpline Tel. Pdf 20 2012/04/20 14:29:11 Phonebook Changing category names 2 1 To change the category names in the shared phonebook: (left soft key) To change the category names in the personal phonebook: (left soft key) a MbN: "Category" a MbN: Select the desired category.



[You're reading an excerpt. Click here to read official PANASONIC KX-TG8561E user guide](http://yourpdfguides.com/dref/4311975)  
<http://yourpdfguides.com/dref/4311975>

A 2 3 4 5 6 Press the dial key (0 to 9, or #) which contains the character you are searching for (page 53).

R Press the same dial key repeatedly to display the first entry corresponding to each character located on that dial key. R If there is no entry corresponding to the character you selected, the next entry is displayed. mbN: Scroll through the phonebook if necessary. A M N MbN: Select the desired phone number. AM N 3 4 Searching by query You can narrow down the search to enter the first characters of a name.

Finding and calling from a phonebook entry Scrolling through all entries 1 1 To search for items in the shared phonebook: (left soft key) To search for items in the personal phonebook: (left soft key) a MbN: Select the desired entry. A M N R You can scroll through the phonebook entry by pressing and holding MCN or MDN. MbN: Select the desired phone number. AM N To search for items in the shared phonebook: (left soft key) To search for items in the personal phonebook: (left soft key) a \* To search for the name, enter the first characters (up to 4) in uppercase (page 53). a R Characters cannot be entered in lowercase. R If there is no entry corresponding to the characters you selected, the next entry is displayed. mbN: Scroll through the phonebook if necessary. A M N MbN: Select the desired phone number. AM N 2 3 2 3 4 5 Searching by first character 1 To search for items in the shared phonebook: (left soft key) To search for items in the personal phonebook: (left soft key) a R Change the character entry mode if necessary: a MbN: "Character Set" a a MbN: Select the character entry mode. A Searching by category 1 To search for items in the shared phonebook: (left soft key) To search for items in the personal phonebook: (left soft key) a 2 21 Helpline Tel.

A R If you select "All", the unit ends the category search. mbN: Scroll through the phonebook if necessary. A M N MbN: Select the desired phone number. AM N Chain dial This feature allows you to dial phone numbers in the phonebook while you are on a call. This feature can be used, for example, to dial a calling card access number or bank account PIN that you have stored in the phonebook, without having to dial manually. editing entries 1 2 3 4 Find the desired entry (page 21). A MbN: "Edit" a MbN: Select the desired item you want to change. A To change the name and phone number: Edit the name or phone number. A To change the category: MbN: Select the desired category. MbN: Select the desired phone number.

press to dial the number. 4 5 6 5 Note: R When storing a calling card access number and your PIN in the phonebook as one phonebook entry, press to add pauses after the number and PIN as necessary (page 17). erasing entries Erasing an entry 1 2 1 Find the desired entry (page 21). A MbN: "Yes" a a M N Copying phonebook entries You can copy phonebook entries: Â between the shared phonebook and personal phonebook. Â between the personal phonebook of each handset.

Important: R Only 1 person can access the phonebook at a time. R Category settings for phonebook entries are not copied. Erasing all entries To erase all entries in the shared phonebook: (left soft key) To erase all entries in the personal phonebook: (left soft key) a MbN: "Erase All" a MbN: "Yes" a MbN: "Yes" a a M N 2 3 4 5 22 Copying multi entries You can copy selected entries (up to 100). Pdf 22 2012/04/20 14:29:11 Phonebook To copy from the shared phonebook to a personal phonebook 6 1 2 3 4 (left soft key) MbN: "Copy" a MbN: Select the desired entry. a R The selected entries are indicated by " ". R To continue copying other entries, perform this step repeatedly. R To cancel an entry, press MCN or MDN to select the entry, then press . R You can also search for another entry by entering the first character (page 21). After selecting the desired entries, press . R The entries will be automatically copied to the personal phonebook on the operated handset. R When the entries have been copied, "Completed" is displayed. M N To copy to the personal phonebook: MbN: Select the desired handset. A To copy to the shared phonebook: MbN: Select the shared phonebook. A R When the entries have been copied, "Completed" is displayed. 7 M N Copying all entries To copy from the shared phonebook to a personal phonebook 5 1 2 3 (left soft key) MbN: "Copy All" a R All shared phonebook entries will be automatically copied to the personal phonebook of the operated handset.

r When all entries have been copied, "Completed" is displayed. M N 6 4 To copy from the personal phonebook to another personal phonebook or to a shared phonebook To copy from the personal phonebook to another personal phonebook or to a shared phonebook 1 2 3 4 (left soft key) a MbN: "Copy" a MbN: Select the desired entry. a R The selected entries are indicated by " ". R To continue copying other entries, perform this step repeatedly. r To cancel an entry, press MCN or MDN to . Select the entry, then press R You can also search for another entry by entering the first character (page 21). After selecting the desired entries, press . 1 2 3 4 (left soft key) a MbN: "Copy All" a To copy to the personal phonebook: MbN: Select the desired handset. A To copy to the shared phonebook: MbN: Select the shared phonebook. Pdf 23 2012/04/20 14:29:11 Speed Dial Speed dial You can assign 1 phone number to each of the dial keys (1 to 9) on the handset.

Editing an entry 1 Press and hold the desired speed dial key (1 to 9). R You can view other speed dial assignments by pressing MCN or MDN. A MbN: "Edit" a Edit the name if necessary (16 characters max. ; page 53). A Edit the phone number if necessary (24 2 times digits max. ). A Adding a phone numbers to a speed dial key 1 2 Press and hold the desired speed dial key (1 to 9). A R You can change the character entry (page 53). Mode by pressing Enter the party's phone number (24 digits 2 times max. ).

A 2 3 4 Erasing an entry 1 2 3 4 Press and hold the desired speed dial key (1 to 9). A MbN: "Erase" a MbN: "Yes" a M N 3 Assigning a phonebook entry to a speed dial key 1 2 3 4 Find the desired entry (page 21). A MbN: "Speed Dial" a MbN: Select the desired phone number. A MbN: Select the desired dial key number. A R Where a dial key is already being used for speed dialling, " " is displayed next to the dial key number. If you select this dial key, "Overwrite" is displayed. To overwrite with the currently selected phone number, go to step 5. AM N Viewing speed dial key assignments You can see the speed dial key assignments on the handset display. Press and hold the desired speed dial key (1 to 9). Making a call using a speed dial key 1 2 Press and hold the desired speed dial key (1 to 9).

M N 5 Note: R If you edit a phonebook entry which is assigned to a speed dial key, the edited entry does not transfer to the speed dial key.



[You're reading an excerpt. Click here to read official PANASONIC](#)

[KX-TG8561E user guide](#)

<http://yourpdfguides.com/dref/4311975>

Pdf 24 2012/04/20 14:29:11 Programming Programmable settings You can customise the unit by programming the following features using the handset. To access the features, there are 2 methods. N Scrolling through the display menus (middle soft key) 1 2 3 4 Press MCN, MDN, MEN, or MFN to select the desired main menu. A Press MCN or MDN to select the desired item from the next sub-menus. a Press MCN or MDN to select the desired setting. A R This step may vary depending on the feature being programmed. n. R To exit the operation, press M n Using the direct command code 1 (middle soft key) a Enter the desired code. A R This step may vary depending on the feature being programmed.

n. R To exit the operation, press M Note: R In the following table, < > indicates the default settings. R In the following table, indicates the reference page number. R Display menu order and sub-menu may vary depending on your model. Display the menu tree and direct command code table Main menu:

Operation Viewing the caller list.

Pdf 29 2012/04/20 14:29:11 Programming Main menu: Sub-menu 1 On/Off Sensitivity Level "Baby Monitor" Sub-menu 2 Settings 1: On 0: <Off> 1: Low 2: <Middle> 3: High Code #268 #269 35 36 Main menu: Operation "Calendar" Code #727 33 Viewing the calendar and setting the schedule alarm. \*1 If you program these settings using one of the handsets, you do not need to program the same item using another handset. \*2 This menu is not displayed when scrolling through the display menus. It is only available in direct command code. \*3 The ringer tone may continue to play for several seconds even if the caller has already hung up.

You may either hear a dial tone or no one on the line when you answer the call. \*4 The preset melodies in this product are used with permission of © 2011 Copyrights Vision Inc. \*5 If you do not want the unit to ring before the caller information is received, set to "Off". (Caller ID subscribers only) You can only remove the first ring if the unit rings two times or more by default, which depends on your service provider/telephone company. \*6 This feature allows the unit to automatically adjust the date and time each time caller information including date and time is received. to turn this feature on, select "Caller ID". To turn this feature off, select "Manual". (Caller ID subscribers only) To use this feature, set the date and time first (page 15). \*7 You can set the wallpaper to display with or without date and time by pressing . The default setting is with date and time displayed.

\*8 You can set the handset display backlight while on charge. "On": Backlight is on (dimmed). "Off": Backlight turns off after 10 seconds of charging. \*9 Turn this feature off if you prefer not to hear key tones while you are dialling or pressing any keys, including confirmation tones and error tones. \*10 If you subscribe to a Caller ID service and want to view the caller's information after lifting up the handset to answer a call, turn off this feature. \*11 The recall/flash time depends on your telephone exchange or host PBX. contact your PBX supplier if necessary. \*12 To prevent other users from joining your conversations with outside callers, turn this feature on. Pdf 30 2012/04/20 14:29:11 Programming Special programming Alarm An alarm sounds at the set time for 1 minute and is repeated 5 times at 5 minute intervals (snooze function). A text memo can also be displayed for the alarm.

A total of 5 separate alarm times can be programmed for each handset. You can set one of 3 different alarm options (once, daily, or weekly) for each alarm time. Important: R Set the date and time beforehand (page 15). 7 MbN: Select the desired alarm tone. A R We recommend selecting a different ringer tone from the one used for outside calls.

AM N R When the alarm is set, Note: 1 2 3 (middle soft key) #720 Select an alarm by pressing 1 to 5. "Once" An alarm sounds once at the set time. "Daily" An alarm sounds daily at the set time. go to step 5. "Weekly" Alarm sounds weekly at the set time(s).

to stop the alarm completely. R Press R When the handset is in use, the alarm will not sound until the handset is in standby mode. To stop the R Press any dial key or sound but keep the snooze function activated. R If you want to make an outside call when the snooze function is activated, please stop the snooze function before making the call. Night mode Night mode allows you to select a period of time during which the handset will not ring for outside calls. This feature is useful for time periods when you do not want to be disturbed, for example, while sleeping. Night mode can be set for each handset. For personal phonebook (page 20), you can also select categories of callers whose calls override night mode and ring the handset (Caller ID subscribers only). Important: R Set the date and time beforehand (page 15). R We recommend turning the base unit ringer off (page 28) in addition to turning the night mode on.

R If you have set the alarm, the alarm sounds even if the night mode is turned on. 4 Proceed with the operation according to your selection in step 3. n Once: Enter the desired date and month. A n Weekly: MbN: Select the desired day of the . A Turning night mode on/off 1 (middle soft key) #238 Helpline Tel. Enter the desired hour and minute you wish to start this feature. a R You can select 24-hour or 12-hour clock format ("AM" or "PM") by pressing . Enter the desired hour and minute you wish to end this feature. a M N R When the night mode is set, displayed. Is Changing the handset name Each handset can be given a customised name ("Bob", "Kitchen", etc.

). This is useful when you make intercom calls between handsets. You can also select whether or not the handset name is displayed in standby mode. the default setting is "No". If you select "Yes" without entering any handset name, "Handset 1" to "Handset 6" is displayed.

4 5 1 2 3 4 5 (middle soft key) #104 Enter the desired name (max. 10 characters; page 53). R If not required, go to step 3. mbN: Select the desired setting. A times M N 2 Changing the start and end time 1 2 (middle soft key) #237 Continue from step 3, "Turning night mode on/off", page 31.

Setting the ring delay This setting allows the handset to ring during night mode if the caller waits long enough. After the selected amount of time passes, the handset rings. If you select "No Ringing", the handset never rings during night mode. Incoming call barring (Caller ID subscribers only) This feature allows the unit to reject calls from specified phone numbers that you do not want to answer such as junk calls. When a call is received, the unit does not ring while the caller is being identified. If the phone number matches an entry in the call barred list, the unit sends out a busy tone to the caller, and then disconnects the call.



[You're reading an excerpt. Click here to read official PANASONIC KX-TG8561E user guide](http://yourpdfguides.com/dref/4311975)  
<http://yourpdfguides.com/dref/4311975>

Important: R When the unit receives a call from a number that is stored in the call barred list, the call is logged in the caller list after the call is (page 40) with disconnected. 1 2 (middle soft key) #239 MbN: Select the desired setting. a AM N Note: R When the answering system answers the call, this feature does not work. Selecting categories to bypass night mode 1 2 (middle soft key) #241 Select your desired categories by pressing 1 to 9.

R " " is displayed next to the selected category numbers. R To cancel a selected category, press the same dial key again. " " disappears. AM N Storing unwanted callers You can store up to 30 phone numbers in the call barred list. Important: R You must store the phone number with an area code in the call barred list. A MbN: "Caller Barred" a MbN: "Yes" a AM N R " " is displayed next to the selected handset numbers. R To cancel a selected handset, press the same dial key again. A Enter the phone number or area code to a be restricted (8 digits max. N By entering phone numbers: 1 (middle soft key) #217 a 4 5 6 2 3 Enter the phone number (24 digits max. M N Viewing/editing/erasing bar call numbers 1 2 3 (middle soft key) #217 MbN: Select the desired entry.

A AM N To erase a number: a MbN: "Yes" a AM Changing the base unit PIN (Personal Identification Number) Important: R If you change the PIN, please make note of your new PIN. The unit will not reveal the PIN to you. If you forget your PIN, see page 58. N 1 2 3 (middle soft key) #132 Enter the current 4-digit base unit PIN (default: "0000"). Enter the new 4-digit base unit PIN.

A AM N Note: R When editing, press the desired dial key to to erase. Add, Setting call restriction You can restrict selected handsets from dialling certain numbers. You can assign up to 6 phone numbers to be restricted, and select which handsets are to be restricted. Storing area codes here prevents the restricted handsets from dialling any phone number in that area code. Calendar/Schedule You can program 20 schedule alarms for each handset using the calendar.

A schedule alarm sounds at the set time for 1 minute. A text memo can also be displayed for the schedule alarm. Important: R Set the date and time beforehand (page 15). R If the unit is connected to a PBX system, date information may not be properly received. Set the PBX system to receive the correct date information. contact your PBX supplier if necessary. 1 2 3 (middle soft key) #256 Enter the base unit PIN (default: "0000"). R If you forget your PIN, see page 58. select the handsets to be restricted by pressing 1 to 6. R All handsets registered to the base unit are displayed.

Pdf 33 2012/04/20 14:29:12 Programming Adding a new entry 6 a 1 2 3 4 5 6 7 (middle soft key) a Edit the text memo if necessary (30 characters max. A 2 times M N MbN: Select the desired date. A R To move to another month in the calendar, keep pressing MCN or MDN. A 2 times R You can select "Off" if you prefer not to hear an alarm tone. R We recommend selecting a different ringer tone from the one used for outside calls. R To add other entries, repeat from step 3. M N 7 8 Erasing an entry Schedule alarm entries are not erased automatically after the schedule alarm sounds. erase unwanted entries. 1 2 3 4 5 1 2 3 4 5 6 (middle soft key) a MbN: "Erase" a MbN: "Yes" a M N a MbN: Select the desired entry. Erasing all entries (middle soft key) a MbN: "Erase All" a MbN: "Yes" a MbN: "Yes" a M N a 8 Note: or place the R To stop the alarm, press handset on the base unit or charger.

R When the handset is in use, the alarm will not sound until the handset is in standby mode. Viewing entries 1 2 (middle soft key) a a Baby monitor This feature allows you to listen in on a room where another handset is located, allowing you to easily monitor from different areas of the house or place. @@@@For example, test its sensitivity. @@To see the entries on the selected date, . @@@@R The monitored handset never rings during the monitoring mode.

@@@@@A Setting the baby monitor Perform the setting operation with the handset to be monitored (for example, the handset placed in a baby's room). MbN: Select the desired phone number. a R "Baby Monitor" will be displayed. @@@@@@A Enter the desired number (24 digits 2 times max. @@@@@ note: R The registered name/number is displayed.

@@@@@ ; page 53). A Edit the phone number if necessary (24 2 times digits max. ). @@@Press M If you want to respond from the monitoring handset, press . @@@@@To answer N, then press the call, press M N. @@@@@You can turn off the baby monitor feature by pressing #0.

@@@@@R This feature cannot be set during a monitoring call. 1 2 3 Press on the handset being monitored. @@@@@Important: R The additional handset model recommended for use with this unit is noted on page 4. If another handset model is used, certain operations (handset settings, base unit settings, etc.

) may not be available. Note: R When the baby monitor is activated, you cannot access the direct commands using the monitored handset. Before setting the baby monitor feature, you can use direct commands to adjust baby monitor sensitivity (page 30). Pdf 36 2012/04/20 14:29:12 Programming Additional base units Handsets can be registered to up to 4 base units, allowing you to add additional base units and extend the area in which your handset(s) can be used. If a handset moves out of range of its base unit when "Auto" is selected on base unit (page 37), it looks for another base unit to make or receive calls. A base unit and the handsets it communicates with is called a "radio cell". Note: R Calls are disconnected when the handset moves from one radio cell to another. R When you purchase an additional handset, refer to the additional handset's installation manual for registration. Selecting a base unit When "Auto" is selected, the handset automatically uses any available base unit it is registered to. When a specific base unit is selected, the handset makes and receives calls using that base unit only.

If the handset is out of range of that base unit, no calls can be made. 1 2 (middle soft key) #137 MbN: Select the desired base unit number, or "Auto". A R The handset starts searching for the base unit. registering a handset to a base unit The supplied handset and base unit are pre-registered. If for some reason the handset is not registered to the base unit (for example, is displayed even when the handset is near the base unit), re-register the handset.

Deregistering a handset A handset can cancel its own registration to the base unit, or other handsets registered to the same base unit. This allows the handset to end its wireless connection with the system. 1 2 3 Handset: (middle soft key) #130 MbN: Select a base unit number. A R This number is used by the handset as a reference only. Base unit: Press and hold M N for about 5 seconds, until the registration tone sounds.



[You're reading an excerpt. Click here to read official PANASONIC KX-TG8561E user guide](http://yourpdfguides.com/dref/4311975)  
<http://yourpdfguides.com/dref/4311975>



The public mailbox can be accessed freely. Private mailboxes are password protected to ensure privacy. Important: R To use the public mailbox, you must register the public mailbox with BT Text (page 42). R To send or receive a message using a private mailbox, you must: A first create the private mailbox by storing its name and password (page 45). A register each private mailbox with BT Text (page 42). note: R A total of 47 messages (at 160 characters/ message) in all mailboxes added together can be saved. Total number may be more than 47 if length of messages is less than 160 characters/message. R If the unit is connected to a PBX system, you may not be able to use SMS features.

1 To store "Message Centre1": (middle soft key) #351 To store "Message Centre2": (middle soft key) #352 Edit the number as necessary. aM N 2 Note: R For PBX users: A You need to add the PBX line access number and a dialling pause to the beginning of the Message Centre 1 number. A If you only use the Message Centre 1 number for SMS, store the Message Centre 1 number as is (without adding a line access number or dialling pause) to Message Centre 2. Registering mailboxes Each SMS mailbox you wish to use must be registered with BT Text. There are two ways you can register a mailbox: A Send an SMS message to another person.

A Send the text message 'REGISTER' to destination number 00000. Pdf 42 2012/04/20 14:29:12 SMS (Short Message Service) Sending a message Writing and sending a new message 1 2 (middle soft key) a a To access the public mailbox: MbN: "Public" a To access a private mailbox: MbN: Select the desired mailbox. " is displayed, you can use the text from the last message you created by pressing MDN. enter a message. A R You can change the character entry (page 53).

Mode by pressing Enter the destination phone number (20 digits max. ). A To use the redial list: MEN (T) a MbN: Select the phone 2 times number. A To use the caller list: MFN ( ) a MbN: Select the party. A 2 times To use the shared phonebook: a MbN: Select the phonebook entry. A a MbN: Select the desired phone number. A 2 times To use the personal phonebook: a a MbN: Select the phonebook entry. A a MbN: Select 2 the desired phone number. A times R If you wish to send the message to the other party's mailbox, enter the other party's mailbox number after the destination phone number. Example: The other party's phone number is 123456 and their mailbox number is 1.

A To send the message, press R To cancel sending, press M . n. 3 4 5 Note: R This unit supports SMS messages of up to 612 characters, however, the maximum number of characters you can send or receive may be limited by your SMS service provider/telephone company. Contact your SMS service provider/telephone company for details. R If your message contains over 160 characters, the message is a long message and "IILong TextII" is displayed. Your service provider/telephone company may treat long messages differently from other messages. Contact your service provider/ telephone company for details. R If your phone is connected to a PBX, store the PBX line access number (page 45). Editing/sending a saved message 1 2 (middle soft key) a a To access the public mailbox: MbN: "Public" a To access a private mailbox: MbN: Select the desired mailbox. a a Enter its password.

MbN: "Send List" a To read a saved message, press MCN or MDN to select the message. A To edit the message: a MbN: "Edit Message" a a Continue from step 4, "Writing and sending a new message", page 43. to send the message: a MbN: "Send" a a Press to erase all numbers. A and hold Continue from step 5, "Writing and sending a new message", page 43. 3 4 5 Erasing saved messages 1 (middle soft key) a a Helpline Tel.

Pdf 43 2012/04/20 14:29:12 SMS (Short Message Service) 2 To access the public mailbox: MbN: "Public" a To access a private mailbox: MbN: Select the desired mailbox. Replying to a message 1 2 3 4 5 While reading a received message, press . mbN: "Reply" a Enter a message (page 53). A Edit the destination phone number if necessary. A Continue from step 6, "Writing and sending a new message", page 43.

3 4 5 6 Receiving a message When an SMS message is received: A "Receiving SMS Message" is displayed. A a tone is heard (if the handset ringer is turned on). A is displayed with the total number of new (unread) SMS messages. Editing/forwarding a message 1 2 3 While reading a received message, press . MbN: "Edit Message" a Continue from step 4, "Writing and sending a new message", page 43. Reading a received message 1 2 (middle soft key) a a To access the public mailbox: MbN: "Public" a To access a private mailbox: MbN: Select the desired mailbox. a a Enter its password. R If a mailbox contains new (unread) SMS messages, "I" is displayed next to the total number of messages for that mailbox. mbN: "Receive List" a MbN: Select a message. R Messages which have already been read are indicated by a " ", even if they were read using another handset.

Erasing received messages 1 2 While reading a received message, press . mbN: "Erase" a R To erase all messages in the selected mailbox , select "Erase All". A MbN: "Yes" a aM N 3 3 4 Storing the sender's number in the phonebook 1 2 3 While reading a received message, press . MbN: "Add Phonebook" a To add entries to the shared phonebook: MbN: "Shared Phonebook" a To add entries to the personal phonebook: 5 44 Helpline Tel. Pdf 44 2012/04/20 14:29:12 SMS (Short Message Service) MbN: "Personal Phonebook" a 4 To store the name, continue from step 3, "Editing entries", page 22. 2 times a M N a Editing the sender's number before calling back 1 2 3 While reading a received message, press . mbN: "Edit & Call" a Edit the number. A M N 5 Storing the PBX line access number (for PBX users only) Store your PBX line access number (4 digits max. ) so that SMS messages are sent properly. When sending SMS messages to entries in the phonebook or redial list, the PBX line access number is deleted.

the default setting is "Off". Other settings Creating private mailboxes Private mailboxes can be used for sending and receiving SMS messages. each private mailbox is password protected. 1 2 3 4 (middle soft key) #353 MbN: Select the desired new mailbox number ("Mailbox1" to "Mailbox6"). 2 times a M N a 1 2 3 (middle soft key) #356 MbN: "On" a Enter your PBX line access code and a dialling pause, if necessary.

A M N Note: R To receive SMS messages using a mailbox, inform others of your mailbox number. R If you forget the password assigned to a mailbox, contact an authorised service centre.



[You're reading an excerpt. Click here to read official PANASONIC KX-TG8561E user guide](http://yourpdfguides.com/dref/4311975)  
<http://yourpdfguides.com/dref/4311975>

Changing private mailbox settings You can change the password or name of the private mailbox and erase the mailbox. 1 2 (middle soft key) #353 MbN: Select the desired mailbox name. Pdf 45 2012/04/20 14:29:12 Answering System Answering system The answering system can answer and record calls for you when you are unavailable to answer the phone.

You can also record phone conversations (page 19). You can also set the unit to play a greeting message but not to record caller messages by selecting "Greeting Only" as the recording time setting (page 50). Important: R Only 1 person can access the answering system (listen to messages, record a greeting message, etc. ) at a time. R When callers leave messages, the unit records the day and time of each message. Make sure the date and time have been set correctly (page 15). turning the answering system on/off The answering system is preset to on. Base unit Press M N to turn on/off the answering system. R When the answering system is turned on: A The answer on indicator lights up. A The message counter displays the total number of messages (old and new).

Handset 1 To turn on: (middle soft key) #327 To turn off: (middle soft key) #328 M N Memory capacity (including your greeting message) The total recording capacity is about 40 minutes, a maximum of 64 messages can be recorded. Note: R When message memory becomes full: A "Messages Full" is shown on the handset display. A The answer on indicator on the base unit flashes rapidly if the answering system is turned on. A The message counter on the base unit flashes if the answering system is turned on. A and the total number of new messages are not displayed on the handset even if the answering system is turned on. A If you use the pre-recorded greeting message, the unit automatically switches to another pre-recorded greeting message asking callers to call again later. A If you recorded your own greeting message, the same message is still announced to callers even though their messages are not recorded. 2 Note: R When the answering system is turned on, is displayed next to the battery icon. Call screening While a caller is leaving a message, you can listen to the call through the handset's speaker.

to adjust the speaker volume , press MDN or MCN repeatedly. You can answer the call by pressing M N on the handset. Call screening can be set for each handset. the default setting is "On". 1 2 (middle soft key) #310 MbN: Select the desired setting.

a M N Greeting message When the unit answers a call, a greeting message is played to callers. You can use either: A your own greeting message A a pre-recorded greeting message 46 Helpline Tel. Pdf 46 2012/04/20 14:29:12 Answering System Recording your greeting message 1 2 3 (middle soft key) #302 MbN: "Yes" a After a beep sounds, hold the handset about 20 cm away and speak clearly into the microphone (2 minutes and 30 seconds max. Listening to messages using the base unit When new messages have been recorded, M N on the base unit flashes. press M N.

R If new messages have been recorded, the base unit plays back new messages. R If there are no new messages, the base unit plays back all messages. 4 5 Using a pre-recorded greeting message The unit provides 2 pre-recorded greeting messages: A If you erase or do not record your own greeting message, the unit plays a pre-recorded greeting asking callers to leave a message. A If the message recording time (page 50) is set to "Greeting Only", callers' messages are not recorded and the unit plays a different pre-recorded greeting message asking callers to call again. Operating the answering system during playback

Key MjN or Mkn M M MnN M \*1 N N N Operation Adjust the speaker volume Repeat message\*1 Skip message Stop playback Erase currently playing message Resetting to a pre-recorded greeting message If you want to use a pre-recorded greeting message once you record your own greeting message, you need to erase your own greeting message. If pressed within the first 5 seconds of a message, the previous message is played. Erasing all messages Press M N 2 times while the unit is not in use. 1 2 (middle soft key) #304 a M N Listening to messages using the handset When new messages have been recorded, is displayed on the handset with the total number of new messages. Playing back the greeting message 1 2 (middle soft key) #303 M N 1 To listen to new messages: (middle soft key) #323 To listen to all messages: (middle soft key) #324 When finished, press M N. Pdf 47 2012/04/20 14:29:13 Answering System Listening to messages from the message list You can select the item to play back.

Key \*4\*4 \*5 \*6 \*1 Operation Erase currently playing message Erase all messages Reset to a pre-recorded greeting message 1 2 (middle soft key) #329 MbN:

Select the desired item from the message list. A R You can erase the selected message as follows: a MbN: "Yes" a When finished, press M N. 3 \*2 Note: R If the item has already been heard, " " is displayed, even if it was heard using another handset. R "Message" is displayed in the message list for any recorded conversations or if the unit cannot receive caller information. \*3 \*4 If pressed within the first 5 seconds of a message, the previous message is played except when playing back from the message list. When you play a message from the message list, the unit stops message playback and the display goes back to the message list. To resume playback: MbN: "Play" a You can also erase as follows: a MbN: "Yes" a Operating the answering system (middle soft key) a Key MDN or MCN Operation Adjust the receiver or speaker volume (during playback) Repeat message (during playback)\*1 Skip message (during playback)\*2

Enter the "Settings" menu Play new messages Play all messages Play greeting message Record greeting message Turn answering system on Pause message\*3 9 or 0 Stop recording Stop playback Turn answering system off a Calling back (Caller ID subscribers only) If caller information is received for the call, you can call the caller back while listening to a message. 1 or MFN 2 or MEN 3 4 5 6 7 6 8 1 2 Press during playback. MbN: "Call Back" a Editing the number before calling back 1 2 3 Press during playback. n MbN: "Edit & Call" a Edit the number.

A M Erasing all messages 1 2 (middle soft key) #325 MbN: "Yes" a a M N Remote operation Using a touch-tone phone, you can call your phone number from outside and access the unit to listen to messages or change 48 Helpline Tel. The unit's voice guidance prompts you to press certain dial keys to perform different operations. Note: R If you do not press any dial keys within 10 seconds after a voice guidance prompt, the unit disconnects your call. Remote access code A 3-digit remote access code must be entered when operating the answering system remotely.



[You're reading an excerpt. Click here to read official PANASONIC KX-TG8561E user guide](http://yourpdfguides.com/dref/4311975)  
<http://yourpdfguides.com/dref/4311975>