




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for PANASONIC KXTG572SK. You'll find the answers to all your questions on the PANASONIC KXTG572SK in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual PANASONIC KXTG572SK
User guide PANASONIC KXTG572SK
Operating instructions PANASONIC KXTG572SK
Instructions for use PANASONIC KXTG572SK
Instruction manual PANASONIC KXTG572SK

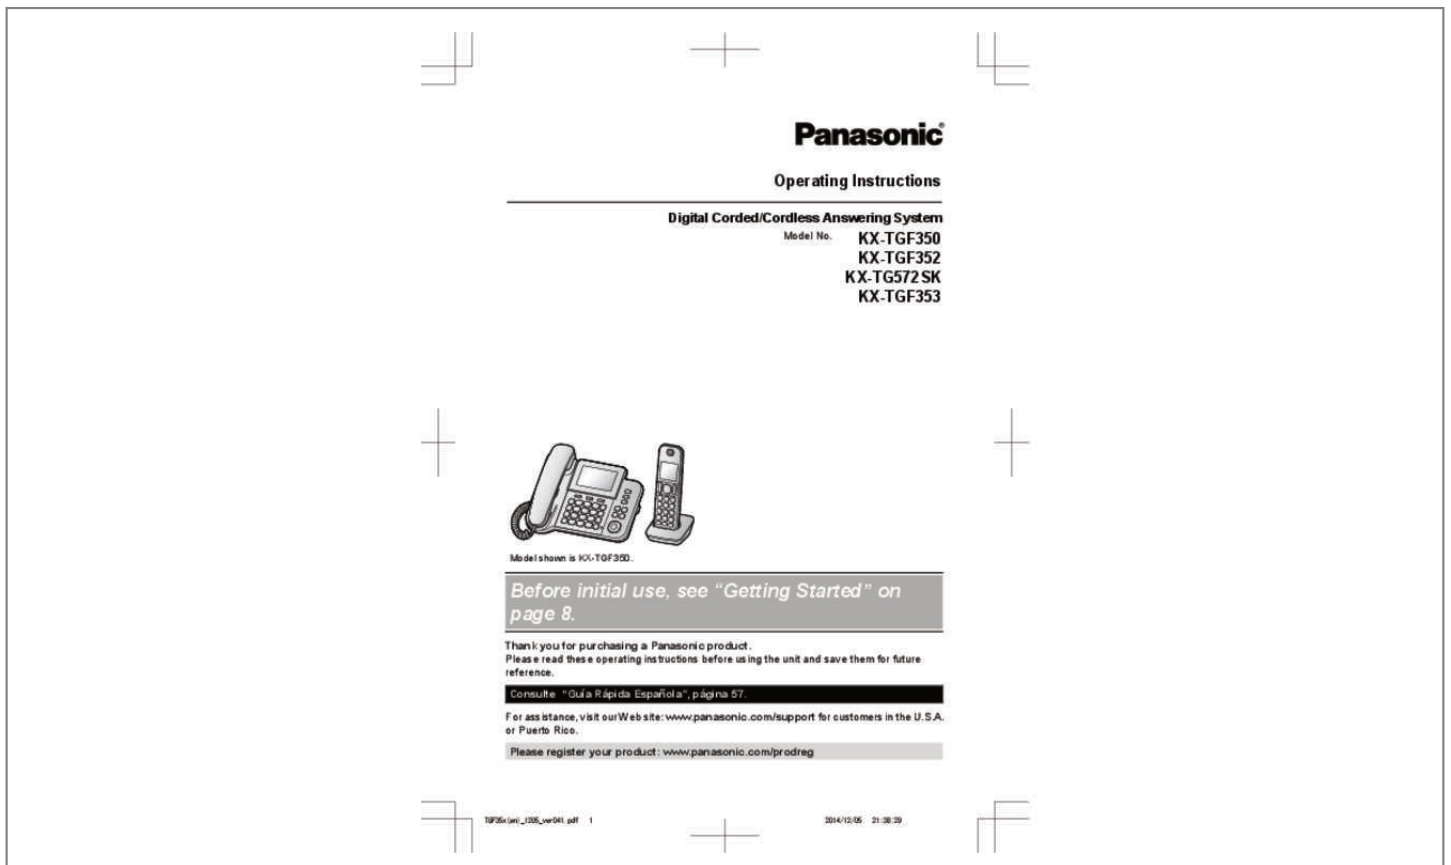

[You're reading an excerpt. Click here to read official PANASONIC KXTG572SK user guide](http://yourpdfguides.com/dref/5784780)
<http://yourpdfguides.com/dref/5784780>

Manual abstract:

thank you for purchasing a Panasonic product. @@@@For assistance, visit our Web site: www.panasonic.com/support for customers in the U. 15 Useful features during a call. @@@@*7 The handset cover comes attached to the handset. Pdf 3 2014/12/05 21:38:29 Introduction Additional/replacement accessories Please contact your nearest Panasonic dealer for sales information (page 61). Accessory item Rechargeable batteries Model number/Specifications HHR-4DPA*1 R To order, please visit www.panasonic.com/batterystore Battery type: – Nickel metal hydride (Ni-MH) – 2 x AAA (R03) size for each handset Headset T-adaptor Range extender Key detector KX-TCA60, KX-TCA93, KX-TCA400, KX-TCA430 KX-J66 KX-TGA405*2 KX-TGA20*3 *1 Replacement batteries may have a different capacity from that of the supplied batteries.

*2 By installing this unit, you can extend the range of your phone system to include areas where reception was previously not available. This product can be purchased online. @@@@ () to a single base unit. R Optional handsets may be a different color from that of the supplied handsets. Pdf 4 2014/12/05 21:38:29 Important Information For your safety To prevent severe injury and loss of life/property, read this section carefully before using the product to ensure proper and safe operation of your product.

93 GHz, and the RF transmission power is 115 mW (max.).) R Do not use the product in health care facilities if any regulations posted in the area instruct you not to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy. WARNING Power connection R Use only the power source marked on the product.

R Do not overload power outlets and extension cords. This can result in the risk of fire or electric shock. R Completely insert the AC adaptor/power plug into the power outlet. Failure to do so may cause electric shock and/or excessive heat resulting in a fire. r Regularly remove any dust , etc. From the AC adaptor/power plug by pulling it from the power outlet, then wiping with a dry cloth. Accumulated dust may cause an insulation defect from moisture, etc. resulting in a fire. R Unplug the product from power outlets if it emits smoke, an abnormal smell, or makes an unusual noise. These conditions can cause fire or electric shock.

Confirm that smoke has stopped emitting and contact us at www.panasonic.com/contactinfo R Unplug from power outlets and never touch the inside of the product if its casing has been broken open. R Never touch the plug with wet hands. danger of electric shock exists. Installation R To prevent the risk of fire or electrical shock, do not expose the product to rain or any type of moisture. R Do not place or use this product near automatically controlled devices such as automatic doors and fire alarms. Radio waves emitted from this product may cause such devices to malfunction resulting in an accident. R Do not allow the AC adaptor or telephone line cord to be excessively pulled, bent or placed under heavy objects. Operating safeguards R Unplug the product from power outlets before cleaning.

do not use liquid or aerosol cleaners. R Do not disassemble the product. r Do not spill liquids (detergents , cleansers , etc.) onto the telephone line cord plug, or allow it to become wet at all. this may cause a fire.

If the telephone line cord plug becomes wet, immediately pull it from the telephone wall jack, and do not use. R Do not excessively pull the corded handset cord from the base unit. This may cause the base unit to fall, resulting in injury. Medical R Consult the manufacturer of any personal medical devices, such as pacemakers or hearing aids, to determine if they are adequately shielded from external RF (radio frequency) energy. (The product operates in CAUTION Installation and location R Never install telephone wiring during an electrical storm.

R Never install telephone line jacks in wet locations unless the jack is specifically designed for wet locations. R Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface. R Use caution when installing or modifying telephone lines. R The AC adaptor is used as the main disconnect device. Ensure that the AC outlet is installed near the product and is easily accessible. R This cordless handset is unable to make calls when: – the handset batteries need recharging or have failed. □ there is a power failure. R Do not mix old and new batteries. R Do not open or mutilate the batteries. Released electrolyte from the batteries is corrosive and may cause burns or injury to the eyes or skin.

The electrolyte is toxic and may be harmful if swallowed. R Exercise care when handling the batteries. Do not allow conductive materials such as rings, bracelets, or keys to touch the batteries, otherwise a short circuit may cause the batteries and/or the conductive material to overheat and cause burns. R Charge the batteries provided with or identified for use with this product only, in accordance with the instructions and limitations specified in this manual. R Only use a compatible base unit (or charger) to charge the batteries. Do not tamper with the base unit (or charger). Failure to follow these instructions may cause the batteries to swell or explode. Attention: A nickel metal hydride battery that is recyclable powers the product you have purchased. Please call 1-800-8-BATTERY (1-800-822-8837) for information on how to recycle this battery. For assistance, please visit www.panasonic.com.

Pdf 5 2014/12/05 21:38:29 Important Information Note when using alkaline batteries for power backup R The batteries should be used correctly, otherwise the unit may be damaged due to battery leakage. R Do not charge, short-circuit, disassemble, or heat the batteries. r Do not dispose of batteries in a fire. R Remove all the batteries when replacing. R Do not mix old, new or different types of batteries.

R It is recommended that batteries are replaced annually. R It is recommended that batteries are replaced after a power outage. R Do not place heavy objects on top of the product. R When you leave the product unused for a long period of time, unplug the product from the power outlet. R The product should be kept away from heat sources such as heaters, kitchen stoves, etc.

It should not be placed in rooms where the temperature is less than 0 °C (32 °F) or greater than 40 °C (104 °F). damp basements should also be avoided. R The maximum calling distance may be shortened when the product is used in the following places: Near obstacles such as hills, tunnels, underground, near metal objects such as wire fences, etc. R Operating the product near electrical appliances may cause interference. Move away from the electrical appliances.

Routine care R Wipe the outer surface of the product with a soft moist cloth. R Do not use benzine, thinner, or any abrasive powder. Important safety instructions When using your product, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following: 1.



[You're reading an excerpt. Click here to read official PANASONIC KXTG572SK user guide](http://yourpdfguides.com/dref/5784780)
<http://yourpdfguides.com/dref/5784780>

Do not use this product near water for example, near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement or near a swimming pool. 2.

Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning. 3. Do not use the telephone to report a gas leak in the vicinity of the leak. 4. Use only the power cord and batteries indicated in this manual. Check with local codes for possible special disposal instructions. SAVE THESE INSTRUCTIONS Other information CAUTION: Risk of explosion if battery is replaced by an incorrect type.

Dispose of used batteries according to the instructions. Notice for product disposal, transfer, or return R This product can store your private/confidential information.

To protect your privacy/confidentiality, we recommend that you erase information such as phonebook or caller list entries from the memory before you dispose of, transfer, or return the product. Notice For best performance Base unit location/avoiding noise The base unit and other compatible Panasonic units use radio waves to communicate with each other. R For maximum coverage and noise-free communications, place your base unit: – at a convenient, high, and central location with no obstructions between the cordless handset and base unit in an indoor environment. □ away from electronic appliances such as TVs, radios, personal computers, wireless devices, or other phones. □ facing away from radio frequency transmitters, such as external antennas of mobile phone cell stations.

(Avoid putting the base unit on a bay window or near a window.) R Coverage and voice quality depends on the local environmental conditions. R If the reception for a base unit location is not satisfactory, move the base unit to another location for better reception. Environment R Keep the product away from electrical noise generating devices, such as fluorescent lamps and motors. R The product should be kept free from excessive smoke, dust, high temperature, and vibration.

7 7 1 5 4 6 R Follow the directions on the display to set up the unit. R When the batteries are fully charged, “Fully charged” is displayed. *1 The base unit can fully charge Ni-MH batteries in about 15 hours. *2 We recommend using HHR-4DPA batteries (page 4). *3 Only insert alkaline batteries once a power failure occurs. Remove the alkaline batteries when power is restored. 1 1 Disconnect the telephone line cord (A). 2 Open the battery cover (B). 3 Install the batteries in the battery compartment (C). Handset battery level Icon Battery level High Medium Low Needs charging. Empty 4 Close the cover, then reconnect the telephone line cord (D). C A B Panasonic Ni-MH battery performance (supplied batteries) Operation In continuous use Not in use (standby) *1 If eco mode is on. note: R Actual battery performance depends on usage and ambient environment. Operating time 13 hours max. *1 12 days max.

*1 D Base unit battery installation (for power backup) You can insert 2 AAA (R03) batteries (not supplied) into the base unit that will power the unit temporarily in the event of a power failure. Important: R The following batteries can be used with the base unit: – Rechargeable Ni-MH batteries*1, *2 (including the batteries used in your handset(s)) Note: R If your phone service provider requires additional devices in order to make and receive calls, such as a modem, you may still not be able to make and receive calls even if the base unit’s backup power feature is functioning. Base unit battery status when a power failure o R The adaptor is a removable attachment for desk stand or wall mounting use (page 47). N Control type Soft keys By pressing a soft key, you can select the feature shown directly above it on the display. Navigator key – MDN, MCN, M N, or M N: Scroll through various lists and items.

– VOL. (Volume: MDN or MCN): Adjust the receiver or speaker volume while talking. The name/number displayed next to the icon indicates the monitoring unit. (page 33) In use Line in use Answering system is being used by another handset or the base unit. Someone is using the line. Base unit display items Item Meaning The line is in use. R When flashing: The call is put on hold. R When flashing rapidly: An incoming call is now being received. (page 9) Blocked call (page 19) In use Line in use Answering system is being used by the han, press MCLEARN. 1 MREDIALN 2 MbN: Select the desired phone number.

A MERASEN 3 MbN: “Yes” a MSELECTN 4 MEXITN Adjusting the receiver or speaker volume Handset / Base unit Press MDN or MCN repeatedly while talking. 2 Lift the corded handset. 3 When you finish talking, place the corded handset on the cradle. Note: R You can also dial the phone number after lifting the corded handset. R While on a call, you can switch from the base unit to the cordless handset as follows. The call sharing mode must be on (page 31). a Handset: Press M N. Pause (for PBX/long distance service users) A pause is sometimes required when making calls using a PBX or long distance service. When storing a calling card access number and/or PIN in the phonebook, a pause is also needed (page 24). Pdf 14 2014/12/05 21:38:30 Making/Answering Calls Example: If you need to dial the line access number “9” when making outside calls with a PBX: Handset Useful features during a call Hold 1 9 a MDN (Pause) 2 Dial the phone number.

5 second pause is inserted each time you press MDN (Pause) on the handset or MPAUSEN on the base unit. 1 Press MMENUN during an outside call. 2 MbN: “Hold” a MSELECTN 3 To release hold, press M N. R Another handset user can take the call by pressing M N. R The base unit user can take the call by lifting the corded handset.

Base unit 1 Press MHOLDN during an outside call. R If you are using the corded handset, you can place it on the cradle. Answering calls Using the handset 1 Lift the handset and press M the unit rings. N or MZN when 2 To release hold, lift the corded handset. R A handset user can take the call by pressing M N. Note for handset and base unit: R While an outside call is on hold, the SP-PHONE indicator flashes. R After holding for 10 minutes, the call is disconnected.



[You're reading an excerpt. Click here to read official PANASONIC KXTG572SK user guide](http://yourpdfguides.com/dref/5784780)

<http://yourpdfguides.com/dref/5784780>

2 When you finish talking, press MOFFN or place the handset on the cradle. Any key answer: You can answer the call by pressing any dial key. Auto talk: You can answer calls simply by lifting the handset (page 30). Temporary ringer off: You can turn the ringer off temporarily by pressing M N. Mute Handset / Base unit Using the base unit 1 Lift the corded handset or press MZN when the unit rings. 1 Press MMUTEN during a call. 2 To return to the call, press MMUTEN. Note: R MMUTEN is a soft key visible on the display during a call.

2 When you finish talking, place the corded handset on the cradle. When the speakerphone is used, press MZN. Temporary ringer off: You can turn the ringer off temporarily by pressing M N. Flash Handset / Base unit MFLASHN allows you to use the special features of your host PBX such as transferring an extension call, or accessing optional telephone services. Note: R To change the flash time, see page 31. Adjusting the ringer volume Handset / Base unit Press MDN or MCN repeatedly to select the desired volume while ringing. For assistance, please visit [www. Pdf 15 2014/12/05 21:38:30 Making/Answering Calls](http://www.pdf15.2014/12/05/21:38:30/Making/Answering/Calls) For call waiting or Call Waiting Caller ID service users To use call waiting or Call Waiting Caller ID, you must first subscribe with your phone service provider. This feature allows you to receive calls while you are already talking on the phone. If you receive a call while on the phone, you will hear a call waiting tone.

If you subscribe to both Caller ID and Call Waiting with Caller ID services, the 2nd caller's information is displayed on the handset or base unit that is in use after you hear the call waiting tone. Handset / Base unit Note: R Depending on the environment where this handset is being used, this feature may not be effective. R This feature is not available while using the speakerphone. Handset equalizer This feature clarifies the voice of the person you are talking to, producing a more natural-sounding voice that is easier to hear and understand. Note: R Please contact your phone service provider for details and availability of this service in your area.

Temporary tone dialing (for rotary/ pulse service users) Handset / Base unit Press * (TONE) before entering access numbers which require tone dialing. Note: R Depending on the condition and quality of your telephone line, this feature may emphasize existing line noise. If it becomes difficult to hear, turn this feature off. R This feature is not available while using the speakerphone. R When both the "Equalizer" setting and noise reduction are activated, is shown on the display.

Call share You can join an existing outside call. Handset To join the conversation, press M other unit is on an outside call. Base unit To join the conversation, lift the corded handset when the handset is on an outside call. Note for handset and base unit: R A maximum of 3 parties (including 1 outside party) can join a conversation. (3-way conference) R To prevent other users from joining your conversations with outside callers, turn call sharing mode off (page 31). N when the Handset clarity booster This feature can improve sound clarity when the handset is used in an area where there may be interference. During an outside call, this feature is turned on automatically when necessary. R When this feature is turned on, is displayed. Handset noise reduction This feature allows you to hear the voice of the person you are talking to more clearly, by reducing the surrounding noise coming from the other party's telephone. 1 Press MMENUN while talking.

2 MbN: "Noise reduction on" or "Noise reduction off" a MSELECTN Transferring calls, conference calls Outside calls can be transferred or a conference call with an outside party can be made: 16 For assistance, please visit [www. Pdf 16 2014/12/05 21:38:30 Making/Answering Calls](http://www.pdf16.2014/12/05/21:38:30/Making/Answering/Calls) – between 2 handsets – between a handset and the base unit Handset 1 2 3 4 During an outside call, press MMENUN. R If the paged party does not answer, press MBACKN to return to the outside call. The other 2 parties can continue the conversation. R To put the outside call on hold: MMENUN a MbN: "Hold" a MSELECTN To resume the conference: MMENUN a MbN: "Conference" a MSELECTN R To cancel the conference: MMENUN a MbN: "Stop conference" a MSELECTN You can continue the conversation with the outside caller. Base unit 5 To complete the transfer: 1 During an outside call, press MINTERCOMN. When 2 or more handsets are registered: MbN: Select the desired unit. A MSELECTN R To page all handsets, press 0 or wait for a few seconds. 2 Wait for the paged party to answer. R If paged party does not answer, press MINTERCOMN to return to the outside call.

3 To complete the transfer: Place the corded handset on the cradle. R The outside call is being routed to the handset. to establish a conference call: Press MCONFN. R To leave the conference, place the corded handset on the cradle. The other 2 parties can continue the conversation. R To put the outside call on hold, press MHOLDN. to resume the conference, press MCONFN. For assistance, please visit [www. Pdf 17 2014/12/05 21:38:30 Intercom](http://www.pdf17.2014/12/05/21:38:30/Intercom) Intercom Intercom calls can be made: – between handsets – between a handset and the base unit Note: R When paging unit(s), the paged unit(s) beeps for 1 minute. R If you receive an outside call while talking on the intercom, the interrupt tone sounds.

□ Base unit: To finish intercom, place the corded handset on the cradle. If the speakerphone is used, press MZN. To answer the call, lift the corded handset. If the speakerphone is used, press MZN. 2 When you finish talking, press MZN or place the corded handset on the cradle. Turning auto intercom on/off This feature allows the handset and base unit to answer intercom calls automatically when it is called. You do not need to press M N, lift the corded handset, or press MZN. When this feature is set to "On", the monitoring handset or base unit for the baby monitor feature (page 35) will also answer baby monitor calls automatically. A MSAVEN 3 Proceed with the operation for your unit. handset: MOFFN Base unit: MEXITN Making an intercom call Handset 1 MMENUN a MbN: "Intercom" a MSELECTN 2 MbN: Select the desired unit.

A MSELECTN 3 When you finish talking, press MOFFN. Note: R You can also use the MINTERCOMN soft key, if displayed, to make intercom calls. base unit 1 Press MINTERCOMN. When 2 or more handsets are registered: MbN: Select the desired unit. A MSELECTN R To page all handsets, press 0 or wait for a few seconds. r Lift the corded handset if needed. 2 When you finish talking, press MZN or place the corded handset on the cradle. answering an intercom call Handset 1 Press M N to answer the page. 2 When you finish talking, press MOFFN. Pdf 18 2014/12/05 21:38:30 Call Block Using the MCALL BLOCKN button You can press the MCALL BLOCKN button in the following situations to disconnect the current call and add a phone number to the call block list: – when an incoming call is being received – when an incoming call is being recorded by the answering system – when talking on an outside call Once a phone number has been added to the call block list, the unit will block calls from that phone number in the future.



[You're reading an excerpt. Click here to read official PANASONIC](http://yourpdfguides.com/dref/5784780)

[KXTG572SK user guide](http://yourpdfguides.com/dref/5784780)

<http://yourpdfguides.com/dref/5784780>

*Handset / Base unit If the caller's phone number matches an entry in the call block list, the unit emits no sound to the caller, and disconnects the call. *1 If you do not want this one ring to sound, select "No" in "Setting not to ring once for blocked call" (page 20). Storing a single phone number Important: R We recommend storing 10 digits (including the area code). If only 7 digits are stored, all numbers that have the same last 7 digits will be blocked. Adding call blocked numbers from the caller list Handset 1 Press MCALL BLOCKN under the situations shown above.*

2 Confirm the call block number and press MYESN. R The call block number is stored in the call block list, "Caller blocked" is displayed, and then the call is disconnected. Note: R If the call has no phone number, the call is blocked but it is not stored in the call block list. R The call block feature is not available for intercom calls or calls received by call waiting. R Blocked calls are logged in the caller list.

1 MCN CID 2 MbN: Select the entry to be blocked. R To edit the number: MMENUN a MbN: "Edit" a MSELECTN Press MEDITN repeatedly until the phone number is shown in the 10-digit format. a MSAVEN a MbN: "Call block" a MSELECTN a Go to step 4. 3 MCALL BLOCKN 4 MbN: "Yes" a MSELECTN 5

Edit the phone number if necessary (24 digits max.). Storing unwanted callers The unit can block calls by storing the desired items in the call block list beforehand (Caller ID subscribers only). □ "Block a single number": The unit blocks calls from specific phone numbers stored in the call block list. □ "Block range of numbers": The unit blocks calls that begin with a number stored in the call block list, such as a toll-free phone number prefix or certain area codes. □ "Block unknown CID": The unit blocks calls that have no phone number. Single phone numbers and ranges of numbers can be stored in the call block list up to 250 items in total.

*Blocking unwanted callers: When a call is received, the unit rings briefly*1 while caller information is being received. 6 MSAVEN a MOFFN Base unit 1 MCIDN 2 MbN: Select the entry to be blocked. R To edit the number: Press MEDITN repeatedly until the phone number is shown in the 10-digit format. 3 MCALL BLOCKN 4 MbN: "Yes" a MSELECTN 5 Edit the phone number if necessary (24 digits max.). 6 MSAVEN a MEXITN Adding call blocked numbers manually Handset 1 MCALL BLOCKN 19 For assistance, please visit www. Pdf 19 2014/12/05 21:38:30 Call Block 2 MbN: "Block a single number" a MSELECTN 3 MMENUN a MbN: "Add" a MSELECTN 4 Enter the phone number (24 digits max.). 5 MSAVEN a MOFFN Base unit Setting not to ring once for blocked call If you do not want the unit to sound one ring for calls from phone numbers stored in the call block list, select "No". the default setting is "Yes".*

Handset / Base unit 1 MCALL BLOCKN 2 MbN: "Block a single number" a MSELECTN a MADDN 1 MCALL BLOCKN 2 MbN: "One ring for blocked call" a MSELECTN 3 Enter the phone number (24 digits max. A MSAVEN 4 Proceed with the operation for your unit. Handset: MOFFN Base unit: MEXITN 1 MCALL BLOCKN 2 MbN: "Block range of numbers" a MSELECTN Viewing/editing/erasing call block numbers Handset 3 MMENUN a MbN: "Add" a MSELECTN 4 Enter the desired number (2-8 digits). 5 MSAVEN a MOFFN Base unit 1 MCALL BLOCKN 2 MbN: "Block a single number" or "Block range of numbers" a MSELECTN 3 MbN: Select the desired entry. A MSAVEN a MOFFN To erase a number: MERASEN a MbN: "Yes" a MSELECTN a MOFFN Base unit 3 MADDN 4 Enter the desired number (2-8 digits).

5 MSAVEN a MEXITN Blocking incoming calls that have no phone number You can block calls when no phone number is provided, such as private callers or out of area calls. Handset / Base unit 1 MCALL BLOCKN 2 MbN: "Block a single number" or "Block range of numbers" a MSELECTN 3 MbN: Select the desired entry. A MSAVEN a MEXITN To erase a number: MERASEN a MbN: "Yes" a MSELECTN a MEXITN Note: R When editing, press the desired dial key to add digits and press MCLEARN to erase digits. 1 2 3 4 MCALL BLOCKN MbN: "Block unknown CID" a MSELECTN MbN: Select the desired setting. A MSAVEN Proceed with the operation for your unit.

Pdf 20 2014/12/05 21:38:31 Call Block Erasing all call block numbers Handset / Base unit 1 MCALL BLOCKN 2 MbN: "Block a single number" or "Block range of numbers" a MSELECTN 3 Proceed with the operation for your unit. Handset: MMENUN a MbN: "Erase all" a MSELECTN Base unit: MERASEN 4 MbN: "Yes" a MSELECTN 5 MbN: "Yes" a MSELECTN 6 Proceed with the operation for your unit. Pdf 21 2014/12/05 21:38:31 Phonebook Phonebook You can add 100 names (16 characters max.) and phone numbers (24 digits max.) to the phonebook, and assign each phonebook entry to the desired group (page 23). Important: R All entries can be shared by the base unit and any registered handset. Key 6 7 8 9 0 # Character M m P p T t W w # N n Q q U u X x O o R r V v Y y 6 6 S s 8 8 Z z 9 9 7 7 Adding phonebook entries Handset / Base unit 1 Proceed with the operation for your unit. Handset: MFN a MMENUN Base unit: M N a MMENUN 2 3 4 5 MbN: "Add new entry" a MSELECTN Enter the party's name. A MOKN Enter the party's phone number. a MOKN MbN: Select the desired group.

*A MSELECTN 2 times Handset: MOFFN Base unit: MEXITN 6 Proceed with the operation for your unit. R To enter another character that is located on the same dial key: Handset: Press MEN to move the cursor to the next space. Base unit: Press M N to move the cursor to the next space. R If you do not press any dial key within 2 seconds after entering a character, the character is fixed and the cursor moves to the next space. R In the above table represents a single space. Erasing the character or number Handset: Press MFN or MEN. Storing a redial list number to the phonebook Phone numbers of up to 24 digits can be stored in the phonebook. Handset / Base unit Note for base unit: R You can also add entries as follows: Press M N. a MADDN a Go to step 3. Character table for entering names While entering characters, you can switch between uppercase and lowercase by pressing * (A@a).*

key 1 2 3 4 5 Character & - A a D d G g J j ' . B b E e H h K k (/ C c F f I i L l) 1 2 2 3 3 4 4 5 5 H , 1 Proceed with the operation for your unit. Handset: MEN REDIAL Base unit: MREDIALN 2 MbN: Select the desired phone number. A MSAVEN 3 To store the name, continue from step 3, "Editing entries", page 23. Storing caller information to the phonebook Handset 1 MCN CID 22 For assistance, please visit www.

A MMENUN R To edit the number: MbN: "Edit" a MSELECTN Press MEDITN repeatedly until the phone number is shown in the desired format.



[You're reading an excerpt. Click here to read official PANASONIC KXTG572SK user guide](http://yourpdfguides.com/dref/5784780)
<http://yourpdfguides.com/dref/5784780>

6 Proceed with the operation for your unit. handset: MOFFN Base unit: MEXITN 3 MbN: "Save caller ID" a MSELECTN 4 MbN: "Phonebook" a MSELECTN 5 Continue from step 3, "Editing entries", page 23. Base unit Finding and calling from a phonebook entry Handset / Base unit 1 Proceed with the operation for your unit. handset: MFN W Base unit: MWN 1 MCIDN 2 MbN: Select the desired entry.

R To edit the number, press MEDITN repeatedly until the phone number is shown in the desired format. 2 To scroll through all entries MbN: Select the desired entry. To search by first character Press the dial key (0 to 9, or #) which contains the character you are searching for (page 22). mbN: Scroll through the phonebook if necessary. To search by group MGROUPO MbN: Select the desired group. Groups Groups can help you find entries in the phonebook quickly and easily. You can change the names of groups assigned for phonebook entries ("Friends", "Family", etc.). By assigning different ringer tones for different groups of callers, you can identify who is calling (ringer ID), if you have subscribed to Caller ID service. Changing group names/setting ringer ID The default group name is "Group 1" to "Group 9".

Handset / Base unit 3 Proceed with the operation for your unit. handset: M N Base unit: Lift the corded handset. Editing entries Handset 1 Proceed with the operation for your unit. A MOKN Edit the phone number if necessary. A MOKN MbN: Select the desired group (page 23). A MSELECTN 2 times a MOFFN Base unit 2 MbN: "Group" a MSELECTN 3 MbN: Select the desired group. A MSELECTN 4 To change group names MbN: "Group name" a MSELECTN a Edit the name (10 characters max.). A MSAVEN 5 To set group ringer tone (handset) MbN: Select the current setting of the group ringer tone. A MOKN Edit the phone number if necessary.

A MOKN MbN: Select the desired group (page 23). A MSELECTN 2 times a MEXITN For assistance, please visit www.pdf23.com 2014/12/05 21:38:31 Phonebook Erasing entries Erasing an entry Handset R If you have rotary/pulse service, you need to on press * (TONE) before pressing MFN the handset or M N on the base unit in step 1 to change the dialing mode temporarily to tone. When adding entries to the phonebook, we recommend adding * (TONE) to the beginning of phone numbers you wish to chain dial (page 22). 2 MERASEN a MbN: "Yes" a MSELECTN a MEXITN Erasing all entries Handset / Base unit Speed dial You can store phone numbers to the base unit and handset separately. – Handset: up to 9 entries.

– Base unit: up to 9 entries. 1 Proceed with the operation for your unit. Handset: MFN a MMENUN Base unit: M N a MMENUN Adding phone numbers to speed dial keys Handset You can assign 1 phone number to each of the dial keys (1 to 9). N By entering phone numbers: 1 Press and hold the desired speed dial key (1 to 9). A MADDN 2 3 4 5 MbN: "Erase all" a MSELECTN MbN: "Yes" a MSELECTN MbN: "Yes" a MSELECTN Proceed with the operation for your unit.

Handset: MOFFN Base unit: MEXITN Chain dial This feature allows you to dial phone numbers in the phonebook while you are on a call. This feature can be used, for example, to dial a calling card access number or bank account PIN that you have stored in the phonebook, without having to dial manually. A MOKN 4 Enter the party's phone number (24 digits max.). A MOKN 5 MSELECTN a MOFFN n From the phonebook: 1 Press and hold the desired speed dial key (1 to 9). A MADDN 1 Proceed with the operation for your unit. 4 MSAVEN a MOFFN Base unit n By entering phone numbers: 1 MSPEED DIALN 2 MbN: Select the desired entry. 3 Press MCALLN to dial the number. Note: R When storing a calling card access number and your PIN in the phonebook as one phonebook entry, press MDN (Pause) on the handset or MPAUSEN on the base unit to add pauses after the number and PIN as necessary (page 14). 2 MbN: Select the desired speed dial key.

Pdf 24 2014/12/05 21:38:31 Phonebook 4 Enter the party's phone number (24 digits max.). A MOKN 5 MSELECTN a MEXITN n From the phonebook: 1 MSPEED DIALN 3 MbN: "Yes" a MSELECTN 4 MOFFN Base unit 2 MbN: Select the desired speed dial key. a M N 3 MbN: Select the desired entry. 4 MSAVEN a MEXITN Note for handset and base unit: R If you edit a phonebook entry which is assigned to a speed dial key, the edited entry does not transfer to the speed dial key. Note for base unit: R You can also select the desired entry as follows: – Press and hold the desired speed dial key (1 to 9). □ Press MSPEED DIALN and then enter the desired speed dial key (1 to 9). 1 2 3 4 5 MSPEED DIALN MbN: Select the desired entry. A MDETAILN MERASEN MbN: "Yes" a MSELECTN MEXITN Viewing an entry/Making a call Handset 1 Press and hold the desired speed dial key (1 to 9). 2 To make a call, press M Base unit N.

Note for base unit: R You can dial phone numbers in the speed dial while you are on a call. 1 Press and hold the desired speed dial key (1 to 9). a MMENUN 2 3 4 5 1 2 3 4 5 6 MbN: "Edit" a MSELECTN Edit the name if necessary. A MOKN Edit the phone number if necessary. A MOKN MSELECTN a MOFFN Base unit MSPEED DIALN MbN: Select the desired entry.

a MDETAILN MEDITN Edit the name if necessary. A MOKN Edit the phone number if necessary. A MOKN MSELECTN a MEXITN One-touch dial buttons You can store phone numbers or extension numbers to the base unit's one-touch dial buttons (1 to 3). □ phone numbers for outside calls – extension numbers for handsets Note: R You can transfer a call to a handset. While you are on an outside call, press the one-touch dial button with an extension number stored.

The line is put on hold and the base unit pages the handset. After the handset answers the page, place the corded handset on the cradle to complete the transfer. Erasing an entry Handset 1 Press and hold the desired speed dial key (1 to 9). Pdf 25 2014/12/05 21:38:31 Phonebook Adding phone numbers for outside calls Base unit n By entering phone numbers: 1 Press and hold the desired one-touch dial button (1 to 3). A MEDITN MERASEN a MbN: "Yes" a MSELECTN a MEXITN Making a call Base unit Press the desired one-touch dial button (1 to 3), then lift the corded handset. Note: R You can dial phone numbers in the one-touch dial while you are on a call. A MOKN 3 Enter the party's phone number (24 digits max.). A MOKN 4 MSELECTN a MEXITN n From the phonebook: 1 Press and hold the desired one-touch dial button (1 to 3). 2 M N 3 MbN: Select the desired entry.

4 MSAVEN a MEXITN Note: R If you edit a phonebook entry which is assigned to a one-touch dial button, the edited entry does not transfer to the one-touch dial button. Adding extension numbers for handsets Base unit 1 Press and hold the desired one-touch dial button (1 to 3). A MOKN a Edit the phone number if necessary. Pdf 26 2014/12/05 21:38:31 Programming Menu list To access the features, there are 2 methods.



[You're reading an excerpt. Click here to read official PANASONIC KXTG572SK user guide](http://yourpdfguides.com/dref/5784780)
<http://yourpdfguides.com/dref/5784780>

Handset / Base unit n Scrolling through the display menus 1 MMENUN 2 Press MCN or MDN to select the desired main menu. A MSELECTN 3 Press MCN or MDN to select the desired item from the next sub-menus. a MSELECTN 4 Press MCN or MDN to select the desired setting. A MSAVEN n Using the direct command code 1 MMENUN a Enter the desired code. A MSAVEN Note: R The unit column shows the unit(s) that can be used to program the item. : Only the handset can program the item.

: Only the base unit can program the item. / : Both the handset and base unit can program the item. R To exit the operation, press MOFFN on the handset or MEXITN on the base unit. R In the following table, < > indicates the default settings. R In the following table, indicates the reference page number.

R Display menu order and sub-menu may vary depending on your model. Display menu tree and direct command code table Main menu: Operation Viewing the phonebook entry. main menu: Operation Viewing the caller list. Main menu: Handset: "Answering device" "Answering device" Base unit: Sub-menu 1 Play new message Play all message Erase all message*1 Sub-menu 2 --- Settings --- Code #323 #324 #325 Unit 40 40 41 "Caller list" Code #213 Unit / 37 "Phonebook" Code #280 Unit / 23 For assistance, please visit www. Pdf 27 2014/12/05 21:38:31 Programming Sub-menu 1 Greeting Sub-menu 2 Record greeting*1 Check greeting Pre-recorded*1 (Reset to pre-recorded greeting) New message alert*1 Outgoing call - On/Off Outgoing call - Notification to Outgoing call - Remote code Base unit beep Settings Ring count*1 On <Off> - Activate <Inactivate> On <Off> 2-7 rings <4 rings> Toll saver 1 min <3 min> Greeting only*2 <111> <On> Off -- #339 #211 // 41 44 Settings --- Code #302 #303 #304 Unit // / 39 40 39 #338 / 41 Recording time*1 #305 / 45 Remote code*1 Screen call Answer on*1 Answer off*1 Main menu: Operation Listening to voicemail messages.

Main menu: Sub-menu 1 Ring adjustments "Settings" Sub-menu 2 Ringer volume Ringer tone*4, *5 Silent mode - On/Off Silent mode - Start/End Silent mode - Select group Set date & time Date and time*1 Memo alarm - Alarm1-3 Once Daily Weekly <Off> <Caller ID auto> Manual Handset: <On> Off Base unit: *1 On <Off> Detector1 Detector2*8 Detector3*8 Detector4*8 Registration - Settings Off-6 <6> <Tone 1> On <Off> <11:00 PM/06:00 AM> Group 1-9 - Code #160 #161 #238 #237 #241 #101 #720 // // Unit / - - 33 33 33 13 32 "Speed dial" Code #261 Unit / 24 Time adjustment*1, *3 Talking caller ID - #226 #162 // - 37 Key detector setting*6 - 1: Add new device (for Detector1)*7 - 2: Add new device (for Detector2) - 3: Add new device (for Detector3) - 4: Add new device (for Detector4) Change name*1 #6561 #6562*8 #6563*8 #6564*8 #6571 #6572*8 #6573*8 #6574*8 -- Deregistration - #6581 #6582*8 #6583*8 #6584*8 - For assistance, please visit www. Pdf 29 2014/12/05 21:38:31 Programming Sub-menu 1 Call block*1 Sub-menu 2 Block a single number Block range of numbers Settings -- #240 #173 --- #247 #261 #302 #331 // Code #217 Unit // / 19 20 20 20 25 24 39 46 Block unknown CID Block (CID: Caller ID) <Unblock> One ring for blocked call One-touch dial Speed dial Record greeting*1 Voicemail --- Save VM access*1, *9 (VM: Voicemail) Save Voicemail access*1, *10 VM tone detect*1 LCD contrast (Display contrast) - <On> Off Handset: Level 1-4 <2> Base unit: Level 1-6 <3> - On <Off> On <Off> <On> Off <On> Off <On> Off <Off> <Yes> No #332 #145 // 46 - Handset name Display name Auto intercom Key tone Caller ID edit (Caller ID number auto edit) Auto talk*11 --- #104 #105 #273 #165 #214 // 35 35 18 - 38 - #200 15 30 For assistance, please visit www. Pdf 30 2014/12/05 21:38:31 Programming Sub-menu 1 Set tel line*1 Sub-menu 2 Set dial mode Set flash time*12 Settings Pulse <Tone> 900 ms <700 ms> 600 ms 400 ms 300 ms 250 ms 200 ms 160 ms 110 ms 100 ms 90 ms 80 ms A <On> Off --- On <Off> <English> Español <English> Español Code #120 #121 Unit // 13 15 Set line mode*13 Call sharing*1 Registration Deregistration*2 Battery saving mode Change language Display Voice prompt*1 Main menu: Operation Displaying customer support Web address. Main menu: Sub-menu 1 On/Off Sensitivity level "Baby monitor" Sub-menu 2 -- "Customer support" - Register handset Deregistration*2 -- #122 #194 #130 #131 #131 #150 #110 #112 // - 16 36 36 36 10 // 12 13 Code #680 Unit / - Settings On <Off> Low <Middle> High Code #268 #269 Unit 34 35 Main menu: Sub-menu 1 Search "Key detector"*6 Sub-menu 2 -- Settings -- Code #655 Unit - Battery check For assistance, please visit www. Pdf 31 2014/12/05 21:38:31 Programming *1 If you program these settings using one of the units, you do not need to program the same item using another unit. *2 This menu is not displayed when scrolling through the display menus. It is only available in direct command code. *3 This feature allows the unit to automatically adjust the date and time each time caller information including date and time is received. to turn this feature on, select "Caller ID auto". To turn this feature off, select "Manual".

(Caller ID subscribers only) To use this feature, set the date and time first (page 13). *4 The preset melodies in this product ("Tone 3" - "Melody 10") are used with permission of © 2009 Copyrights Vision Inc. *5 If you subscribe to a distinctive ring service (such as IDENTIA-RING), select a tone (tone 1 or 2). If you select a melody, you cannot distinguish lines by their ringers. *6 This setting is available when you have the key detector (KX-TGA20). Read the installation manual for more information on the key detector. *7 For models with supplied key detectors, the display shows "1:Detector1". *8 If you register 2 or more key detectors. *9 Handset *10 Base unit *11 If you subscribe to a Caller ID service and want to view the caller's information after lifting up the handset to answer a call, turn off this feature. *12 The flash time depends on your telephone exchange or host PBX. contact your PBX supplier if necessary. The setting should stay at "700 ms" unless pressing MFLASHN fails to pick up the waiting call. *13 Generally, the line mode setting should not be changed.



[You're reading an excerpt. Click here to read official PANASONIC](#)

[KXTG572SK user guide](#)

<http://yourpdfguides.com/dref/5784780>

This setting automatically maintains receiver volume at the proper level depending on the current telephone line condition. Set the line mode to "A" if telephone line condition is not good.

Alarm An alarm sounds at the set time for 1 minute and is repeated 5 times at 5 minute intervals (snooze function). A text memo can also be displayed for the alarm. A total of 3 separate alarm times can be programmed for each handset. You can set one of 3 different alarm options (once, daily, or weekly) for each alarm time. Important: R Make sure the unit's date and time setting is correct (page 13).

Handset "Once" "Daily" "Weekly" An alarm sounds once at the set time. An alarm sounds daily at the set time. go to step 5. Alarm sounds weekly at the set time(s). 4 Proceed with the operation according to your selection in step 3. N Once: Enter the desired month and date. A MOKN n Weekly: MbN: Select the desired day of the week and press MSELECTN. A MSELECTN R We recommend selecting a different ringer tone from the one used for outside calls. A MSAVEN 3 Enter the desired hour and minute you wish to start this feature. 10 MSELECTN a MOFFN Note: R Press MSTOPN to stop the alarm completely.

R When the handset is in use, the alarm will not sound until the handset is in standby mode. R Press any dial key or MSNOOZEN to stop the sound but keep the snooze function activated. R If you want to make an outside call when the snooze function is activated, please stop the snooze function before making the call. 4 MAM/PMN: Select "AM" or "PM". @@ 6 MAM/PMN: Select "AM" or "PM". 7 MSAVEN a MEXITN Changing the start and end time Handset / Base unit 1 MMENUN#237 2 Continue from step 3 for handset or step 3 for base unit, "Turning silent mode on/off", page 33. Selecting groups to bypass silent mode Handset / Base unit Silent mode Silent mode allows you to select a period of time during which the handset and/or base unit will not ring for outside calls. This feature is useful for time periods when you do not want to be disturbed, for example, while sleeping. Silent mode can be set for each unit. Using the phonebook's group feature (page 23), you can also select groups of callers whose calls override silent mode and ring the unit (Caller ID subscribers only). Important: R Make sure the unit's date and time setting is correct (page 13). R If you have set the alarm, the alarm sounds even if the silent mode is turned on. Turning silent mode on/off Handset 1 MMENUN#241 2 MbN: Select the desired group. A MSELECTN R " " is displayed next to the selected group numbers. R To cancel the selected group: MbN: Select the group.

3 MSAVEN 4 Proceed with the operation for your unit. Handset: MOFFN Base unit: MEXITN **Baby monitor** This feature allows you to listen in on a room where another handset is located, allowing you to easily monitor from different areas of the house or place. The monitored handset (placed in a baby's room, for example) will automatically call the monitoring handset, base unit, or the phone number stored when it detects sound. Important: R You should perform a test run of the baby monitor procedure to ensure that the baby monitor feature is set correctly. For example, 1 MMENUN#238 2 MbN: Select the desired setting.

a MSAVEN R If you select "Off", press MOFFN to exit. 3 Enter the desired hour and minute you wish to start this feature. 4 *: Select "AM" or "PM". @@@@ we recommend leaving the monitored handset on charger. R The monitored handset never rings while it is being monitoring. @@@@ 1 Press MMENUN on the handset being monitored. @@A MOKN 7 Edit the phone number if necessary. @@N When monitoring from an outside line: Answer the call. @@ You can turn off the baby monitor feature by pressing #0. Note: R The unit disconnects the call automatically after 2 minutes.

@@). This is useful when you make intercom calls between handsets. @@@@R This feature cannot be set during a monitoring call. @@ the default setting is "Off". @@ base unit: Press MZN to answer a call. If you want to respond from the monitoring unit, press MMUTEN. @@@@ To answer the call with the handset, press MOFFN, then press M N. To answer the call with the base unit, press MZN 3 times. @@Important: R See page 4 for information on the available model. @@@@3 Handset: Press MOKN, then wait until a long beep sounds.

@@This allows the handset to end its wireless connection with the system. Handset / Base unit 1 MMENUN#131 R All handsets registered to the base unit are displayed. 2 MbN: Select the handset you want to cancel. A MSELECTN 3 MbN: "Yes" a MSELECTN 4 Proceed with the operation for your unit. To use Caller ID features, you must subscribe to a Caller ID service.

Contact your phone service provider for details. **Talking Caller ID** Handset / Base unit This feature lets you know who is calling without looking at the display. To use this feature, you must: – subscribe to a Caller ID service of your phone service provider. – turn this feature on (page 29). When caller information is received, the handsets and/or base unit announce the caller's name or phone number received from your phone service provider following every ring.

This feature may not pronounce all names correctly. R Caller ID service has a limit of how many characters can be displayed. If the caller's name is too long, the unit may not be able to display or announce the entire name. **Phonebook name announcement** When caller information is received and it matches a phone number stored in the phonebook, the stored name in the phonebook is announced. **Caller ID features** Handset / Base unit When an outside call is being received, the caller information is displayed. Caller information for the last 50 callers is logged in the caller list from the most recent call to the oldest. R If the unit cannot receive caller information, the following is displayed: – "Out of area": The caller dials from an area which does not provide a Caller ID service. – "Private caller": The caller requests not to send caller information. To "Long distance": The caller makes a long distance call. R If the unit is connected to a PBX system, caller information may not be properly received.

contact your PBX supplier. **Missed calls** Handset / Base unit If a call is not answered, the unit treats it as a missed call. The display shows "Missed call". Note: R Even when there are unviewed missed calls, "Missed call" disappears from the standby display if the following operation is performed by one of the units: – A handset is replaced on the charger. **Phonebook name display** When caller information is received and it matches a phone number stored in the phonebook, the stored name in the phonebook is displayed and logged in the caller list. **Caller list** Important: R Make sure the unit's date and time setting is correct (page 13).



[You're reading an excerpt. Click here to read official PANASONIC KXTG572SK user guide](http://yourpdfguides.com/dref/5784780)
<http://yourpdfguides.com/dref/5784780>

Viewing the caller list and calling back Handset / Base unit 1 Proceed with the operation for your unit. Handset: MCN CID Base unit: MCIDN 2 Press MCN to search from the most recent call, or MDN to search from the oldest call. 3 Proceed with the operation for your unit. Base unit: – To call back, lift the corded handset.

– To exit , press MEXITN. For assistance, please visit www. Pdf 37 2014/12/05 21:38:32 Caller ID Service Note for handset and base unit: R If the entry has already been viewed or answered, “ ” is displayed. @@@@This feature can be set for each unit (page 30). the default setting is “On”.

@@@@@@@@ n 2 MbN: Select the desired entry. @@@@@@ handset: MCN CID Base unit: MCIDN 4 Lift the corded handset. Caller ID number auto edit feature Handset / Base unit Once you call back an edited number, the unit which was used to call back remembers the area code and format of the edited number. The next time someone calls from the same area code, caller information is customized by the unit as follows: – When the call is being received, the Caller ID number is displayed in the same format as the edited number. □ After the call has ended, the caller’s phone number is displayed in the same format as the edited number, when reviewed from the caller list.

For example, you can use this feature to set the unit to ignore the area code of callers in your area, so that you can call these local numbers using caller information without dialing the area code. 2 MERASEN a MbN: “Yes” a MSELECTN 3 Proceed with the operation for your unit. Pdf 38 2014/12/05 21:38:32 Answering System Answering system The answering system can answer and record calls for you when you are unavailable to answer the phone. You can also set the unit to play a greeting message but not to record caller messages by selecting “Greeting only” as the recording time setting (page 45). Important: R Make sure the unit’s date and time setting is correct (page 13). Note for base unit and handset: R When the answering system is turned on, on the base unit lights up. Greeting message When the unit answers a call, a greeting message is played to callers. You can use either: – your own greeting message – a pre-recorded greeting message Recording your greeting message You can configure this setting using either the base unit or one of the handsets. Handset / Base unit Memory capacity (including your greeting message) The total recording capacity is about 17 minutes. a maximum of 64 messages can be recorded.

Note: R When message memory becomes full: – “Messages full” is shown on the handset and base unit display. On the base unit flashes rapidly if the – answering system is turned on. □ If you use the pre-recorded greeting message, the unit automatically switches to another pre-recorded greeting message asking callers to call again later. □ If you recorded your own greeting message, the same message is still announced to callers even though their messages are not recorded. 1 MMENUN#302 2 MbN: “Yes” a MSELECTN 3 After a beep sounds, speak clearly about 20 cm (8 inches) away from the microphone (2 minutes max. 5 Proceed with the operation for your unit. Handset: MOFFN Base unit: MEXITN Using a pre-recorded greeting message The unit provides 2 pre-recorded greeting messages: – If you reset to pre-recorded greeting or do not record your own greeting message, the unit plays a pre-recorded greeting asking callers to leave a message. □ If the message recording time (page 45) is set to “Greeting only”, callers’ messages are not recorded and the unit plays a different pre-recorded greeting message asking callers to call again. Resetting to a pre-recorded greeting message If you change into a pre-recorded greeting message once you record your own greeting message, your own recorded greeting message is erased. You can configure this setting using either the base unit or one of the handsets.

Turning the answering system on/off Base unit Press M N to turn on/off the answering system. Handset 1 To turn on: MMENUN#327 To turn off: MMENUN#328 2 MOFFN For assistance, please visit www. Pdf 39 2014/12/05 21:38:32 Answering System Handset / Base unit 1 MMENUN#304 2 MYESN 3 Proceed with the operation for your unit. Handset: MOFFN Base unit: MEXITN Operating the answering system during playback Key MDN or MCN M M N N Operation Adjust the speaker volume Repeat message*1 Skip message Pause message To resume playback, press M N. Stop playback Erase currently playing message Playing back the greeting message Handset / Base unit MPAUSEN 1 MMENUN#303 2 Proceed with the operation for your unit.

M N (STOP) MERASEN *1 If pressed within the first 5 seconds of a message, the previous message is played. Calling back (Caller ID subscribers only) Listening to messages Important: R If your phone service provider offers voicemail service, the voicemail service may answer calls before the base unit’s built-in answering system has a chance to answer calls and record messages. In this case, messages you expect to be recorded by the answering system will be recorded on the voicemail service. For more information, see “For landline voicemail service subscribers” (page 44). R When using the base unit or handset to listen to messages, the noise reduction feature (page 16) is activated automatically in spite of the setting (is not displayed).

Lift the corded handset during playback. R To edit the number before calling back, press MEDITN repeatedly until the phone number is shown in the desired format (page 38). Erasing all messages Press MERASEN 2 times while the unit is not in use. Using the handset When new messages have been recorded, “New message” is displayed. 1 To listen to new messages: MMENUN#323 To listen to all messages: MMENUN#324 2 When finished, press MOFFN. note: R

To switch to the receiver , press M N. R You can also use the MPLAYN soft key, if displayed, to play new messages. Operating the answering system MMENUN a MbN: “Answering device” a MSELECTN Key MDN or MCN 1 or MFN Operation Adjust the receiver/speaker volume (during playback) Repeat message (during playback)*1 Using the base unit When new messages have been recorded: – M N on the base unit flashes. R During playback, M N on the base unit lights. R If new messages have been recorded, the base unit plays back new messages.

R If there are no new messages, the base unit plays back all messages. Pdf 40 2014/12/05 21:38:32 Answering System Key 2 or MEN 3 4 5 6 7 8 MPAUSEN 9 or MSTOPN 0 *4*3 *5 *6 Operation Skip message (during playback) Enter the “Settings” menu Play new messages Play all messages Play greeting message Record greeting message Turn answering system on Pause message*2 Stop recording Stop playback Turn answering system off Erase currently playing message Erase all messages Reset to a pre-recorded greeting message Advanced new message alerting features Audible message alert This feature allows the base unit to beep to inform you of a new message arrival when new messages are recorded.



[You're reading an excerpt. Click here to read official PANASONIC KXTG572SK user guide](http://yourpdfguides.com/dref/5784780)
<http://yourpdfguides.com/dref/5784780>

The base unit beeps 2 times every minute until you listen to the messages, if the "Base unit beep" setting is turned on. the default setting is "Off". You can configure this setting using either the base unit or one of the handsets. handset / Base unit 1 MMENUN#339 2 MbN: Select the desired setting. A MSAVEN 3 Proceed with the operation for your unit. Handset: MOFFN Base unit: MEXITN *1 If pressed within the first 5 seconds of a message, the previous message is played. *2 To resume playback: MbN: "Playback" a MSELECTN *3 You can also erase as follows: MPAUSEN a MbN: "Erase" a MSELECTN a MbN: "Yes" a MSELECTN Calling back (Caller ID subscribers only) New message alert by a call This feature allows you to receive a notification by phone when new messages are recorded. The base unit calls a phone number you specify.

You can then operate the answering system remotely to listen to the new message. To use this feature, you must: – store a phone number to which the unit makes the call to. □ turn on the new message alert setting. After you answer the new message alert call, you can listen to messages from that call (page 43).

You can configure this setting using either the base unit or one of the handsets.

Important: R A new message alert is stopped 1 minute after the unit starts to call. The unit will not retry the call even if the call is not answered. Storing a phone number to which the unit makes an alert call Handset n From the phonebook: 1 MMENUN#338 1 Press MPAUSEN during playback. 2 MbN: "Call back" a MSELECTN Editing the number before calling back 1 Press MPAUSEN during playback. 2 MbN: "Edit & Call" a MSELECTN 3 Press MEDITN repeatedly until the phone number is shown in the desired format (page 38).

A MSAVEN a MOFFN n By entering a phone number: 1 MMENUN#338 3 MMENUN a MbN: "Edit" a MSELECTN 4 Edit the name if necessary (16 characters max.). A MOKN 5 Edit the phone number if necessary (24 digits max. A MOKN 3 Edit the name if necessary (16 characters max.). A MOKN 5 Enter the desired number (24 digits max.). A MOKN a MSELECTN a MOFFN Base unit n From the phonebook: 1 MMENUN#338 4 Edit the phone number if necessary (24 digits max.). A MOKN a MSELECTN a MEXITN Erasing the set phone number Handset 2 MbN: "Notification to" a MSELECTN aM N 3 MbN: Select the desired phonebook entry.

A MSAVEN a MEXITN n By entering a phone number: 1 MMENUN#338 1 2 3 4 MMENUN#338 MbN: "Notification to" a MSELECTN MMENUN a MbN: "Erase" a MSELECTN MbN: "Yes" a MSELECTN a MOFFN R The new message alert setting is turned off. A MOKN 3 MbN: "Yes" a MSELECTN a MEXITN R The new message alert setting is turned off. Activating/inactivating the remote access code to play messages If you activate this feature, you must enter the remote access code (page 43) to play the new message from the new message alert call. This is so that unauthorized parties cannot listen to your messages. the default setting is "Inactivate". □ "Inactivate": You can listen to the message by pressing 4 to play new messages (without entering the remote access code). □ "Activate": You must enter your remote access code and then press 4 to play new message. Handset / Base unit 4 Enter the desired number (24 digits max.). A MOKN a MSELECTN a MEXITN Turning on/off the new message alert setting Handset / Base unit 1 2 3 4 MMENUN#338 MbN: "On/Off" a MSELECTN MbN: Select the desired setting.

A MSAVEN Proceed with the operation for your unit. Handset: MOFFN Base unit: MEXITN Editing the set phone number Handset 1 MMENUN#338 2 MbN: "Notification to" a MSELECTN 42 1 MMENUN#338 2 MbN: "Remote code" a MSELECTN 3 MbN: Select the desired setting. Pdf 42 2014/12/05 21:38:32 Answering System 4 Proceed with the operation for your unit. Handset: MOFFN Base unit: MEXITN Listening to messages After you answer the new message alert, you can listen to the messages as follows. N When the remote access code is set to "Inactivate": Press 4 to play the new message during the announcement.

N When the remote access code is set to "Activate": Handset / Base unit 1 2 3 4 MMENUN#306 Enter the desired 3-digit remote access code. MSAVEN Proceed with the operation for your unit. 1 Enter the remote access code (page 43) during the announcement. Using the answering system remotely 1 Dial your phone number from a touch-tone phone. 2 Press 4 to play the new message.

Note: R Within 10 seconds after listening to new messages, you can press #9 during the call to turn off the new message alert by a call feature. R Even if the unit makes a new message alert call, the handset redial list does not show the record. However, on the base unit redial list it is shown as "Message alert". 2

After the greeting message starts, enter your remote access code. 3 Follow the voice guidance prompts as necessary or control the unit using remote commands (page 43). 4 When finished, hang up. Voice guidance n When the English voice guidance is selected During remote operation, the unit's voice guidance starts and prompts you to press 1 to perform a specific operation, or press 2 to listen to more available operations. N When the Spanish voice guidance is selected To start the voice guidance, press 9. The voice guidance announces the available remote commands (page 43). Note: R If you do not press any dial keys within 10 seconds after a voice guidance prompt, the unit disconnects your call.

Remote operation Using a touch-tone phone, you can call your phone number from outside and access the unit to listen to messages or change answering system settings. The unit's voice guidance prompts you to press certain dial keys to perform different operations. Remote access code A 3-digit remote access code must be entered when operating the answering system remotely. This code prevents unauthorized parties from listening to your messages remotely. the default setting is "111". You can configure this setting using either the base unit or one of the handsets. Important: R To prevent unauthorized access to this product, we recommend that you regularly change the remote code. Remote commands You can press dial keys to access certain answering system functions without waiting for the voice guidance to prompt you. Key 1 Operation Repeat message (during playback)*1 For assistance, please visit www. Pdf 43 2014/12/05 21:38:32 Answering System Key 2 4 5 9 0 *4 *5 *# Operation Skip message (during playback) Play new messages Play all messages Stop playback*2 Start voice guidance*3 Turn answering system off Erase currently playing message Erase all messages End remote operation (or hang up) 3 Proceed with the operation for your unit.

Handset: MOFFN Base unit: MEXITN Number of rings before the unit answers a call You can change the number of times the phone rings "Ring count" before the unit answers calls.



[You're reading an excerpt. Click here to read official PANASONIC](http://yourpdfguides.com/dref/5784780)

[KXTG572SK user guide](http://yourpdfguides.com/dref/5784780)

<http://yourpdfguides.com/dref/5784780>