

Please note that the actual controls and components, menu items, etc. of your Digital Camera may look somewhat different from those shown in the illustrations in these Operating Instructions. Carefully observe copyright laws. Selecting the Recording Mode Switching the mode by rotating the mode dial. • Rotate the mode dial slowly to select the desired mode.

• Recording of pre-recorded tapes or discs or other published or broadcast material for purposes other than your own private use may infringe copyright laws. Even for the purpose of private use, recording of certain material may be restricted. [DISP.] button [EXPOSURE] button A [(Playback) button B Charging lamp C [Q.MENU] button/ [] (Delete/Cancel) button D Cursor buttons 3(È)/4(#)/2(ë)/1(%) E [MENU/SET] button f List of Recording Modes \ Intelligent Auto Mode The subjects are recorded using settings automatically selected by the camera. Programme AE Mode The subjects are recorded using your own settings. @@Panorama Shot Mode This mode allows you to take panorama pictures. @@@@Scenery Mode This allows you to take pictures of a wide landscape. @@Creative Control Mode Record while checking the image effect. @.@ • Use only the recommended accessories.

• Do not remove covers. • Do not repair this unit by yourself. @@Charge the battery before use. • Charge the battery only when it is inserted in the camera. • Do not remove or damage the external label on the battery. • The battery is a rechargeable lithium ion battery. @@@@The camera also becomes warm during use. This is not a malfunction. @@@@Quality [A] Save location]. Built-in Memory (Approx.

@@Digital Recording media Recording file format Still Picture Motion pictures Interface Digital • Depending on the menu item, its setting may not appear or it may be displayed in a fClose the menu Press [screen. halfway.] repeatedly until the screen returns to the recording/playback f [Date Stamp] Using the Zoom To make subjects appear further away use (Wide): Rotate the zoom lever towards Wide. @@@@Stamp the year, month, day, hour, and minutes.

@@Maximum magnification: 42k Extra Optical Zoom (EZ) This function works when any of the picture sizes indicated with is selected. You can zoom in further than you can with the Optical Zoom without deteriorating the image quality. Maximum magnification: 105k (This includes the optical zoom magnification. The magnification level differs depending on [Picture Size] setting.) Intelligent Zoom Enabled when [i.Zoom] in the [Rec] menu is set to [ON].

You can zoom in up to twice the original zoom magnification while minimising the deterioration of the image quality. Digital Zoom This function works when [Digital Zoom] in the [Rec] menu is set to [ON]. Although the image quality deteriorates every time you zoom in further, you can zoom in up to four times the original zoom magnification. Microphone Connect the computer and camera with the USB connection cable (supplied). PC [AV OUT/DIGITAL] socket • This socket is also used when charging the battery. This unit can record motion pictures in QuickTime Motion JPEG format. Mode dial Analogue video Audio

Terminal [AV OUT/DIGITAL] Dimensions (excluding the projecting parts) Mass Operating temperature Operating humidity • You can record motion pictures fitting each Recording Mode. Motion picture button • Start recording by pressing the motion picture • It is recommended that you close the flash when • The recording state indicator (red) will flash while recording motion pictures. • Stop the recording by pressing the motion picture button again. recording motion pictures.

USB Connection Cable button. 2 3 Press 3/4 to select [PC], and then press [MENU/SET]. Drag and drop files and folders in the camera to the PC. • When the image transfer is complete, disconnect the USB connection cable safely. f Playback and editing on a PC f About the recording quality setting The recording quality for motion pictures can be changed in [Rec Quality] of the [Motion Picture] menu. Settings [HD] Picture size 1280k720 640k480 320k240

30 fps Aspect ratio 16:9 4:3 Software for image playback or editing is not supplied with this product. • To play back or edit still pictures, use standard software. • To play back motion pictures, use standard software. AC Adaptor (Panasonic VSK0775): Information for your safety Input: Output: 110 V to 240 V, 50/60 Hz, 0.2 A 5 V, 800 mA Troubleshooting If the problem is not resolved, it may be improved by selecting [Reset] on the [Setup] menu.

The charging lamp blinks. Battery Pack (lithium-ion) (Panasonic DMW-BCM13E): Information for your safety Voltage/capacity: 3.6 V/1250 mAh Changing Functions and Settings Functions and settings can be changed using 3/4/2/1 and [MENU/SET]. (Some functions and settings will not be available for selection depending on the Recording Mode.) [VGA] [QVGA] • When recording to the built-in memory, [Rec Quality] is fixed to [QVGA].

• Motion pictures can be recorded continuously for up to 15 minutes. Also, continuous recording exceeding 2 GB is not possible. Remaining time for continuous recording is displayed on the screen. • This phenomenon occurs when charging in a location where the temperature is very high or very low. > Reconnect the USB connection cable (supplied) in a location where the ambient temperature (and the temperature of battery) is in a 10 oC to 30 oC (50 oF to 86 oF) range, and try charging again.

The charging lamp has gone off but the unit has not been charged. • SDXC Logo is a trademark of SD-3C, LLC. • QuickTime and the QuickTime logo are trademarks or registered trademarks of Apple Inc., used under license therefrom. 3(È) 4(#) The exposure compensation or Auto Bracket setting screen is displayed. The macro setting screen is displayed. @@@@ • If you use Extra Optical Zoom or Intelligent Zoom, the angle of view may change drastically when you start or finish recording a motion picture. • If your PC is not capable of supplying sufficient power, charging is not possible. When recording pictures or half-pressing the shutter button, reddish stripes may appear on the monitor. Alternatively, part or all of the monitor may turn a reddish colour.

2(ë) Playback [(Playback) button 1(%) • Use this to play back pictures. • This is a characteristic of CCDs, and it appears when the subject has a bright part. Some unevenness may occur in the surrounding areas, but this is not a malfunction. It is recorded in motion pictures but is not recorded on still pictures.

• It is recommended that when you take pictures you take care not to expose the screen to sunlight or any other source of strong light. 100-0001 1/5 Cursor buttons • 2/1: to select the picture [] (Delete/Cancel) button]: to delete the displayed picture Please refer to "Operating Instructions for advanced features (PDF format)" for details.



[You're reading an excerpt. Click here to read official PANASONIC](http://yourpdfguides.com/dref/5585233)

[LUMIX DMC-LZ40 user guide](http://yourpdfguides.com/dref/5585233)

<http://yourpdfguides.com/dref/5585233>