



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for PANASONIC TX-39AS650E. You'll find the answers to all your questions on the PANASONIC TX-39AS650E in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual PANASONIC TX-39AS650E  
User guide PANASONIC TX-39AS650E  
Operating instructions PANASONIC TX-39AS650E  
Instructions for use PANASONIC TX-39AS650E  
Instruction manual PANASONIC TX-39AS650E

The image shows the cover of the Panasonic VIERA TV operating instructions manual. The top left corner features the Panasonic logo and a list of languages: English, Nederlands, and Română. The top right corner lists model numbers: TX-39AS650E, TX-42AS650E, TX-47AS650E, TX-50AS650E, TX-55AS650E, and TX-60AS650E. The main title is "Operating Instructions LCD Television" with a small TV icon. Below this is a large "VIERA" logo. At the bottom, there is a section for "eHELP" with a QR code and a small icon of a hand holding a remote. The QR code is labeled "TQB0E2402P4" and "English".

Thank you for purchasing this Panasonic product.  
Please read these instructions carefully before operating this product and retain them for future reference.  
The images shown in this manual are for illustrative purposes only.  
Please refer to Pan European Guarantee Card if you need to contact your local Panasonic dealer for assistance.

English



[You're reading an excerpt. Click here to read official PANASONIC TX-39AS650E user guide](http://yourpdfguides.com/dref/5585845)  
<http://yourpdfguides.com/dref/5585845>

**Manual abstract:**

Please read these instructions carefully before operating this product and retain them for future reference. The images shown in this manual are for illustrative purposes only. Please refer to Pan European Guarantee Card if you need to contact your local Panasonic dealer for assistance. 20 2 English Important Notice Notice for DVB / Data broadcasting / IPTV functions & For the information of the trademarks, refer to [eHELP] (Support > Licence). Consult your local dealer for availability of DVB-T / T2 services in your area. Consult your cable service provider for availability of DVB-C services with this TV. & This TV may not work correctly with the signal which does not meet the standards of DVB-T / T2 or DVB-C. & Not all the features are available depending on the country, area, broadcaster, service provider and network environment. & Not all CI modules work properly with this TV. Consult your service provider about the available CI module.

& This TV may not work correctly with CI module that is not approved by the service provider. & Additional fees may be charged depending on the service provider. & The compatibility with future services is not guaranteed. & Check the latest information on the available services at the following website.

(English only) <http://panasonic.net/viera/support>

Net/viera/support Panasonic does not guarantee operation and performance of peripheral devices made by other manufacturers; and we disclaim any liability or damage arising from operation and/or performance from usage of such other maker's peripheral devices. @@@@English 3 This product is licensed under the AVC patent portfolio license for the personal and non-commercial use of a consumer to (i) encode video in compliance with the AVC Standard ("AVC Video") and/or (ii) decode AVC Video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a video provider licensed to provide AVC Video. No license is granted or shall be implied for any other use. Additional information may be obtained from MPEG LA, LLC. Rovi Corporation and/or its subsidiaries and related affiliates are not in any way liable for the accuracy or availability of the program schedule information or other data in the GUIDE Plus+/Rovi Guide system and cannot guarantee service availability in your area.

In no event shall Rovi Corporation and/or its related affiliates be liable for any damages in connection with the accuracy or availability of the program schedule information or other data in the GUIDE Plus+/Rovi Guide system. transport only in upright position. Safety Precautions To help avoid risk of electrical shock, fire, damage or injury, please follow the warnings and cautions below: **Y Mains plug and lead Warning** If you detect anything unusual, immediately remove the mains plug. This TV is designed to operate on AC 220-240 V , 50 / 60 Hz. & Insert the mains plug fully into the socket outlet. & Ensure that the mains plug is easily accessible. & Disconnect the mains plug when cleaning the TV. & Do not touch the mains plug with wet hands. & Do not damage the mains lead.  Do not place a heavy object on the lead.

Do not place the lead near a high temperature object.  Do not pull on the lead. Hold onto the mains plug body when disconnecting the plug.  Do not move the TV with the lead plugged into a socket outlet.  Do not twist the lead, bend it excessively or stretch it. Do not use a damaged mains plug or socket outlet.  Ensure the TV does not crush the mains lead. & Do not use any mains lead other than that provided with this TV. **Y Take care Warning** & Do not remove covers and never modify the TV yourself as live parts are accessible when they are removed. There are no user serviceable parts inside.

& Do not expose the TV to rain or excessive moisture. This TV must not be exposed to dripping or splashing water and objects filled with liquid, such as vases, must not be placed on top of or above the TV. & Do not insert foreign objects into the TV through the air vents. 4 English & Do not use an unapproved pedestal / mounting equipment. Be sure to ask your local Panasonic dealer to perform the setup or installation of approved wall-hanging brackets.

& Do not apply strong force or impact to the display panel. & Do not place the TV on sloped or unstable surfaces, and ensure that the TV does not hang over the edge of the base. This TV is designed for table-top use. & Do not expose the TV to direct sunlight and other sources of heat. **Y Radio wave Warning** & Do not use the TV and Touch Pad Controller in any medical institutions or locations with medical equipment.

Radio waves may interfere with the medical equipment and cause accidents due to the malfunction. & Do not use the TV and Touch Pad Controller near any automatic control equipment such as automatic doors or fire alarms. Radio waves may interfere with the automatic control equipment and cause accidents due to the malfunction. & Keep the distance at least 22 cm from the TV and Touch Pad Controller when you have a cardiac pacemaker. Radio waves may interfere with the operation of the pacemaker. & Do not disassemble or alter the TV and Touch Pad Controller in any way. To prevent the spread of fire, keep candles or other open flames away from this product at all times **Y Dangerous part / Small object Warning** & This product contains possibly dangerous parts such as plastic bags, that can be breathed in or swallowed by young children accidentally. Keep these parts out of reach of young children. & Do not allow children to handle any small objects such as SD Card and R03 batteries. The small object could be swallowed by young children.

Remove SD Card immediately after use and store out of reach of young children. **Y Built-in wireless LAN Caution** & Do not use the built-in wireless LAN to connect to any wireless network (SSID\*) for which you do not have usage rights. such networks may be listed as a result of searches. However, using them may be regarded as illegal access. \*SSID is a name for identifying a particular wireless network for transmission. & Do not subject the built-in wireless LAN to high temperatures, direct sunlight or moisture. & Data transmitted and received over radio waves may be intercepted and monitored. To avoid malfunctions or slow response caused by radio wave interference, keep the TV away from the devices such as other wireless LAN devices, microwaves, mobile phones and the devices that use 2. 4 GHz and 5 GHz signals when using the built-in wireless LAN. When noises occur due to the static electricity , etc. , the TV might stop operating for the protection of the devices. In this case, turn the TV off with Mains power On / Off switch, then turn it on again. & Additional information for the wireless LAN and access point may be on the following website. (English only) <http://panasonic.net/viera/support> **Y Pedestal Warning** & Do not disassemble or modify the pedestal.

Caution & Do not use any pedestal other than the one provided with this TV.



[You're reading an excerpt. Click here to read official PANASONIC](http://yourpdfguides.com/dref/5585845)

[TX-39AS650E user guide](http://yourpdfguides.com/dref/5585845)

<http://yourpdfguides.com/dref/5585845>

Do not use the pedestal if it becomes warped or physically damaged. If this occurs, contact your nearest Panasonic dealer immediately. During setup, make sure that all screws are securely tightened. Ensure that the TV does not suffer any impact during installation of the pedestal. Ensure that children do not climb onto the pedestal. Install or remove the TV from the pedestal with at least two people. Install or remove the TV by the specified procedure. 4 GHz signal. Do not drop, bend, exert pressure on, or step on the 3D Eyewear. Do not use the 3D Eyewear if it is physically damaged. The supplied 3D Eyewear can be worn over vision correction glasses. Moving the TV Caution Before moving the TV, disconnect all cables. Move the TV with at least two people. Take an appropriate break before continuing to view.

Be careful not to hit the TV screen or other people unintentionally. Do not view 3D images from a distance shorter than recommended. The recommended viewing distance is at least 3 times of the image height. 39-inch model 42-inch model 47-inch model 50-inch model 55-inch model 60-inch model Excessive volume Caution Do not expose your ears to excessive volume from the headphones. irreversible damage can be caused. If you hear a drumming noise in your ears, turn down the volume or temporarily stop using the headphones. Battery for the Remote Control / Touch Pad Controller Caution Incorrect installation may cause battery leakage, corrosion and explosion. Replace only with the same or equivalent type. Do not mix old and new batteries. Do not mix different battery types (such as alkaline and manganese batteries).

Do not burn or break up batteries. Do not expose batteries to excessive heat such as sunshine, fire or the like. 3 m or more 6 English When black bands at the top and bottom of the screen are displayed, such as movies, view the screen from a distance at least 3 times the height of the actual image. (That makes the distance shorter than the recommended values above.) LCD Television Accessories Remote Control (p.

13) N2QAYB000829 Declaration of Conformity (DoC) "Hereby, Panasonic Corporation declares that this TV is in compliance with the essential requirements and other relevant provisions of the Directive 1999/5/EC. If you want to get a copy of the original DoC of t3 for VIERA Link connection. For more information, refer to [eHELP] (Functions > VIERA Link "HDAVI Control™"). (M3 stereo mini plug) Common Interface Turn the TV off with Mains Power On / Off switch whenever inserting or removing the CI module. If a smart card and a CI module come as a set, first insert the CI module, then insert the smart card into the CI module.

Insert or remove the CI module completely in the correct direction as shown. Normally encrypted channels will appear. (The viewable channels and its features depend on the CI module.) If encrypted channels do not appear [Common Interface] in the Setup Menu There might be some CI modules in the market with older firmware versions that do not work fully interoperable with this new CI+ v1.3 TV. In this case, please contact your content provider.

English Identifying Controls Remote Control 7 OK & RQILUPV VHOHFWRQV DQG FKRLFHV 3 UHVV DIWHU VHOHFWLQJ FKDQQHO SRVLWLRQV WR TXLFNO\ FKDQJH FKDQQHO & 'LVSODV FKDQQHO OLWV 8 [Option Menu] & (DV\ RSWLRQDO VHWWLQJ IRU YLHZLQJ VRXQG\ HWF 9 Coloured buttons (red-green-yellow-blue) & 8VHG IRU WKH VHOHFWLQJ QDYLDJDLWLRQ DQG RSHUDWLRQ RI YDULRXV IXQFWLRQV 10 Volume Up / Down 11 Numeric buttons & KDQJHV FKDQQHO DQG WHOHWH[W SDJHV 6 HWV FKDUDFWHUV :KHQ LQ 6WDQGE\ PRGH VZLWFKHV 79 RQ 12 [eHELP] & 'LVSODV >H+ / 3 %XLOWLQ 2SHUDWLRQV\ QVWUXFWLRQV 13 Input mode selection & 79 VZLWFKHV WR '9% & '9% 7 \$QDORJXH & \$9 VZLWFKHV WR \$9 LQSWX PRGH IURP\ QSWX 6HOFHFWLRQ OLWV 14 Aspect & KDQJHV DVSHFW UDWLR 15 Subtitles & 'LVSODV VXEWLWOHV 16 Exit & 5HWXUQV WR >+RPH 6FUHHQ 17 HOME & 'LVSODV >+RPH 6FUHHQ 18 TV Guide & 'LVSODV (OHFWURQLF 3URIJUDPPH \*XLGH 19 Cursor buttons & 0DNHV VHOHFWLQJ DQG DGMXVPHQWV 20 Return & 5HWXUQV WR WKH SUHYLXV PHQX SDJH 21 Channel Up / Down 22 Sound Mute On / Off 1 Standby On / Off switch 2 3D button & 6ZLWFKHV WKH YLHZ EHWZHHQ DQG 3 [Main Menu] & 3UHVV WR DFFHVV 3LFWXUH 6RXQG 1HWZRUN 7LPHU 6HWXS DQG +HOS 0HQXV 4 Teletext button 5 Information & 'LVSODV FKDQQHO DQG SURJUDPPH LQIRUPDWLRQ 6 APPS & 'LVSODV >\$336 /LVW @ DSSOLFWRQV OLWV 23 Last view & 6ZLWFKHV WR SUHYLXVON YLHZHG FKDQQHO RU LQSWX PRGH 24 Operations for contents, connected equipment, etc. 14 English & 6OLGH\RXU ILQJHU WR PRYH WKH FXUVRU RQ LQWHUQHW FRQWHQWV RU >XUVRU 6HWWLQJ @ LQ >9, (\$ 7RXFK 3DG & RQWUROOHU @ 6HWXS 0HQX VHOHFW WKH LWHP DGMXVW OHYHOV HWF Indicator / Control panel :KHQ SUHVVLQJ 3 3 3 EXWWRQV WKH FRQWURO SDQHO JXLGH DSSHDUV RQ WKH ULJKW VLGH RI WKH VFUHHQ IRU VHFROGV WR KLJKOLJKW WKH SUHVVG EXWWRQ 4 5 & 7UDFH WKH IULQJH WR VFUROO 6 7 1 2 3 5HDU VLGH RI WKH 79 1 Remote control signal receive & R QRW SODFH DQ REMHFW EHWZHHQ WKH 79 UHPRWH FRQWURO VLJQDO UHFHLYHU DQG UHPRWH FRQWURO 2 Ambient sensor & 6HQVHV EULJKWQHVV WR DGMXVW SLFWXUH TXDOLW\ ZKHQ >PELHQW 6HQVUR @ LQ WKH 3LFWXUH 0HQX LV VHW WR >2Q 3 Power LED Red: 6WDQGE\ Green: 2Q Orange: 6WDQGE\ ZLWK 5FRUGLQ 6WDQGE\ ZLWK 7LPHU 3URIJUDPPH 2Q & 7KH / 'EOLQV ZKHQ WKH 79 UHFHLYHV D FRPPDQG IURP WKH UHPRWH FRQWURO 4 Input mode selection & 3UHVV UHSHDWHG\ XQWLO\RX UHDFK WKH GHVLUHG PRGH Installing / Removing batteries 6OLGH RSHQ & ORVH [Main Menu] & 3UHVV DQG KROG IRU DERXV VHFROGV WR GLVSOD\ PDLQ PHQX OK ZKHQ LQ WKH PHQX VVWHP 5 & KDQQHO 8S 'RZQ IRWH WKH FRUHFV SRODULW RU & XUVRU 8S 'RZQ ZKHQ LQ WKH PHQX VVWHP 6 9ROXP 8S 'RZQ & XUVRU /HIW 5LJKW ZKHQ LQ WKH PHQX VVWHP 7 Mains power On / Off switch & 8VH WR VZLWFK WKH PDLQV SRZHU Note & ,W LV UHFRRPHQGHG WR KROG 7RXFK 3DG & RQWUROOHU ZLWK\RXU KDQG ZKHQ XVLQJ 7KH EDWWHU\ SRZHU ZLOO EH XVHG ZKHQHYHU\RX XVH 7RXFK 3DG & RQWUROOHU LQFOXGLQJ WKH WRXFK RI WKH WRXFK SDG HYHQ LI QRW RSHUDWLRQ WKH 79 ,W PD\ GHFUHDVH WKH EDWWHU\ OLIH 6RPH RSHUDWLRQV GLIIH GHSHQGLQJ RQ WKH DSSOLFWRQV English 15 First time Auto Setup \$XWRPDWLFDOO\ VHW XS WKH 79 DQG VHDFKHV IRU DYDLODEOH 79 FKDQQHOV ZKHQ WKH 79 LV WXUQH RQ IRU WKH ILUVW WLPH 7KHVH VVWSV DUH QRW QHFHVVDU\ LI WKH VHWXS KDV EHHQ FRPSOHWHG\RXU ORFDO GHDOHU 3 OHDVH FRPSOHWH FRQHFWRQV 3 3 3 DQG VHWWLQJ LI QHFHVVDU\ RI WKH FRQHFVHG HTXLSHQW EHIRUH VDWULQJ \$XWR 6HWXS )RU GHWDLOV RI VHWWLQJ IRU WKH FRQHFVHG HTXLSHQW UHDFK WKH PDQXDO RI WKH HTXLSHQW Tick the TV signal mode to tune, and then select [Start Auto Setup] WXQH VHDFKHV IRU WKH DYDLODEOH FKDQQHOV VNLW XQLQJ & \$XWR 6HWXS VFUHHQ YDULHV GHSHQGLQJ RQ WKH FRQWUL DQG WKH VLJQDO PRGH\RX VHOHFW >9% & 1HWZRUN 6HWWLQJ @ IRUPDOO\ VHW >)UHTXHQ\ @ DQG >1HWZRUN , '@ WR >\$XWR @ ,I >\$XWR @ LV QRW GLVSODHG RU LI QHFHVVDU\ HQWHU >)UHTXHQ\ @ DQG >1HWZRUN , '@ VSHFLILHG\RXU FDEOH SURYLGHU ZLWK QXPULF EXWWRQV 1 Plug the TV into mains socket and turn power on & 7DNHV D IHZ VHFROGV WR EH GLVSODHG 3 Select the type of [Home Screen] 7KH GHPRQVWUDWLRQ WR H[SODLQ KRZ WR XVH >P\ +RPH 6FUHHQ @ LV GLVSODHG & RQILUP WKH GHPRQVWUDWLRQ E\ IROORZLQJ WKH RQVVFUHHQ LQVWUXFWLRQV DQG WKHQ VHOHFW WKH GHVLUHG >+RPH 6FUHHQ @ (DPSOH >+RPH 6FUHHQ 6HOFHFWLRQ @ 2 Select the following items 6HW XS HDFK LWHP E\ IROORZLQJ WKH RQVVFUHHQ LQVWUXFWLRQV (DPSOH Please select your viewing environment.

[You're reading an excerpt. Click here to read official PANASONIC TX-39AS650E user guide](#)



<http://yourpdfguides.com/dref/5585845>

Home Shop ([DPSOHI] >79 +RPH 6FUHHQ@ Y How to use remote control 0RYH WKH FXUVRU Auto Setup is now complete and your TV is ready for viewing. ,I WXQLQJ KDV IDLOHG FKHFN WKH FRQQHFWRQ RI WKH QHWZRUN 5) FDEOH DQG WKH IROORZ WKH RQVUFUHHQ LQVWUXFWLRQV Note Y 7KH 79 ZLOO DXWRPDWLFDOO JR LQWR 6WDQGE PRGH ZKHQ QR RSHUDWRQ LV SHUIRUPHG IRU P KRUV LI >\$XWR 6WDQGE@ LQ WKH 7LPHU 0HQX LV VHW WR >2Q@ P Y 7KH 79 ZLOO DXWRPDWLFDOO JR LQWR 6WDQGE PRGH ZKHQ QR VLJQDO LV UHFHLYHG DQG QR RSHUDWRQ LV SHUIRUPHG IRU P PLQXWH LI >1R VLJQDO 3RZHU RII@ LQ WKH 7LPHU 0HQX LV VHW WR >2Q@ P Y 7R UHWXQH DOO FKDQQHOV [Auto Setup] in [Tuning Menu] (Setup Menu) Y 7R DGG WKH DYDLODEOH 79 VLJQDO PRGH ODWHU [Add TV Signal] in [Tuning Menu] (Setup Menu) Y 7R LQLWLDOLVH DOO VHWWLQJ [Shipping Condition] in [System Menu] (Setup Menu) SFFHVV WKH LWHP P VWRUH WKH VHWWLQJ 5HWXUQ WR WKH SUHYLXXV LWHP LI DYDLODEOH Select the language Select [Home] 6HOHFW >+RPH@ YLHZLQJ HQYLURQPHQW WR XVH LQ RXU KRPH HQYLURQPHQW P Y >6KRS@ LV IRU VKRS GLVSOD P Y 7R FKDJH YLHZLQJ HQYLURQPHQW ODWHU RQ RX ZLOO QHHG WR LQLWLDOLVH DOO VHWWLQJ V E DFFHVV LQJ 6KLSLQJ & RQGLWLRQ Set up the network connection Select your country Y 'HSHQLQJ RQ WKH FRXQWU RX VHOHFW VHOHFW RXU 5HJLRQ RU VWRUH WKH & KLOG /RFN 3, I QXPEHU P P P F DQQRW EH VWRUH P 16 English Operations Turn power on 79 or 5HPRWH & RQWURO Y ODLQV SRZHU 2Q P 2II VZLWFK VKRXOG EH RQ P P Y 7KH ODVW YLHZHG >+RPH 6FUHHQ@ LV GLVSODHG ([DPSOHI] >79 +RPH 6FUHHQ@ Y 7KH VHOHFWDEOH PRGHV YDU GSHQGLQJ RQ WKH FKDQQHOV VWRUH P VHOHFW DFFHVV Y <RX FDQ DOVR VHOHFW WKH PRGH SUHVVLQJ WKH 79 EXWWRQ UHSHDWHG P Y , I >79 6HOHFWLRQ@ LV QRW GLVSODHG SUHVV WKH 79 EXWWRQ WR VZLWFK WKH PRGH 3 Select a channel XS GRZQ or Y 7R VHOHFW D FKDQQHO SRVLWLRQ ZLWK P RU PRUH GLJLW H P P P P To access each feature ([DPSOHI] 6HOHFWHG FRQWHQW VFUHHQ Access [APPS List] and select a feature ([DPSOHI] >\$336 /LVW@ Y 7R UHWXUQ WR >+RPH 6FUHHQ@ DW DQ\ WLPH Y <RX FDQ VHW XS RU PDNH >+RPH 6FUHHQ@ WR GLVSOD\ GHVLUH LQIRUPDWLRQ WR DFFHVV VSHFLILF IHDWXUH HDVLOP WR VHOHFW WKH GHIDXOW >+RPH 6FUHHQ@ P HWP JRU GHWDLOV IROORZ WKH RQVUFUHHQ LQVWUXFWLRQV RU UHIHU WR >+RPH 6FUHHQ ! p +RPH 6FUHHQ P Watching TV \$336 LV WKH DSSOLFDWRQ IHDWXUH RI WKH 79 P Y )RU RSHUDWRQV RI HDFK IHDWXUH DQG WKH VHWXS RI >\$336 /LVW@ P IROORZ WKH RQVUFUHHQ LQVWUXFWLRQV RU UHIHU WR >+RPH 6FUHHQ ! \$336 /LVW P I Select the TV viewer from [Home Screen] VHOHFW DFFHVV 2 Select the mode TV Selection DVB-C DVB-T Analogue English 17 How to Use eHELP >+RPH 6FUHHQ@ LV WKH GHWDLOHG RSHUDWRQ LQVWUXFWLRQV EXLOW LQWR WKH 79 DQG KHOSV RX WR JHW PRUH XQGHUVWDQGLQJ RI WKH RSHUDWRQV IRU HDFK IHDWXUH Viewing 3D images <RX FDQ HQMR\ YLHZLQJ P LPDJHV ZLWK FRQWHQW RU SURJUDPPHV FRUHVSRQGLQJ WR WKH P HIIHFW E ZHDULQJ WKH P (HZHDU VXSSOLHG P Y 7KH P (HZHDU PXVW EH ZRUQ WR YLHZ P LPDJHV P 7KLV 79 VXSSRUW >)UDPH 6HTXHQWLDO@ \*P >6LGH E 6LGH@ DQG >7RS DQG %RWWRP@ P IRUPDWV P Y )RU PRUH LQIRUPDWLRQ UHIHU WR >+RPH 6FUHHQ@ :DWFKLQJ ! P P \*P 7KH P IRUPDWV KDW WKH LPDJHV IRU WKH OHIW DQG ULJKW HNHV DUH UFRUGHG ZLWK WKH KLJK GHILQWLRQ TXDOLW DQG DOWHUQDWXO SODHG EDFN P I Display [eHELP] or [Help] [eHELP] Y , I WKLV LV QRW WKH ILUVW WLPH WR YLHZ >+RPH 6FUHHQ@ P IURP ZKHQ WKH 79 LV WXUQH RQ WKH FRQILUPDWLRQ VFUHHQ LV GLVSODHG WR VHOHFW ZKHWKHU >)LUVW 3DJH@ RU >/DVW 3DJH@ P To view the 3D images Y Playing back 3D-compatible Blu-ray disc (Frame Sequential format) Y & RQHFH WKH P FRPSDWLEOH SODHU YLD D IXOO ZLUHG +0, FRPSOLDQW FDEOH P , I RX XVH WKH RQ P FRPSDWLEOH SODHU WKH LPDJHV ZLOO EH GLVSODHG LQ P PRGH P Y , I WKH LQSW PRGH LV QRW VZLWFKHG DXWRPDWLFDOO VHOHFW WKH LQSW PRGH FRQHFHWHG WR WKH SODHU XVLQJ WKH \$9 EXWWRQ P 2 Select the category and item VHOHFW FDWHJR\ DFFHVV & DWJR\ ILHOG , WHP ILHOG Y 3D-supported broadcast Y 3OHDVH FRQVXOW WKH VXSSOLHU RI FRQWHQW RU SURJUDPPHV IRU DYDLODELOLW RI WKLV VHUYLFD VHOHFW LWHP DFFHVV 6XE LWHP ILHOG 'HVFULSWLRQ VHOHFW VXE LWHP DFFHVV Y 3D photos and 3D videos taken by 3D-compatible Panasonic products Y \$YDLODEOH LQ 0HGLD 3ODHU DQG IHWZRUN VHUYLFDV Y 2D images converted to 3D Y 3UHV WKH P EXWWRQ DQG VHW WR >P P@ PRGH LQ >P ORGH 6HOHFWLRQ@ P 2 Put the 3D Eyewear on View the 3D images Y 7R UHWXUQ WR WKH SUHYLXXV ILHOG 6DIHW\ SUHFDXWRQV ZLOO EH GLVSODHG ZKHQ RX ILUVW ZDWFK WKH P LPDJHV 6HOHFW >HV@ RU >1R@ WR FRQLQXH WR YLHZ P LPDJHV Note Y 'R QRW H[HUW SUHVXUH RQ RU VFUDWFK WKH OHQV RI WKH P (HZHDU P P FRQWHQW ZLOO QRW EH FRUHFW\ YLVLEOH LI WKH P (HZHDU LV ZRUQ XSVLGH GRZQ RU EDFNWR P IURQW P :KHQ YLHZLQJ P LPDJHV PDNH VXUH RXU HNHV DUH DW DQ DSSUR[LPDWH\ KRULJRWDO OHYHO DQG NHHS D SRVLWLRQ ZKHUH RX GR QRW VHH GRXEOH LPDJHV Y 7R VFUROO WKH GHVFULSWLRQ LI PRUH WKDQ P SDJH :KLOH WKH GHVFULSWLRQ LV KLJKOLJKWHG Y 7R GLVSOD\ WKH PHQV UHODWHG WR WKH GHVFULSWLRQ RQ IRU VRPH GHVFULSWLRQV UHG 18 English FAQs %HIRUH UHTXHVWLQJ VHUYLFD RU DVVLVDDWQH P SOHDVH IROORZ WKHV VLPSON JXLGHV WR VROY WKH SUREOHP P Y )RU PRUH LQIRUPDWLRQ UHIHU WR >+RPH 6FUHHQ ! )\$4V P The TV does not switch on Y & KHFN WKH PDLQV OHDG LV SOXJHG LQWR WKH 79 DQG WKH VRFNHV RXWOHW P Y & KHFN WKH FRUHFV LQSW PRGH LV VHOHFWHG P Y & KHFN WKH VHWWLQJ RI >\$9 P > & 20321 (17@ P > 9, '2@ LQ >, QSWX 6HOHFWLRQ@ WR PDWFK WKH RXWSXW RI WKH H[HUWQDO HTXLSPHQW P Y , V > & RQWUDVW@ P > %ULJKWQHVV@ RU > & RORXU@ LQ WKH 3LFWXUH 0HQX VHW WR WKH PLQLXP Y & KHFN DOO UHTXLUHG FDEOHV DQG FRQHFHWRQV DUH ILUPO LQ SODFH P Unusual image is displayed Y 7XUQ WKH 79 RII ZLWK ODLQV SRZHU 2Q P 2II VZLWFK P WKHQ WXUQ LW RQ DJDLQ P Y , I WKH SUREOHP SHUVLVWV LQLWLDOLVH DOO VHWWLQJ [Shipping Condition] in [System Menu] (Setup Menu) Parts of the TV become hot Y (YHQ LI WKH WHPSHUDWXUH RI SDUWV RI WKH IURQW WRS DQG UHDSHQOV KDV ULVHQ P WKHVH WHPSHUDWXUH ULVHV GR QRW FDXVH DQ SUREOHPV LQ WHUPV RI SHUIRUPDQH RU TXDOLW The display panel moves slightly and clattered sound is heard when it is pushed with a finger Y 7KHUH LV D OLWWOH JDS DURXQG WKH SDQHO WR SUHYHQW GDPDJH WR WKH SDQHO P 7KLV LV QRW D PDOIXQFWLRQ P English 19 Maintenance First, remove the mains plug from the socket outlet.

14) Y +DV WKH 79 EHHQ VZLWFKHG RQ" Y 7KH EDWWHULHV PD EH UXQQQLQJ ORZ P SHSODFH WKHP ZLWK QHZ RQHVP Y 3RLQW WKH UHPRWH FRQWURO GLUHFW\ DW WKH 79 V UHPRWH FRQWURO VLJQDO UHFHLYHU ZLWKLQ DEXW P P DQG D P GHJUHH DQJOH RI WKH VLJQDO UHFHLYHU P Y 6LWXDWH WKH 79 DZD\ IURP VXQVLOH RU RWKHU VRXUFHV RI EULJKW OLJKW QRW WR VLOH RQ WKH 79 V UHPRWH FRQWURO VLJQDO UHFHLYHU P No image can be displayed Y & KHFN WKH 79 LV WXUQH RQ P Y & KHFN WKH PDLQV OHDG LV SOXJHG LQWR WKH 79 DQG WKH VRFNHV RXWOHW P Y & KHFN WKH FRUHFV LQSW PRGH LV VHOHFWHG P Y & KHFN WKH VHWWLQJ RI >\$9 P > & 20321 (17@ P > 9, '2@ LQ >, QSWX 6HOHFWLRQ@ WR PDWFK WKH RXWSXW RI WKH H[HUWQDO HTXLSPHQW P Y , V > & RQWUDVW@ P > %ULJKWQHVV@ RU > & RORXU@ LQ WKH 3LFWXUH 0HQX VHW WR WKH PLQLXP Y & KHFN DOO UHTXLUHG FDEOHV DQG FRQHFHWRQV DUH ILUPO LQ SODFH P Unusual image is displayed Y 7XUQ WKH 79 RII ZLWK ODLQV SRZHU 2Q P 2II VZLWFK P WKHQ WXUQ LW RQ DJDLQ P Y , I WKH SUREOHP SHUVLVWV LQLWLDOLVH DOO VHWWLQJ [Shipping Condition] in [System Menu] (Setup Menu) Parts of the TV become hot Y (YHQ LI WKH WHPSHUDWXUH RI SDUWV RI WKH IURQW WRS DQG UHDSHQOV KDV ULVHQ P WKHVH WHPSHUDWXUH ULVHV GR QRW FDXVH DQ SUREOHPV LQ WHUPV RI SHUIRUPDQH RU TXDOLW The display panel moves slightly and clattered sound is heard when it is pushed with a finger Y 7KHUH LV D OLWWOH JDS DURXQG WKH SDQHO WR SUHYHQW GDPDJH WR WKH SDQHO P 7KLV LV QRW D PDOIXQFWLRQ P English 19 Maintenance First, remove the mains plug from the socket outlet.



[You're reading an excerpt. Click here to read official PANASONIC TX-39AS650E user guide](http://yourpdfguides.com/dref/5585845)  
<http://yourpdfguides.com/dref/5585845>



*You should note this serial number in the space provided below and retain this book, plus your purchase receipt, as a permanent record of your purchase to aid in identification in the event of theft or loss, and for Warranty Service purposes. .*



[You're reading an excerpt. Click here to read official PANASONIC TX-39AS650E user guide](http://yourpdfguides.com/dref/5585845)  
<http://yourpdfguides.com/dref/5585845>