



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for PANASONIC TX-55AS640E. You'll find the answers to all your questions on the PANASONIC TX-55AS640E in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual PANASONIC TX-55AS640E
User guide PANASONIC TX-55AS640E
Operating instructions PANASONIC TX-55AS640E
Instructions for use PANASONIC TX-55AS640E
Instruction manual PANASONIC TX-55AS640E

The screenshot shows the Panasonic TV's operating instructions screen. At the top left, there are language selection buttons for English, Nederlands, and Română. The top right features the Panasonic logo and model numbers: TX-40AS640E, TX-48AS640E, and TX-55AS640E. The main content area is divided into two sections: 'Operating Instructions LCD Television' with a small TV icon, and a large 'VIERA' logo. Below the VIERA logo, there is a section titled 'For more detailed instructions, refer to [eHELP] (Built-in Operating Instructions)'. This section includes icons for a question mark, a hand holding a remote, and the eHELP logo. At the bottom left, there is a small black box with white text: 'Thank you for purchasing this Panasonic product. Please read these instructions carefully before operating this product and retain them for future reference. The images shown in this manual are for illustrative purposes only. Please refer to Pan European Guarantee Card if you need to contact your local Panasonic dealer for assistance.' At the bottom right, there is a QR code and the text 'TQB0E2399P4' and 'English'.



[You're reading an excerpt. Click here to read official PANASONIC TX-55AS640E user guide](http://yourpdfguides.com/dref/5642944)
<http://yourpdfguides.com/dref/5642944>

Manual abstract:

Please read these instructions carefully before operating this product and retain them for future reference. The images shown in this manual are for illustrative purposes only. Please refer to Pan European Guarantee Card if you need to contact your local Panasonic dealer for assistance. 20 2 English Important Notice Notice for DVB / Data broadcasting / IPTV functions & For the information of the trademarks, refer to [eHELP] (Support > Licence). Consult your local dealer for availability of DVB-T / T2 services in your area. Consult your cable service provider for availability of DVB-C services with this TV. & This TV may not work correctly with the signal which does not meet the standards of DVB-T / T2 or DVB-C. & Not all the features are available depending on the country, area, broadcaster, service provider and network environment. & Not all CI modules work properly with this TV. Consult your service provider about the available CI module.

& This TV may not work correctly with CI module that is not approved by the service provider. & Additional fees may be charged depending on the service provider. & The compatibility with future services is not guaranteed. & Check the latest information on the available services at the following website.

(English only) <http://panasonic>.

Net/viera/support Panasonic does not guarantee operation and performance of peripheral devices made by other manufacturers; and we disclaim any liability or damage arising from operation and/or performance from usage of such other maker's peripheral devices. @@No license is granted or shall be implied for any other use. Additional information may be obtained from MPEG LA, LLC. @@@@ transport only in upright position. @@ This TV is designed to operate on AC 220-240 V, 50 / 60 Hz.

& Insert the mains plug fully into the socket outlet. & Ensure that the mains plug is easily accessible. & Disconnect the mains plug when cleaning the TV. & Do not touch the mains plug with wet hands. & Do not damage the mains lead. □ Do not place a heavy object on the lead. □ Do not place the lead near a high temperature object. □ Do not pull on the lead. Hold onto the mains plug body when disconnecting the plug. □ Do not move the TV with the lead plugged into a socket outlet.

□ Do not twist the lead, bend it excessively or stretch it. Do not use a damaged mains plug or socket outlet. □ Ensure the TV does not crush the mains lead. & Do not use any mains lead other than that provided with this TV. & Take care Warning & Do not remove covers and never modify the TV yourself as live parts are accessible when they are removed. There are no user serviceable parts inside. & Do not expose the TV to rain or excessive moisture. This TV must not be exposed to dripping or splashing water and objects filled with liquid, such as vases, must not be placed on top of or above the TV. & Do not insert foreign objects into the TV through the air vents. 4 English & Do not use an unapproved pedestal / mounting equipment.

Be sure to ask your local Panasonic dealer to perform the setup or installation of approved wall-hanging brackets. & Do not apply strong force or impact to the display panel. & Do not place the TV on sloped or unstable surfaces, and ensure that the TV does not hang over the edge of the base. This TV is designed for table-top use. & Do not expose the TV to direct sunlight and other sources of heat.

& Radio wave Warning & Do not use the TV and Touch Pad Controller in any medical institutions or locations with medical equipment. Radio waves may interfere with the medical equipment and cause accidents due to the malfunction. & Do not use the TV and Touch Pad Controller near any automatic control equipment such as automatic doors or fire alarms. Radio waves may interfere with the automatic control equipment and cause accidents due to the malfunction. & Keep the distance at least 22 cm from the TV and Touch Pad Controller when you have a cardiac pacemaker.

Radio waves may interfere with the operation of the pacemaker. & Do not disassemble or alter the TV and Touch Pad Controller in any way. To prevent the spread of fire, keep candles or other open flames away from this product at all times & Dangerous part / Small object Warning & This product contains possibly dangerous parts such as plastic bags, that can be breathed in or swallowed by young children accidentally. Keep these parts out of reach of young children. & Do not allow children to handle any small objects such as R03 batteries. The small object could be swallowed by young children. & Built-in wireless LAN Caution & Do not use the built-in wireless LAN to connect to any wireless network (SSID*) for which you do not have usage rights. such networks may be listed as a result of searches. However, using them may be regarded as illegal access. *SSID is a name for identifying a particular wireless network for transmission.

& Do not subject the built-in wireless LAN to high temperatures, direct sunlight or moisture. & Data transmitted and received over radio waves may be intercepted and monitored. To avoid malfunctions or slow response caused by radio wave interference, keep the TV away from the devices such as other wireless LAN devices, microwaves, mobile phones and the devices that use 2.4 GHz and 5 GHz signals when using the built-in wireless LAN. When noises occur due to the static electricity, etc., the TV might stop operating for the protection of the devices. In this case, turn the TV off with Mains power On / Off switch, then turn it on again. & Additional information for the wireless LAN and access point may be on the following website. (English only) <http://panasonic>.

Net/viera/support & Pedestal Warning & Do not disassemble or modify the pedestal.

Caution & Do not use any pedestal other than the one provided with this TV. & Do not use the pedestal if it becomes warped or physically damaged. If this occurs, contact your nearest Panasonic dealer immediately. & During setup, make sure that all screws are securely tightened. & Ensure that the TV does not suffer any impact during installation of the pedestal.

& Ensure that children do not climb onto the pedestal. & Install or remove the TV from the pedestal with at least two people. & Install or remove the TV by the specified procedure. @@ 4 GHz signal. @@@@ Take an appropriate break before continuing to view.

@@@@ Be careful not to hit the TV screen or other people unintentionally. @@ & Do not view 3D images from a distance shorter than recommended.

@@@@ & Move the TV with at least two people. @@@@ irreversible damage can be caused. @@@@ (That makes the distance shorter than the recommended values above. @@ & Replace only with the same or equivalent type. & Do not mix old and new batteries. @@ & Do not burn or break up batteries. & Do not expose batteries to excessive heat such as sunshine, fire or the like. Make sure you dispose of batteries correctly.

Declaration of Conformity (DoC) "Hereby, Panasonic Corporation declares that this TV is in compliance with the essential requirements and other relevant provisions of the Directive 1999/5/EC.



[You're reading an excerpt. Click here to read official PANASONIC TX-55AS640E user guide](http://yourpdfguides.com/dref/5642944)
<http://yourpdfguides.com/dref/5642944>

□ If you want to get a copy of the original DoC of this TV, please visit the following website: [http://www.De Authorized Representative: Panasonic Testing Centre Panasonic Marketing Europe GmbH Winsberggring 15, 22525 Hamburg, Germany](http://www.DeAuthorizedRepresentative.com) 6 English This TV is intended to be used in the following countries. Albania, Andorra, Austria, Belgium, Bulgaria, Croatia, Cyprus, Czech Republic, Denmark, Estonia, Finland, France, Germany, Greece, Hungary, Italy, Iceland, Latvia, Liechtenstein, Lithuania, Luxembourg, Malta, Monaco, Montenegro, Netherlands, Norway, Poland, Portugal, Romania, Slovakia, Slovenia, Spain, Sweden, Switzerland, Turkey The wireless LAN feature of this TV shall exclusively be used inside buildings. Take care not to throw them away unintentionally. For the information of optional accessories, refer to [eHELP] (Support > Optional accessories). English 7 Assembling / Removing the pedestal A Assembly screw (4) M5 × 15 B Assembly screw (4) M4 × 12 C Bracket (2) 2 D Base 3 Y Assembling the pedestal A B 1 C D Removing the pedestal from the TV Be sure to remove the pedestal in the following way when using the wall-hanging bracket or repacking the TV. 1 Remove the assembly screws 3 Remove the assembly screws B from the TV. from the bracket. 2 Pull out the pedestal from the TV.

A 8 English Connections Y External equipment and cables shown are not supplied with this TV. Y Please ensure that the unit is disconnected from the mains socket before attaching or disconnecting any cables. Y Check the terminal type and cable plugs are correct when connecting. Y Keep the TV away from electronic equipment (video equipment, etc.) or equipment with an infrared sensor, otherwise distortion of image / sound may occur or o 22 Sound Mute On / Off 1 Standby On / Off switch 2 3D button Y 6ZLWFKHV WKH YLHZ EHWZHHQ □' DQG □'□ 3 [Main Menu] Y 3UHV V WR DFFHV V 3LFWXUH □ 6RXQG □ 1HWZRUN □ 7LPHU □ 6HWXS DQG +HOS 0HQXV □ 4 Teletext button 5 Information Y 'LVSODV FKDQQHO DQG SURJUDPPH LQIRUPDWLRQ □ 6 APPS Y 'LVSODV >\$336 /LVW@ DSSOLFDWLRQV OLWV □ 23 Last view Y 6ZLWFKHV WR SUHYLRXV\ YLHZHG FKDQQHO RU LQSWXW PRGH □ 24 Operations for contents, connected equipment, etc.

□ English 13 Y 6OLGH \RXU ILQJHU WR PRYH WKH FXUVRU RQ LQWHUQHW FRQWHQWV RU >&XUVRU 6HWWLQJ@ LQ >9,(5\$ 7RXFK 3DG &RQWUROOHU@ 6HWXS 0HQX □ VHOHFW WKH LWHP □ DGMXVW OHYHOV □ HWF □ Indicator / Control panel Y :KHQ SUHVVLQJ □ □ □ □ □ □ EXWWRQV WKH FRQWURO SDQHO JXLGH DSSHDUV RQ WKH ULJKW VLGH RI WKH VFUHHQ IRU □ VHFROGV WR KLJKOLJKW WKH SUHVWHG EXWWRQV □ 4 5 Y 7UDFH WKH IULQJH WR VFUROO □ 6 7 1 2 3 5HDU VLGH RI WKH 79 1 Remote control signal receive Y 'RQRW SODFH DQ REMHFV EHWZHHQ WKH 79 UHPRWH FRQWURO VLJQDO UHFHLYHU DQG UHPRWH FRQWURO □ 2 Ambient sensor Y 6HQVHV EULJKWQHVV WR DGMXVW SLFWXUH TXDOLW ZKHQ >PELQW 6HQVRU@ LQ WKH 3LFWXUH 0HQX LV VHW WR >2Q@ □ 3 Power LED Red: 6WDQGE \ Green: 2Q Y 7KH /(' EOLQV ZKHQ WKH 79 UHFHLYHU D FRPPDQG IURP WKH UHPRWH FRQWURO □ 4 Input mode selection Y 3UHV V UHSHDWHG\ XQWLO \RX UHDFK WKH GHVLUHG PRGH □ [Main Menu] Y 3UHV V DQG KROG IRU DERXW □ VHFROGV WR GLVSOD\ PDLQ PHQX □ OK ZKHQ LQ WKH PHQX \VWHP 5 &KDQQHO 8S □ 'RZQ &XUVRU 8S □ 'RZQ ZKHQ LQ WKH PHQX \VWHP 6 9ROXP 8S □ 'RZQ &XUVRU /HIW □ 5LJKW ZKHQ LQ WKH PHQX \VWHP 7 Mains power On / Off switch Y 8VH WR VZLWFK WKH PDLQV SRZHU □ Y Installing / Removing batteries 6OLGH RSHQ &ORVH IRWH WKH FRUHFV SRODULW □ RU □ Note Y ,W LV UHFRPPHQGHG WR KROG 7RXFK 3DG &RQWUROOHU ZLWK \RXU KDQG ZKHQ XVLQJ □ Y 7KH EDWWHU SRZHU ZLOO EH XVHG ZKHQYHU \RX XVH 7RXFK 3DG &RQWUROOHU LQFOXGLQJ WKH WRXFK RI WKH WRXFK SDG HYHQ LI QRW RSHUDWLRQ WKH 79 □ ,W PD\ GHFUHDVH WKH EDWWHU OLIH □ Y 6RPH RSHUDWLRQV GLIIHU GHSHQGLOJ RQ WKH DSSOLFDWLRQ □ 14 English First time Auto Setup \$XWRPDWLFDOO\ VHW XS WKH 79 DQG VHDUFKHV IRU DYDLODEOH 79 FKDQQHOV ZKHQ WKH 79 LV WXUQH RQ IRU WKH ILUVW WLPH □ Y 7KHVH VHWV DUH QRW QHFHVVDU\ LI WKH VHWXS KDV EHHQ FRPSOHWHG E\ \RXU ORFDO GHDOHU □ Y 3OHDVH FRPSOHWH FRQHFWLRQV □ □ □ □ □ □ DQG VHWWLQJ LI QHFHVVDU\ RI WKH FRQHFWHG HTXLSHQW EHIRUH VWDUWLQJ \$XWRPDWLFDOO\ VHW XS WKH 79 DQG FRQHFWHG HTXLSHQW UHG WKH PDQXDO RI WKH HTXLSHQW □ Tick the TV signal mode to tune, and then select [Start Auto Setup] □ WXO VHDUFK IRU WKH DYDLODEOH FKDQQHOV □ VNLW XQLQJ Y \$XWRPDWLFDOO\ YDULHV GHSHQGLOJ RQ WKH FRXQWU\ DQG WKH VLJQDO PRGH \RX VHOHFW □ Y >9%□& 1HWZRUN 6HWWLQJ@ IRUPDOO\ VHW >)UHTXHQF\@ DQG >1HWZRUN , '@ WR >\$XWR@ , I >\$XWR@ LV QRW GLVSODHG RU LI QHFHVVDU\ HQWHU >)UHTXHQF\@ DQG >1HWZRUN , '@ VSHFLILHG E\ \RXU FDEOH SURYLGHU ZLWK QXPHULF EXWWRQV □ 1 Plug the TV into mains socket and turn power on Y 7DNHV D IHZ VHFROGV WR EH GLVSODHG □ 3 Select the type of [Home Screen] 7KH GHPRQVWUDWLRQ WR H[SODLQ KRZ WR XVH >P\ +RPH 6FUHHQ@ LV GLVSODHG □ &RQILUP WKH GHPRQVWUDWLRQ E\ IROORZLQJ WKH RQVVFUHHQ LQVWUXFWLRQV □ DQG WKHQ VHOHFW WKH GHVLUHG >+RPH 6FUHHQ@ □ ([DPSOH] >+RPH 6FUHHQ 6HOHFWLRQ@ 2 Select the following items 6HW XS HDFK LWHP E\ IROORZLQJ WKH RQVVFUHHQ LQVWUXFWLRQV ([DPSOH] Please select your viewing environment. Home Shop ([DPSOH] >79 +RPH 6FUHHQ@ Y How to use remote control 0RYH WKH FXUVRU Auto Setup is now complete and your TV is ready for viewing. ,I WXQLQJ KDV IDLOHG □ FKHFN WKH FRQHFWLRQ RI WKH QHWZRUN □ 5) FDEOH □ DQG WKHQ IROORZ WKH RQVVFUHHQ LQVWUXFWLRQV □ Note Y 7KH 79 ZLOO DXWRPDWLFDOO\ JR LQWR 6WDQGE PRGH ZKHQ QR RSHUDWLRQ LV SHUIRUPHG IRU □ KRXUV LI >\$XWR 6WDQGE@ LQ WKH 7LPHU 0HQX LV VHW WR >2Q@ □ Y 7KH 79 ZLOO DXWRPDWLFDOO\ JR LQWR 6WDQGE PRGH ZKHQ QR VLJQDO LV UHFHLYHG DQG QR RSHUDWLRQ LV SHUIRUPHG IRU □ □ PLQXWHV LI >1R VLJQDO 3RZHU RII@ LQ WKH 7LPHU 0HQX LV VHW WR >2Q@ □ Y 7R UHWXQH DOO FKDQQHOV [Auto Setup] in [Tuning Menu] (Setup Menu) Y 7R DGG WKH DYDLODEOH 79 VLJQDO PRGH ODWHU [Add TV Signal] in [Tuning Menu] (Setup Menu) Y 7R LQLWLDOLVH DOO VHWWLQJ [Shipping Condition] in [System Menu] (Setup Menu) \$FFHV V WKH LWHP □ VWRUH WKH VHWWLQJ 5HWXUQ WR WKH SUHYLRXV LWHP LI DYDLODEOH Select the language Select [Home] 6HOHFW >+RPH@ YLHZLQJ HQYLURQPHQW WR XVH LQ \RXU KRPH HQYLURQPHQW □ Y >6KRS@ LV IRU VKRS GLVSODHG □ Y 7R FKDQJH YLHZLQJ HQYLURQPHQW ODWHU RQ \RX ZLOO QHHG WR LQLWLDOLVH DOO VHWWLQJ E\ DFFHVVLQJ 6KLSLQJ &RQGLWLRQ □ Set up the network connection Select your country Y 'HSHQGLQJ RQ WKH FRXQWU\ \RX VHOHFW □ VHOHFW \RXU 5HJLRQ RU VWRUH WKH &KLOG /RFN □ 3, 1 QXPEHU '□□□□' FDQQRW EH VWRUH □ English 15 Operations Turn power on 79 or 5HPRWH &RQWURO Y 0DLQV SRZHU 2Q □ 2 II VZLWFK VKRXOG EH RQ □ □ □ Y 7KH ODVW YLHZHG >+RPH 6FUHHQ@ LV GLVSODHG □ ([DPSOH] >79 +RPH 6FUHHQ@ Y 7KH VHOHFWDEOH PRGHV YDU\ GHSHQGLOJ RQ WKH FKDQQHOV VWRUH □ VHOHFW DFFHV V <RX FDQ DOVR VHOHFW WKH PRGH SUHVVLQJ WKH 79 EXWWRQ UHSHDWHG □ □ , I >79 6HOHFWLRQ@ LV QRW GLVSODHG □ SUHV V WKH 79 EXWWRQ WR VZLWFK WKH PRGH □ 3 Select a channel XS GRZQ or Y 7R VHOHFW D FKDQQHO SRVLWLRQ ZLWK □ RU PRUHGLJLW □ □ □ □ □ □ □ To access each feature ([DPSOH] 6HOHFWHG FRQWHQW VFUHHQ Access [APPS List] and select a feature ([DPSOH] >\$336 /LVW@ Y 7R UHWXUQ WR >+RPH 6FUHHQ@ DW DQ\ WLPH Y <RX FDQ VHW XS RU PDNH >+RPH 6FUHHQ@ WR GLVSOD\ GHVLUHG LQIRUPDWLRQ □ WR DFFHV V VSHFLILF IHDWXUV HDVLO □ WR VHOHFW WKH GHIDXOW >+RPH 6FUHHQ@ □ HWF □)RU GHWDLOV IROORZ WKH RQVVFUHHQ LQVWUXFWLRQV RU UHIHU WR >H+ / 3@ P\ +RPH 6FUHHQ ! P\ +RPH 6FUHHQ □ Watching TV \$336 LV WKH DSSOLFDWLRQV IHDWXUV RI WKH 79 □ Y)RU RSHUDWLRQV RI HDFK IHDWXUH DQG WKH VHWXS RI >\$336 /LVW@ □ IROORZ WKH RQVVFUHHQ LQVWUXFWLRQV RU UHIHU WR >H+ / 3@ P\ +RPH 6FUHHQ ! \$336 /LVW □ 1 Select the TV viewer from [Home Screen] VHOHFW DFFHV V 2 Select the mode TV Selection DVB-C DVB-T Analogue 16 English How to Use eHELP >H+ / 3@ LV WKH GHWDLOHG RSHUDWLRQ LQVWUXFWLRQV EXLOW LQWR WKH 79 □ DQG KHOS \RX WR JHW PRUH XQGHUVWDQGLQJ RI WKH RSHUDWLRQV IRU HDFK IHDWXUH □ Viewing 3D images <RX FDQ HQMR\ YLHZLQJ □' LPDJHV ZLWK FRQWHQWV RU SURJUDPPHV FRUHFVSRQGLQJ WR WKH □' HIIHFW E\ ZHDULQJ WKH □' (HZH DU RSWLRQDO □ Y 7KH □' (HZH DU PXVW EH ZRUQ WR YLHZ □' LPDJHV □

Y :KHQ XVLQJ WKH P' ^HZHDU SOHDVH DOVR UHDG WKH PDQXDO RI WKH P' ^HZHDU Y 7KLV 79 VXSSRUWV >)UDPH 6HTXHQLDO@*P >6LGH E 6LGH@ DQG >7RS DQG %RWWRP@ P' IRUPDWWP Y)RU PRUH LQIRUPDWLRQ UHIHU WR >H+(/3@ :DWFKLQJ! P' P *P 7KH P' IRUPDW WKDW WKH LPDJHV IRU WKH OHIW DQG ULJKW HNV DUH UHFRUGHG ZLWK WKH KLJK GHILQLWLRQ TXDOLW DQG DOWHUQDWHO SODHG EDFN 1 Display [eHELP] or [Help] [eHELP] Y ,I WKLV LV QRW WKH ILUVW WLPH WR YLHZ >H+(/3@ IURP ZKHQ WKH 79 LV WXUQH RQ WKH FRQILUPDWLRQ VFUHHQ LV GLVSODHG WR VHOHFW ZKHWKHU >)LUVW 3DJH@ RU >/DVW 3DJH@ P' To view the 3D images 8VH WKH 3DQDVRQLF P' ^HZHDU WKDW VXSSRUWV %OXHWRRWK ZLUHOHV WHFKRORJ 2 Select the category and item VHOHFW FDWHJRU DFFHVV Y Playing back 3D-compatible Blu-ray disc (Frame Sequential format) Y &RQHFW WKH P' FRPSDWLEOH SODHU YLD D IXOO ZLUHG +0, FRPSOLDQW FDEOH P, I RX XVH WKH QRQ P' FRPSDWLEOH SODHU WKH LPDJHV ZLOO EH GLVSODHG LQ P' PRGH Y ,I WKH LQSW PRGH LV QRW VZLWFKHG DXWRPDWLFDOO VHOHFW WKH LQSW PRGH FRQHFWHG WR WKH SODHU XVLQJ WKH \$9 EXWWRQ P' &DWHJRU ILHOG ,WHP ILHOG VHOHFW LWHP DFFHVV 6XE LWHP ILHOG 'HVFULSWLRQ VHOHFW VXE LWHP DFFHVV Y 3D-supported broadcast Y 3OHDVH FRQVXOW WKH VXSSOLHUV RI FRQWHQW RU SURJUDPPHV IRU DYDLODELWLW RI WKLV VHUFLFH P' Y 3D photos and 3D videos taken by 3D-compatible Panasonic products Y SYDLODEOH LQ OHGLD 3ODHU DQG IHWZRUN VHUFLFH P' Y 2D images converted to 3D Y 3UHVV WKH P' EXWWRQ DQG VHW WR >P' P'@ PRGH LQ >P' ORGH 6HOHFWLRQ@ P' Preparations (QVXUH WKDW WKH UHJLVUDWLRQ RI WKH P' ^HZHDU KDV EHHQ FRPSOHWHG)RU GHWDLOV UHDG WKH PDQXDO RI WKH P' ^HZHDU P' Y 7R UHWXUQ WR WKH SUHYLRXV ILHOG Y 7R VFUROO WKH GHVFULSWLRQ LI PRUH WKDQ P' SDJH :KLOH WKH GHVFULSWLRQ LV KLJKOLJKWHG 1 Turn the 3D Eyewear on and put it on &RQHFWLRQ VWDWXV DQG EDWWHU VWDWXV DUH GLVSODHG RQ WKH ERWRP ULJKW RI WKH VFUHHQ P' Y 7R GLVSOD WKH PHQX UHODWHG WR WKH GHVFULSWLRQ RQ IRU VRPH GHVFULSWLRQV UHG 2 View the 3D images 6DIHW SUHFDXWLRQV ZLOO EH GLVSODHG ZKHQ RX ILUVW ZDWFK WKH P' LPDJH 6HOHFW >HV@ RU >1R@ WR FRQWLQX WR YLHZ P' LPDJHV English 17 Note Y 7XUQ RII WKH P' ^HZHDU DIWHU XVLQJ LW P' Y 8VH WKH P' ^HZHDU ZLWKLQ DSSUR[LPDWHO P P P IURP WKH 79P <RX FDQQRW YLHZ WKH P' LPDJHV ZLWK WKH P' ^HZHDU WRR IDU IURP WKH 79P EHFDXVH RI WKH GLILFXOW RI UHFHLYLQJ UDGLR ZDYHV IURP WKH 79P Y 7KH UDQJH PD EH VKRUWHQHG GHSHQLQJ RQ WKH REVWDFOHV EHWZHHQ WKH 79 DQG WKH P' ^HZHDU RU WKH VXUURXQLQJ HQYLURQPHQW Y :KHQ YLHZLQJ P' LPDJHV PDNH VXUH RXU HNV DUH DW DQ DSSUR[LPDWHO KRULJRWDO OHYHO DQG NHHS D SRVLWLRQ ZKHUH RX GR QRW VHH GRXEOH LPDJHV Y 7KHUH DUH GLIIHUHQFHV LQ WKH YLHZLQJ UDQJH RI WKH P' ^HZHDU DPRQJ LQGLYLGXDOV 18 English FAQs %HIRUH UHTXHVWLQJ VHUFLFH RU DVVLVWDQFH SOHDVH IROORZ WKHVH VLPSON JXLGHV WR VROYH WKH SUREOHP Y)RU PRUH LQIRUPDWLRQ UHIHU WR >H+(/3@ 6XSSRUW!)\$4V P' The TV does not switch on Y &KHFN WKH PDLQV OHDG LV SOXJHG LQWR WKH 79 DQG WKH VRFNHW RXWOHW P' The TV goes into Standby mode Y \$XWR SRZHU VWDQGE IXQFWLRQ LV DFWLYDWHG P' The remote control does not work or is intermittent Y \$UH WKH EDWWHULHV LQVWDOOHG FRUHFWO" (p.



[You're reading an excerpt. Click here to read official PANASONIC TX-55AS640E user guide](http://yourpdfguides.com/dref/5642944)
<http://yourpdfguides.com/dref/5642944>

