

Manual abstract:

Some cameras are C and CS mount compatible. refer to the Operating Instructions of the camera. Screw the lens clockwise into the camera. eventually , the clutch of the lens will start slipping. Keep turning the lens until the clutch reaches its stop. @@Turn the lens until the correct position is achieved. When removing the lens, keep turning the lens counter-clockwise until the lens comes off. Before operating this lens, please read these instructions carefully. After reading this Operating Instructions, keep it for future reference. @@@@This alerts users to the possible risk of personal harm.

This alerts users to the possible risk of personal and material harm. The flange back of the lens is factory adjusted for C mount camera, respectively. @@Fully open the iris by either of the following methods. set the auto electronic shutter of the camera to On. @@@@ This is a warning to users. Do not look at the sun through the lens with the naked eye. @@ fire or electric shocks may occur. Do not damage, bend, twist or pull on the cable. Do not install the lens in a place where vibration and shock are expected. It may come loose and fall off.

By inputting power to potentiometers, they output position voltage. @@ â· Use a blower or a clean lens brush to remove dust. @@Avoid dropping, strong vibration, shock and pressure on it. â· Keep the lens away from dust, poisonous gas, moisture and salt. @@.



[You're reading an excerpt. Click here to read official PENTAX](#)

[C6Z1218M3-5 user guide](#)

<http://yourpdfguides.com/dref/2312010>