



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for PENTAX OPTIO WS80. You'll find the answers to all your questions on the PENTAX OPTIO WS80 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual PENTAX OPTIO WS80
User guide PENTAX OPTIO WS80
Operating instructions PENTAX OPTIO WS80
Instructions for use PENTAX OPTIO WS80
Instruction manual PENTAX OPTIO WS80



[You're reading an excerpt. Click here to read official PENTAX OPTIO WS80 user guide](http://yourpdfguides.com/dref/2644999)
<http://yourpdfguides.com/dref/2644999>

Manual abstract:

Regarding trademarks · PENTAX, Optio and smc PENTAX are trademarks of HOYA CORPORATION. · SDHC logo () is a trademark. · 2008 ACD Systems Ltd. All rights reserved. ACDSec and the ACDSec logo are trademarks of ACD Systems Ltd. in Canada, the U.S., Europe, Japan and other countries. · Microsoft and Windows are registered trademarks of Microsoft Corporation in the United States and other countries. Windows Vista is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.

· This product supports PRINT Image Matching III. © Copyright 2001 Seiko Epson Corporation. All Rights Reserved. PRINT Image Matching is a trademark of Seiko Epson Corporation.

· All other brands or product names are trademarks or registered trademarks of their respective companies. Regarding Product Registration In order to better serve you, we request that you complete the product registration, which can be found on the CD-ROM supplied with the camera or the PENTAX website. Thank you for your cooperation. Refer to "Connecting to a Computer" (p.211) for more information.

To users of this camera · Do not use or store this device in the vicinity of equipment that generates strong electromagnetic radiation or magnetic fields. Strong static charges or the magnetic fields produced by equipment such as radio transmitters could interfere with the monitor, damage the stored data, or affect the product's internal circuitry and cause camera misoperation. · The liquid crystal panel used in the display is manufactured using extremely high precision technology. Although the level of functioning pixels is 99.99% or better, you should be aware that 0.01% or fewer of the pixels may not illuminate or may illuminate when they should not. However, this has no effect on the recorded image. · If you point the camera toward an object that is bright, a band of light may appear on the screen display. This phenomenon is referred to as "smear" and is not a malfunction of the camera. · There is a possibility that the illustrations and the display screen in this manual are different from the actual product.

· In this manual, both an SD Memory Card and an SDHC Memory Card are referred to as SD Memory Cards hereafter. · In this manual, the generic term "computer(s)" refers to either a Windows PC or a Macintosh hereafter. Using Your Camera Safely We have paid close attention to the safety of this product. When using this product, we request your special attention regarding items marked with the following symbols. Warning This symbol indicates that violating this item could cause serious personal injuries. Caution This symbol indicates that violating this item could cause minor or medium personal injuries, or loss of property. 1 About the Camera Warning · Do not disassemble or modify the camera. High voltage areas are present inside the camera, with the risk of electric shock. · If the camera interior is exposed due to dropping or otherwise damaging the camera, never touch the exposed portion. There is a risk of electric shock.

· Wrapping the strap around your neck is dangerous. Take care that small children do not hang the strap around their necks. · If any irregularities occur during use, such as smoke or a strange odor, stop use immediately, remove the battery or the AC adapter, and contact your nearest PENTAX Service Center. Continuing to use the product can cause a fire or electric shock. Caution · Do not place your finger over the flash when discharging the flash. You may burn yourself. · Do not cover the flash with clothing when discharging the flash. Discoloration may occur. · Some portions of the camera heat up during use. There is a risk of low temperature burns when holding such portions for long periods.

· Should the monitor be damaged, be careful of glass fragments. Also, be careful not to allow the liquid crystal to get on your skin, in your eyes or mouth. · Depending on your individual factors or physical condition, the use of the camera may cause itching, rashes or blisters. In case of any abnormality, stop using the camera and get medical attention immediately. About the Battery Charger and the AC Adapter Warning · Always use the battery charger and AC adapter exclusively developed for this product, with the specified power and voltage. Using a battery charger or AC adapter not exclusive to this product, or using the exclusive battery charger or AC adapter with an unspecified power or voltage can cause a fire, electric shock, or camera breakdown. The specified voltage is 100 240V AC. 2 · Do not disassemble or modify the product. This can cause a fire or electric shock. · If the generation of smoke or strange odor from the product or other abnormality occurs, immediately discontinue use and consult a PENTAX Service Center.

Continuing to use the product can cause a fire or electric shock. · If water should happen to get inside the product, consult a PENTAX Service Center. Continuing to use the product can cause a fire or electric shock. · If a thunder storm should occur while using the battery charger, unplug the AC plug cord and discontinue use. Continuing to use the product can cause damage to the equipment, fire, or electric shock. · Wipe off the plug of the AC plug cord if it becomes covered with dust. Dust on the plug may cause a fire. Caution · Do not place or drop heavy objects on or forcefully bend the AC plug cord. Doing so may damage the cord. Should the AC plug cord be damaged, consult a PENTAX Service Center.

· Do not touch or short-circuit the terminal area of the AC plug cord while the cord is plugged in. · Do not plug or unplug the power cord with wet hands. This can cause an electric shock. · Do not drop the product, or subject it to violent impact. This can cause equipment breakdown.

· Do not use the battery charger to charge a battery other than a rechargeable lithium-ion battery D-LI88. Attempting to charge other types of batteries may cause an explosion, or heating, or may damage the battery charger. · To reduce the risk of hazards, use only a CSA/UL certified power supply cord set, cord is Type SPT-2 or heavier, minimum NO.18 AWG copper, one end with a molded-on male attachment plug cap (with a specified NEMA configuration), and the other is provided with a molded-on female connector body (with a specified IEC nonindustrial type configuration) or the equivalent. 3 About the Battery

Warning · Be sure to store the battery out of the reach of small children.

Placing it in their mouths may cause an electric shock. · If any leakage from the battery should come in contact with your eyes, do not rub them. Flush your eyes with clean water and get medical attention immediately. Caution · Only use the specified battery with this camera.



[You're reading an excerpt. Click here to read official PENTAX](http://yourpdfguides.com/dref/2644999)

[OPTIO WS80 user guide](http://yourpdfguides.com/dref/2644999)

<http://yourpdfguides.com/dref/2644999>

Use of other batteries may cause an explosion or fire. · Do not disassemble the battery. Disassembling the battery may cause an explosion or leakage. · The battery should be inserted correctly, observing (+) and (-) marks on the battery and the camera. Inserting the battery incorrectly may cause an explosion or fire. · Remove the battery from the camera immediately if it becomes hot or begins to smoke.

Be careful not to burn yourself during removal. · Keep wires, hairpins, and other metal objects away from the + and contacts of the battery. · Do not short the battery or dispose of the battery in fire. This can cause an explosion or fire. · If any leakage from the battery should come in contact with skin or clothes, wash the affected areas thoroughly with water. · Precautions for D-LI88 Battery Usage: - BATTERY MAY EXPLODE OR FIRE IF MISTREATED. - DO NOT DISASSEMBLE OR DISPOSE OF IN FIRE. - DO NOT CHARGE EXCEPT SPECIFIED CHARGING CONDITION. - DO NOT HEAT ABOVE 140°F / 60°C, OR SHORT CIRCUIT. - DO NOT CRUSH OR MODIFY.

About the SD Memory Card Warning · To avoid the risk of SD Memory Cards from being swallowed by mistake, keep them out of the reach of small children. Seek medical attention immediately if an SD Memory Card is accidentally swallowed. 4 Care to be Taken During Handling Before Using Your Camera · When traveling, take the Worldwide Service Network that is included in the package. This will be useful if you experience problems abroad. · When the camera has not been used for a long time, confirm that it is still working properly, particularly prior to taking important pictures (such as at a wedding or when traveling).

Pictures and sound cannot be guaranteed if recording, playback or transferring your data to a computer, etc. is not possible due to a malfunction of your camera or recording media (SD Memory Card), etc. About the Battery and Charger · Storing the battery fully charged may decrease the battery performance. Avoid storing in high temperatures. · If the battery is left inserted and the camera is not used for a long time, the battery will over-discharge and shorten the battery's usage span.

· Charging the battery a day before use or on the day of use is recommended. · The AC plug cord provided with this camera is developed exclusively for the battery charger D-BC88. Do not use it with other devices. Precautions on Carrying and Using Your Camera · Do not subject the camera to high temperatures or high humidity. Do not leave the camera in a vehicle, as the temperature can get very high. · Do not subject the camera to strong vibrations, shocks, or pressure. Use a cushion to protect the camera from vibrations of motorcycles, automobiles, or ships. · The temperature range for camera use is 0°C to 40°C (32°F to 104°F). · The monitor may appear black at high temperatures, but will return to normal at normal temperatures. · The monitor may respond more slowly at low temperatures.

This is due to liquid crystal properties, and is not a malfunction. · Sudden temperature changes will cause condensation on the inside and outside of the camera. Place the camera in your bag or a plastic bag, and remove it after temperature of the camera and surroundings are equalized. 5 · Avoid contact with garbage, mud, sand, dust, water, toxic gases, or salts. These could cause the camera to breakdown. Wipe dry any rain or water drops on the camera. · Please do not press forcefully on the monitor. This could cause it to break or malfunction. · Be careful not to sit down with the camera in your back pocket as this may damage the exterior of the camera or the display. · Be careful not to overtighten the tripod screw when using a tripod.

· The lens on this camera is not interchangeable. The lens is not removable. Waterproof and Dustproof Function · This camera is provided with a waterproof/dustproof design complying with JIS waterproof grade 8 and JIS dustproof grade 6 (equivalent to IP68). · To enhance the waterproof performance of the camera, the front of the lens is protected by glass. As any dirt or water on the glass will affect the quality of pictures taken, the glass should be kept clean at all times.

· Leaving the camera on the sand at the beach may cause

.....

..... 20 Names of Parts....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... 21 Names of Operating Parts

.....

.....

.....

.....

.....

.....

.....

..... 22 Monitor Indications ...

.....

.....

.....

.....

.....
.....
.....
.....
.....
.....
..... 114 Setting the AE Metering..

.....
.....
.....
.....
.....
.....
.....
.....

..116 Setting the Sensitivity

.....
.....
.....
.....
.....
.....
.....

..... 117 Setting Blink Detection .

.....
.....
.....
.....
.....
.....
.....

.... 118 Setting Pixel Track SR.

.....
.....
.....
.....
.....
.....
.....

119 Setting the Instant Review.....

.....
.....
.....
.....
.....
.....
.....

120 Setting the Image Sharpness (Sharpness).....

.....
.....
.....

..... 121 Setting the Color Saturation (Saturation)....

.....
.....
.....
.....

... 122 Setting the Image Contrast (Contrast).....

.....
.....
.....

.....
.....

122 Setting the Date Imprint Function

.....
.....
.....
.....
.....

....123 10 Calling Up a Specific Function.....

.....
.....
.....

.....
.....
.....

..... 124 Recording Movies ..

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

126 Recording a Movie.....

.....
.....
.....
.....
.....

.....
.....
.....

.....126 Selecting the Recorded Pixels and Frame Rate for Movies ...

.....128 Setting the Movie SR (Movie Shake Reduction) Function....

.....

... 129 Recording a Movie from Pictures Taken at a Set Interval (Interval Movie) ..

.....
.....
.....
.....
.....
.....

.....
.....
.....

.....
.. 130 Saving the Settings (Memory) ...

.....
.....

.....
.....
.....
.....

..... 133 Playing Back and Deleting Images 135 Playing Back Images .

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.136 Playing Back Still Pictures

.....
.....
.....
.....

.....
.....
.....

. 136 Playing Back a Movie

.....
.....
.....
.....

.....
.....
.....

..... 137 Multi-Image Display ..

.....
.....
.....
.....

.....
.....
.....
.....

.....138 Using the Playback Function ..

.....
.....
.....

.....
.....
.....

.....
.... 140 Slideshow

.....
.....

.....
.....
.....

.....
.....
.....

.....143 Rotating the Image .

.....
.....
.....

.....
.....
.....

.....
145 Zoom Playback.....

.....
.....

.....
.....
.....

.....
.....
.....

..... 146 Zoom In on the Subject's Face Automatically (Face Close-up Playback) ...

.....
.....
.....

.....
.....
.....

.....
.....

. 148 Deleting Images and Sound Files....

.....
.....

.....
.....
.....

..... 150 Deleting a Single Image ..

.....
.....
.....

.....
.....
.....
.....

.....
.....
. 150 Deleting Selected Images and Sound Files....

.....
.....

.....
.....
152 Deleting All Images and Sound Files.....

.....
.....
.....
.....

..... 154 Recovering Deleted Images .

.....
.....
.....
.....

.....
.....
.....
..... 155 Protecting Images and Sound Files from Deletion (Protect)

.... 156 Connecting the Camera to AV Equipment.....

.....
.....
.....

.....
.. 159 Editing and Printing Images 161 Editing Images ...

.....
.....
.....
.....
.....

.... 162 Changing the Image Size (Resize).....

.....
.....
.....

.....
.....
.....
.162 Cropping Images

.....
.....
.....
.....
.....

.....
.....

.....163 Processing Images So That Faces Look Smaller.....

.....
.....
.....

164 Using the Digital Filters.....

.....
.....
.....
.....
.....
.....

..... 166 Red-eye Compensation.....

.....
.....
.....
.....
.....
.....

.....170 Adding a Frame (Frame Composite) .

.....
.....
.....
.....
.....
.....

... 171 Editing Movies

.....
.....
.....
.....
.....
.....
.....

. 174 Copying Images and Sound Files...

.....
.....
.....
.....
.....

176 Setting the Printing Service (DPOF).....

.....
.....
.....
.....

... 179 Printing a Single Image ..

.....

.....
...188 Recording a Voice Memo ..

.....

.....

.....

.....

.....

.....

.....

.... 188 Playing Back a Voice Memo.

.....

.....

.....

.....

.....

.....

.....

. 189 Settings 191 Camera Settings....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... 192 Formatting an SD Memory Card....

.....

.....

.....

.....

.....

.....

.....192 Changing the Sound Settings...

.....

.....

.....

.....

.....

.....

.....

..193 Changing the Date and Time.....

.....

.....

.....

.....

.....

.....

... 194 Setting the World Time ..

.....

.....

.....

.....

.....
.....
.....
.....
.....
... 197 Changing the Display Language

.....
.....
.....
.....
.....
... 199 Changing the Naming Rule of the Folder ..

.....
.....
.....
.....
.....
200 Changing the Video Output Format.....

.....
.....
.....
.....
.....
..... 201 Adjusting the Brightness of the Display

.....
.....
.....
.....
.....
. 202 Using the Power Saving Function

.....
.....
.....
.....
.....
.... 203 Setting Auto Power Off

.....
.....
.....
.....
.....
..... 204 Changing the Start-up Screen .

.....
.....
.....
.....
.....
... 205 Correcting Defective Pixels in the CCD Sensor (Pixel Mapping) .



[You're reading an excerpt. Click here to read official PENTAX OPTIO WS80 user guide](#)

.....
.....
.....

.....
.....
.....

.....
.....
.....

... 206 Resetting to Default Settings (Reset)

.....
.....
.....

.....207 Using the Clock Function....

.....
.....
.....

.....
.....
.....

. 208 Displaying the Time

.....
.....
.....

.....
.....
.....

.....
.....
.....

.208 Setting the Alarm

.....
.....
.....

.....
.....
.....

.....208 Connecting to a Computer 211 Setting Up Your Computer.....

.....
.....
.....

.....
.....
.....

..... 212 Provided Software ..

.....

.....
.....

.....
.....
.....

.....
.....
.....

212 System Requirements

.....
.....
.....

.....
.....
.....

.....213 Installing the Software

.....
.....
.....

.....
.....
.....

..214 Setting the USB Connection Mode.....

.....
.....
.....

.....
.....
.....

....218 Connecting to a Windows PC .

.....
.....
.....

.....
.....
.....

.....
.....
.....

.. 220 Connecting the Camera and Your Windows PC ...

.....
.....
.....

.....
.....
.....

...220 Transferring Images ..

.....
.....
.....

.....
.....
.....

.....
.....
.....

.. 221 Disconnecting the Camera from Your Windows PC.....

.....
... 224 Starting "ACDSee for PENTAX 3.0" .

.....
.....

.....
.....
.....

.....225 Viewing Images .

.....
.....
.....

.....
.....
.....

.....
.....

227 12 Details on How to Use "ACDSee for PENTAX 3.0"

.....

.....228 Connecting to a Macintosh ..

.....
.....

.....
.....
.....

.....
229 Connecting the Camera and Your Macintosh.....

.....
.....

.....
. 229 Transferring Images

.....
.....

.....
.....
.....

.....
.....
.....

230 Disconnecting the Camera from Your Macintosh

.....
.....

230 Starting "ACDSee 2 for Mac".....

.....

.....
.....
.....

.....

. 231 Viewing Images

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....232 Details on How to Use "ACDSee 2 for Mac"...

.....

.....

.....

.....

232 Appendix 233 Functions Available for Each Shooting Mode.....

.....

.....

.....

..234 Messages.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

...236 Troubleshooting.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

... 238 Default Settings.....

.....

.....

.....

.....

.....

.....

.....

.....

... 240 List of World Time Cities.

.....

.....

.....

.....

.....

.....

.....

.....

.....

245 *Optional Accessories*

.....

.....

.....

.....

.....

.....

.....

. 246 *Main Specifications*

.....

.....

.....

.....

.....

.....

.....

.....

247 *WARRANTY POLICY*.....

.....

.....

.....

.....

.....

.....

.....

..... 251 *Index*..

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... 256 13 In this manual, the method for operating the four-way controller is shown in illustrations, such as in the ones below. 2or 4or 3or 5or The meanings of the symbols used in this Operating Manual are explained below. 1 indicates the reference page number for an explanation of the related operation.

indicates information that is useful to know. indicates precautions to be taken when operating the camera. This is the mode for capturing still pictures and recording movies. In this manual, the mode for taking still pictures is referred to as the "still picture capture mode" and the mode for recording movies is

referred to as the "C mode". This is the mode for viewing still pictures and playing back movies and sound files.

A mode Q mode 14 Composition of the Operating Manual This Operating Manual contains the following chapters. 1 Getting Started This chapter explains what you need to do after purchasing the camera before you start taking pictures. Be sure to read it and follow the instructions. 1 2 Common Operations This chapter explains common operations such as the functions of the buttons and how to use the menus. For more details, refer to the respective chapters below.

2 3 3 Taking Pictures This chapter explains the various ways of capturing images and how to set the relevant functions. 4 4 Playing Back and Deleting Images This chapter explains how to view still pictures and movies on the camera or on a TV screen and how to delete images from the camera. 5 5 Editing and Printing Images This chapter explains the various ways of printing still pictures and how to edit images with the camera. 6 6 Recording and Playing Back Sound This chapter explains how to record sound files or add sound (a voice memo) to an image, and how to play back them. 7 7 Settings This chapter explains how to set the camera-related functions. 8 8 Connecting to a Computer This chapter explains how to connect the camera to a computer, and includes installation instructions and a general overview of the provided software. 9 9 Appendix This chapter deals with troubleshooting and lists the optional accessories. 15 Camera Features In addition to basic picture-taking, the Optio WS80 has a variety of shooting modes to suit different situations. This section describes how to make the most of the key features of your camera. Together with the explanations of camera operations, it will enable you to enjoy your camera to the full.

Forget Your Worries About Water Getting in the Camera! The Optio WS80 is waterproof/ dustproof, and the water resistant coating on the lens protective glass enables you to take pictures underwater for two hours at a depth of 1.5 meters (4.9 ft.). It also allows the camera to be sprayed by water, and you can use the camera in locations where it will be exposed to dust and dirt such as beaches, kitchens, and workshops. Because it utilizes a lock mechanism for the battery/card/ terminal cover, when the cover is firmly locked, you can use the camera underwater safely, with the knowledge that the battery and card are also secure. For taking pictures while snorkeling (p.84) For taking pictures at the pool or while playing in a river or lake For taking pictures while enjoying various outdoor activities without worrying about your camera getting a bit dirty. A quick wipe with a wet cloth is all it needs! 16 Easy-to-Navigate Capture and Playback Functions! The user-friendly design of the Optio WS80 enables easy operation with only a few buttons. Simply by choosing the appropriate icon, you can select the shooting mode (p.

73) and choose the optimal settings for the situation, or the playback mode (p.140, p.162) and enjoy the various playback and editing functions. A guide on the display lets you check the functions available in each mode and how to use them. A shooting mode guide is displayed in the Capture Mode Palette and a playback mode guide in the Playback Mode Palette (p.

73, p.140). Use the Green Mode to take pictures easily using standard settings (p.80). Perfect for Portrait Shots! The Optio WS80 comes with a "Face Recognition" function that spots the faces in your shot and automatically adjusts the focus and exposure for the faces.

It can recognize up to 32 people per shot (), so it will help you take perfect group shots too.*



[You're reading an excerpt. Click here to read official PENTAX](http://yourpdfguides.com/dref/2644999)

[OPTIO WS80 user guide](http://yourpdfguides.com/dref/2644999)

<http://yourpdfguides.com/dref/2644999>

It will automatically release the shutter when people are smiling, or if anyone blinked, it will tell you that so you can take the shot again until it is perfect. It also has a feature that lets you enlarge each person's face in sequence during playback so you can quickly check their facial expressions. * Up to 31 face recognition frames (up to 30 frames in Half-length Portrait mode) are displayed on the monitor. Face Recognition function (p.76) Modes for taking stunning pictures of people (p.88) Close-ups of people's faces for easy checking during playback (p.148) 17 Add Various Frames to Your Pictures! When you take a picture with the Optio WS80, you can choose from a wide range of fun frames to create attractive framed shots (p.93). You can also add frames to pictures you have taken.

Adjust the position of the subject in the picture or reduce or enlarge the picture size to match the frame shape and size. Now you no longer have to worry about the subject not fitting into the frame (p.171). For decorating your pictures with a frame Display Images and Sound Files in Calendar Format! With the Optio WS80, you can display recorded images and sound files by date in calendar format (p.139). This lets you quickly find the image or sound file you want to play back. Advanced Movie Recording Functions The Optio WS80 has a shake reduction function (Movie SR) to reduce camera shake during movie recording (p.129). And it enables you to record movies in 1280x720 pixel (16:9) HDTV format (*) (p.128).

* When connecting to and playing back images on AV equipment, image data is output at normal screen resolution. To view movies in HDTV, transfer the data to a computer and play it back on the computer. Use the camera to shoot fun-filled movies of your children or pets as a visual diary of their development (p.126). 18 Perfect Size for Carrying Around With You! With its design and excellent portability, the Optio WS80 is just right to slip into a pocket of your bag or hang around your neck, so you always have it with you, like your cell phone.

It has a useful clock function, "Clock Mode" for telling the time. You can also set the alarm to ring at a specified time (p.208). A Multitude of Functions Inside the Camera for Enjoying Images Without a Computer! The Optio WS80 has a variety of functions to let you enjoy playing back and editing images without having to connect the camera to your computer and transfer the images first. The camera is all you need to take and edit still pictures and movies (p.162). And no more worries about accidentally deleting images, because now, with the Optio WS80, you can recover them again (p.155). Resize (p.162), Cropping (p.163) and Red-eye Compensation (p.170) can be used, while the image is displayed in the playback mode. You can divide a movie into two or select a frame from a movie to save it as a still picture (p.174). 19 Checking the Contents of the Package Camera Optio WS80 Strap O-ST51 (*) Software (CD-ROM) S-SW87 USB cable I-USB7 (*) AV cable I-AVC7 (*) Rechargeable lithium-ion battery D-LI88 (*) Battery charger D-BC88 (*) AC plug cord Quick Guide Operating Manual (this manual) Items marked with an asterisk (*) are also available as optional accessories.

The battery charger and AC plug cord are only sold as a set (Battery Charger Kit K-BC88). For other optional accessories, refer to "Optional Accessories" (p.246). 20 Names of Parts Front Self-timer lamp Flash Lens (with a protective glass attached) Microphone Tripod socket Battery/card/terminal cover Battery/card/terminal cover lock lever Battery lock lever PC/AV terminal Back Speaker Power switch Shutter release button Strap lug Display 21 Names of Operating Parts Power switch Shutter release button Zoom button Q button I button Four-way controller 4/W button Green/i button Refer to "Understanding the Button Functions" (p.56 - p.59) for an explanation of the function of each button. 22 Monitor Indications Display in A Mode The display shows information such as the shooting conditions in the capture mode. The display changes in the following sequence each time you press the 4/W button: "Normal Display", "Histogram + Info" and "No Info". Normal Display 38 Histogram + Info 38 OK 10M 200 08/08/2009 14:25 OK OK No Info When the shooting mode is set to 9 (Green) mode, the monitor display is as shown on the right. You cannot change the information on the display by pressing the 4/W button.

(p.80) 38 23 Normal Display in Still Picture Capture Mode 78 1 2 3 9 38 10 11 12 13 14 4 5 6 1/250 F3.5 +1.0 08/08/2009 14:25 15 16 17 18 1 2 3 4 5 6 7 8 9 10 Shooting mode (p.73) Face Priority icon (p.

76) D-Range Setting (p.113) Camera shake warning (p.119) Shutter speed Aperture Flash Mode (p.105) Drive Mode (p.95, p.

96, p.98) Focus Mode (p.107) Digital Zoom/Intelligent Zoom icon (p.82) 11 Memory status (p.46) 12 Remaining image storage capacity 13 Battery level indicator (p.39) 14 Focus frame (p.70) 15 Date and time (p.52) 16 EV Compensation (p.112) 17 Date Imprint setting (p.123) 18 World Time setting (p.

197) * 3 depends on the [D-Range Setting] setting in the [A Rec. Mode] menu. P When [Highlight Correction] is set to O Q When [Shadow Correction] is set to O O When [Highlight Correction] and [Shadow Correction] are set to O If [Highlight Correction] and [Shadow Correction] are both set to P (Off), nothing appears in 3. 24 * 4 varies depending on the following conditions. f When the shutter release button is pressed halfway with the [Pixel Track SR] in the [A Rec. Mode] menu set to P (Off) and camera shake is likely to occur M When [Pixel Track SR] is set to O * 5 and 6 appear only when the shutter release button is pressed halfway. * For 9, when the focus mode is set to = and the Auto-Macro function is activated, the q appears on the display (p.107). * Some indications may not appear depending on the shooting mode. 25 Histogram + Info/No Info Display in Still Picture Capture Mode A1 to A18 and B1 appear when "Histogram + Info" is selected.

Only B1 appears when "No Info" is selected. A5 A6 A7 A1 A2 A3 B1 A4 B2 B3 A8 A9 38 10M 200 1/250 F3.5 A10 A11 A12 A13 A14 A15 A16 +1.0 +1.0 A17 A18 Shooting mode (p.

73) Face Priority icon (p.76) D-Range Setting (p.113) Camera shake warning (p.119) Flash Mode (p.105) Drive Mode (p.

95, p.96, p.98) Focus Mode (p.107) Digital Zoom/ Intelligent Zoom icon (p.82) A9 Memory status (p.46) A10 Remaining image storage capacity A1 A2 A3 A4 A5 A6 A7 A8 A11 Battery level indicator (p.39) A12 Recorded Pixels (p.110) A13 White Balance (p.114) A14 AE Metering (p.116) A15 Sensitivity (p.

117) A16 Histogram (p.30) A17 EV Compensation (p.112) A18 Date Imprint setting (p.123) B1 Focus frame (p.70) B2 Shutter speed B3 Aperture * A3 depends on the [D-Range Setting] setting in the [A Rec. Mode] menu. P When [Highlight Correction] is set to O Q When [Shadow Correction] is set to O O When [Highlight Correction] and [Shadow Correction] are set to O If [Highlight Correction] and [Shadow Correction] are both set to P (Off), nothing appears in A3.



[You're reading an excerpt. Click here to read official PENTAX](http://yourpdfguides.com/dref/2644999)

[OPTIO WS80 user guide](http://yourpdfguides.com/dref/2644999)

<http://yourpdfguides.com/dref/2644999>

26 * A4 varies depending on the following conditions. f When the shutter release button is pressed halfway with the [Pixel Track SR] in the [A Rec. Mode] menu set to P (Off) and camera shake is likely to occur M When [Pixel Track SR] is set to O * B2 and B3 appear only when the shutter release button is pressed halfway.

* When the shooting mode is b (Auto Picture) and if you press the shutter release button halfway, the automatically selected shooting mode appears in AI even when "No Info" is selected (p.78). * Some indications may not appear depending on the shooting mode. 27 Display in Q Mode The display shows the shooting information of the image in the playback mode. The display changes in the following sequence each time you press the 4/W button: "Normal Display", "Histogram + Info" and "No Info".

Normal Display 100 - 0038 Edit 08/08/2009 14:25 OK Histogram + Info 100 - 0038 OK 10M 200 1/250 F3.5 Edit 08/08/2009 14:25 OK No Info Edit 28 Normal Display/Histogram + Info Display in Playback Mode (All of the display items are displayed here for explanatory purposes.) The display shows information such as the shooting conditions. A1 to A11 appear when "Normal Display" or "Histogram + Info" is selected. B1 to B7 appear only when "Histogram + Info" is selected.

A3 A2 A1 B1 B2 B3 B4 B5 B6 A4 A5 100 - 0038 A6 A7 A8 A9 10M 200 1/250 F3.5 B7 Edit 08/08/2009 14:25 A10 A11 A1 Face Priority icon (p.76) A2 Playback mode Q : Still Picture (p.136) K : Movie (p.137) L : Sound (p.186) A3 Protect icon (p.156) A4 Voice memo icon (p.189) A5 Memory status (p.46) A6 Folder number (p.200) A7 File number A8 Battery level indicator (p.

39) A9 Volume icon A10 Captured date and time (p.52) A11 Four-way controller guide B1 Recorded Pixels (p.110) B2 White Balance (p.114) B3 AE Metering (p.116) B4 Sensitivity (p.117) B5 Shutter speed B6 Aperture B7 Histogram (p.30) * A1 appears only if the Face Recognition function worked when the image was shot. * In "Normal Display", A8 and A10 disappear if no operation is performed for two seconds. * A9 appears only when the volume is being adjusted during playback of movies, sound files or voice memo (p.137, p.

186, p.189). * A11 appears even when "No Info" is selected, but disappears if no operation is performed for two seconds. When no operation is performed for two seconds in "Normal Display" or "Histogram + Info", only "Edit" disappears. 29 Guide Indications A guide for each available button operation appears as follows on the display during operation.

2 3 4 5 MENU Four-way controller (2) Four-way controller (3) Four-way controller (4) Four-way controller (5) 3 button Zoom button OK SHUTTER 4/W button Shutter release button Green/i button I button X, i I, J Using the Histogram A histogram shows the brightness distribution of an image. The horizontal axis represents brightness (dark at the left and bright at the right) and the vertical axis represents the number of pixels. The shape of the histogram (Dark) Brightness (Bright) before and after shooting tells you whether the brightness and contrast are correct or not, and lets you decide if you need to use EV compensation and take the picture again. Setting the Exposure (EV Compensation) 1p.112 Number of pixels Understanding Brightness If the brightness is correct, the graph peaks in the middle.

If the image is too dark, the peak is on the left side, and if it is too bright, the peak is on the right side. Dark image Correct image Bright image 30 When the image is too dark, the part to the left is cut off (dark portions) and when the image is too bright, the part to the right is cut off (bright portions). Understanding Contrast The graph peaks gradually for images in which contrast is balanced. The graph peaks on both sides but sinks in the middle for images with a large difference in contrast and low amounts of mid-level brightness. 31 Memo 32 1 Getting Started Attaching the Strap

.....
.....
.....
..... 34 Powering the Camera .

.....
.....
.....
.....
35 Installing the SD Memory Card
.....
. 42 Turning the Camera On and Off

.....
46 Initial Settings
.....
.....

... 48 Attaching the Strap Attach the strap (O-ST51) supplied with the camera. 1 Getting Started 1 2 1 2 Pass the narrow end of the strap through the strap lug.

Pass the other end of the strap through the loop and pull tight. 34 Powering the Camera Charging the Battery Use the supplied battery charger (D-BC88) to charge the supplied rechargeable lithium-ion battery (D-LI88) before using it in the camera for the first time or after a long period of non-use, or when the [Battery depleted] message appears. Note: AC plug cord "Listed, Type SPT-2 or NISPT-2, 18/2 flexible cord, rated 125 V, 7A, minimum 6 ft (1.8 m)" Charging indicator While charging: Lights Charging finished: Turns off 1 Getting Started 3 2 To power outlet Battery Battery charger 1 AC plug cord 1 2 3 4 Connect the AC plug cord to the battery charger. Plug the AC plug cord into the power outlet.

Place the battery in the battery charger so that the PENTAX logo is facing up. The charging indicator lights while the battery is charging and turns off when charging is finished. Remove the battery from the battery charger when charging is finished. 35 1 Getting Started · Do not use the supplied battery charger (D-BC88) to charge batteries other than the rechargeable lithium-ion battery D-LI88, as the battery charger may overheat or be damaged. · The battery has reached the end of its service life when it starts to run down soon after being charged. Replace it with a new battery. · If the battery is inserted correctly but the charging indicator fails to light, the battery may be faulty. Replace it with a new battery. The time required to fully charge the battery is about 120 minutes (max.).

(The charging time may vary depending on the ambient temperature and charging conditions.) The appropriate ambient temperature for charging the battery is 0°C to 40°C (32°F to 104°F). Installing the Battery Use the rechargeable lithium-ion battery D-LI88 that is provided with the camera. Charge the battery before using it in the camera for the first time. 1 2 3 4 Battery/card/terminal cover lock lever Battery/card/terminal cover Battery lock lever Battery 1 36 Open the battery/card/terminal cover. While pushing the battery/card/terminal cover lock lever towards 1, slide the cover towards 2 and open it towards 3. 2 Press the battery lock lever in the direction of 4 and insert the battery so that the PENTAX logo is facing toward the lens. Match the marks on the battery to the marks inside the battery compartment and push the battery in until it is locked in place. Make sure that the battery is inserted with the PENTAX logo pointing toward the lens. If the battery is incorrectly oriented, malfunction may result.



[You're reading an excerpt. Click here to read official PENTAX
OPTIO WS80 user guide
http://yourpdfguides.com/dref/2644999](http://yourpdfguides.com/dref/2644999)

1 Getting Started 3 Close the battery/card/terminal cover. Slide the battery/card/terminal cover in the opposite direction indicated by 2. If you hear a click, the cover is securely closed. Removing the Battery 1 2 Open the battery/card/terminal cover. Press the battery lock lever in the direction of 4. The battery will be ejected. Take care not to drop the battery when removing it. 37 1 Getting Started 38 This camera uses a rechargeable lithium-ion battery D-LI88. Use of any other type of battery may damage the camera and cause malfunction. Insert the battery correctly.

If the battery is incorrectly oriented, malfunction may result. Do not remove the battery while the camera is turned on. Do not use excessive force when sliding the battery/card/terminal cover open and closed because the waterproof packing may peel off. If the packing is not in the correct position, the camera will not be waterproof. If the battery/card/terminal cover is not locked securely when you close it, water, sand, or dirt may get into the camera. Avoid changing the battery where the camera is likely to get wet or dirty, and make sure that the camera and your hands are dry completely. When storing the battery for more than 6 months, charge the battery for 30 minutes using the battery charger and store the battery separately. Be sure to recharge the battery every 6 to 12 months. Storing the battery below room temperature is ideal. Avoid storing it in high temperatures.

The date and time may be returned to the default setting if the camera is left without the battery for a long time. Be careful as the camera or the battery may become hot when the camera is used continuously for a long period of time. Image Storage Capacity, Movie Recording Time, Sound Recording Time, and Playback Time (at 23°C with the display on and the battery fully charged) Image Storage Capacity*1 (flash used for 50% of shots) Approx. 200 pictures Movie Recording Time*2 Approx. 70 min. Sound Recording Time*2 Approx. 270 min. Playback Time*2 Approx. 240 min. *1 Recording capacity shows the approximate number of shots recorded during CIPA-compliant testing (with display on, flash used for 50% of the shots, and 23 degrees centigrade).

Actual performance may vary according to operating conditions. *2 According to the result of in-house testing. In general, battery performance may temporarily deteriorate as the temperature decreases. Be sure to take a spare battery with you when traveling abroad or to a cold region, or if you intend to take a lot of pictures. Battery Level Indicator You can check the battery level by the indicator on the display.

Screen Display (green) (green) (yellow) (red) [Battery depleted] Battery Status Adequate power remains. Battery is running low. Battery is running very low. Battery is exhausted. The camera will turn off after this message appears.

1 Getting Started 39 Using the AC Adapter 1 Getting Started Use of the optional AC adapter kit (K-AC88) is recommended if you intend to use the camera for a long time or connect it to a computer. 6 AC plug cord 4 3 5 AC adapter 3 DC coupler 4 2 1 DC terminal 1 1 2 3 Make sure that the camera is turned off and open the battery/card/terminal cover. Remove the battery. Refer to p.36 - p.37 on how to open/close the battery/card/terminal cover and remove the battery.

Insert the DC coupler, as shown in the illustration, while holding down the battery lock lever. Confirm the DC coupler is locked in place. The battery/card/terminal cover will not close while the DC coupler is inserted. Leave the cover open when using the AC adapter and do not attempt to close it.

4 5 6 40 Connect the DC terminal of the AC adapter to the DC terminal of the DC coupler. Connect the AC plug cord to the AC adapter. Plug the AC plug cord into the power outlet. Make sure that the camera is turned off before connecting or disconnecting the AC adapter. Make sure that the AC plug cord and the DC terminal connecting the AC adapter to the camera are inserted securely. Data may be lost if either becomes disconnected while data is being recorded on the SD Memory Card or the built-in memory. Do not use excessive force when sliding the battery/card/terminal cover open and closed because the waterproof packing may peel off. If the packing is not in the correct position, the camera will not be waterproof. Use the AC adapter with due care to avoid fire or electric shock. Be sure to read "About the Battery Charger and the AC Adapter" (p.

2) before using the AC adapter. Be sure to read the operation manual accompanying the AC adapter kit K-AC88 before using the adapter. When connecting the AC adapter, you cannot set the camera upright on the table because the cord from the DC coupler comes out of the bottom of the camera. 1 Getting Started 41 Installing the SD Memory Card This camera uses either an SD Memory Card or an SDHC Memory Card. (Both cards are referred to as SD Memory Cards hereafter.

) Captured images and sound files are saved on the SD Memory Card if a card is inserted in the camera. They are saved in the built-in memory if a card is not inserted (p.46). Be sure to use this camera to format (initialize) an SD Memory Card that is unused or has been used on other cameras or digital devices. Refer to "Formatting an SD Memory Card" (p.

192) for instructions on formatting. Make sure that the camera is turned off before inserting or removing the SD Memory Card. Do not use excessive force when sliding the battery/card/terminal cover open and closed because the waterproof packing may peel off. If the packing is not in the correct position, the camera will not be waterproof. Avoid changing the SD Memory Card where the camera is likely to get wet or dirty, and make sure that the camera and your hands are completely dry. The still picture storage capacity varies depending on the capacity of the SD Memory Card and the selected number of recorded pixels and quality level (p.45). The self-timer lamp blinks while the SD Memory Card is being accessed (data is being recorded or read). 1 Getting Started 42 Backing Up Data The camera may not be able to access data in the built-in memory in the case of a malfunction. Use a computer or other device to back up important data in another location.

1 2 3 1 Getting Started SD Memory Card socket Battery/card/terminal cover SD Memory Card 1 2 Open the battery/card/terminal cover. While pushing the battery/card/terminal cover lock lever towards 1, slide the cover towards 2 and open it towards 3. Insert the SD Memory Card into the SD Memory Card socket so that the label is facing toward the front of the camera (the side with the lens). Push the card in all the way. Data may not be recorded correctly if the card is not inserted all the way.



[You're reading an excerpt. Click here to read official PENTAX OPTIO WS80 user guide](http://yourpdfguides.com/dref/2644999)
<http://yourpdfguides.com/dref/2644999>

3 Close the battery/card/terminal cover. Slide the battery/card/terminal cover in the opposite direction indicated by 2. If you hear a click, the cover is securely closed. To Remove the SD Memory Card 1 2 Open the battery/card/terminal cover. Push the card into the SD Memory Card socket to eject it. Pull the card out. If the battery/card/terminal cover is not locked securely when you close it, water, sand, or dirt may get into the camera. 43 Precautions When Using an SD Memory Card · The SD Memory Card is equipped with a writeprotect switch. Setting the switch to LOCK prevents new data from being recorded on the card, the stored data from being deleted, and the card from being formatted by the camera or Write-protect computer. r appears on the display when the card is switch write-protected.

· Care should be taken when removing the SD Memory Card immediately after using the camera, as the card may be hot. · Do not remove the SD Memory Card or turn the camera off while the data is being played back or saved to the card, or the camera is connected to a computer with the USB cable, as this may cause the data to be lost or the card to be damaged. · Do not bend the SD Memory Card or subject it to violent impact. Keep it away from water and store away from high temperature. · Do not remove the SD Memory Card during formatting as this may damage the card and render it unusable.

· The data on the SD Memory Card may be deleted in the following circumstances. We do not accept any liability for data that is deleted (1) when the SD Memory Card is mishandled by the user. (2) when the SD Memory Card is exposed to static electricity or electrical interference. (3) when the SD Memory Card has not been used for a long time. (4) when the SD Memory Card is ejected or the battery is removed while the data on the card is being recorded or accessed. · If it is not used for a long time, the data on the card may become unreadable. Be sure to regularly make a backup of important data on a computer. · Avoid using or storing the card where it may be exposed to static electricity or electrical interference. · Avoid using or storing the card in direct sunlight or where it may be exposed to rapid changes in temperature or to condensation. · When using an SD Memory Card with a slow recording speed, recording may stop while you are taking movies even when there is adequate space in the memory, or shooting and playback may take a long time.

· Be sure to format SD Memory Cards that are unused or have been used on another camera. Refer to "Formatting an SD Memory Card" (p.192). · Please note that formatting the SD Memory Card will not necessarily delete the data so that it cannot be recovered using off-the-shelf data recovery software. There are off-the-shelf secure data deletion software programs available that will completely delete the data. If you are going to discard, give away or sell your SD

Memory Card, you should ensure that the data on the card is completely deleted or the card itself is destroyed if it contains any personal or sensitive information. In any case, the data on your SD Memory Card should be managed at your own risk. 1 Getting Started 44 Number of Images Recordable on an SD Memory Card The sizes of the recorded images differ depending on the number of recorded pixels of the images, so the number of images that will be saved on an SD Memory Card also differs. Choose the appropriate number of recorded pixels for still pictures on the [A Rec. Mode] menu.

Selecting the Number of Recorded Pixels 1p.110 1 Getting Started Choose the appropriate number of recorded pixels and frame rate in [Movie] on the [A Rec. Mode] menu. Selecting the Recorded Pixels and Frame Rate for Movies 1p.128 For an approximate guide to the number of images or the length of recorded movies that can be saved on an SD Memory Card, see "Main Specifications" (p.

248). 45 Turning the Camera On and Off 1 Power switch 46 Getting Started 1 Press the power switch. The camera turns on and the display turns on. If the [Language/] screen or [Date Adjustment] screen appears when you turn the camera on, follow the procedure on p.48 to set the display language and/or current date and time.

2 Press the power switch again. The display turns off, the lens closes, and the camera turns off. Taking Still Pictures 1p.70 Checking the SD Memory Card The SD Memory Card is checked when the camera turns on and the memory status is displayed. Memory status 38 a + r The SD Memory Card is inserted. Images and sound files will be saved on the SD Memory Card. The SD Memory Card is not inserted. Images and sound files will be saved in the built-in memory. The write-protect switch on the SD Memory Card is in the LOCK position (p.44).

Images and sounds cannot be recorded. 08/08/2009 14:25 Starting-up in the Playback Mode If you want to play back images or sound files straightaway without taking any pictures, you can start up the camera in the playback mode. 1 Getting Started Power switch Q button 1 Press the power switch while holding down the Q button. The display turns on and the camera turns on in the playback mode. To switch from the playback mode to the capture mode, press the Q button or press the shutter release button halfway. Playing Back Still Pictures 1p.136 47 Initial Settings The [Language/] screen appears when the camera is turned on for the first time. Perform the operations in "Setting the Display Language" below to set the language, and in "Setting the Date and Time" (p.52) to set the current date and time. The language, date, and time can be changed later.

Refer to the pages below for instructions. · To change the language, follow the steps in "Changing the Display Language" (1p.199). · To change the date and time, follow the steps in "Changing the Date and Time" (1p.194).

1 Getting Started 48 Setting the Display Language 3 button Four-way controller 4 button 1 Use the four-way controller (2345) to choose the display language. English Dansk Deutsch Svenska Suomi Polski Italiano Nederlands Magyar MENU Cancel OK OK 2 Press the 4 button. The [Initial Setting] screen appears in the selected language. If the desired settings for [Hometown] and [DST] (Daylight Saving Time) appear, proceed to Step 3. Proceed to "To Set Hometown and DST" (p.

51) if the desired settings do not appear. Initial Setting English Hometown New York Settings complete MENU Cancel 1 Getting Started DST OFF Daylight saving time 3 Press the four-way controller (3) twice to select [Settings complete]. Initial Setting English Hometown New York Settings complete MENU Cancel OK DST OFF OK 4 Press the 4 button. The [Date Adjustment] screen appears. Set the date and time by following the procedure in "Setting the Date and Time" (p.



[You're reading an excerpt. Click here to read official PENTAX OPTIO WS80 user guide](http://yourpdfguides.com/dref/2644999)
<http://yourpdfguides.com/dref/2644999>

52). 49 If you accidentally select the wrong language and proceed to the next procedure, perform the following operation to set the desired language. 1 Getting Started 50 When the Wrong Language Has Been Inadvertently Selected 1 2 Press the four-way controller (5). Use the four-way controller (2345) to select the language and press the 4 button. The [Initial Setting] screen appears in the selected language.

When the Screen After Step 2 Appears in the Wrong Language 1 2 3 4 5 6 7 Press the 3 button. The setting screen is ended and the camera returns to capture status. Press the 3 button. The [A Rec. mode] menu appears. Press the four-way controller (5). Use the four-way controller (32) to select [Language/]. Press the four-way controller (5). The [Language/] screen appears. Use the four-way controller (2345) to select the language.

Press the 4 button. The [W Setting] menu appears in the selected language. The language is now switched to your desired language. To reset [Hometown], [Date] and [Time], refer to the pages below for instructions. · To change [Hometown], follow the steps in "Setting the World Time" (1p. 197). · To change the [Date] and [Time], follow the steps in "Changing the Date and Time" (1p.194). To Set Hometown and DST 3 4 Press the four-way controller (3). The frame moves to [W Hometown].

1 Getting Started Initial Setting English Hometown New York Settings complete MENU Cancel Press the four-way controller (5). The [W Hometown] screen appears. 5 Use the four-way controller (45) to choose a city. Hometown City DST New York OK MENU Cancel OK 6 7 8 9 Press the four-way controller (3). The frame moves to [DST] (Daylight Saving Time). Use the four-way controller (45) to select O or P. Press the 4 button. The [Initial Setting] screen reappears. Press the four-way controller (3) to select [Settings complete]. Initial Setting English Hometown New York Settings complete MENU Cancel OK DST OFF OK 10 Press the 4 button.

The [Date Adjustment] screen appears. Next, set the date and time. 51 1 Getting Started 52 The video output format (NTSC/PAL) is set to the format of the city selected in [Hometown] on the [Initial Setting] screen. Refer to "List of World Time Cities" (p.245) for the video output format of each city set as the initial setting, and "Changing the Video Output Format" (p.201) for changing the setting of the video output format. Setting the Date and Time Set the current date and time and the display style. 1 2 Press the four-way controller (5). The frame moves to [mm/dd/yy]. Use the four-way controller (23) to choose the date and time display style.

Choose from [mm/dd/yy], [dd/mm/yy] or [yy/mm/dd]. Date Adjustment Date Format Date mm/dd / yy 24h 01/01/2009 Time MENU Cancel 00:00 Settings complete 3 4 Press the four-way controller (5). The frame moves to [24h]. Use the four-way controller (23) to select [24h] (24-hour display) or [12h] (12-hour display). Date Adjustment Date Format Date mm/dd / yy 24h 01/01/2009 Time MENU Cancel 00:00 Settings complete 5 6 Press the four-way controller (5).

The frame returns to [Date Format]. Press the four-way controller (3). The frame moves to [Date]. 7 Press the four-way controller (5). The frame moves to the month.

Date Adjustment Date Format mm/dd / yy 24h Date Time MENU Cancel 01/01/2009 00:00 Settings complete 1 Getting Started 8 Use the four-way controller (23) to change the month. Change the day and year in the same manner. Next, change the time. If you selected [12h] in Step 4, the setting switches between am and pm corresponding to the time. Date Adjustment Date Format mm/dd / yy 24h 01/01/2009 00:00 Settings complete MENU Cancel Date Time 9 Press the four-way controller (3) to select [Settings complete]. Date Adjustment Date Format Date Time MENU Cancel mm/dd/yy 24h 01/01/2009 00:00 Settings complete OK OK 10 Press the 4 button. This confirms the date and time and completes the initial setting. The camera returns to capture status. If you press the 4 button in Step 10, the camera clock is reset to 00 seconds. To set the exact time, press the 4 button when the time signal (on the TV, radio, etc.

) reaches 00 seconds. When the [Initial Setting] or [Date Adjustment] screen is displayed, you can cancel the setting operation and switch to the capture mode by pressing the 3 button. In this case, the [Initial Setting] screen will appear next time you turn the camera on. 53 1 Getting Started 54 [Language/], [Date], [Time], [Hometown] and [DST] can be changed. Refer to the pages below for instructions. · To change the language, follow the steps in "Changing the Display Language" (1p.199). · To change the date and time, follow the steps in "Changing the Date and Time" (1p.194). · To change the city or turn DST on and off, follow the steps in "Setting the World Time" (1p.

197). 2 Common Operations Understanding the Button Functions

. 56 Setting the Camera Functions

.....

... 61 Understanding the Button Functions A Mode 2 Common Operations 1 2 3 4 5 6 7 8 9 1 2 Power switch Turns the camera on and off (p.46). Shutter release button Focuses the camera on the subject when pressed halfway in still picture capture mode (except in 3, s and \ modes). Takes a still picture when pressed down fully (p.71). Starts and stops movie recording in C (Movie) and V (Underwater Movie) modes (p.126).

Starts and stops sound file recording in Voice Recording (p.185). 3 4 5 Zoom button Changes the captured area (p.82). Q button Switches to the Q mode (p. 60). 3 button Displays the [A Rec. Mode] menu (p.61). 5 6 I button Switches the Face Recognition function (p.

76). The Face Recognition function is switched as follows each time the I button is pressed: Smile Capture Face Priority Off Face Priority On 7 Four-way controller 2 3 4 5 23 Changes the drive mode (p.95, p.96, p.98). Displays the Capture Mode Palette (p.73). Changes the flash mode (p.105). Changes the focus mode (p.

107). Adjusts the focus when the focus mode is set to \ (p.108). 2 Common Operations 8 9 4/W button Changes the information on the display (p.23). Green button Switches to the 9 (Green) mode (p.80). Calls up the assigned function (p.124). 57 Q Mode 1 2 2 Common Operations 3 4 5 6 7 8 9 1 2 3 Power switch Turns the camera on and off (p.

46). Shutter release button Switches to A mode (p.60). Zoom button Press towards the left (f) during single-image display to change to four-image display. Changes to nine-image display when pressed towards the left again.

Returns to the previous display when pressed towards the right (y) (p.138). Enlarges the image when pressed towards the right (y) during singleimage display. Returns to the previous display when pressed towards the left (f) (p.



[You're reading an excerpt. Click here to read official PENTAX OPTIO WS80 user guide](http://yourpdfguides.com/dref/2644999)
<http://yourpdfguides.com/dref/2644999>

146).

Press towards the left (f) during nine-image display to change to folder or calendar display (p.139). Press towards the right (y) during folder/calendar display to change to nine-image display (p.139). Adjusts the volume during playback of movies, sound files or voice memo (p.137, p.186, p.189). 4 5 58 Q button Switches to A mode (p.60).

3 button Displays the [W Setting] menu during single-image display (p.61). Returns to single-image display during Playback Mode Palette display (p.140). Returns to single-image display during four-/nine-image display or zoom display (p.138). Changes to nine-image display of the selected folder during folder display (p.139). Changes to nine-image display of the selected date during calendar display (p.139).

6 I button Zooms in on the subject's faces in the face-recognized image in the order the faces were recognized when the picture was taken. (Face close-up playback) (p.148). 2 Common Operations 7 Four-way controller 2 3 45 Plays back and pauses a movie or sound file (p.137, p.186). Displays the Playback Mode Palette (p.140). Stops a movie or sound file during playback (p.137, p.186).

186). Displays the previous or next image or sound file during single-image display (p.136). Fast-forwards, fast-reverses, frame reverses, reverses a movie and makes a movie play forwards during playback (p.137). Fast-forwards, fast-reverses, and moves to the next index in sound file playback (p.186). Selects an image in four-/nine-image display, a folder in folder display, and a date in calendar display (p.138, p.139).

Moves the display area during zoom display (p.146). Moves the image when using the Frame Composite function (p.171). 2345 8 4/W button Changes the information on the display (p.28). Returns to single-image display during four-/nine-image display or zoom display (p.138, p.146). Changes to nine-image display of the selected folder during folder display (p.139).

139). Changes to single-image display of the selected date during calendar display (p.140). 9 Green/i button Switches from single-image display to the Delete screen (p.150).

Switches from four-/nine-image display to the Select & Delete screen (p.152). Switches from folder display to the calendar display screen (p.139). Switches from calendar display to the folder display screen (p.139).

59 Switching Between A Mode and Q Mode In this manual, the capture mode, such as for taking still pictures, is referred to as "A mode" (the capture mode). The playback mode, such as for displaying captured images on the display, is referred to as "Q mode" (the playback mode). In Q mode, you can perform simple editing operations on the captured images. Follow the procedure below to switch between A mode and Q mode. To Switch from A Mode to Q Mode 2 Common Operations 60 1 1 Press the Q button. The camera switches to Q mode. To Switch from Q Mode to A Mode Press the Q button or the shutter release button halfway. The camera switches to A mode. Displaying data stored in the built-in memory When an SD Memory Card is inserted in the camera, images, movies, and sounds on the SD Memory Card are displayed.

If you want to display images, movies and sounds in the built-in memory, turn the camera off and remove the SD Memory Card, or follow the procedure below to use the "Built-in memory display" function. Make sure that the camera is turned off before inserting or removing the SD Memory Card. Viewing images in the built-in memory while the SD Memory Card is inserted (built-in memory display) When you press and hold down the Q button for more than one second in

A mode, the message [Display image/sound from built-in memory] appears, and the images, movies and sound files stored in the built-in memory are displayed. In the built-in memory display, you can play back still pictures (including enlarged display) (p.136, p.146), movies (p.137) and sounds (p.186), and switch between four-/nine-image display, folder display and calendar display (p.138). In the built-in memory display, you cannot delete data, delete a selection, display the Playback Mode Palette or display the menu.

If you want to perform any of these operations on images, movies or sounds in the built-in memory, do so after removing the SD Memory Card. Setting the Camera Functions To change the camera settings, press the 3 button to display the [A Rec. Mode] menu or [W Setting] menu. Menus for playing back and editing images and sound files are displayed from the Playback Mode Palette (p.140).

2 Operating the Menus Press the 3 button in A mode to display the [A Rec. Mode] menu. Press the 3 button in Q mode to display the [W Setting] menu. Use the four-way controller (45) to switch between [A Rec. Mode] menu and [W Setting] menu.

Common Operations 61 During recording 38 During playback 100-0038 100 0038 08/08/2009 14:25 2 MENU Edit 08/08/2009 14:25 MENU 62 Common Operations SHUTTER Rec. Mode 1/4 Setting 1/3 Pixel Track SR Recorded Pixels 10M White Balance AWB Focusing Area AE Metering Auto Sensitivity MENU Sound Date Adjustment 08/08/2009 Alarm World Time English Folder Name Date MENU Exit Exit Rec. Mode 1/4 Setting 1/3 Pixel Track SR Recorded Pixels 10M White Balance AWB Focusing Area AE Metering Auto Sensitivity MENU Exit Sound Date Adjustment 08/08/2009 Alarm World Time English Folder Name Date MENU Exit MENU or Press halfway The setting is complete and the camera returns to A mode. 38 100-0038 100 0038 08/08/2009 14:25 Edit 08/08/2009 14:25 The setting is complete and the camera returns to Q mode. Available button operations appear on the display during menu operation (p.30). Ex.) To set the [Focusing Area] on the [A Rec. Mode] menu 1 2 Press the 3 button in A mode. The [A Rec.

Mode] menu appears. Press the four-way controller (3). The frame moves to [Pixel Track SR]. Rec. Mode 1/4 Pixel Track SR Recorded Pixels 10M White Balance AWB Focusing Area AE Metering Auto Sensitivity MENU Exit 2 Common Operations 3 4 Press the four-way controller (3) three times. The frame moves to [Focusing Area]. Press the four-way controller (5). A pull-down menu appears with the items that can be selected. The pull-down menu displays only those items that can be selected with the current camera settings. Rec.

Mode 1/4 Pixel Track SR Recorded Pixels 10M AWB White Balance Focusing Area AE Metering Sensitivity Auto MENU Exit 5 Use the four-way controller (23) to change the setting. The focusing area changes each time the four-way controller (23) is pressed. Rec. Mode 1/4 Pixel Track SR Recorded Pixels 10M White Balance AWB Focusing Area AE Metering Sensitivity 0.0 MENU Cancel OK OK 6 Press the 4 button or the four-way controller (4). The setting is saved and then the camera is ready for setting the other functions. To exit the settings, press the 3 button. To use another operation, refer to the alternate Step 6 options on the next page.



[You're reading an excerpt. Click here to read official PENTAX OPTIO WS80 user guide](http://yourpdfguides.com/dref/2644999)
<http://yourpdfguides.com/dref/2644999>