



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for PHILIPS CD 191. You'll find the answers to all your questions on the PHILIPS CD 191 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual PHILIPS CD 191**  
**User guide PHILIPS CD 191**  
**Operating instructions PHILIPS CD 191**  
**Instructions for use PHILIPS CD 191**  
**Instruction manual PHILIPS CD 191**

Register your product and get support at  
[www.philips.com/welcome](http://www.philips.com/welcome)

CD191  
CD196



User manual

**PHILIPS**



[You're reading an excerpt. Click here to read official PHILIPS CD 191 user guide](http://yourpdfguides.com/dref/4246705)  
<http://yourpdfguides.com/dref/4246705>

**Manual abstract:**

@@@ Ensure that the electrical outlet is always easily accessible. For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily accessible. This equipment is not designed to make emergency calls when the power fails. An alternative has to be made available to allow emergency calls. Do not allow the product to come into contact with liquids. Do not use any cleaning agents containing alcohol, ammonia, benzene, or abrasives as these may harm the set. Do not expose the phone to excessive heat caused by heating equipment or direct sunlight. Do not drop your phone or allow objects to fall on your phone. @@@ Always use the cables provided with the product. @@ This can deteriorate audio quality and damage the product.

@@ Do not use the product in places where there are explosive hazards. Do not open the handset, base station or charger as you could be exposed to high voltages. come into contact with metal objects. type. instructions.

About operating and storage temperatures Operate in a place where temperature is always between 0C to +40C (up to 90% relative humidity). Store in a place where temperature is always between -20C and +45C (up to 95% relative humidity). Battery life may be shorter in low temperature conditions. EN 3 2 Your phone Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at [www.philips.com/welcome](http://www.philips.com/welcome).

Power adapter\*\* What is in the box Line cord\* Guarantee Base station (CD191) Quick start guide Base station (CD196) Note \* In some countries, you have to connect the line adapter to the line cord, then plug the line cord to the telephone socket. \*\* In multi-handset packs, there are additional handsets and chargers and power adapters. Handset\*\* Charger\*\* 4 EN Overview of the phone i a b c d e f Switch to upper/lower case during editing. Mute or unmute the microphone. j Microphone k Turn the speaker phone is on/off. Make and receive calls through the speaker. o n m l k j g h i l\* Set the dial mode (pulse mode or temporary tone mode). m Scroll down on the menu. Decrease the earpiece/speaker volume.

Access the call log. Make and receive calls. Recall key a Earpiece b Loudspeaker c Battery door d Scroll up on the menu. Increase the earpiece/speaker volume. Access the phonebook. n e REDIAL/C Delete text or digits. Cancel operation. Access the redial list. f End the call. Exit the menu/operation. Press and hold to switch the handset on or off. Press to enter a space during text editing. Press and hold to lock the keypad. Make a predial call. Press and hold to enter a pause.

o MENU/OK Access the main menu. Confirm selection. Enter the options menu. Select the function displayed on the handset screen directly above the key. Overview of the base station CD191 g a h EN 5 a Find handsets.

Enter the registration mode. Display icons In standby mode, the icons shown on the main screen tell you what features are available on your handset. Icon a b c d CD196 h g e f a Find handsets Enter registration mode b Speaker c d e f g / Decrease/increase the speaker volume. Skip backward during playback. Skip forward during playback. Turn the answering machine on/off. Play messages. Stop messages playback. Delete the current playback message. Press and hold to delete all old messages.

h Descriptions When the handset is off the base station/charger, the bars indicate the battery level (from full to low). When the handset is on the base station/charger, the bars keep scrolling until charging is complete. The empty battery icon flashes and you hear an alert tone. The battery is low and needs recharging. The number of bar indicates the link status between the handset and base station. The more bars are shown, the better the signal or the connection is. It remains steadily on when browsing incoming calls in the call log. It indicates an outgoing call in the redial list. It flashes when there is a new missed call. It remains steadily on when browsing the missed calls in call log.

It flashes when there is a new missed call or when browsing new missed calls. It remains steadily on when browsing the missed calls in call log that are already read. The speaker is on. The ringer is off. Answering machine: it flashes when there is a new message.

It displays when the telephone answering machine is turned on. 6 EN / It flashes when there is a new voice message. It remains steadily on when the voice messages are already viewed in the call log. The icon is not shown when there is no voice message. It is displayed when you scroll up/down a list/increase and decrease the volume.

There are more digits on the right. Press REDIAL/C to read. EN 7 3 Get started Caution Make sure that you have read the safety instructions in the 'Important safety instruction' section before you connect and install your handset. Connect the base station Warning Risk of product damage! Ensure that the power supply voltage corresponds to the voltage printed on the back or the underside of the phone. Use only the supplied power adapter to charge the batteries. 3 Connect each end of the power adapter to (for multi handset version only): the DC input jack at the bottom of the extra handset charger. the power socket on the wall. Note If you subscribe to the digital subscriber line (DSL) high speed internet service through your telephone line, ensure you install a DSL filter between the telephone line cord and the power socket.. The filter prevents noise and caller ID problems caused by the DSL interference.

For more information on the DSL filters, contact your DSL service provider. The type plate is located on the bottom of the base station. 1 2 Connect each end of the power adapter to: the DC input jack at the bottom of the base station; the power socket on the wall. Connect each end of the line cord to: the telephone socket at the bottom of the base station; the telephone socket on the wall. Install the handset The batteries are pre-installed in the handset. Pull the battery tape off from the battery door before charging. 8 EN Note The country/language setting option is country dependent. If no welcome message is displayed, it means the country/language setting is preset for your country. Then you can set the date and time. To re-set the language, see the following steps.

1 Caution Risk of explosion! Keep batteries away from heat, sunshine or fire. Never discard batteries in fire. Use only the supplied batteries. Risk of decreased battery life! Never mix different brands or types of batteries. 2 Select [Menu] > [Phone setup] > [Language], then press MENU/OK to confirm. Select a language, then press MENU/OK to confirm. The setting is saved. Set the date and time Note Charge the batteries for 8 hours before first use.



**[You're reading an excerpt. Click here to read official PHILIPS CD 191 user guide](http://yourpdfguides.com/dref/4246705)**  
<http://yourpdfguides.com/dref/4246705>

If the handset becomes warm when the batteries are being charged, it is normal. Tip To set the date and time later, press REDIAL/C to skip this setting. Warning Check the battery polarity when inserting in the battery compartment. Incorrect polarity may damage the product. 1 2 3 4 5 Press MENU/OK. Select [Phone setup] > [Date & time], then press MENU/OK to confirm. Press the numeric buttons to enter the date, then press MENU/OK to confirm. The time setting menu is displayed on the handset. Press the numeric buttons to enter the time. If the time is in 12-hour format, press / to select [AM] or [PM]. Press MENU/OK to confirm. The batteries are pre-installed in the handset.

Pull the battery tape off from the battery door before charging. Configure your phone (country dependent) 1 2 When using your phone for the first time, you see a welcome message. Press MENU/OK. Change the remote access PIN code Note The default answering machine remote access PIN code is 0000 and it is important to change it to ensure the security. Set the country/language Select your country/language, then press MENU/OK to confirm. The country/language setting is saved. EN 9 1 2 3 4 5 Press MENU/OK. Select [Answ. Machine] > [Remote access] > [Change PIN], then press MENU/OK to confirm. Enter the old PIN, then press MENU/OK to confirm.

Enter the new PIN code, then press MENU/OK to confirm. Enter the new PIN code again, then press MENU/OK to confirm. The setting is saved. Check the battery level Charge the handset Place the handset on the base station to charge the handset. When the handset is placed correctly on the base station, you hear a docking sound.

The handset starts charging. Note Charge the batteries for 8 hours before first use. If the handset becomes warm when the batteries are being charged, it is normal. The battery icon displays the current battery level. When the handset is off the base station/charger, the bars indicate the battery level (full, medium and low).

When the handset is on the base station/charger, the bars flash until charging completes. The empty battery icon flashes. The battery is low and needs recharging. The handset turns off if the batteries are empty. If you are on the phone, you hear warning tones when the batteries are almost empty.

@@@@@ Press REDIAL/C to delete the character. Press and to move the cursor left and right. @@@@ You can access the phonebook from the handset. @@@@ There are 2 direct access memories (keys and ). @@@@ Press the alphanumerical key that matches the character.

@@ Select a contact in the phonebook list. @@ Select a contact and view the available information. 1 Select the contact, then press MENU/OK to view the number. Search a record You can search the phonebook records in these ways: Scroll the contacts list. Enter the first character of the contact. Add a record Note If your phonebook memory is full, the handset displays a notification message. Delete some records to add new ones. Scroll the contact list 1 2 16 Press or press MENU/OK > [Phonebook] > [View] to access the phonebook list. Press and to scroll through the phonebook list. EN 1 2 3 Press MENU/OK.

Select [Phonebook] > [Add new], then press MENU/OK to confirm. Enter the name, then press MENU/OK to confirm. 4 Select a volume level, then press MENU/OK to confirm. @@@@ Enter or edit the name. To erase a character, press REDIAL/C.

Press MENU/OK to confirm. The setting is saved. 1 2 3 Press MENU/OK. @@ Select a ringtone, then press MENU/OK to confirm. @@@@ Select [On]/[Off], then press MENU/OK to confirm.

@@ Select a language, then press MENU/OK to confirm. @@@@ Select [Services] > [Carrier code], then press MENU/OK to confirm. Enter the carrier code, then press MENU/OK to confirm. @@@@ Select an option, then press MENU/OK to confirm. Deactivate auto removal of the carrier code Auto conference To join an external call with another handset, press . 1 2 3 4 Press MENU/OK. Select [Services] > [Carrier code], then press MENU/OK to confirm. Press REDIAL/C to delete the digits. Press MENU/OK to confirm. The setting is saved.

Activate/Deactivate auto conference 1 2 3 Press MENU/OK. Select [Services] > [Conference], then press MENU/OK to confirm. Select [Auto]/[Off], then press MENU/OK to confirm. The setting is saved. Manage the area code Note This feature only applies to models with area code support. Manage the carrier code Note This feature only applies to models with carrier code support. You can define an area code (up to 5 digits). This area code is automatically removed from an incoming call if it matches with the code you define. Then the phone number is saved in the call log without an area code. Activate auto removal of the area code 1 Press MENU/OK.

EN 23 2 3 Select [Services] > [Area code], then press MENU/OK to confirm. Enter the area code, then press MENU/OK to confirm. The setting is saved. Note The maximum length of a detect number is 5 digits. The maximum length of an auto prefix number is 10 digits.

Note Deactivate auto removal of the area code This is a country dependent feature. 1 2 3 4 Press MENU/OK. Select [Services] > [Area code], then press MENU/OK to confirm. Press REDIAL/C to delete the digits. Press MENU/OK to confirm.

The setting is saved. Set auto prefix 1 2 3 4 Press MENU/OK. Select [Services] > [Auto prefix], then press MENU/OK to confirm. Enter the detect number, then press MENU/OK to confirm. Enter the prefix number, then press MENU/OK to confirm. The setting is saved. Note Network type Note This feature only applies to models with network type support. 1 2 3 To enter a pause, press and hold . Press MENU/OK. Select [Services] > [Network type], then press MENU/OK.

Select a network type, then press MENU/OK. The setting is saved. Note If the prefix number is set and the detect number is left empty, the prefix number is added to all outgoing calls. Note The feature is unavailable if the dialed number starts with \* and #. Auto prefix This feature checks and formats your outgoing call number before it is dialed out. The prefix number can replace the detect number you set in the menu. For example, you set 604 as the detect number and 1250 as the prefix. When you have dialed out a number such as 6043338888, your phone changes the number to 12503338888 when it dials out. Select the recall duration Make sure that the recall time is set correctly before you can answer a second call. In normal case, the phone is already preset for the recall duration.

You can select among 3 options: [Short], [Medium] and [Long]. The number of 24 EN available options varies with different countries. For details, consult your service provider. 2 3 4 1 2 3 Select [Services] > [Register], then press MENU/OK to confirm. Enter the system PIN. Press REDIAL/C to make corrections. Press MENU/OK to confirm the PIN. Press and hold 5 seconds.



[You're reading an excerpt. Click here to read official PHILIPS CD](http://yourpdfguides.com/dref/4246705)

[191 user guide](http://yourpdfguides.com/dref/4246705)

<http://yourpdfguides.com/dref/4246705>

Note Press MENU/OK. Select [Services] > [Recall time], then press MENU/OK to confirm.

Select an option, then press MENU/OK to confirm. The setting is saved. on the base station for Dial mode Note This feature only applies to models that support both tone and pulse dial. For models with an answering machine, you hear a confirmation beep. Registration is complete in less than 2 minutes. The base automatically assigns a handset number to the handset. Note If the PIN is incorrect or no base is found within a certain period, your handset displays a notification message. Repeat the above procedure if registration fails. Dial mode is the telephone signal used in your country. The phone supports tone (DTMF) and pulse (rotary) dial.

Consult the service provider for detailed information. Set the dial mode 1 2 3 Press MENU/OK. Select [Services] > [Dial mode], then press MENU/OK to confirm. Select a dial mode, then press MENU/OK to confirm. The setting is saved. Note Note The preset PIN is 0000. No change can be made on it. Unregister the handsets 1 2 3 4 5 6 If two handsets share the same base station, you can unregister a handset with another handset. Press MENU/OK. Select [Services] > [Unregister], then press MENU/OK to confirm.

Enter the system PIN. (The preset PIN is 0000). Press REDIAL/C to remove the number. Select the handset number to be unregistered. Press MENU/OK to confirm.

@@@ Select [Services] > [Reset], then press MENU/OK to confirm. The handset displays a confirmation request. Press MENU/OK to confirm.

@@@ Select [Answ. Machine] > [Voice language], then press MENU/OK to confirm.

Select a language, then press MENU/OK to confirm. @@ Select [Record also] if you allow the callers to leave messages. @@ Select [Answ. Machine] > [Voice answer], then press MENU/OK to confirm. Select an answer mode, then press MENU/OK to confirm. @@ Select [Answ. Machine] > [Voice answer], then press MENU/OK to confirm. @@ Select [Answ. Machine] > [Announcement], then press MENU/OK to confirm. Select [Record also] or [Answer only], then press MENU/OK to confirm.

Select [Play], then press MENU/OK to confirm. You can listen to the current announcement. Note Record an announcement The maximum length of the announcement you can record is 3 minutes. The newly recorded announcement automatically replaces the old one. 1 2 3 4 5 6 Press MENU/OK. Select [Answ. Machine] > [Announcement], then press MENU/OK to confirm. Select [Record also] or [Answer only], then press MENU/OK to confirm. Select [Record], then press MENU/OK to confirm. Start recording close to the microphone after the beep.

Press MENU/OK to stop recording or the recording stops after 3 minutes. You can listen to the newly recorded announcement on the handset. Note You can no longer listen to the announcement when you pick up an incoming call. Restore the default announcement 1 2 3 4 5 Press MENU/OK. Select [Answ. Machine] > [Announcement], then press MENU/OK to confirm. Select [Record also] or [Answer only], then press MENU/OK to confirm. Select [Use default], then press MENU/OK to confirm. The handset displays a confirmation request. Press MENU/OK to confirm.

The default announcement is restored. Make sure that you speak close to the microphone when you record an announcement. Incoming messages (ICM) Each message can be up to 3 minutes long. When you receive new messages, the new message indicator flashes on the answering machine and the handset displays a notification message. 28 EN Note If you pick up the phone when the caller leaves a message, the recording stops and you can talk to the caller directly. 1 2

When you listen to the message, press MENU/OK to enter the options menu. Select [Delete], then press MENU/OK to confirm. The current message is deleted. Note If the memory is full, the answering machine switches to [Answer only] automatically. Delete old messages to receive new ones.

Delete all old incoming messages From the base Press and hold in standby mode. All old messages are permanently deleted. From the handset Listen to the incoming messages You can listen to the incoming messages in the sequence they are recorded. From the base To start/Stop listening, press . To adjust the volume, press / . To play the previous message/replay the current message, press . To play the next message, press . To delete the current message, press .

Note No deleted messages can be recovered. 1 2 3 Press MENU/OK.

Select [Answ. Machine] > [Delete all], then press MENU/OK to confirm. The handset displays a confirmation request. Press MENU/OK to confirm. All old messages are permanently deleted.

Note You can delete the read messages only. No deleted messages can be recovered. From the handset Select MENU/OK > [Answ. Machine] > [Play], then press MENU/OK to confirm. New messages start playing.

Old messages start playing if there is no new message. Press REDIAL/C to stop listening. Press MENU/OK to enter the options menu. Press / to increase/decrease the volume. Set the ring delay You can set the number of times the phone rings before the answering machine picks up the call. 1 2 3 Press MENU/OK. Select [Answ. Machine] > [Ring delay], then press MENU/OK to confirm. Select a new setting, then press MENU/OK to confirm. The setting is saved.

Delete an incoming message From the base Press when you listen to the message. The current message is deleted. From the handset EN 29 Note Make sure that the answering machine is switched on before this feature can be applied. 3 4 5 Enter the old PIN, then press MENU/OK to confirm. Enter the new PIN code, then press MENU/OK to confirm. Enter the new PIN code again, then press MENU/OK to confirm. The setting is saved. Tip When you access the answering machine remotely, you are recommended to set the ring delay to [Toll saver] mode. This is a cost effective way to manage your messages. When there are new messages, the answering machine picks up the call after 3 rings; When there is no messages, it picks up the call after 5 rings.

Access the answering machine remotely 1 2 3 Make a call to your home number with a touch tone phone. Enter # when you hear the announcement. Enter your PIN code. You now have access to your answering machine, and you can listen to the new messages. Note Remote access You can operate your answering machine when you are away from home.

Simply make a call to your phone with a touch tone phone and enter your 4-digit PIN code. Note The remote access PIN code is the same as your system PIN. The preset PIN is 0000. You have 2 chances to enter the correct PIN code before your phone hangs up. 4 Activate/deactivate the remote access You can allow or block remote access to the answering machine.

Press a key to carry out a function. See the Remote access commands table below for a list of available functions. Note 1 2 3 Press MENU/OK. Select [Answ. Machine] > [Remote access], then press MENU/OK to confirm.



[You're reading an excerpt. Click here to read official PHILIPS CD](http://yourpdfguides.com/dref/4246705)

[191 user guide](http://yourpdfguides.com/dref/4246705)

<http://yourpdfguides.com/dref/4246705>

Select [On]/[Off], then press MENU/OK to confirm. The setting is saved. When there is no message, the phone hangs up automatically if no key is pressed for 8 seconds. Remote access commands Key 1 2 3 6 7 Function Repeat the current or listen to the previous message. Listen to messages.

Skip to the next message. Delete the current message. Switch the answering machine on. (not available when you listen to the messages). Change the PIN code 1 2 Press MENU/OK. Select [Answ. Machine] > [Remote access] > [Change PIN], then press MENU/OK to confirm. EN 30 8 9 Stop listening to the message. Switch the answering machine off. (not available when you listen to the messages).

Behavior of the LED display on the base station The table below shows you the current status with different LED display behavior on the base station. LED display Steady on Message status There is no new message and the memory is not full. The handset is switched on. Enter the paging mode There is a new message and the memory is not full. There is an incoming call.

Recording an incoming message/announcement. Message playback. Remote access/listen to messages from the handset. There is no new message and the memory is full. @@ You can find the Declaration of Conformity on www.

p4c. philips.com. @@@@To register and use this handset with a GAP compliant base station of different make, first follow the procedure described in the manufacturer's instructions, then follow the procedure described in this manual for registering a handset. To register a handset from different make to the base station, put the base station in registration mode, then follow the procedure described in the handset manufacturer's instructions. general have the ability to emit and receive electromagnetic signals. One of Philips' leading Business Principles is to take all necessary health and safety measures for our products, to comply with all applicable legal requirements and to stay well within the EMF standards applicable at the time of producing the products. Philips is committed to develop, produce and market products that cause no adverse health effects. @@@@Please act according to your local rules and do not dispose of your old products with your normal household waste. Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.

EN 33 Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste. Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environmental and human health. When this logo is attached to a product, it means a financial contribution has been paid to the associated national recovery and recycling system. Environmental information All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.) Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment. 34 EN 14 Frequently asked questions No signal bar is displayed on the screen. The handset is out of range. Move it closer to the base station.

If the handset displays [Unregister], register your handset. Tip For further information, see the chapter 'Services', section 'Register the handsets'. If I fail to register the additional handsets to the base station, what do I do? Your base memory is full. Unregister the unused handsets and try again. No dialing tone Check your phone connections.

The handset is out of range. Move it closer to the base station. No docking tone The handset is not placed properly on the base station/charger. The charging contacts are dirty. Disconnect the power supply first and clean the contacts with a damp cloth.

I cannot change the settings of my voice mail, what do I do? The voice mail service is managed by your service provider but not the phone itself. Contact your service provider to change the settings. The handset on the charger does not charge. Make sure the batteries are inserted correctly. Make sure the handset is placed properly on the charger. The battery icon animates when charging. Make sure the docking tone setting is turned on. When the handset is placed correctly on the charger, you can hear a docking tone. The charging contacts are dirty. Disconnect the power supply first and clean the contacts with a damp cloth.

Batteries are defective. Purchase new ones from your dealer. No display Make sure the batteries are charged. Make sure there is power and the phone is connected. Bad audio (crackles, echo, etc.) The handset is nearly out of range. Move it closer to the base station. The phone receives interference from the nearby electrical appliances. Move the base station away from them. The phone is at a location with thick walls.

Move the base away from them. The handset does not ring. Make sure the handset ringtone is turned on. The caller ID does not display. The service is not activated.

Check with your service provider. The caller's information is withheld or unavailable. Note If the above solutions do not help, disconnect the power supply from both the handset and base station. Try again after 1 minute. EN 35 15 Appendix Text and number input tables Key Upper case characters (for English/ French/ German/ Italian/Turkish/ Portuguese/Spanish/Dutch/Danish/ Finnish/Norwegian/ Swedish/ Romanian/ Polish/Czech/Hungarian/Slovakian/ Slovenian/Croatian/Lithuanian/Estonian/ Latvian/Bulgarian) Space .

0, / ; ' ' ! ? \* + - % \ | @ \_ # = < > ( ) & \$ ... ABC2C DEF3 GHI4 JKL5 MNO6 PQRS7S T UV 8 W XY Z 9 Z Lower case characters (for English/ French/ German/ Italian/Turkish/ Portuguese/Spanish/Dutch/Danish/ Finnish/Norwegian/ Swedish) Space . 0, / ; ' ' ! ? \* + - % \ | @ \_ # = < > ( ) & \$ [ ] { } ... abc2c def3 ghi4i jkl5 mno6 pqr7s tuv8 wxyz9z Upper case characters (for Greek) Space . 0, / ; ' ' ! ? \* + - % \ ^ ~ | @ \_ # = < > ( ) & \$ [ ] { } ..

. AB2ABC EN 3 4 5 6 7 8 9 Key 0 1 2 3 4 5 6 7 8 9 Key 0 1 2 3 4 5 6 7 8 9 Key 0 1 2 3 4 5 6 3DEF 4GHI 5JKL 6MNO 7PQRS 8T UV 9 W XYZ Lower case characters (for Greek) Space . 0, / ; ' ' ! ? \* + - % \ ^ ~ | @ \_ # = < > ( ) & \$ [ ] { } ... 2abc 3def 4ghi 5jkl 6mno 7pqrs 8tuv 9wxyz Upper case characters (for Serbian) Space . 0, / ; ' ' ! ? \* + - % \ ^ ~ | @ \_ # = < > ( ) & \$ [ ] { } ... ABC C2 DEF3 GHI 4 JKL 5 MNO6 PQRS S7 T UV 8 W XY Z Z 9 Lower case characters (for Serbian) Space .

0, / ; ' ' ! ? \* + - % \ ^ ~ | @ \_ # = < > ( ) & \$ [ ] { } ... abcC2 def3 ghi4 jkl5 mno 6 0 1 2 3 4 5 6 7 8 9 Key 0 1 2 3 4 5 6 7 8 9 Key 0 1 2 3 6 7 8 9 pqrSS7 t u v ij 8 wxyZ Z9 EN 37 0168 Specifications are subject to change without notice 2012 Koninklijke Philips Electronics N.



[You're reading an excerpt. Click here to read official PHILIPS CD](http://yourpdfguides.com/dref/4246705)

[191 user guide](http://yourpdfguides.com/dref/4246705)

<http://yourpdfguides.com/dref/4246705>