



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for PHILIPS CD 195. You'll find the answers to all your questions on the PHILIPS CD 195 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual PHILIPS CD 195
User guide PHILIPS CD 195
Operating instructions PHILIPS CD 195
Instructions for use PHILIPS CD 195
Instruction manual PHILIPS CD 195

Register your product and get support at
www.philips.com/welcome

CD190
CD195



User manual

PHILIPS



[You're reading an excerpt. Click here to read official PHILIPS CD 195 user guide](http://yourpdfguides.com/dref/4247351)
<http://yourpdfguides.com/dref/4247351>

Manual abstract:

@@@ Ensure that the electrical outlet is always easily accessible. Do not open the handset, base station or charger as For pluggable equipment, the socket-outlet shall you could be exposed to high voltages. be installed near the equipment and shall be easily accessible. This equipment is not designed to make emergency calls when the power fails. An alternative has to be made available to allow emergency calls. Do not allow the product to come into contact with liquids. Do not use any cleaning agents containing alcohol, ammonia, benzene, or abrasives as these may harm the set. Do not expose the phone to excessive heat caused by heating equipment or direct sunlight. Do not drop your phone or allow objects to fall on your phone. @@@ Always use the cables provided with the product.

@@ This can deteriorate audio quality and damage the product. @@ Do not use the product in places where there are explosive hazards. come into contact with metal objects. type. instructions.

About operating and storage temperatures · Operate in a place where temperature is always between 0°C to +40°C (up to 90% relative humidity). · Store in a place where temperature is always between -20°C and +45°C (up to 95% relative humidity). · Battery life may be shorter in low temperature conditions. EN 3 2 Your phone Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Power adapter** What is in the box Line cord* Guarantee Base station (CD190) Quick start guide Base station (CD195) Note · * In some countries, you have to connect the line · adapter to the line cord, then plug the line cord to the telephone socket. ** In multi-handset packs, there are additional handsets and chargers and power adapters. Handset** Charger** 4 EN Overview of the phone a i Microphone jR Recall key (This function is network dependent.) k* Set the dial mode (pulse mode or temporary tone mode). l Scroll down on the menu. Decrease the earpiece/speaker volume. Access the call log. Make and receive calls. n m l b c d e k j i f g h m a Earpiece b Battery door c Scroll up on the menu.

Increase the earpiece/speaker volume. Access the phonebook. n MENU/OK · Access the main menu. · Confirm selection. · Enter the options menu. · Select the function displayed on the handset screen directly above the key. Overview of the base station CD190 d REDIAL/C · Delete text or digits. · Cancel operation. · Access the redial list. e End the call.

Exit the menu/operation. Press and hold to switch the handset on or off. Press to enter a space during text editing. Press and hold to lock the keypad. a f . . g# · Make a predial call.

· Press and hold to enter a pause. h Mute or unmute the microphone. a Press to find handsets. Press and hold to enter the registration mode. EN 5 CD195 Icon a b c d h g e f a Press to find handsets Press and hold to enter the registration mode b Speaker c d e f g / Decrease/increase the speaker volume.

Skip backward during playback. Skip forward during playback. Turn the answering machine on/off. Play messages. Stop messages playback. Delete the current playback message. Press and hold to delete all old messages. / h Display icons In standby mode, the icons shown on the main screen tell you what features are available on your handset. Descriptions When the handset is off the base station/charger, the bars indicate the battery level (from full to low). When the handset is on the base station/charger, the bars keep scrolling until charging is complete.

The empty battery icon flashes and you hear an alert tone. The battery is low and needs recharging. The number of bar indicates the link status between the handset and base station. The more bars are shown, the better the signal or the connection is. It remains steadily on when browsing incoming calls in the call log. It indicates an outgoing call in the redial list. It flashes when there is a new missed call. It remains steadily on when browsing the missed calls in call log. It flashes when receiving incoming call. It remains steadily on during a call.

The ringer is off. Answering machine: it flashes when there is a new message. It displays when the telephone answering machine is turned on. It flashes when there is a new voice message. It remains steadily on when the voice messages are already viewed in the call log.

The icon is not shown when there is no voice message. It is displayed when you scroll up/down a list/increase and decrease the volume. There are more digits on the right. Press REDIAL/C to read. 6 EN 3 Get started Caution · Make sure that you have read the safety instructions in the 'Important safety instruction' section before you connect and install your handset.

Connect the base station Warning · Risk of product damage! Ensure that the power supply · voltage corresponds to the voltage printed on the back or the underside of the phone. Use only the supplied power adapter to charge the batteries. 3 Connect each end of the power adapter to (for multi handset version only): · the DC input jack at the bottom of the extra handset charger. · the power socket on the wall. Note · If you subscribe to the digital subscriber line (DSL) high speed internet service through your telephone line, ensure you install a DSL filter between the telephone line cord and the power socket.. The filter prevents noise and caller ID problems caused by the DSL interference. For more information on the DSL filters, contact your DSL service provider. The type plate is located on the bottom of the base station. · 1 2 Connect each end of the power adapter to: · the DC input jack at the bottom of the base station; · the power socket on the wall.

Connect each end of the line cord to: · the telephone socket at the bottom of the base station; · the telephone socket on the wall. Install the handset The batteries are pre-installed in the handset. Pull the battery tape off from the battery door before charging. EN 7 Note · The country/language setting option is country dependent. If no welcome message is displayed, it means the country/language setting is preset for your country. Then you can set the date and time. To re-set the language, see the following steps. 1 Caution · Risk of explosion! Keep batteries away from heat, · · sunshine or fire. Never discard batteries in fire. Use only the supplied batteries.

Risk of decreased battery life! Never mix different brands or types of batteries.



[You're reading an excerpt. Click here to read official PHILIPS CD 195 user guide](http://yourpdfguides.com/dref/4247351)
<http://yourpdfguides.com/dref/4247351>

2 Select [MENU] > [PHONE SETUP] > [LANGUAGE], then press MENU/OK to confirm. Select a language, then press MENU/OK to confirm. » The setting is saved. Set the date and time Note · Charge the batteries for 8 hours before first use.

· If the handset becomes warm when the batteries are being charged, it is normal. Tip · To set the date and time later, press REDIAL/C to skip this setting. Warning · Check the battery polarity when inserting in the battery compartment. Incorrect polarity may damage the product. 1 2 3 4 5 Press MENU/OK. Select [PHONE SETUP] > [DATE/TIME], then press MENU/OK to confirm. Press the numeric buttons to enter the date, then press MENU/OK to confirm. » The time setting menu is displayed on the handset. Press the numeric buttons to enter the time. · If the time is in 12-hour format, press / to select [AM] or [PM]. Press MENU/OK to confirm. The batteries are pre-installed in the handset. Pull the battery tape off from the battery door before charging. Configure your phone (country dependent) 1 2 When using your phone for the first time, you see a welcome message. Press MENU/OK.

Change the remote access PIN code Note · The default answering machine remote access PIN code is 0000 and it is important to change it to ensure the security. Set the country/language Select your country/language, then press MENU/OK to confirm. » The country/language setting is saved. 8 EN 1 2 3 4 5 Press MENU/OK. Select [ANSW MACHINE] > [REMOTE ACC.] > [CHANGE PIN], then press MENU/OK to confirm. Enter the old PIN, then press MENU/OK to confirm. Enter the new PIN code, then press MENU/OK to confirm. Enter the new PIN code again, then press MENU/OK to confirm. » The setting is saved.

Check the battery level Charge the handset Place the handset on the base station to charge the handset. When the handset is placed correctly on the base station, you hear a docking sound. » The handset starts charging. Note · Charge the batteries for 8 hours before first use. · If the handset becomes warm when the batteries are being charged, it is normal.

The battery icon displays the current battery level. When the handset is off the base station/charger, the bars indicate the battery level (full, medium and low). @@The empty battery icon flashes. The battery is low and needs recharging. @@@@Press REDIAL/C to delete the character. Press and to move the cursor left and right. @@You can access the phonebook from the handset. @@There are 2 direct access memories (keys and). @@When you press and hold on the key in standby mode , the saved phone number is dialed automatically. Enter the first character of a contact 1 2 Press or press MENU/OK > [PHONEBOOK] > [VIEW] to access the phonebook list. Press the alphanumeric key that matches the character. » The first record that starts with this character is displayed. Call from the phonebook 1 2 3 Press or press MENU/OK > [PHONEBOOK] > [VIEW] to access the phonebook list. Select a contact in the phonebook list. Press to make the call.

View the phonebook Note · You can view the phonebook on one handset only each time. 1 2 Access the phonebook during a call 1 2 Press MENU/OK, select [PHONEBOOK] then press MENU/OK again to confirm. Select the contact, then press MENU/OK to view the number. Press or press MENU/OK > [PHONEBOOK] at a record, then press . @@Select a record, then press MENU/OK to confirm. Select [SAVE NUMBER], then press MENU/OK to confirm. Enter and edit the name, then press MENU/OK to confirm. Enter and edit the number, then press MENU/OK to confirm. @@@@Select [ON]/[OFF], then press MENU/OK to confirm. » The setting is saved.

1 2 3 Press MENU/OK. @@Select a volume level, then press MENU/ OK to confirm. @@It is displayed on the handset screen in standby mode. @@@@Enter or edit the name. To erase a character, press REDIAL/C. Press MENU/OK to confirm. » The setting is saved. 1 2 3 Press MENU/OK. @@Select a ringtone, then press MENU/OK to confirm. @@@@Select [ON]/[OFF], then press MENU/OK to confirm.

@@Select [PHONE SETUP] > [LANGUAGE], then press MENU/OK to confirm. Select a language, then press MENU/OK to confirm. » The setting is saved. EN 21 10 Services The phone supports a number of features that help you handle and manage the calls. 1 2 3 Press MENU/OK. Select [SERVICES] > [NETWORK TYPE], then press MENU/OK. Select a network type, then press MENU/ OK. » The setting is saved. Call list type You can set whether you can view all incoming calls or missed calls from this menu. Select the recall duration Make sure that the recall time is set correctly before you can answer a second call.

In normal case, the phone is already preset for the recall duration. You can select among 3 options: [SHORT], [MEDIUM] and [LONG]. The number of available options varies with different countries. For details, consult your service provider. Select the call list type 1 2 3 Press MENU/OK. Select [SERVICES] > [CALL LISTS], then press MENU/OK to confirm. Select an option, then press MENU/OK to confirm. 1 2 3 Press MENU/OK. Select [SERVICES] > [RECALL TIME], then press MENU/OK to confirm. Select an option, then press MENU/OK to confirm.

» The setting is saved. Auto conference To join an external call with another handset, press . Activate/Deactivate auto conference Dial mode Note · This feature only applies to models that support both tone and pulse dial. 1 2 3 Press MENU/OK. Select [SERVICES] > [CONFERENCE], then press MENU/OK to confirm.

Select [AUTO]/[OFF], then press MENU/ OK to confirm. » The setting is saved. Dial mode is the telephone signal used in your country. The phone supports tone (DTMF) and pulse (rotary) dial. Consult the service provider for detailed information.

Network type Note · This feature only applies to models with network type support. Set the dial mode 1 2 Press MENU/OK. Select [SERVICES] > [DIAL MODE], then press MENU/OK to confirm. 22 EN 3 Select a dial mode, then press MENU/OK to confirm. » The setting is saved. Note Note · For models with an answering machine, you hear a confirmation beep. · If your phone is in pulse dial mode, press * during a call for temporary tone mode. Digits entered for this call are then sent out as tone signals. » Registration is complete in less than 2 minutes. The base automatically assigns a handset number to the handset.

Note Register the handsets You can register additional handsets to the base station. The base station can register up to 4 handsets. · If the PIN is incorrect or no base is found within a certain period, your handset displays a notification message. Repeat the above procedure if registration fails. Note · The preset PIN is 0000. No change can be made on it.



[You're reading an excerpt. Click here to read official PHILIPS CD](http://yourpdfguides.com/dref/4247351)

[195 user guide](http://yourpdfguides.com/dref/4247351)

<http://yourpdfguides.com/dref/4247351>

Auto registration Place the unregistered handset on the base station. » The handset detects the base station and start to register automatically. » Registration is completed in less than 2 minutes. The base station automatically assigns a handset number to the handset.

Unregister the handsets 1 2 3 4 5 6 If two handsets share the same base station, you can unregister a handset with another handset. Press MENU/OK. Select [SERVICES] > [UNREGISTER], then press MENU/OK to confirm. Enter the system PIN. (The preset PIN is 0000).

Press REDIAL/C to remove the number. Select the handset number to be unregistered. Press MENU/OK to confirm. » The handset is unregistered. Tip · The handset number displays beside the handset name in standby mode.

Manual registration If auto registration fails, register your handset manually to the base station. 1 2 3 4 Press MENU/OK on the handset. Select [SERVICES] > [REGISTER], then press MENU/OK to confirm. Enter the system PIN. Press REDIAL/C to make corrections. Then press MENU/OK to confirm the PIN.

Press and hold 5 seconds. on the base station for EN 23 Restore default settings You can reset your phone settings to the original factory settings. 1 2 3 Press MENU/OK. Select [SERVICES] > [RESET], then press MENU/OK to confirm.

» The handset displays a confirmation request. Press MENU/OK to confirm. » All settings are reset. 24 EN 11 Telephone answering machine Note · Available only for CD195. 3 Select [ANSWER ONLY]/[RECORD ALSO]/[OFF], then press MENU/OK to confirm. @@@@Select [ANSW MACHINE] > [LANGUAGE], then press MENU/OK to confirm. Select a language, then press MENU/OK to confirm. @@Select [RECORD ALSO]if you allow the callers to leave messages. @@@@Select an answer mode, then press MENU/OK to confirm. @@@@Select [ANSWER ONLY] or [RECORD ALSO], then press MENU/OK to confirm.

Select [PLAY], then press MENU/OK to confirm. @@The newly recorded announcement automatically replaces the old one. 1 2 3 4 5 6 Press MENU/OK. @@Select [ANSWER ONLY] or [RECORD ALSO], then press MENU/OK to confirm. Select [RECORD NEW], then press MENU/OK to confirm.

Start recording close to the microphone after the beep. Press MENU/OK to stop recording or the recording stops after 3 minutes. » You can listen to the newly recorded announcement on the handset. Note · You can no longer listen to the announcement when you pick up an incoming call. Restore the default announcement 1 2 3 4 5 Press MENU/OK.

@@Select [RECORD ALSO]or [ANSWER ONLY], then press MENU/OK to confirm. Select [USE DEFAULT], then press MENU/OK to confirm. » The handset displays a confirmation request. Press MENU/OK to confirm. » The default announcement is restored · Make sure that you speak close to the microphone when you record an announcement. Incoming messages (ICM) Each message can be up to 3 minutes long. When you receive new messages, the new message indicator flashes on the answering machine and the handset displays a notification message. 26 EN Note · If you pick up the phone when the caller leaves a message, the recording stops and you can talk to the caller directly. Set the ring delay You can set the number of times the phone rings before the answering machine picks up the call. Note · If the memory is full, the answering machine switches to [ANSWER ONLY] automatically.

Delete old messages to receive new ones. 1 2 3 Press MENU/OK. Select [ANSW MACHINE] > [RING DELAY], then press MENU/OK to confirm. Select a new setting, then press MENU/OK to confirm. » The setting is saved. Note Listen to the incoming messages You can listen to the incoming messages in the sequence they are recorded. From the base · To start/Stop listening, press . · To adjust the volume, press / . · To play the previous message/replay the current message, press . · To play the next message, press .

· To delete the current message, press . Note · No deleted messages can be recovered. · Make sure that the answering machine is switched on before this feature can be applied. Tip · When you access the answering machine remotely, you are recommended to set the ring delay to [TOLL SAVER] mode. This is a cost effective way to manage your messages.

When there are new messages, the answering machine picks up the call after 3 rings; When there is no messages, it picks up the call after 5 rings. Delete an incoming message From the base Press when you listen to the message. » The current message is deleted. Remote access You can operate your answering machine when you are away from home. Simply make a call to your phone with a touch tone phone and enter your 4-digit PIN code.

Note · The remote access PIN code is the same as your system PIN. The preset PIN is 0000. Delete all old incoming messages Press and hold on the base station in standby mode. » All old messages are permanently deleted. Activate/deactivate the remote access You can allow or block remote access to the answering machine. EN 27 1 2 3 Press MENU/OK. Select [ANSW MACHINE] > [REMOTE ACC.], then press MENU/OK to confirm. Select [ON]/[OFF], then press MENU/OK to confirm. » The setting is saved.

Note · When there is no message, the phone hangs up automatically if no key is pressed for 8 seconds. Remote access commands Key 1 2 3 6 7 8 9 Function Repeat the current or listen to the previous message. Listen to messages. Skip to the next message. Delete the current message. Switch the answering machine on. (not available when you listen to the messages). Stop listening to the message. Switch the answering machine off. (not available when you listen to the messages).

Change the PIN code 1 2 3 4 5 Press MENU/OK. Select [ANSW MACHINE] > [REMOTE ACC.] > [CHANGE PIN], then press MENU/OK to confirm. Enter the old PIN, then press MENU/OK to confirm. Enter the new PIN code, then press MENU/OK to confirm.

Enter the new PIN code again, then press MENU/OK to confirm. @@@@· The handset is switched on. @@· There is an incoming call. · Recording an incoming message/announcement. · Message playback.

· Remote access/listen to messages from the handset. · There is no new message and the memory is full. @@Enter # when you hear the announcement. Enter your PIN code. » You now have access to your answering machine, and you can now listen to the new messages. Note Flashing · You have 2 chances to enter the correct PIN code before your phone hangs up. 4 Press a key to carry out a function. See the Remote access commands table below for a list of available functions. Flashing (Fast) 28 EN 12 Technical data Display · Amber LCD backlight General telephone features · Caller name & number identification · Conference call and voicemails · Maximum talk time: 16 hours Phonebook list, Redial list and Call log · Phonebook list with 50 entries · Redial list with 10 entries · Call log with 20 entries Battery · CORUN: 2 x AAA Ni-MH 1.



You're reading an excerpt. Click here to read official PHILIPS CD

195 user guide

<http://yourpdfguides.com/dref/4247351>

2V 600mAh rechargeable batteries · GPI: 2 x AAA Ni-MH 1.

2V 600mAh rechargeable batteries · BYD: 2 x AAA Ni-MH 1.2V 600mAh rechargeable batteries Power adapter Base and charger: · Philips: SSW-1920UK/SG-2, Input: 100240V 50/60Hz 0.2A; Output: 6V 500mA · Philips: S003PB060050, Input: 100-240V 50/60Hz 0.2A; Output: 6V 500mA Power consumption · Power consumption in standby mode: 0.6W (CD190) 0.65W (CD195) Weight and dimensions (CD190) · Handset: 97.7 grams · 162.8 x 47.5 x 29.7 mm (H x W x D) · Base: 116.

9 grams · 79.2 x 130.3 x 91 mm (H x W x D) · Charger: 56.4 grams · 78.5 x 80.

5 x 83 mm (H x W x D) Weight and dimensions (CD195) · Handset: 97.7 grams · 162.8 x 47.5 x 29.7 mm (H x W x D) · Base: 148.
8 grams · 79.2 x 130.3 x 91 mm (H x W x D) · Charger: 56.4 grams · 78.5 x 80.5 x 83 mm (H x W x D) EN 29 13 Notice Declaration of conformity Hereby Philips Consumer Lifestyle, declares that the CD190/CD195 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. You can find the Declaration of Conformity on www.p4c.philips.com.

This product has been designed, tested and manufactured according the European R&TTE directive 1999/5/EC. Use GAP standard compliance The GAP standard guarantees that all DECTTM GAP handsets and base stations comply with a minimum operating standard irrespective of their make. The handset and base station are GAP compliant, which means they guarantee the minimum functions: register a handset, take the line, make a call and receive a call. @@@@ Philips is committed to develop, produce and market products that cause no adverse health effects. Philips confirms that if its products are handled properly for their intended use, they are safe to use according to scientific evidence available today. Philips plays an active role in the development of international EMF and safety standards, enabling Philips to anticipate further developments in standardization for early integration in its products. Disposal of your old product and batteries Your product is designed and manufactured with high quality materials and components, which can be recycled and reused. Compliance with EMF Koninklijke Philips Electronics N.V. manufactures and sells many products targeted at consumers, which, like any electronic apparatus, in When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/EC.

Please inform yourself about the local separate collection system for electrical and electronic products. Please act according to your local rules and do not dispose of your old products with your normal household waste. Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health. 30 EN Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste. Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environmental and human health.

When this logo is attached to a product, it means a financial contribution has been paid to the associated national recovery and recycling system.

Environmental information All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.) Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

EN 31 14 Frequently asked questions No signal bar is displayed on the screen. · The handset is out of range. Move it closer to the base station. · If the handset displays [UNREGISTERED], put the handset on the base until the signal bar appears. Tip · For further information, see the chapter 'Services', section 'Register the handsets'. If I fail to register the additional handsets to the base station, what do I do? Your base memory is full. Unregister the unused handsets and try again. No dialing tone · Check your phone connections. · The handset is out of range. Move it closer to the base station.

No docking tone · The handset is not placed properly on the base station/charger. · The charging contacts are dirty. Disconnect the power supply first and clean the contacts with a damp cloth. I cannot change the settings of my voice mail, what do I do? The voice mail service is managed by your service provider but not the phone itself. Contact your service provider to change the settings. The handset on the charger does not charge. · Make sure the batteries are inserted correctly. · Make sure the handset is placed properly on the charger. The battery icon animates when charging. · Make sure the docking tone setting is turned on.

When the handset is placed correctly on the charger, you can hear a docking tone. · The charging contacts are dirty. Disconnect the power supply first and clean the contacts with a damp cloth. · Batteries are defective. Purchase new ones from your dealer.

No display · Make sure the batteries are charged. · Make sure there is power and the phone is connected. Bad audio (crackles, echo, etc.) · The handset is nearly out of range. Move it closer to the base station.
· The phone receives interference from the nearby electrical appliances. Move the base station away from them. · The phone is at a location with thick walls. Move the base away from them. The handset does not ring. Make sure the handset ringtone is turned on. The caller ID does not display. · The service is not activated. Check with your service provider. · The caller's information is withheld or unavailable.

Note · If the above solutions do not help, disconnect the power supply from both the handset and base station. Try again after 1 minute. 32 EN 15 Appendix Text and number input tables key 0 1 2 3 4 5 6 7 8 9 * # key 0 1 2 3 4 5 6 7 8 9 Key 0 1 2 3 4 5 6 7 8 Characters (for English/Latin) space 0 Ø -1 ABC2 DEF3 GHI4 JKL5 MNO6 PQRS7 T UV 8 W XY Z 9 *?N) # ' , - & Characters (for Norwegian/Danish/Polish) space 0 -1 AÆBC2 DEF3 GHI4 JKL5 MNO6 PQRS7 T UV 8 W XY Z 9 Characters (for Greek) space 0 -1 AB2 EZ3 H4 KM5 NO6 P7 TY 8 9 key 0 1 2 3 4 5 6 7 8 9 X9 Characters (for Polish) space 0 -1 ABC2 DEF3 GHI4 JKLL5 MNO6 PQRS7 T UV 8 W XY Z 9 EN 33 0168 Specifications are subject to change without notice © 2012 Koninklijke Philips Electronics N.V. All rights reserved. .



[You're reading an excerpt. Click here to read official PHILIPS CD 195 user guide](http://yourpdfguides.com/dref/4247351)
<http://yourpdfguides.com/dref/4247351>