



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for PHILIPS CD 290. You'll find the answers to all your questions on the PHILIPS CD 290 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual PHILIPS CD 290
User guide PHILIPS CD 290
Operating instructions PHILIPS CD 290
Instructions for use PHILIPS CD 290
Instruction manual PHILIPS CD 290

Register your product and get support at
www.philips.com/welcome

CD290
CD295



User manual

PHILIPS



[You're reading an excerpt. Click here to read official PHILIPS CD 290 user guide](http://yourpdfguides.com/dref/4246754)
<http://yourpdfguides.com/dref/4246754>

Manual abstract:

@@@ Ensure that the electrical outlet is always easily accessible. Do not use any cleaning agents containing alcohol, ammonia, benzene, or abrasives as these may harm the set. Do not expose the phone to excessive heat caused by heating equipment or direct sunlight. Do not drop your phone or allow objects to fall on your phone. Active mobile phones in the vicinity may cause interference. About operating and storage temperatures Operate in a place where temperature is always between 0C to +40C (up to 90% relative humidity). Store in a place where temperature is always between -20C and +45C (up to 95% relative humidity). @@@ Always use the cables provided with the product. @@ This can deteriorate audio quality and damage the product. @@ Do not use the product in places where there are explosive hazards.

Do not open the handset, base station or charger as you could be exposed to high voltages. For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily accessible. Handsfree activation could suddenly increase the volume in the earpiece to a very high level: make sure the handset is not too close to your ear. This equipment is not designed to make emergency calls when the power fails. An alternative has to be made available to allow emergency calls.

Do not allow the product to come into contact with liquids. come into contact with metal objects. type. instructions. EN 3 Eng l i sh 2 Your phone

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome. Power adapter** What is in the box Line cord* Guarantee Base station (CD290) Base station (CD295) User manual Quick start guide Note * In some countries, you have to connect the line adapter to the line cord, then plug the line cord to the telephone socket. Handset** Note Charger** ** In multi-handset packs, there are additional handsets and chargers and power adapters. 4 EN j Microphone a b k c o n m d e f Turn the speaker phone on/off. Make and receive calls through the speaker. l Press and hold to make an intercom call (for multi handset version only). Scroll down on the menu. Decrease the earpiece/speaker volume. Access the call log.

Make and receive calls. Recall key Access the main menu. Confirm selection. Enter the options menu. Select the function displayed on the handset screen directly above the key. m g h i l k j n a Earpiece b Loudspeaker c Battery door d Scroll up on the menu. Increase the earpiece/speaker volume. Access the phonebook. Delete text or digits. Cancel operation.

End the call. Exit the menu/operation. Press and hold to switch the handset on or off. Press to enter a space during text editing. Press and hold to lock the keypad.

Make a predial call. Press and hold to enter a pause. Switch to upper/lower case during editing. o e f g h EN 5 Eng l i sh Overview of the phone i Mute or unmute the microphone. Overview of the base station CD290 CD295 a b a c d h g e f a a Press to find handsets.

Press and hold to enter the registration mode. Press to find handsets. Press and hold to enter the registration mode. b Speaker c d e f g / Decrease/increase the speaker volume. Skip backward during playback. Skip forward during playback. Turn the answering machine on or off. Play messages. Stop messages playback. Delete the current playback message.

Press and hold to delete all old messages. h 6 EN The mode is activated. In standby mode, the icons shown on the main screen tell you what features are available on your handset. Icon Descriptions When the handset is off the base station/charger, the bars indicate the battery level (from full to low). When the handset is on the base station/charger, the bars keep scrolling until charging completes. The empty battery icon flashes and you hear an alert tone. The battery is low and needs recharging. It displays the link status between the handset and base station. The more bars are shown, the better the signal strength is. It remains steadily on when browsing incoming calls in the call log.

It indicates an outgoing call in the redial list. @@ It remains steadily on when browsing the missed calls in call log. It flashes when receiving an incoming call. It remains steadily on when you are in a call. The speaker is on.

The alarm clock is activated. The ringer is off. Answering machine: it flashes when there is a new message. It displays when the telephone answering machine is turned on. It flashes when there is a new voice message.

It remains steadily on when the voice messages are already viewed in the call log. The icon is not shown when there is no voice message. EN 7 Eng l i sh Display icons The silent mode is activated. 3 Get started Caution Make sure that you have read the safety instructions in the 'Important safety instruction' section before you connect and install your handset. 1 2 Connect each end of the power adapter to: the DC input jack at the bottom of the base station; the power socket on the wall. Connect each end of the line cord to: the telephone socket at the bottom of the base station; the telephone socket on the wall. Connect the base station Warning Risk of product damage! Ensure that the power supply voltage corresponds to the voltage printed on the back or the underside of the phone. Use only the supplied power adapter to charge the batteries. Note If you subscribe to the digital subscriber line (DSL) high speed internet service through your telephone line, ensure you install a DSL filter between the telephone line cord and the power socket.

The filter prevents noise and caller ID problems caused by the DSL interference. For more information on the DSL filters, contact your DSL service provider. The type plate is located on the bottom of the base station. 3 Connect each end of the power adapter to (for multi handset version only): the DC input jack at the bottom of the extra handset charger. the power socket on the wall. 8 EN The batteries are pre-installed in the handset. Pull the battery tape off from the battery door before charging. Select your country/language, then press [OK] to confirm. The country/language setting is saved. Note The country/language setting option is country dependent.

If no welcome message is displayed, it means the country/language setting is preset for your country. Then you can set the date and time. To re-set the language, see the following steps. 1 Caution Risk of explosion! Keep batteries away from heat, Use only the supplied batteries. Risk of decreased battery life! Never mix different brands or types of batteries. sunshine or fire. Never discard batteries in fire. 2 Select [Menu] > [Phone setup] > [Language], then press [OK] to confirm. Select a language, then press [OK] to confirm.



[You're reading an excerpt. Click here to read official PHILIPS CD 290 user guide](http://yourpdfguides.com/dref/4246754)
<http://yourpdfguides.com/dref/4246754>

The setting is saved.

Set the date and time Tip To set the date and time later, press [Back] to skip this setting. Note Charge the batteries for 8 hours before first use. If the handset becomes warm when the batteries are being charged, it is normal. 1 2 3 Select [Menu] > [Phone setup] > [Date & time], then press [OK] to confirm. Press the numeric buttons to enter the date, then press [OK] to confirm. Press the numeric buttons to enter the time. Note Warning Check the battery polarity when inserting in the battery compartment. Incorrect polarity may damage the product. The batteries are pre-installed in the handset. Pull the battery tape off from the battery door before charging.

If the time is in 12-hour format, press [AM] or [PM]. / to select Configure your phone (country dependent) 1 2 When using your phone for the first time, you see a welcome message. Press [OK]. 4 Press [OK] to confirm. EN 9 Eng l i sh Install the handset Set the country/language Change the remote access PIN code Note The default answering machine remote access PIN code is 0000 and it is important to change it to ensure the security. Check the battery level 1 2 3 4 Select [Menu] > [Answ. Machine] > [Remote access] > [Change PIN], then press [OK] to confirm. Enter the old PIN, then press [OK] to confirm. Enter the new PIN code, then press [OK] to confirm. Enter the new PIN code again, then press [Save] to confirm.

The setting is saved. The battery icon displays the current battery level. When the handset is off the base station/charger, the bars indicate the battery level (full, medium and low). When the handset is on the base station/charger, the bars flash until charging is complete. The empty battery icon flashes. The battery is low and needs recharging. The handset turns off if the batteries are empty. If you are on the phone, you hear warning tones when the batteries are almost empty. The call gets disconnected after the warning. Charge the handset Place the handset on the base station to charge the handset. When the handset is placed correctly on the base station, you hear a docking sound. The handset starts charging. Note Charge the batteries for 8 hours before first use. If the handset becomes warm when the batteries arr. Switch between two calls You can switch your calls in these ways: Press and ; or Press [Option] and select [Switch calls], then press [OK] again to confirm. The current call is put on hold, and you are now connected to the other call. EN 13 Eng l i sh Answer a call Turn the speaker on or off Make a conference call with the external callers Note This service is network dependent. Check with the service provider for additional charges. When you are connected to two calls, you can make a conference call in these ways: Press , then ; or Press [Option], select [Conference] and then press [OK] again to confirm. @@@@ The current caller is put on hold.

Select a handset number, then press [OK] to confirm. @@ The handsets available for intercom are displayed. Select a handset number, then press [OK] to confirm. Press when the other side answers your call. @@ The handsets available for intercom are displayed. Select a handset number, then press [OK] to confirm. The selected handset rings. Press on the selected handset. The intercom is established. @@@@ The handsets available for intercom are displayed. The external caller is put on hold. Select or enter a handset number, then press [OK] to confirm. The selected handset rings. Press on the selected handset. The intercom is established.

Press [Conf]. @@@@ records. @@@@ Select an option, then press [OK] to confirm. View the call records 1 2 Press . The incoming call log is displayed.

@@@@@@ The incoming call log is displayed. Select a record, then press [Option]. Select [Save number], then press [OK] to confirm. Enter and edit the name, then press [OK] to confirm. Enter and edit the number, then press [Save] to confirm. @@@@ The incoming call log is displayed. Select a record, then press [Option] to confirm. @@ Press [OK] to confirm. The record is deleted. Delete all call records 1 2 3 4 Press .

The incoming call log is displayed. Press [Option]. Select [Delete all], then press [OK] to confirm. The handset displays a confirmation request. Press [OK] to confirm. @@ It includes the names and/or numbers you have called. @@ Select a record, then press [Option] to confirm. Select [Delete], then press [OK] to confirm. The handset displays a confirmation request. Press [OK] to confirm.

The record is deleted. View the redial records 1 Press [Redial]. @@ Select the record you want to call. Press The number is dialed out. @@ Select [Option] > [Delete all], then press [OK] to confirm.

The handset displays a confirmation request. Press [OK] to confirm. @@ Select a record, then press [OK] to confirm. Press [Option], select [Save number], then press [OK] to confirm. Enter and edit the name, then press [OK] to confirm.

Enter and edit the number, then press [Save] to confirm. @@@@ Select a volume level, then press [OK] to confirm. @@ Select [On/off], then press [OK] to confirm. The setting is saved. Select [Start & end], then press [OK] to confirm. Set the time, then press [OK] to confirm. The setting is saved. @@ Select a ringtone, then press [OK] to confirm. @@ Select [On]/[Off], then press [OK] to confirm. @@ Select [On]/[Off], then press [OK] to confirm.

@@@@ Select a profile, then press [OK] to confirm. The setting is saved. @@ Enter or edit the name. To erase a character, select [Clear]. Press [OK] to confirm. @@ Select [On]/[Off], and press [OK] to confirm. The setting is saved. is displayed in standby mode. Set the display language Note This feature only applies to models with multiple Languages available for selection vary with different countries. language support.

Note When ECO is set to [On], the connection range between the handset and the base station can be reduced. 1 2 Select [Menu] > [Phone setup] > [Language], then press [OK] to confirm. Select a language, then press [OK] to confirm. The setting is saved. 24 EN Your phone has a built-in alarm clock. Check the information below to set your alarm clock. Set the alarm 1 2 3 Select [Menu] > [Alarm], then press [OK] to confirm. Select [On once] or [On daily], then press [OK] to confirm. Enter an alarm time, then press [OK] to confirm. The alarm is set and is displayed on the screen.

Tip Press / to switch between [AM] / [PM]. Turn off the alarm When the alarm rings Press any key to turn off the alarm. Before the alarm rings Select [Menu] > [Alarm] > [Off], then press [OK] to confirm. The setting is saved. EN 25 Eng l i sh 11 Alarm clock 12 Services The phone supports a number of features that help you handle and manage the calls. Auto prefix This feature checks and formats your outgoing call number before it is dialed out. The prefix number can replace the detect number you set in the menu.



You're reading an excerpt. [Click here to read official PHILIPS CD 290 user guide](http://yourpdfguides.com/dref/4246754)
<http://yourpdfguides.com/dref/4246754>

For example, you set 604 as the detect number and 1250 as the prefix. When you have dialed out a number such as 6043338888, your phone changes the number to 12503338888 when it dials out. Note Call list type You can set whether you can view all incoming calls or missed calls from this menu.

Select the call list type The maximum length of a detect number is 5 digits. The maximum length of an auto prefix number is 10 digits. 1 2 Select [Menu] > [Services] > [Call list type], then press [OK] to confirm. Select an option, then press [OK] to confirm. Note This is a country dependent feature. Auto conference To join an external call with another handset, press . Set auto prefix 1 2 3 Select [Menu] > [Services] > [Auto prefix], then press [OK] to confirm. Enter the detect number, then press [OK] to confirm. Enter the prefix number, then press [OK] to confirm. The setting is saved.

Note Activate/Deactivate auto conference 1 2 Select [Menu] > [Services] > [Conference], then press [OK] to confirm. Select [Auto]/[Off], then press [OK] to confirm. The setting is saved. To enter a pause, press and hold . Network type Note This feature only applies to models with network type support.

Note If the prefix number is set and the detect number is left empty, the prefix number is added to all outgoing calls. 1 2 Select [Menu] > [Services] > [Network type], then press [OK]. Select a network type, then press [OK]. The setting is saved. Note The feature is unavailable if the dialed number starts with * and #.

26 EN Ensure that the recall time is set correctly before you can answer a second call. In normal case, the phone is already preset for the recall duration. You can select among 3 options: [Short], [Medium] and [Long]. The number of available options varies with different countries. For details, consult your service provider. You can register additional handsets to the base station. The base station can register up to 5 handsets. Auto registration Place the unregistered handset on the base station. The handset detects the base station and start to register automatically. Registration is completed in less than 2 minutes.

The base station automatically assigns a handset number to the handset. If auto registration fails, register your handset manually to the base station. 1 2 Select [Menu] > [Services] > [Recall time], then press [OK] to confirm. Select an option, then press [OK] to confirm. The setting is saved. Dial mode Note This feature only applies to models that support both tone and pulse dial. 1 2 3 Select [Menu] > [Services] > [Register], then press [OK] to confirm. Enter the system PIN. Press [Clear] to make corrections. Press [OK] to confirm the PIN.

Press and hold seconds. Note Dial mode is the telephone signal used in your country. The phone supports tone (DTMF) and pulse (rotary) dial. Consult the service provider for detailed information. on the base station for 5 Set the dial mode For models with an answering machine, you hear a confirmation beep. 1 2 Select [Menu] > [Services] > [Dial mode], then press [OK] to confirm. Select a dial mode, then press [OK] to confirm. The setting is saved. Note 4 Press [OK] to start the registration. Registration is complete in less than 2 minutes.

@@@Enter the system PIN. Press [Clear] to make corrections. Press [OK] to confirm the PIN. Select the handset number to be unregistered. Press [OK] to confirm. @@ The handset displays a confirmation request. Press [OK] to confirm. @@Select [Record also] if you allow the callers to leave messages. @@Machine] > [Voice answer], then press [OK] to confirm. Select an answer mode, then press [OK] to confirm.

@@By default, the answering machine is set to the [Record also] mode. @@@Machine] > [Voice answer], then press [OK] to confirm. Select [Answer only]/[Record also]/[Off], then press [OK] to confirm. The setting is saved. The answering machine language is the language for the announcements. 1 2 Select [Menu] > [Answ. Machine] > [Voice language], then press [OK] to confirm. Select a language, then press [OK] to confirm. The setting is saved. Through the base Press to turn the answering machine on or off in standby mode.

Note When the answering machine is switched on, it answers incoming calls after a certain number of rings based on the ring delay setting. Announcements The announcement is the message your caller hears when the answering machine picks up the call. The answering machine has 2 default announcements: the [Record also] mode and [Answer only] mode. EN 29 Eng l i sh Set the answer mode Record an announcement The maximum length of the announcement you can record is 3 minutes. The newly recorded announcement automatically replaces the old one.

Restore the default announcement 1 2 3 4 Select [Menu] > [Answ. Machine] > [Announcement], then press [OK] to confirm. Select [Record also] or [Answer only], then press [OK] to confirm. Select [Use default], then press [OK] to confirm. The handset displays a confirmation request.

Press [OK] to confirm. The default announcement is restored. 1 2 3 4 5 Select [Menu] > [Answ. Machine] > [Announcement], then press [OK] to confirm. Select [Record also] or [Answer only], then press [OK] to confirm. Select [Record new], then press [OK] to confirm. Recording starts after the beep. Press [OK] to stop recording or the recording stops after 3 minutes. You can listen to the newly recorded announcement on the handset. Note Incoming messages (ICM) Each message can be up to 3 minutes long.

When you receive new messages, the new message indicator flashes on the answering machine and the handset displays a notification message. Note If you pick up the phone when the caller leaves a message, the recording stops and you can talk to the caller directly. To restore the default announcement, delete your current announcement. Note Make sure that you speak close to the microphone when you record an announcement. Listen to the announcement Note If the memory is full, the answering machine switches to [Answer only] automatically. Delete old messages to receive new ones. 1 2 3 Select [Menu] > [Answ. Machine] > [Announcement], then press [OK] to confirm. Select [Record also] or [Answer only], then press [OK] to confirm. Select [Play], then press [OK] to confirm.

You can listen to the current announcement. Note You can no longer listen to the announcement when you pick up an incoming call. 30 EN You can listen to the incoming messages in the sequence they are recorded. From the base To start/stop listening, press . To adjust the volume, press / .

To play the previous message/replay the current message, press . To play the next message, press . To delete the current message, press . Note No deleted messages can be recovered. From the base Press and hold in standby mode.

All old messages are permanently deleted.



[You're reading an excerpt. Click here to read official PHILIPS CD](http://yourpdfguides.com/dref/4246754)

[290 user guide](http://yourpdfguides.com/dref/4246754)

<http://yourpdfguides.com/dref/4246754>

From the handset 1 2 Select [Menu] > [Answ. Machine] > [Delete all], then press [OK] to confirm. The handset displays a confirmation request. Press [OK] to confirm. All old messages are permanently deleted. Note From the handset Select [Menu] > [Answ. Machine] > [Play], then press [OK] to confirm. New messages start playing. Old messages start playing if there is no new message.

Press [Back] to stop listening. Press [Option] to enter the options menu. Press / to increase/decrease the volume. You can delete the read messages only. No deleted messages can be recovered. Call screening You can hear the caller while he is leaving a message. Press to answer the call. From the base Press / to adjust the speaker volume during call screening. Note If you turn the speaker to the lowest volume level, the call screening function is off. Delete an incoming message From the base Press when you listen to the message.

The current message is deleted. From the handset 1 2 When you listen to the message, press [Option] to enter the options menu. Select [Delete], then press [OK] to confirm. The current message is deleted. EN 31 Eng l i sh Listen to the incoming messages Delete all old incoming messages Set the ring delay You can set the number of times the phone rings before the answering machine picks up the call.

Activate/deactivate the remote access You can allow or block remote access to the answering machine. 1 2 Select [Menu] > [Answ. Machine] > [Ring delay], then press [OK] to confirm. Select a new setting, then press [OK] to confirm. The setting is saved.

Note 1 2 Select [Menu] > [Answ. Machine] > [Remote access], then press [OK] to confirm. Select [Activate]/[Deactivate], then press [OK] to confirm. The setting is saved. Change the PIN code Make sure that the answering machine is switched on before this feature can be applied. 1 2 3 4 Select [Menu] > [Answ. Machine] > [Remote access] > [Change PIN], then press [OK] to confirm. Enter the old PIN, then press [OK] to confirm. Enter the new PIN code, then press [OK] to confirm. Enter the new PIN code again, then press [Save] to confirm.

The setting is saved. Tip When you access the answering machine remotely, you are recommended to set the ring delay to [Toll saver] mode. This is a cost effective way to manage your messages. When there are new messages, the answering machine picks up the call after 3 rings; When there is no messages, it picks up the call after 5 rings. Remote access You can operate your answering machine when you are away from home. Simply make a call to your phone with a touch tone phone and enter your 4-digit PIN code. Note The remote access PIN code is the same as your system PIN. The preset PIN is 0000. Access the answering machine remotely 1 2 3 Make a call to your home number with a touch tone phone. Enter # when you hear the announcement.

Enter your PIN code. You now have access to your answering machine, and you can listen to the new messages. Note You have 2 chances to enter the correct PIN code before your phone hangs up. 32 EN 4 Note When there is no message, the phone hangs up automatically if no key is pressed for 8 seconds. Remote access commands Key 1 2 3 6 7 8 9 Function Repeat the current or listen to the previous message.

Listen to messages. Skip to the next message. Delete the current message. Switch the answering machine on. (not available when you listen to the messages).

Stop listening to the message. Switch the answering machine off. (not available when you listen to the messages). EN 33 Eng l i sh Press a key to carry out a function. See the Remote access commands table below for a list of available functions. 14 Technical data Display Amber LCD backlight General telephone features Dual mode caller name & number identification Conference call and voicemails Intercom Maximum talk time: 17 hours Phonebook list, Redial list and Call log Phonebook list with 100 entries Redial list with 20 entries Call log with 50 entries Battery CORUN: 2 x AAA Ni-MH 1.2V 600mAh rechargeable batteries GPI: 2 x AAA Ni-MH 1.2V 600mAh rechargeable batteries BYD: 2 x AAA Ni-MH 1.2V 600mAh rechargeable batteries Adapter Base and charger Philips: SSW-1920UK/SG-2, Input: 100-240V50/60Hz 0.2A, Output: 6V 500mA Philips: S003PB060050, Input: 100-240V 50/60Hz 0.

Philips: SSW-1920UK/SG-2, Input: 100-240V50/60Hz 0.2A, Output: 6V 500mA Philips: S003PB060050, Input: 100-240V 50/60Hz 0.

2A, Output: 6V 500mA Power consumption Power consumption at standby mode: around 0.60W (CD290); 0.65W (CD295) Weight and dimensions (CD290) Handset: 113.6 grams 164 x 47.5 x 164 mm (H x W x D) Base: 116.9 grams 79.2 x 130.3 x 91 mm (H x W x D) Charger: 56.4 grams 78.5 x 80.

5 x 83 mm (H x W x D) Weight and dimensions (CD295) Handset: 113.6 grams 164 x 47.5 x 164 mm (H x W x D) Base: 148.8 grams 79.2 x 130.3 x 91 mm (H x W x D) Charger: 56.4 grams 78.5 x 80.5 x 83 mm (H x W x D) 34 EN Declaration of conformity Hereby Philips Consumer Lifestyle, declares that the CD290/CD295 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. You can find the Declaration of Conformity on www.

p4c. philips.com. @@@@To register a handset from different make to the base station, put the base station in registration mode, then follow the procedure described in the handset manufacturer's instructions. Disposal of your old product and batteries Your product is designed and manufactured with high quality materials and components, which can be recycled and reused. Compliance with EMF Koninklijke Philips Electronics N.V. manufactures and sells many products targeted at consumers, which, like any electronic apparatus, in general have the ability to emit and receive electromagnetic signals. When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/ EC. Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste. @@@@Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environmental and human health. When this logo is attached to a product, it means a financial contribution has been paid to the associated national recovery and recycling system.

Environmental information All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.) Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment. 36 EN 16 Frequently asked questions No signal bar is displayed on the screen.



[You're reading an excerpt. Click here to read official PHILIPS CD](http://yourpdfguides.com/dref/4246754)

[290 user guide](http://yourpdfguides.com/dref/4246754)

<http://yourpdfguides.com/dref/4246754>

The handset is out of range. Move it closer to the base station.

If the handset displays [Unregister], put the handset on the base until the signal bar appears.. Tip For further information, see 'Register the handsets' on the Services section. If I fail to register the additional handsets to the base station, what do I do? Your base memory is full. Unregister the unused handsets and try again.

No dialing tone Check your phone connections. The handset is out of range. Move it closer to the base station. No docking tone The handset is not placed properly on the base station/charger. The charging contacts are dirty.

Disconnect the power supply first and clean the contacts with a damp cloth. I cannot change the settings of my voice mail, what do I do? The voice mail service is managed by your service provider but not the phone itself. Contact your service provider to change the settings. The handset on the charger does not charge. Make sure the batteries are inserted correctly. Make sure the handset is placed properly on the charger. The battery icon animates when charging. Make sure the docking tone setting is turned on. When the handset is placed correctly on the charger, you can hear a docking tone. The charging contacts are dirty.

Disconnect the power supply first and clean the contacts with a damp cloth. Batteries are defective. Purchase new ones from your dealer. No display Make sure the batteries are charged. Make sure there is power and the phone is connected. Bad audio (crackles, echo, etc.) The handset is nearly out of range.

Move it closer to the base station. The phone receives interference from the nearby electrical appliances. Move the base station away from them.

The phone is at a location with thick walls. Move the base away from them. The handset does not ring. Make sure the handset ringtone is turned on. The caller ID does not display.

The service is not activated. Check with your service provider. The caller's information is withheld or unavailable. The handset loses connection with the base or the sound is distorted during a call. Check if the ECO mode is activated.

Turn it off to increase the handset range and enjoy the optimal call conditions. Note If the above solutions do not help, disconnect the power supply from both the handset and base station. Try again after 1 minute. EN 37 Eng l i sh 17 Appendix Text and number input tables Key Upper case characters (for English/

French/ German/ Italian/Turkish/ Portuguese/Spanish/Dutch/Danish/ Finnish/Norwegian/ Swedish/ Romanian/ Polish/Czech/Hungarian/Slovakian/ Slovenian/Croatian/Lithuanian/Estonian/ Latvian/Bulgarian) Space . 0, /, ; " ' ! ? * + - % ^ ~ \ | @ _ # = < > () & \$ [] { } ... ABC2C DEF3 GH14 JKL5 MNO6 PQRS7S T UV 8 W XY Z 9 Z Lower case characters (for English/ French/ German/ Italian/Turkish/ Portuguese/Spanish/Dutch/Danish/ Finnish/Norwegian/ Swedish) Space . 0, /, ; " ' ! ? * + - % ^ ~ \ | @ _ # = < > () & \$ [] { } ..

. abc2c def3 ghi4i jkl5 mno6 pqrS7s tuv8 wxyz9z Key 0 1 2 3 4 5 6 7 8 9 Key 0 1 2 3 4 5 6 7 8 9 Key 0 1 2 3 4 5 6 7 8 9 Upper case characters (for Greek) Space . 0, /, ; " ' ! ? * + - % ^ ~ \ | @ _ # = < > () & \$ [] { } ... AB2ABC 3DEF 4GHI 5JKL 6MNO 7PQRS 8T UV 9 W XY Z Lower case characters (for Greek) Space . 0, /, ; " ' ! ? * + - % ^ ~ \ | @ _ # = < > () & \$ [] { } ... 2abc 3def 4ghi 5jkl 6mno 7pqrs 8tuv 9wxyz Upper case characters (for Serbian) Space . 0, /, ; " ' ! ? * + - % ^ ~ \ | @ _ # = < > () & \$ [] { } ... ABCC2 DEF3 GH14 JKL5 MNO6 PQRS S7 T UV 8 W XY Z Z 9 0 1 2 3 4 5 6 7 8 9 Key 0 1 2 3 4 5 6 7 8 9 38 EN 2 3 4 5 6 7 8 9 EN 39 Eng l i sh Key 0 1 Lower case characters (for Serbian) Space . 0, /, ; " ' ! ? * + - % ^ ~ \ | @ _ # = < > () & \$ [] { } ..

.. abcC2 def3 ghi4 jkl5 mno6 pqrS S7 t u v Lj 8 wxyZZ9 18 Index additional handsets alarm announcements answering machine auto conference auto prefix H 27 25 29 29 26 26 handset name 24 A I incoming messages intercom calls internal calls 30 15 15 L B base station installation overview battery 8 6 10, 34 language setting answering machine handset listen to messages 29 24 31 M C missed calls mute 20 20 12 10 14, 16, 26 18 20 13 call log caller ID calling charging conference contacts N network type 26 O P date setting default settings delete messages dial mode disposal D on/off 9 28 31 27 35 29 E F ECO mode 24 phone overview set up phone settings phonebook PIN answering machine handset power adapter 5 9 23 18, 20 10, 32 10 34 find handsets/paging 6 R G GAP 40 EN 35 recall time redial register/unregister remote access to answering machine 27 22 27, 28 32 S safety save a number signal strength silent mode sounds docking keytone sound profile standby mode 3 20 11 23 23 24 10 T text entry time setting transfer call troubleshooting/FAQ two calls/call on hold 17, 38 9 15 37 13 V volume adjustment 13 EN 41 Eng l i sh ring delay ringtone 32 23 0168 Specifications are subject to change without notice 2012

Koninklijke Philips Electronics N.V. All rights reserved.

UM_CD290-295_05_EN_V1.1 WK12031 .



[You're reading an excerpt. Click here to read official PHILIPS CD](#)

[290 user guide](#)

<http://yourpdfguides.com/dref/4246754>