



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for PHILIPS D2152. You'll find the answers to all your questions on the PHILIPS D2152 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual PHILIPS D2152  
User guide PHILIPS D2152  
Operating instructions PHILIPS D2152  
Instructions for use PHILIPS D2152  
Instruction manual PHILIPS D2152

Always there to help you

Register your product and get support at  
[www.philips.com/welcome](http://www.philips.com/welcome)



D210  
D215



Extended user  
documentation

**PHILIPS**



[You're reading an excerpt. Click here to read official PHILIPS D2152 user guide](http://yourpdfguides.com/dref/5735229)

<http://yourpdfguides.com/dref/5735229>

### Manual abstract:

@@The Electrical network is classified as hazardous. @@Ensure that the electrical outlet is always easily accessible. ?? For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily accessible. ?? Handsfree activation could suddenly increase the volume in the earpiece to a very high level: make sure the handset is not too close to your ear. ?? This equipment is not designed to make emergency calls when the power fails. An alternative has to be made available to allow emergency calls. ?? Do not allow the product to come into contact with liquids. ?? Do not use any cleaning agents containing alcohol, ammonia, benzene, or abrasives as these may harm the set. ?? Do not expose the phone to excessive heat caused by heating equipment or direct sunlight. ?? Do not drop your phone or allow objects to fall on your phone.

?? Active mobile phones in the vicinity may cause interference. To avoid damage or malfunction Caution ?? Use only the power supply listed in the user ?? Use only the batteries listed in the user instructions. ?? Risk of explosion if battery is replaced by an incorrect ?? Dispose of used batteries according to the instructions. ?? Do not dispose of batteries in fire. ?? Always use the cables provided with the product.

?? Do not allow the charging contacts or the battery to ?? Do not let small metal objects come into contact with the product. This can deteriorate audio quality and damage the product. ?? Metallic objects may be retained if placed near or on the handset receiver. ?? Do not use the product in places where there are explosive hazards. ?? Do not open the handset, base station or charger as you could be exposed to high voltages. come into contact with metal objects. type. instructions. About operating and storage temperatures ? Operate in a place where temperature is always between 0C to +40C (up to 90% relative humidity). ? Store in a place where temperature is always between -20C and +45C (up to 95% relative humidity). ? Battery life may be shorter in low temperature conditions. EN 3 2 Your phone Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at [www.philips.com/welcome](http://www.philips.com/welcome). Power adapter\*\* What is in the box Line cord\* Guarantee Handset\*\* Short user manual Note ?? \* In some countries, you have to connect the line adapter to the line cord, then plug the line cord to the telephone socket.

Base station (D210) Tip Base station (D215) ?? \*\* In multi-handset packs, there are additional handsets and chargers and power adapters. Charger (without telephone socket)\*\* 4 EN Overview of the phone a e ? Press to enter a space during text editing. ? Press and hold to lock/unlock the keypad in standby mode.

? Press and hold to enter a pause when making a call. ? Switch to upper/lower case during editing. (for D210) or / (for D215) ? Mute or unmute the microphone. ? Access to the answer machine menu in standby mode (for D215 only). ? Listen to new messages from the answering machine (for D215 only). f m l k b c d g j i h e f g h Microphone i n ? Turn the speaker phone on/off. ? Make and receive calls through the speaker.

? Press and hold to make an intercom call (for multi-handset version only). ? Set the dial mode (pulse mode or temporary tone mode). ? Scroll down on the menu. ? Decrease the earpiece/speaker volume. ? Access the call log.

? Make and receive calls. ? Recall key (This function is network dependent.) j o k a Earpiece b ? Scroll up on the menu. ? Increase the earpiece/speaker volume. ? Access the phonebook.

l c REDIAL/C ? Delete text or digits. ? Cancel operation. ? Access the redial list. d ? End the call. ? Exit the menu/operation. ? Press and hold to switch the handset on or off. m MENU/OK ? Access the main menu. ? Confirm selection. ? Enter the options menu. ? Select the function displayed on the handset screen directly above the key.

n Loudspeaker o Battery door EN 5 Decrease/increase the speaker volume. Overview of the base station D210 e f / Skip backward/forward during playback. ? Play messages. ? Stop messages playback. Turn the answering machine on or off. g a a ? Press to find handsets. ? Press and hold to enter the registration mode. D215 a b c d e f g a Speaker (back of the base station) b ? Press to find handsets. ? Press and hold to enter the registration mode. ? Delete the current playback message.

? Press and hold to delete all old messages. / EN c d 6 3 Get started Caution ?? Make sure that you have read the safety instructions in the 'Important safety instructions' section before you connect and install your handset. D210 Connect the base station Warning ?? Risk of product damage! Ensure that the power supply voltage corresponds to the voltage printed on the back or the underside of the phone. ?? Use only the supplied power adapter to charge the batteries.

D215 Note ?? If you subscribe to the digital subscriber line (DSL) high speed internet service through your telephone line, ensure you install a DSL filter between the telephone line cord and the power socket.

The filter prevents noise and caller ID problems caused by the DSL interference. For more information on the DSL filters, contact your DSL service provider.

?? The type plate is located on the bottom of the base station. 1 2 Connect each end of the power adapter to: ? the DC input jack of the base station; ? the power socket on the wall. Connect each end of the line cord to: ? the telephone socket of the base station; ? the telephone socket on the wall.

3 Connect each end of the power adapter to (for multi handset version only): ? the DC input jack at the bottom of the extra handset charger. ? the power socket on the wall. EN 7 Caution ?? Risk of explosion! Keep batteries away from heat, ?? Use only the supplied batteries. ?? Risk of decreased battery life! Never mix different brands or types of batteries. sunshine or fire. Never discard batteries in fire. Note ?? Charge the batteries for 8 hours before first use. ??

If the handset becomes warm when the batteries are charging, it is normal. Warning ?? Check the battery polarity when inserting in the battery compartment. Incorrect polarity may damage the product.

Insert the supplied batteries 1 Configure your phone (country dependent) 2 1 2 When using your phone for the first time, you see a welcome message. Press MENU/OK. Set the country/language 3 Select your country/language, then press MENU/OK to confirm. The country/language setting is saved. Note ?? The country/language setting option is country dependent. If no welcome message is displayed, it means the country/language setting is preset for your country.

Then you can set the date and time. To reset the language, see the following steps. 1 Select MENU/OK > [Phone setup] > [Language], then press MENU/OK to confirm. 8 EN 2 Select a language, then press MENU/OK to confirm.

The setting is saved.



[You're reading an excerpt. Click here to read official PHILIPS D2152 user guide](#)

<http://yourpdfguides.com/dref/5735229>

Charge the handset Set the date and time 1 2 3 4 Press MENU/OK. Select [Phone setup] > [Date & time], then press MENU/OK to confirm. Press the numeric buttons to enter the date, then press MENU/OK to confirm. The time setting menu is displayed on the handset.

Press the numeric buttons to enter the time. ? If the time is in 12-hour format, press / to select [am] or [pm] (Country dependent). Press MENU/OK to confirm. 5 Place the handset on the base station to charge the handset. When the handset is placed correctly on the base station, you hear a docking sound. The handset starts charging. Note ?? Charge the batteries for 8 hours before first use. ?? If the handset becomes warm when the batteries are being charged, it is normal. Change the remote access PIN (for D215) Note ?? The default answering machine remote access PIN code is 0000 and it is important to change it to ensure the security. Your phone is now ready to use. 1 2 3 4 5 Press / Machine]. or MENU/OK > [Answ. Check the battery level The battery icon displays the current battery level. When the handset is off the base station, the bars indicate the battery level (full, medium and low). When the handset is on the base station/charger, the bars flash until charging is complete.

The empty battery icon flashes. The battery is low and needs recharging. EN 9 Select [Remote access] > [Change PIN], then press MENU/OK to confirm. Enter the old PIN, then press MENU/OK to confirm. Enter the new PIN code, then press MENU/OK to confirm. Enter the new PIN code again, then press MENU/OK to confirm. The setting is saved. The handset turns off if the batteries are empty. If you are on the phone, you hear warning tones when the batteries are almost empty. The call gets disconnected after the warning.

It flashes when receiving incoming call. It remains steadily on when you are in a call. The speaker is on. The ringer is off. Answering machine (D215 only): it flashes when there is a new message or when the memory is full.

It displays when the telephone answering machine is turned on. It flashes when there is a new voice message. It remains steadily on when the voice messages are already viewed in the call log. The icon is not shown when there is no voice message. It is displayed when you scroll up / down a list or increase / decrease the volume.

There are more digits on the right. Press REDIAL/C to read. The ECO+ mode is activated. What is standby mode? Your phone is in standby mode when it is idle. The standby screen displays the handset name or date and time, and handset number. Display icons In standby mode, the icons shown on the main screen tell you what features are available on your handset. Icon Descriptions When the handset is off the base station/charger, the bars indicate the battery level (from full to low). When the handset is on the base station/charger, the bars keep scrolling until charging is complete. The empty battery charges. 1 2 Press during a call.

The first call is put on hold. Dial the second number. The number displayed on the screen is dialed out. When you are connected to two calls, press , then .

The two calls are combined and a conference call is established. EN 13 5 Intercom and conference calls An intercom call is a call to another handset that shares the same base station. A conference call involves a conversation between you, another handset user and the outside callers. 2 Select a handset number, then press MENU/OK to confirm. Wait for the other side to answer your call. Switch between calls Press and hold to switch between the outside call and the intercom call.

Make a call to another handset Note ?? If the base station only has 2 registered handsets, press and hold to make a call to another handset. Make a conference call A 3-way conference call is between you, another handset user and the outside callers. It requires two handsets to share the same base station.

1 During an external call Press and hold . For multi-handset versions, the handsets available for intercom are displayed, then go to step 2.

For two-handset versions, the other handset rings, then go to step 3. Select a handset number, then press MENU/OK to confirm. The selected handset rings.

Press on the selected handset. The intercom is established.

Press REDIAL/C or the intercom call. to cancel or end 1 Press and hold to initiate an internal call. The external caller is put on hold. For multi-handset versions, the handsets available for intercom are displayed, then go to step 2. For two-handset versions, the other handset rings, then go to step 3. Select or enter a handset number, then press MENU/OK to confirm. The selected handset rings. Press on the selected handset. The intercom is established. Press MENU/OK.

You are now in a 3-way conference call with an external call and a selected handset. Press Note 2 3 4 2 3 4 5 While you are on the phone You can go from one handset to another during a call: 1 Press and hold . The current caller is put on hold. For multi-handset versions, the handsets available for intercom are displayed, then go to step 2. to end the conference call. ?? Press to join an ongoing conference with another handset if [Services] > [Conference] is set to [Auto]. 14 EN During the conference call 1 2 Press and hold to put the external call on hold and go back to the internal call. The external call is put on hold. Press and hold again to establish the conference call again. Note ?? If a handset hangs up during the conference call, the other handset remains connected to the external call.

EN 15 6 Text and numbers You can enter text and numbers for handset name, phonebook records, and other menu items. Enter text and numbers 1 2 3 Press once or several times on the alphanumeric key to enter the selected character. Press REDIAL/C to delete a character. Press and hold REDIAL/C to delete all characters. Press and to move the cursor left and right.

Press Note ?? For information on key mapping of characters and numbers, see the chapter 'Appendix'. to add a space. Switch between uppercase and lowercase By default, the first letter of each word in a sentence is uppercase and the rest is lowercase. Press and hold to switch between the uppercase and lowercase letters. 16 EN 7 Phonebook This phone has a phonebook that stores up to 50 records.

You can access the phonebook from the handset. Each record can have a name up to 14 characters long and a number up to 24 digits long. There are 2 direct access memories (keys and ). Depending on your country, keys and are preset to the voice mail number and information service number of your service provider respectively. When you press and hold on the key in standby mode , the saved phone number is dialed automatically. Scroll the contact list 1 2 Press or press MENU/OK > [Phonebook] > [View] to access the phonebook list. Press and to scroll through the phonebook list. Enter the first character of a contact 1 2 Press or press MENU/OK > [Phonebook] > [View] to access the phonebook list.



[You're reading an excerpt. Click here to read official PHILIPS D2152 user guide](http://yourpdfguides.com/dref/5735229)

<http://yourpdfguides.com/dref/5735229>

Press the alphanumeric key that matches the character. The first record that starts with this character is displayed.

Note ?? The availability of direct access memory is country dependent. Call from the phonebook 1 Press or press MENU/OK > [Phonebook] > [View] to access the phonebook list. Select a contact in the phonebook list. Press to make the call. View the phonebook Note ?? You can view the phonebook on one handset only each time. 2 3 1 2 Press or press MENU/OK > [Phonebook] > [View] to access the phonebook list. Select a contact and view the available information. Access the phonebook during a call 1 2 Press MENU/OK. Select the contact, then press MENU/OK to view the number. Search a record You can search the phonebook records in these ways: ? Scroll the contacts list.

? Enter the first character of the contact. EN 17 Add a record Note ?? If your phonebook memory is full, the handset displays a notification message. Delete some records to add new ones. ?? The phonebook overwrites the old number with the new number. Delete a record 1 2 3 4 Press MENU/OK. Select [Phonebook] > [Delete], then press MENU/OK to confirm. Select a contact, then press MENU/OK to confirm. A confirmation request is displayed on the handset. Press MENU/OK to confirm. The record is deleted.

1 2 3 4 Press MENU/OK. Select [Phonebook] > [Add new], then press MENU/OK to confirm. Enter the name, then press MENU/OK to confirm. Enter the number, then press MENU/OK to confirm. Your new record is saved. Tip Delete all records 1 2 3 Press MENU/OK. Select [Phonebook] > [Delete all], press MENU/OK to confirm. A confirmation request is displayed on the handset. Press MENU/OK to confirm. All records (except the 2 direct access memory records) are deleted.

?? Press and hold to insert a pause. ?? Press once or several times on the alphanumeric key to ?? Press REDIAL/C to delete the character. Press to move the cursor left and right. enter the selected character. / Edit a record 1 2 3 4 5 Press MENU/OK. Select [Phonebook] > [Edit], then press MENU/OK to confirm. Select a contact, then press MENU/OK to confirm. Edit the name, then press MENU/OK to confirm. Edit the number, then press MENU/OK to confirm. The record is saved.

18 EN 8 Call log The call log stores the call history of all missed or received calls. The incoming call history includes the name and number of the caller, call time and date. This feature is available if you have registered to the caller ID service with your service provider. Your phone can store up to 20 call records. The call log icon on the handset flashes to remind you of any unanswered calls.

If the caller allows the display of his identity, you can view his name or number. The call records are displayed in chronological order with the most recent received call at the top of the list. Note ?? Make sure that the number in the call list is valid before you can call back directly from the call list. 3 Select an option, then press MENU/OK to confirm. View the call records 1 2 Press .

The incoming call log is displayed. Select a record, then press MENU/OK and select [View] for more available information. Save a call record to the phonebook 1 2 3 4 5 Press . The incoming call log is displayed. Select a record, then press MENU/OK to confirm. Select [Save number], then press MENU/OK to confirm. Enter and edit the name, then press MENU/OK to confirm. Enter and edit the number, then press MENU/OK to confirm. The record is saved. The icons shown on the screen tell you whether they are missed/received calls.

Icons Description It remains steadily on when browsing incoming calls in the call log. It flashes when there is a new missed call. It remains steadily on when browsing the missed calls in call log. Return a call 1 2 3 Press . Select a record on the list. Press to make the call. Call list type You can set whether you can view all incoming calls or missed calls from this menu. Select the call list type Delete a call record 1 Press . The incoming call log is displayed. 1 2 Press MENU/OK.

Select [Services] > [Call list type], then press MENU/OK to confirm. EN 19 2 3 4 Select a record, then press MENU/OK to confirm. Select [Delete], then press MENU/OK to confirm. A confirmation request is displayed on the handset..

Press MENU/OK to confirm. The record is deleted. Delete all call records 1 2 3 4 Press . The incoming call log is displayed. Press MENU/OK to enter the options menu.

Select [Delete all], then press MENU/OK to confirm. A confirmation request is displayed on the handset.. Press MENU/OK to confirm. @@It includes the names and/or numbers you have called. @@Select [Delete], then press MENU/OK to confirm. A confirmation request is displayed on the handset.. Press MENU/OK to confirm. @@Select [Delete all], then press MENU/OK to confirm.

A confirmation request is displayed on the handset.. Press MENU/OK to confirm. All records are deleted. Redial a call 1 2 Press REDIAL/C. Select a record, then press . @@Select a record, then press MENU/OK to confirm. Select [Save number], then press MENU/OK to confirm. Enter and edit the name, then press MENU/OK to confirm. Enter and edit the number, then press MENU/OK to confirm.

@@@Select [On]/[Off], then press MENU/OK to confirm. The setting is saved. 1 2 3 Press MENU/OK. @@Select a volume level, then press MENU/OK to confirm. @@@@Select [On]/[Off], then press MENU/OK to confirm.

@@@Select a ringtone, then press MENU/OK to confirm. @@Select [Phone setup] >[ECO+ mode], then press MENU/OK to confirm. Select [On]/[Off], and press MENU/OK to confirm. The setting is saved. ECO+ is displayed in standby mode.

1 2 3 Press MENU/OK. @@Select [On]/[Off], then press MENU/OK to confirm. The setting is saved. 22 EN Note ?? @@?? When ECO+ is activated, the standby time is reduced. @@@@Select a language, then press MENU/OK to confirm. @@@@Enter or edit the name. To erase a character, press REDIAL/C. Press MENU/OK to confirm. @@This feature only applies to models with multiple?? Languages available vary from country to country. language support.

1 Press MENU/OK. EN 23 11 Telephone answering machine Note ?? Available only for D215. Through the base Press to turn the answering machine on or off in standby mode. Note ?? When the answering machine is switched on, it answers incoming calls after a certain number of rings based on the ring delay setting. Your phone includes a telephone answering machine that records unanswered calls when it is on. You can access the answering machine remotely and change the settings through the answering machine menu on the handset. The button on the base station lights up when the answering machine is on. Set the answering machine language Note ?? This feature only applies to models with multiplelanguage support. Turn the answering machine on or off You can turn the answering machine on or off through the base station or the handset. The answering machine language is the language for the announcements.



[You're reading an excerpt. Click here to read official PHILIPS D2152 user guide](http://yourpdfguides.com/dref/5735229)

<http://yourpdfguides.com/dref/5735229>

1 2 3 Press / Machine]. or MENU/OK > [Answ. Select [Voice language], then press MENU/ OK to confirm. Select a language, then press MENU/OK to confirm. The setting is saved.

Through the handset 1 2 3 Press / Machine]. or MENU/OK > [Answ. Select [Voice answer], then press MENU/ OK to confirm. Select [Answer only]/[Record also]/[Off], then press MENU/OK to confirm. The setting is saved.

Note Set the answer mode You can set the answering machine and select if the callers can leave messages. Select [Record also] if you allow the callers to leave messages. Select [Answer only] if you forbid the callers to leave messages. ?? [Answer only] means the answering machine is on. are answered and messages are recorded. ?? [Record also] means the answering machine is on. Calls ?? [Off] means the answering machine is off. Calls are only answered, messages are not recorded. 1 2 3 Press / Machine]. or MENU/OK > [Answ.

Select [Voice answer], then press MENU/ OK to confirm. Select an answer mode, then press MENU/ OK to confirm. 24 EN The setting is saved. Note ?? If the memory is full, the answering machine switches to [Answer only] mode automatically. Listen to the announcement 1 2 3 4 Press / Machine]. or MENU/OK > [Answ. Select [Announcement], then press MENU/OK to confirm. Select [Answer only] or [Record also], then press MENU/OK to confirm. Select [Play], then press MENU/OK to confirm. You can listen to the current announcement.

Note Announcements The announcement is the message your caller hears when the answering machine picks up the call. The answering machine has 2 pre-recorded announcements: [Record also] and [Answer only]. ?? You can no longer listen to the announcement when you pick up an incoming call. Record an announcement The maximum length of the announcement you can record is 3 minutes. The newly recorded announcement automatically replaces the old one. Restore the default announcement 1 2 3 4 5 6 1 2 3 4 5 Press / Machine]. or MENU/OK > [Answ. Press / Machine]. or MENU/OK > [Answ. Select [Announcement], then press MENU/OK to confirm.

Select [Answer only] or [Record also], then press MENU/OK to confirm. Select [Record], then press MENU/OK to confirm. Start recording close to the microphone after the beep. Press MENU/OK to stop recording or the recording stops after 3 minutes. You can listen to the newly recorded announcement on the handset. Note Select [Announcement], then press MENU/OK to confirm. Select [Record also] or [Answer only], then press MENU/OK to confirm. Select [Use default], then press MENU/ OK to confirm. The handset displays a confirmation request is displayed on the handset. Press MENU/OK to confirm.

The default announcement is restored. Incoming messages Each message can be up to 3 minutes long. When you receive new messages, the new message indicator flashes on the answering machine and the handset. ?? Make sure that you speak close to the microphone when you record an announcement. EN 25 Note ?? If you pick up the phone when the caller leaves a message, the recording stops and you can talk to the caller directly. ?? If the memory is full, the answering machine switches to [Answer only] automatically. Delete old messages to receive new ones. From the handset 1 2 When you listen to the message, press MENU/OK to enter the options menu. Select [Delete], then press MENU/OK to confirm. The current message is deleted.

Listen to the incoming messages You can listen to the incoming messages in the sequence they are recorded. From the base ? To start/stop listening, press . ? To adjust the volume, press / . ? To play the previous message/replay the current message, press . ? To play the next message, press . ? To delete the current message, press . Note ?? No deleted messages can be recovered. Delete all old incoming messages Press and hold on the base station in standby mode. All old messages are permanently deleted. From the handset 1 2 3 Press / Machine] or MENU/OK > [Answ.

Select [Delete all], then press MENU/OK to confirm. A confirmation request is displayed on the handset. Press MENU/OK to confirm. All old messages are permanently deleted. Note From the handset ? If there are new messages, press / to listen. If there is no new message, press / , then MENU/OK to listen to old messages. ? Press MENU/OK > [Answ. Machine] > [Play], then press MENU/OK to confirm. New messages start playing. Old messages start playing if there is no new message.

? ? ? Press REDIAL/C to stop listening. Press MENU/OK to enter the options menu. Press / to increase/decrease the volume. ?? You can only delete the read messages. No deleted messages can be recovered. Set the ring delay You can set the number of times the phone rings before the answering machine picks up the call. 1 2 3 Press / Machine] or MENU/OK > [Answ. Delete an incoming message From the base Press when you listen to the message. The current message is deleted. 26 EN Select [Ring delay], then press MENU/OK to confirm.

Select a new setting, then press MENU/ OK to confirm. The setting is saved. Note ?? Make sure that the answering machine is switched on before this feature can be applied. 2 3 4 5 Select [Remote access] > [Change PIN], then press MENU/OK to confirm. Enter the old PIN, then press MENU/OK to confirm. Enter the new PIN code, then press MENU/OK to confirm. Enter the new PIN code again, then press MENU/OK to confirm. The setting is saved. Tip ?? When you access the answering machine remotely, you are recommended to set the ring delay to [Toll saver] mode. This is a cost effective way to manage your messages.

When there are new messages, the answering machine picks up the call after 3 rings; When there is no messages, it picks up the call after 5 rings. Access the answering machine remotely Remote access You can operate your answering machine when you are away from home. Simply make a call to your phone with a touch tone phone and enter your 4-digit PIN code. Note ?? The remote access PIN code is the same as your system PIN. The preset PIN is 0000. 1 2 3 Make a call to your home number with a touch tone phone. Enter # when you hear the announcement. Enter your PIN code. You now have access to your answering machine, and you can now listen to the new messages. Note ?? You have 2 chances to enter the correct PIN code before your phone hangs up.

Activate/deactivate the remote access You can allow or block remote access to the answering machine. 4 Press a key to carry out a function. See the Remote access commands table below for a list of available functions. Note 1 2 3 Press / Machine] or MENU/OK > [Answ. Select [Remote access], then press MENU/OK to confirm. Select [Activate]/[Deactivate], then press MENU/OK to confirm. The setting is saved. ?? When there is no message, the phone hangs up automatically if no key is pressed for 8 seconds. Remote access commands Key 1 2 3 6 Function Listen to the previous message. Listen to messages. Skip to the next message.



[You're reading an excerpt. Click here to read official PHILIPS D2152 user guide](http://yourpdfguides.com/dref/5735229)

<http://yourpdfguides.com/dref/5735229>

Delete the current message. Change the PIN code 1 Press / Machine]. or MENU/OK > [Answ. EN 27 7 8 9 Switch the answering machine on. (not available when you listen to the messages). Stop listening to the message. Switch the answering machine off. (not available when you listen to the messages). Behavior of the LED display on the base station The table below shows you the current status with different LED display behavior on the base station.

LED display Steady on Message status ? There is no new message and the memory is not full. ? The answering machine is switched on. ? Enter the paging mode ? There is a new message and the memory is not full. ? There is an incoming call. ? Recording an incoming message/announcement. ? Message playback. ? Remote access/listen to messages from the handset. ? There is no new message and the memory is full. ? Enter the registration mode Flashing Flashing (Fast) 28 EN 12 Services The phone supports a number of features that help you handle and manage the calls. Network type Note ?? This is a country dependent feature.

It only applies to models with network type support. Call list type You can set whether you can view all incoming calls or missed calls from this menu. 1 2 3 Press MENU/OK. Select [Services] > [Network type], then press MENU/OK. Select a network type, then press MENU/OK. The setting is saved. Select the call list type 1 2 3 Press MENU/OK. Select [Services]> [Call list type], then press MENU/OK to confirm. Select an option, then press MENU/OK to confirm.

Auto prefix This feature checks and formats your outgoing call number before it is dialed out.

The prefix number can replace the detect number you set in the menu. For example, you set 604 as the detect number and 1250 as the prefix. When you have dialed out a number such as 6043338888, your phone changes the number to 12503338888 when it dials out. Note ?? The maximum length of a detect number is 10 digits. The maximum length of an auto prefix number is 10 digits.

?? This is a country dependent feature. Auto conference To join an external call with another handset, press . Note ?? This feature is available only for multi-handset versions. Activate/Deactivate auto conference 1 2 3 Press MENU/OK. Select [Services] > [Conference], then press MENU/OK to confirm.

Select [Auto]/[Off], then press MENU/OK to confirm. The setting is saved. Set auto prefix 1 2 3 4 Press MENU/OK. Select [Services] > [Auto prefix], then press MENU/OK to confirm. Enter the detect number, then press MENU/OK to confirm. Enter the prefix number, then press MENU/OK to confirm. The setting is saved. EN 29 Note ?? To enter a pause, press and hold . ?? If the prefix number is set and the detect number is left ?? The feature is unavailable if the dialed number starts with \* and #. empty, the prefix number is added to all outgoing calls.

3 Select a dial mode, then press MENU/OK to confirm. The setting is saved. Note ?? If your phone is in pulse dial mode, press during a call for temporary tone mode. Digits entered for this call are then sent out as tone signals. Select the recall duration Make sure that the recall time is set correctly before you can answer a second call. In normal case, the phone is already preset for the recall duration. You can select among 3 options: [Short], [Medium] and [Long]. The number of available options varies with different countries. For details, consult your service provider. Auto clock Note ?? This service is network dependent.

?? Make sure you have subscribed to the caller ID service before you use this feature. 1 2 3 Press MENU/OK. Select [Services] > [Recall time], then press MENU/OK to confirm. Select an option, then press MENU/OK to confirm. The setting is saved.

It synchronizes the date and time on your phone with the public switched telephone network (PSTN) automatically. For the date to be synchronized, make sure the current year is set. 1 2 3 Press MENU/OK. Select [Services] > [Auto clock], then press MENU/OK to confirm. Select [On]/[Off] .

Press MENU/OK. The setting is saved. Dial mode Note ?? This feature only applies to models that support both tone and pulse dial. Register additional handsets You can register additional handsets to the base station. The base station can register up to 4 handsets. Dial mode is the telephone signal used in your country. The phone supports tone (DTMF) and pulse (rotary) dial. Consult the service provider for detailed information. Set the dial mode 1 2 3 4 Press MENU/OK on the handset. Select [Services] > [Register], then press MENU/OK to confirm.

Press and hold 5 seconds. on the base station for 1 2 Press MENU/OK. Select [Services] > [Dial mode], then press MENU/OK to confirm. Enter the system PIN. Press REDIAL/C to make corrections. Then press MENU/OK to confirm the PIN. 30 EN Note ?? For models with an answering machine, you hear a confirmation beep. 2 3 Select [Services] > [Reset], then press MENU/OK to confirm. A confirmation request is displayed on the handset. Press MENU/OK to confirm.

All settings (except the phonebook and direct access keys information) are reset. Registration is complete in less than 2 minutes. The base automatically assigns a handset number to the handset. Note ?? If the PIN is incorrect or no base is found within a certain period, your handset displays a notification message. Repeat the above procedure if registration fails.

?? The preset PIN is 0000. No change can be made on it. Unregister the handsets 1 2 3 4 5 Press MENU/OK. Select [Services] > [Unregister], then press MENU/OK to confirm. Enter the system PIN.

(The preset PIN is 0000). Press REDIAL/C to remove the number. Select the handset number to be unregistered. Press MENU/OK to confirm. The handset is unregistered. Tip ?? The handset name is displayed beside the handset number in standby mode. Restore default settings You can reset your phone settings to the original factory settings. 1 Press MENU/OK. EN 31 13 Technical data General specification and features ? Talk time: 16 hours ? Standby time: 180 hours ? Range indoor: 50 meters ? Range outdoor: 300 meters ? Phonebook list with 50 entries ? Redial list with 10 entries ? Call log with 20 entries ? Answering machine with 25 minutes recording time ? Caller identification standard support: FSK, DTMF Battery ? Philips: 2 x AAA Ni-MH 1.2V 550 mAh rechargeable batteries Power adapter Base and charger ? MEIC: MN-A102-U130, input: 100-240 V~, 50/60 Hz 200 mA, output: 6 Vdc 400 mA ? Tenpao: S003IB0600040, input: 100-240 V~, 50/60 Hz 150 mA, output: 6 Vdc 400 mA ? Power consumption ? Power consumption in standby mode: around 0.

70W (D210), 0.75 W (D215) Weight and dimensions (D210) ? Handset: 96.2 grams ? 158.2 x 47 x 26.3 mm (H x W x D) ? Base: 57.6 grams ? 71 x 68.4 x 45.0 mm (H x W x D) ? Charger: 43.8 grams ? 71 x 68.4 x 45.

0 mm (H x W x D) Weight and dimensions (D215) ? Handset: 96.2 grams ? 158.2 x 47 x 26.3 mm (H x W x D) ? Base: 104.0 grams ? 121.5 x 68.



[You're reading an excerpt. Click here to read official PHILIPS D2152 user guide](http://yourpdfguides.com/dref/5735229)  
<http://yourpdfguides.com/dref/5735229>

0 x 44.0 mm (H x W x D) ? Charger: 43.8 grams ? 71 x 68.4 x 45.

0 mm (H x W x D) 32 EN 14 Notice Declaration of conformity Hereby, WOOX Innovations declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. You can find the Declaration of Conformity on [www.p4c.philips.com](http://www.p4c.philips.com). This product has been designed, tested and manufactured according to the European R&TTE directive 1999/5/EC. Disposal of your old product and batteries Your product is designed and manufactured with high quality materials and components, which can be recycled and reused. Use GAP standard compliance The GAP standard guarantees that all DECT? GAP handsets and base stations comply with a minimum operating standard irrespective of their make. The handset and base station are GAP compliant, which means they guarantee the minimum functions: register a handset, take the line, make a call and receive a call. The advanced features may not be available if you use them with other makes.

To register and use this handset with a GAP compliant base station of different make, first follow the procedure described in the manufacturer's instructions, then follow the procedure described in this manual for registering a handset. To register a handset from different make to the base station, put the base station in registration mode, then follow the procedure described in the handset manufacturer's instructions. When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/ EC. Please inform yourself about the local separate collection system for electrical and electronic products. Please act according to your local rules and do not dispose of your old products with your normal household waste.

@@@Environmental information All unnecessary packaging has been omitted. @@@@?? The handset is out of range. Move it closer to the base station.

?? If the handset displays [Unregistered], register your handset. Tip ?? For further information, see the chapter 'Services', section 'Register additional handsets'.

5 If I fail to pair (register) the additional handsets to the base station, what do I do? Your base memory is full. Unregister the unused handsets and try again. Tip ?? For further information, see the chapter 'Services', section 'Unregister the handsets'. My handset is in searching status, what do I do? ? Make sure that the base station has power supply. ? Register the handset to the base station.

? Move the handset closer to the base station. I have chosen a wrong language which I cannot read, what do I do? 1 2 3 Press to go back to the standby screen. Press MENU/OK to access the main menu screen. One of the following texts appears on the screen: Rglages > Langue Phone setup > Language Config. tel.

> Idioma 4 Select it to access the language options. Select your own language. The handset loses connection with the base or the sound is distorted during a call. Check if the ECO+ mode is activated. Turn it off to increase the handset range and enjoy the optimal call conditions. No dialing tone ?? Check your phone connections. ?? The handset is out of range. Move it closer to the base station. No docking tone ?? The handset is not placed properly on the base station/charger. ?? The charging contacts are dirty.

Disconnect the power supply first and clean the contacts with a damp cloth. I cannot change the settings of my voice mail, what do I do? The voice mail service is managed by your service provider but not the phone itself. Contact your service provider to change the settings. The handset on the charger does not charge. ?? Make sure the batteries are inserted correctly. ?? Make sure the handset is placed properly on the charger. The battery icon animates when charging. ?? Make sure the docking tone setting is turned on. When the handset is placed correctly on the charger, you can hear a docking tone. ?? The charging contacts are dirty.

Disconnect the power supply first and clean the contacts with a damp cloth. ?? Batteries are defective. Purchase new ones with the same specifications. No display ?? Make sure the batteries are charged. ?? Make sure there is power and the phone is connected.

Bad audio (crackles, echo, etc.) ?? The handset is nearly out of range. Move it closer to the base station. ?? The phone receives interference from the nearby electrical appliances. Move the base station away from them.

EN 35 ?? The phone is at a location with thick walls. Move the base away from them. The handset does not ring. Make sure the handset ringtone is turned on. The caller ID does not display. ?? The service is not activated. Check with your service provider. ?? The caller's information is withheld or unavailable. Note ?? If the above solutions do not help, disconnect the power supply from both the handset and base station. Try again after 1 minute.

36 EN 16 Appendix Text and number input tables Key Upper case characters (for English/ French/German/Italian/Turkish/

Portuguese/Spanish/Dutch/Danish/ Finnish/Norwegian/ Swedish/Romanian/ Polish/Czech/Hungarian/Slovakian/ Slovenian/Croatian/ Lithuanian/Estonian/ Latvian/Bulgaria) Space . 0, / ; ; " ' ! ? \* + - % ^ ~ | @ \_ # = < > ( ) & ? \$ [ ] { } ... ABC2??? DEF3????? GHI4????? JKL5? MNO6 PQRS7????? T UV

8 ? ? W XY Z 9 ? ? ? ? Lower case characters (for English/ French/German/Italian/Turkish/ Portuguese/Spanish/Dutch/Danish/ Finnish/Norwegian/ Swedish/Romanian/ Polish/Czech/Hungarian/Slovakian/ Slovenian/Croatian/ Lithuanian/Estonian/ Latvian/Bulgaria) Space . 0, / ; ; " ' ! ? \* + - % ^ ~ | @ \_ # = < > ( ) & ? \$ [ ] { } ... abc2??? def3????? ghi4????? jkl5? mno6 pqr7????? tuv8??? wxyz9????? Key 0 1 2 3 4 5 6 7 8 9 Key 0 1 2 3 4 5 6 7 8 9 Key 0 1 2 3 4 5 6 7 8 9 Key 0 1 2 Upper case characters (for Greek) Space . 0, / ; ; " ' ! ? \* + - % ^ ~ | @ \_ # = < > ( ) & ? \$ [ ] { } ... AB?2ABC ???3DEF ???4GHI ???5JKL ???6MNO ???7PQRS ? ? ? ? 8T UV ? ? ? ? 9 W XY Z Lower case characters (for Greek) Space .

0, / ; ; " ' ! ? \* + - % ^ ~ | @ \_ # = < > ( ) & ? \$ [ ] { } ? ???2abc ???3def ???4ghi ???5jkl? ???6mno ???7pqr ???8tuv ???9wxyz Upper case characters (for Serbian) Space . 0, / ; ; " ' ! ? \* + - % ^ ~ | @ \_ # = < > ( ) & ? \$ [ ] { } ... ? ? ? ? ? ? ? ? 2 A B C ? ? ? ? ? ? 3DEF?? ? ? ? ? 4GHI? ? ? ? ? 5JKL? ? ? ? ? 6MNO ? ? ? ? ? 7PQRS?? ? ? ? ? 8T UV ? ? ? ? 9 W XY Z ? ? ? ? Lower case characters (for Serbian) Space .

0, / ; ; " ' ! ? \* + - % ^ ~ | @ \_ # = < > ( ) & ? \$ [ ] { } ? abc2 EN 37 0 1 2 3 4 5 6 7 8 9 Key 0 1 2 3 4 5 6 7 8 9 3 4 5 6 7 8 9 def3?? ghi4? jkl5? mno6 pqr7??? tuv8 xyz9???? 38 EN 2014 WOOX Innovations Limited. All rights reserved. Philips and the Philips? Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used by WOOX Innovations Limited under license from Koninklijke Philips N.

V. 0168 UM\_D210\_215\_05\_EN\_V1,0 wk1420.



[You're reading an excerpt. Click here to read official PHILIPS D2152 user guide](http://yourpdfguides.com/dref/5735229)  
<http://yourpdfguides.com/dref/5735229>