



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for PHILIPS EX-PERFECTCARE PURE GC7635. You'll find the answers to all your questions on the PHILIPS EX-PERFECTCARE PURE GC7635 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual PHILIPS EX-PERFECTCARE PURE GC7635
User guide PHILIPS EX-PERFECTCARE PURE GC7635
Operating instructions PHILIPS EX-PERFECTCARE PURE GC7635
Instructions for use PHILIPS EX-PERFECTCARE PURE GC7635
Instruction manual PHILIPS EX-PERFECTCARE PURE GC7635

Always here to help you

Register your product and get support at
www.philips.com/welcome

GC7600 series



User manual

PHILIPS



[You're reading an excerpt. Click here to read official PHILIPS EX-PERFECTCARE PURE GC7635 user guide](http://yourpdfguides.com/dref/5510830)
<http://yourpdfguides.com/dref/5510830>

Manual abstract:

philips. Com/welcome GC7600 series User manual 1 English 6 Français 15 Italiano 24 Português 33 Español 42 GC7600 series 6 English -- ANTI-CALC: Important information: -- Replace the ANTI-CALC cartridge when the ANTI-CALC replacement light flashes and the appliance beeps. If you do not, the product will stop working to prevent damaging itself. You could either replace the cartridge or use demineralised water with exhausted cartridge. -- To purchase more ANTI-CALC cartridges, go to your local Philips dealer or search for GC002 or GC004 in the online shop at www. [4] 1 ANTI-CALC cartridge 2 ANTI-CALC cartridge compartment 3 ANTI-CALC cartridge compartment lid 4 Carry lock release button (specific types only) 5 Filling funnel lid 6 Water tank with water level indicator 7 Iron platform 8 Supply hose 9 Mains cord with plug 10 ANTI-CALC cartridge replacement light 11 On/off button with power-on light 12 ECO button with light 13 Soleplate 14 'Iron ready' light 15 Steam trigger/steam boost button English Important 7 Read the separate important information leaflet and the user manual carefully before you use the appliance. Save both documents for future reference. To fully benefit from the support that Philips offers, register your product at www. Before first use - Placing the ANTI-CALC cartridge Note: The appliance does not produce steam if the ANTI-CALC cartridge is not in place. 1 Press the carry lock release button (specific types only) and remove the iron from the iron platform. 2 Open the ANTI-CALC cartridge compartment. 3 Take the ANTI-CALC cartridge out of its package (1) and pull the rubber cap from its bottom (2). Place the ANTI-CALC cartridge in the compartment and press it down until it locks into place (3). Then close the ANTI-CALC cartridge compartment lid. @@ This is normal and the water is harmless. @@ You can refill the water tank at any time during use. @@@@ This sensor informs you when the cartridge needs to be replaced. 2 Demineralised water You can safely use demineralised water in your steam generator. Make sure that the ANTI-CALC cartridge is always in place, as the cartridge serves as a link between the water tank and the iron. When you use demineralised water, the ANTI-CALC cartridge is not used and therefore replacement of the cartridge is not necessary. 3 Descaled water from the IronCare The IronCare removes scale from tap water to ensure optimum performance for your iron. Caution: Do not use perfumed water, water from a tumble dryer, rainwater, vinegar, mineral water, magnetically treated water (Aqua+), water from a drinking water filter, starch, descaling agents, ironing aids, salt or chemicals in the water tank. These types of water have been tested. They are not suitable and may even cause damage to the appliance. If you use any of these types of water, your guarantee becomes invalid. 1 Open the filling funnel lid. 2 Fill the water tank with tap water up to the MAX indication. then close filling funnel lid ('click'). English Using the appliance OptimalTemp technology Do not iron non-ironable fabrics. This appliance is equipped with OptimalTemp technology, which enables you to iron all types of ironable fabrics without adjusting the iron temperature or steam setting. -- Fabrics with these symbols are ironable, for example linen, cotton, polyester, silk, wool, viscose and rayon. 9 -- Fabrics with this symbol are not ironable. 2 Make sure that there is enough water in the water tank (see section 'Filling the water tank' in chapter 'Preparing for use'). 3 Plug in the appliance and press the on/off button. wait for approx. 2 minutes until the 'iron ready' light stops flashing. 4 Press and hold the steam trigger to start ironing. Keep the steam trigger pressed continuously when you move the iron over the fabric. Note: When you use the appliance for the first time or after replacement of the ANTI-CALC cartridge, it may take 10 seconds for steam to come out of the appliance. Note: The pump is activated each time you press the steam trigger. It produces subtle rattling sound, which is normal. When there is no water in the water tank, the pump sound is louder. Fill up the water tank with water when the water level drops below the minimum level. 10 English Steam boost function -- Use the steam boost function to remove stubborn creases. Press the steam trigger twice quickly. vertical steam ironing Hot steam is emitted from the iron. Never attempt to remove creases from a garment that someone is wearing. Do not apply steam near your or someone else's hand. You can use the steam iron in vertical position to remove wrinkles from hanging fabrics. 1 Hold the iron in vertical position, press the steam trigger and touch the garment lightly with the soleplate. Putting down the iron during ironing -- During ironing, you can place the iron either on the iron platform or horizontally on the ironing board. @@@@ 1 To activate the ECO mode, press the ECO button. The light in the ECO button goes on. @@@@ @@@@ @@@@ @@@@ - You can still continue steam ironing for 15-30 min. @@@@ @@@@ @@@@ @@@@ @@@@ Cleaning To properly maintain your appliance, clean it regularly. 1 Clean the appliance with a moist cloth. @@ 2 Pour the water out of the water tank into the sink. 3 Fold the supply hose. @@ 5 Fold the mains cord and fasten it with the Velcro strip. @@@@ @@@@ philips. @@ Problem The appliance does not produce any steam. Possible cause There is not enough water in the water tank. You have not pressed the steam trigger. You have just installed a new ANTI-CALC cartridge. The ANTI-CALC cartridge is not placed properly. @@ You have to replace the ANTI-CALC cartridge. Solution Fill the water tank beyond the MIN indication. Press the steam trigger and keep it pressed when you iron. Press and hold the steam trigger for 10 seconds until steam comes out. Press down the ANTI-CALC cartridge until it locks into position. Replace the ANTI-CALC cartridge (see chapter 'IMPORTANT: Replacing the ANTI-CALC cartridge'). You can also use demineralised water or descaled water from the IronCare. @@ english Problem The 'ANTICALC cartridge replacement' light keeps flashing. The appliance produces a loud pumping sound (subtle pumping sound is normal). Possible cause You have to replace the ANTI-CALC cartridge. Solution 13 Replace the ANTI-CALC cartridge (see chapter 'IMPORTANT: Replacing the ANTI-CALC cartridge'). You can also use demineralised water or descaled water from the IronCare. @@ Continue to press the steam trigger until the pumping sound stops and steam comes out of the soleplate. You have just installed a new ANTI-CALC cartridge. the water tank is empty. Refill the water tank with water and press the steam trigger until the pumping sound stops and steam comes out of the soleplate. Place the ANTI-CALC cartridge (see chapter 'Before first use - Placing the ANTI-CALC cartridge'). inspect the ANTI-CALC cartridge thoroughly.



[You're reading an excerpt. Click here to read official PHILIPS EX-PERFECTCARE PURE GC7635 user guide](http://yourpdfguides.com/dref/5510830)
<http://yourpdfguides.com/dref/5510830>

If you see any sign of damage or cracks, no matter how small, replace the ANTI-CALC cartridge with a new one. Press the on/off button to reactivate the steam generator. The ANTI-CALC cartridge is not in place. The ANTI-CALC cartridge is damaged or shows cracks or hairline cracks. the appliance has switched off. The safety auto-off function is activated automatically when the steam generator has not been used for more than 5 minutes. The iron leaves a The surface to be ironed was shine or an imprint uneven, for instance because on the garment.

You were ironing over a seam or a fold in the garment. @@@@ perfect Care is safe on all garments. @@@@Replace the ironing board cover if the foam material has worn out. You can also add an extra layer of felt material under the ironing board cover to prevent condensation on the ironing board. Put an extra layer of felt material under the ironing You may have an ironing board cover to prevent condensation on the ironing board that is not designed to cope with the high steam board. rate of the steam generator. There is too much steam coming out of the iron. The default setting of the iron Activate the ECO mode to iron with a lower is the OptimalTemp setting. in steam output. See section 'Energy saving' in this user this setting the iron provides manual. a high steam output. 14 English This iron has been approved by The Woolmark Company Pty Ltd for the ironing of wool only products provided that the garments are ironed according to the instructions on the garment label and those issued by the manufacturer of this iron. .



[You're reading an excerpt. Click here to read official PHILIPS EX-PERFECTCARE PURE GC7635 user guide](http://yourpdfguides.com/dref/5510830)
<http://yourpdfguides.com/dref/5510830>