



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for PHILIPS HC 5440/80. You'll find the answers to all your questions on the PHILIPS HC 5440/80 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual PHILIPS HC 5440/80**  
**User guide PHILIPS HC 5440/80**  
**Operating instructions PHILIPS HC 5440/80**  
**Instructions for use PHILIPS HC 5440/80**  
**Instruction manual PHILIPS HC 5440/80**

Always here to help you

Register your product and get support at:  
[www.philips.com/welcome](http://www.philips.com/welcome)



HC5440/80  
HC5440/16  
HC5440/15  
HC3420/80  
HC3420/17  
HC3420/15

User manual

**PHILIPS**



[You're reading an excerpt. Click here to read official PHILIPS HC 5440/80 user guide](http://yourpdfguides.com/dref/5635847)  
<http://yourpdfguides.com/dref/5635847>

**Manual abstract:**

□1) 1 Cutting unit 2 Length setting adjuster 3 On/off button 4 Charging light 5 Trimming comb 6 Beard comb (HC5440/80, HC3420/80, HC3420/17 only) 7 Adapter 8 Socket for small plug 9 Brush 10 Case (HC5440/80, HC3420/80 only) Important Read this user manual carefully before you use the appliance and save it for future reference. @@@@ Only the cutting unit can be rinsed under the tap. -- Use, charge and store the appliance at a temperature between 5°C and 35°C. -- Only use the adapter supplied. -- If the adapter is damaged, always have it replaced with one of the original type in order to avoid a hazard. -- Do not use the appliance if the cutting unit or the trimming comb is damaged or broken, as this may cause injury. electromagnetic fields This Philips appliance complies with all standards and regulations regarding exposure to electromagnetic fields (EMF). General -- The appliance is equipped with an automatic voltage selector and is suitable for mains voltages from 100 to 240 volts. -- The adapter transforms 100-240 volts to a safe low voltage of less than 24 volts. English Charging 7 Charge the appliance fully before you use it for the first time or after a long period of disuse.

It takes approximately 8 hours to fully charge the appliance. When it is fully charged, the appliance has a cordless operating time of up to 60 minutes (HC3420) or 75 minutes (HC5440). Note: After charging the appliance once fully for the first time, you can also use the appliance directly from the mains. Simply connect the appliance to the mains. Charging indications Charging -- When the appliance is charging, the charging light lights up green continuously. Charging the appliance 1 Make sure the appliance is switched off. 2 Insert the appliance plug into the appliance. 3 Put the adapter in the wall socket. 4 After charging, remove the adapter from the wall socket and pull the appliance plug out of the appliance. Optimising the lifetime of the rechargeable battery When you have charged the appliance for the first time, we advise you to use it until the battery is completely empty.

@@Then recharge the battery. Follow this procedure at least twice a year. @@The settings correspond to the remaining hair length after cutting. When you trim for the first time, be careful. Do not move the trimmer too fast. make smooth and gentle movements. @@Trimming with comb 1 Attach the comb onto the appliance. 2 Turn the length setting adjuster to the desired length setting. @@ 3 Switch on the appliance. @@@@ (5mm) or to contour the neckline and sideburns.

@@1 Push the comb off the appliance. Touch the hair lightly with the trimmer. @@The settings correspond to the remaining hair length after cutting. 1 Attach the comb onto the appliance. @@ 3 Switch on the appliance. @@@@Never immerse the appliance in water or rinse it under the tap. @@@@2 Wipe the housing of the appliance with a dry cloth. @@ 4 Press the release button (1). The cutting unit comes off the appliance (2). @@11 6 Clean the inside of the appliance with the brush.

Never immerse the appliance in water or rinse it under the tap. 7 Shake off excess water. @@@@ 1 Press the release button (1). The cutting unit comes off the appliance (2). 2 Insert the lug of the new cutting unit into the guiding slot (1) and push the cutting unit back onto the appliance (2).

12 English Ordering accessories To buy accessories or spare parts, visit www. You can also contact the Philips Consumer Care Centre in your country (see the worldwide guarantee leaflet for contact details). Environment -- Do not throw away the appliance with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment. -- The built-in rechargeable battery contains substances that may pollute the environment.

Always remove the battery before you discard and hand in the appliance at an official collection point. Dispose of the battery at an official collection point for batteries. If you have trouble removing the battery, you can also take the appliance to a Philips service centre. The staff of this centre will remove the battery for you and will dispose of it in an environmentally safe way. Removing the rechargeable battery Only remove the rechargeable battery if it is completely empty. 1 Disconnect the appliance from the mains and let the appliance operate until the motor stops. 2 Press the release button (1) and remove the cutting unit (2). 3 Insert the screwdriver between the motor unit and the back panel of the appliance. @@ 13 5 Remove the side panels. @@@@ Guarantee and support If you need information or support, please visit www.

philips. Com/ support or read the separate worldwide guarantee leaflet. -- Acest aparat nu trebuie utilizat de către persoane (inclusiv copii) care au capacități fizice, mentale sau senzoriale reduse sau sunt lipsite de experiență și cunoștințe, cu excepția cazului în care sunt supravegheați sau instruiți cu privire la utilizarea aparatului de către o persoană responsabilă pentru siguranța lor. .



[You're reading an excerpt. Click here to read official PHILIPS HC 5440/80 user guide](http://yourpdfguides.com/dref/5635847)  
<http://yourpdfguides.com/dref/5635847>