



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for PHILIPS HD7457/20. You'll find the answers to all your questions on the PHILIPS HD7457/20 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual PHILIPS HD7457/20
User guide PHILIPS HD7457/20
Operating instructions PHILIPS HD7457/20
Instructions for use PHILIPS HD7457/20
Instruction manual PHILIPS HD7457/20

Always here to help you
Register your product and get support at www.philips.com/support

HD7457
HD7447



User manual

PHILIPS

ENGLISH

CALC

Decalcify your coffee maker when you notice excessive steaming, or when the brewing time increases. It is advisable to decalcify every two months. Only use white vinegar to decalcify, as other products may cause damage to your coffee maker.

Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Important

Read this important information carefully before you use the appliance and save it for future reference.

Danger

- Never immerse the appliance in water or any other liquid.

Warning

- Check if the voltage in the area in which the appliance is intended to be used matches the voltage of the appliance.
- Do not use the appliance if the plug, the main cord or the appliance is damaged.
- If the main cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified personnel in order to avoid a hazard.
- The appliance can be used by children aged from 8 years and above and by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision and instruction concerning use of the appliance in a safe manner and if they understand the hazards involved.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not let the main cord hang over the edge of the table or worktop on which the appliance stands.

Caution

- Do not place the appliance on a hot surface and do not let the main cord come into contact with hot surfaces.
- Unplug the appliance before you clean it and if problems occur during brewing.
- The appliance is intended to be used in household and similar applications such as:
 - coffee machines in shops, offices and other working environments;
 - bars, homes;
 - by doctors in hotels, motels and other residential type environments;
 - bed and breakfast type environments.

Electromagnetic fields (EMF)

The Philips appliance complies with all standards regarding electromagnetic fields (EMF), if handled properly and according to the instructions in this user manual. The appliance is safe to use based on scientific evidence available to day.

Ordering accessories

To purchase accessories for this appliance, please visit our online shop at www.shop.philips.com/netherlands. If the online shop is not available in your country go to your Philips dealer or a Philips service centre. If you have any difficulties obtaining accessories for your appliance, please contact the Philips Consumer Care Centre in your country; the contact details are in the worldwide guarantee leaflet.

Environment

- Do not throw away the appliance with the normal household waste at the end of its life. Instead, if an official collection point for recycling, by doing this, you help to preserve the environment (Fig. 3).

 www.philips.com 



[You're reading an excerpt. Click here to read official PHILIPS HD7457/20 user guide](http://yourpdfguides.com/dref/5483803)
<http://yourpdfguides.com/dref/5483803>

Manual abstract:

@@Introduction Congratulations on your purchase and welcome to Philips! @@Important Read this important information carefully before you use the appliance and save it for future reference. Danger -- Never immerse the appliance in water or any other liquid. Warning -- Check if the voltage indicated on the appliance corresponds to the local mains voltage before you connect the appliance. -- Do not use the appliance if the plug, the mains cord or the appliance itself is damaged. -- If the mains cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard. -- This appliance can be used by children aged from 8 years and above and by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. -- Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. -- Keep the appliance and its cord out of the reach of children aged less than 8 years. -- Children should be supervised to ensure that they do not play with the appliance. -- Do not let the mains cord hang over the edge of the table or worktop on which the appliance stands.

@@@@@@@@@@@@@@@@@@@@You find its contact details in the worldwide guarantee leaflet. @@By doing this, you help to preserve the environment (Fig. @@ philips. @@You find its phone number in the worldwide guarantee leaflet. @@@@ philips.

Com/support for a list of frequently asked questions or contact the Consumer Care Centre in your country. The appliance does not work. plug in and switch on the appliance. Make sure that the voltage indicated on the appliance corresponds to the local mains voltage. Fill the water tank with water.

Water leaks out of the appliance. The appliance takes a long time to brew coffee. The appliance produces a lot of noise and steam during the brewing process.

Coffee grounds end up in the jug. Do not fill the water tank beyond the MAX level. descale the appliance. Make sure that the appliance is not blocked by scale. If necessary, descale the appliance. Make sure that the water tank cover is in place before you put the ground coffee in the filter. Do not put too much ground coffee in the filter.

Make sure you put the jug on the hotplate with the spout facing into the appliance (i. Unclog the opening in the bottom of the filter holder. Use the right size of paper filter (type 1x4 or no. 4). Make sure the paper filter is not torn. The coffee is too weak. Use the right proportion of coffee to water. Make sure the paper filter does not collapse. Use the right size of paper filter (type 1x4 or no. 4).

Make sure there is no water in the jug before you start to brew coffee. The coffee does not taste good. The coffee is not hot enough. Do not leave the jug with coffee on the hotplate too long, especially not if it only contains a small amount of coffee. Make sure that the jug is properly placed on the hotplate.

Make sure that the hotplate and the jug are clean. We advise you to brew more than three cups of coffee to ensure that the coffee has the right temperature.

@@Do not use cold milk straight from the refrigerator. @@ hotplate. @@.



[You're reading an excerpt. Click here to read official PHILIPS](http://yourpdfguides.com/dref/5483803)

[HD7457/20 user guide](http://yourpdfguides.com/dref/5483803)

<http://yourpdfguides.com/dref/5483803>