



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for PHILIPS HD7459/20. You'll find the answers to all your questions on the PHILIPS HD7459/20 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual PHILIPS HD7459/20**  
**User guide PHILIPS HD7459/20**  
**Operating instructions PHILIPS HD7459/20**  
**Instructions for use PHILIPS HD7459/20**  
**Instruction manual PHILIPS HD7459/20**

Always here to help you  
Register your product and get support at  
[www.philips.com/support](http://www.philips.com/support)

HD7459



User manual

**PHILIPS**

 [www.philips.com](http://www.philips.com)  100% RECYCLED PAPER  
100% RECYCLED PAPER  
4022.000.0002.1



[You're reading an excerpt. Click here to read official PHILIPS HD7459/20 user guide](http://yourpdfguides.com/dref/5563043)  
<http://yourpdfguides.com/dref/5563043>

**Manual abstract:**

By doing this, you help to preserve the environment (Fig. 1). Guarantee and support If you need information or support, please visit [www.philips.com/support](http://www.philips.com/support) or read the separate worldwide guarantee leaflet. Troubleshooting This chapter summarises the most common problems you could encounter with the appliance. If you are unable to solve the problem with the information below, visit [www.philips.com/support](http://www.philips.com/support) for a list of frequently asked questions or contact the Consumer Care Centre in your country. Problem Solution Important Read this important information carefully before you use the appliance and save it for future reference.

**Danger** -- Never immerse the appliance in water or any other liquid. **Warning** -- Check if the voltage indicated on the appliance corresponds to the local mains voltage before you connect the appliance. -- Do not use the appliance if the plug, the mains cord or the appliance itself is damaged. philips.

@@@@@@@@@@@@@@@@ it is advisable to descale it every two months.

@@ Ordering accessories To buy accessories or spare parts, visit [www.philips.com](http://www.philips.com). The appliance does not work. plug in and switch on the appliance. @@ Fill the water tank with water. Water leaks out of the appliance.

The appliance takes a long time to brew coffee. @@ Coffee grounds end up in the jug. Do not fill the water tank beyond the MAX level. descale the appliance. Make sure that the appliance is not blocked by scale. If necessary, descale the appliance. @@ Do not put too much ground coffee in the filter. @@ Unclog the opening in the bottom of the filter holder. Use the right size of paper filter (type 1x4 or no. 4).

Make sure the paper filter is not torn. The coffee is too weak. Use the right proportion of coffee to water. Make sure the paper filter does not collapse. Use the right size of paper filter (type 1x4 or no. 4). @@ The coffee does not taste good. The coffee is not hot enough. Do not leave the jug with coffee on the hotplate too long, especially not if it only contains a small amount of coffee. Make sure that the jug is properly placed on the hotplate.

Make sure that the hotplate and the jug are clean. We advise you to brew more than three cups of coffee to ensure that the coffee has the right temperature. We advise you to use thin cups, because they absorb less heat from the coffee than thick cups. Do not use cold milk straight from the refrigerator. There is less coffee in Make sure you place the jug properly on the the jug than expected.

hotplate. If the jug is not placed properly on the hotplate, the drip stop prevents the coffee from flowing out of the filter. Sikkerhed og support Hvis du brug for hjælp eller support, bedes du besøge [www.philips.com](http://www.philips.com).



[You're reading an excerpt. Click here to read official PHILIPS HD7459/20 user guide](http://www.philips.com)  
<http://yourpdfguides.com/dref/5563043>