



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for PHILIPS HD7751/00. You'll find the answers to all your questions on the PHILIPS HD7751/00 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual PHILIPS HD7751/00  
User guide PHILIPS HD7751/00  
Operating instructions PHILIPS HD7751/00  
Instructions for use PHILIPS HD7751/00  
Instruction manual PHILIPS HD7751/00

Always here to help you

Register your product and get support at:  
[www.philips.com/welcome](http://www.philips.com/welcome)



HD7751



EN	User manual	5	IT	Manuale utente	59
DA	Brugervejledning	12	NL	Gebruiksaanwijzing	67
DE	Benutzerhandbuch	19	NO	Brukerhåndbok	75
EL	Εγχειρίδιο χρήσης	27	PT	Manual do utilizador	82
ES	Manual del usuario	36	SV	Användarhandbok	90
FI	Käyttöopas	44	TR	Kullanım kılavuzu	97
FR	Mode d'emploi	51			

**PHILIPS**



[You're reading an excerpt. Click here to read official PHILIPS HD7751/00 user guide](http://yourpdfguides.com/dref/5476110)  
<http://yourpdfguides.com/dref/5476110>

### Manual abstract:

@ 2 General description (Fig. 1) 1 Filter basket 2 Drip stop 3 Lock of coffee bean chute 4 Grind selection knob 5 Display 6 STRENGTH button 7 2-10 cups button 8 Filter basket holder 9 Jug lid 10 Glass jug 11 Hotplate 12 Overflow hole 13 Water reservoir with water level window 14 OPEN button for filter basket holder 15 On/off, start/standby button 16 Pre-ground coffee button 17 Steam vent 18 Lid of coffee bean chute 19 Water reservoir lid 20 Coffee bean container 21 Coffee bean container lid 22 Cleaning brush 3. 2 Warning • Check if the voltage indicated on the bottom of the appliance corresponds to the local mains voltage before you connect the appliance. □ If the mains cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard. □ This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. □ Children should be supervised to ensure that they do not play with the appliance. □ Keep the mains cord out of the reach of children. Do not let the mains cord hang over the edge of the table or worktop on which the appliance stands. □ Do not touch the grinding burrs of the appliance, especially when the appliance is connected to the mains. • Keep the packaging materials (plastic bags, cardboard buffers, etc.

) out of the reach of children, as they are not a toy. □ Do not touch the hot surfaces of the appliance when it operates. • This appliance is designed to grind beans and make coffee. Use it correctly and with care to avoid scalding by hot water and steam. □ Do not use the appliance if the plug, the mains cord or the appliance itself is damaged.

5 English 1 Introduction 3 Important • If a problem occurs that you cannot solve by means of this user manual, contact the Consumer Care Centre in your country. If the problem cannot be solved, take the appliance to a service centre authorised by Philips for examination or repair. Do not attempt to repair the appliance yourself, otherwise your guarantee becomes invalid. 4 Before first use 4. 1 Flushing the appliance You need to flush the coffeemaker once before first use.

1 Put the mains plug in the wall socket. □ The display lights up and the appliance beeps. D Note: If you do not press any button within 5 minutes, the appliance goes into standby mode. In this case, the display goes out and only the start/standby button stays on to indicate that the appliance is still switched on. In standby mode, you can press any button to reactivate the appliance. 3 Open the water reservoir lid. Fill the water reservoir with fresh cold water up to the 10-cup indication (Fig. 3). D Note: Do not put coffee beans or ground coffee in the appliance. 4 Close the water reservoir lid.

5 Place the jug on the hotplate (Fig. 4). D Note: Make sure the lid is on the jug and the jug is properly placed on the hot plate. The spout of the jug has to face forward into the appliance. If the lid is not on the jug or the jug is not properly placed, the drip stop function is automatically activated (see chapter 'Using the appliance', section 'Drip stop function'). □ The appliance beeps and the freshness indicator appears on the display. 7 Press the pre-ground coffee button to switch off the grinder (Fig. 6). □ The button lights up when you press it. 3.

3 Caution • Do not place the appliance on a hot surface and prevent the mains cord from coming into contact with hot surfaces. □ Unplug the appliance if problems occur during grinding or brewing and before you clean it. □ The jug is hot during and after brewing. Always hold the jug by its handle. • Never use the jug in a microwave oven.

□ Do not move the appliance while it is operating. □ Wait until the appliance has cooled down before you store it. The hotplate and the coffee jug may be hot. □ After you have unpacked the appliance, make sure it is complete and undamaged. If in doubt, do not use the appliance but contact the Consumer Care Centre in your country.

□ This appliance is intended for normal household use only. It is not intended for use in environments such as staff kitchens of shops, offices, farms or other work environments. Nor is it intended to be used by clients in hotels, motels, bed and breakfasts and other residential environments. If handled properly and according to the instructions in this user manual, the appliance is safe to use based on scientific evidence available today. 6 8 9 10 11 @@ Press the start/standby button to start the brewing process (Fig. 7). Let the appliance operate until all the water has flowed into the jug. • The coffeemaker produces 5 beeps when the brewing process is finished. Press the start/standby button to stop the brewing/keep-warm process. 2 Using coffee beans B Warning: Do not put espresso coffee beans in the coffee bean container.

Only use regular coffee beans. B Warning: Always keep the water reservoir lid closed when you fill the coffee bean container with coffee beans. Otherwise coffee beans can fall into the water reservoir and block up the water inlet. 1 Press the OPEN button on the right-hand side of the appliance to open the filter basket holder. 4) in the filter basket to collect the ground coffee. (Fig. 10) 3 Remove the coffee bean container lid (1) and fill the container with coffee beans (2). Make sure there are enough coffee beans in the container for the amount of coffee you want to brew (Fig. 11). D Note: Always make sure the bean container is at least half full.

b Warning: The maximum capacity of the coffee bean container is 250g. To prevent the grinder from jamming, do not exceed this amount. B Warning: To prevent the grinder from jamming, do not use unroasted or caramelised beans. 4 Turn the grind selection knob to select the desired type of grind (from fine to coarse). E Tip: We advise you to experiment with the different grind settings to find out which setting you prefer.

5 To select the number of cups, press the 2-10 cups button as many times as the desired number of cups (Fig. 1 Filling the water reservoir 1 Open the water reservoir lid and fill the water reservoir with the required amount of cold water (Fig. 3). There are indications for 2 to 10 cups (275ml to 1375ml) on the water level window and on the jug. You can use these indications to determine how much water to put in the water reservoir.

Keep in mind that the amount of brewed coffee will be slightly less, since ground coffee absorbs water. E Tip: Use the jug to fill the water reservoir with the required amount of water.



[You're reading an excerpt. Click here to read official PHILIPS](http://yourpdfguides.com/dref/5476110)

[HD7751/00 user guide](http://yourpdfguides.com/dref/5476110)

<http://yourpdfguides.com/dref/5476110>

d Note: (Fig. 18) Do not fill the water reservoir beyond the 10-cup indication, otherwise water spills from the opening at the back. 7 •• The 2-10 cups button lights up when you press it. □• The selected number of cups appears on the display. D Note: The appliance uses all the water in the water tank. @@@@ 14). □• The STRENGTH button lights up when you press it. □• The display shows the selected coffee strength.

@@ 15). @@□• The grinder grinds the required amount of coffee beans. @@ 16). @@ •• The hotplate switches on automatically. @@@@ 17). @@@@ 5. @@@@ 6). □• The button lights up when you press it. @@@@ 8 D Note: How much pre-ground coffee you use is a matter of personal taste. For a medium-strong cup of coffee, use one measuring spoon (approximately 6g) for each cup (125ml).

6 Close the filter basket holder and place the jug on the hotplate. 4 Drip stop function The drip stop function enables you to remove the jug from the coffeemaker before the brewing process is finished. When you remove the jug, the drip stop stops the flow of coffee into the jug. D Note: The brewing process does not stop when you remove the jug. If you do not put the jug back onto the hotplate within 20 seconds, the filter basket overflows.

You have to clean the coffee bean chute every 1 to 2 weeks, depending on the frequency of use. 1 Put the mains plug in the wall socket. □• The start/standby button and the display lights up. 3 Press the start/standby button and then remove the mains plug from the wall socket. 4 Insert the flat end of the cleaning brush handle into the chute lock and turn the lock to the 'open' position.

(Fig. 19) 5 Open the lid of the coffee bean chute (Fig. 20). 6 Use the cleaning brush to brush ground coffee residues into the lower part of the chute (Fig. 21). E Tip: Place a paper filter in the filter basket to collect the ground coffee. □• The ground coffee residues fall into the filter basket. 7 Close the lid of the coffee bean chute and turn the lock to the 'locked' position (Fig. 22). 8 Remove the paper filter with the ground coffee residues and throw it away.

6 Cleaning and maintenance 6. 1 Cleaning after every use B Warning: Never immerse the appliance in water or any other liquid, nor rinse it under the tap. 1 Remove the mains plug from the wall socket. 2 Wipe the outside of the coffeemaker and the hotplate with a damp cloth. 3 Clean the filter basket and the glass jug with hot water and some washing-up liquid or clean them in the dishwasher. 6. 3 Descaling the coffeemaker When the message 'CALC' appears on the display (after with the amount of water in the water reservoir. Please keep in mind that the appliance uses all the water in the water reservoir. •• Use ground coffee of a stronger blend or flavour. □• To increase the coffee strength, increase the amount of pre-ground coffee or decrease the amount of water. The appliance continues to drip long after the brewing process has ended. •• The dripping is caused by condensation of steam. It is completely normal that the appliance drips for some time. □• If the dripping does not stop, the drip stop may be clogged. To clean the drip stop, press the OPEN button on the right-hand side of the appliance to open the filter basket holder.

Take out the filter basket. Then rinse the filter basket and the drip stop under the tap. □• If you remove the jug for more than 20 seconds during the brewing process, the drip stop causes the filter basket to overflow. The coffee is not hot enough. •• Make sure the jug is placed properly on the hotplate.

□• Make sure that the hotplate and the bottom of the jug are clean. □• Use thin-walled cups, because they absorb less heat from the coffee than thick-walled cups. □• Do not use milk that comes directly out of the fridge. 11 English 10 Troubleshooting The filter overflows when I remove the jug from the appliance while it is brewing coffee. □• If you remove the jug for more than 20 seconds during the brewing process, the drip stop causes the filter basket to overflow. Also note that the coffee does not reach its full taste before the end of the brewing process. Therefore we advise you not to remove the jug and pour out the coffee before the end of the brewing process. dansk 1 Introduktion Tillykke med dit køb og velkommen til Philips! @@@@ 9 Hvis du ikke har brug for varmepladen til at holde kaffen varm, skal du trykke på start/ standby-knappen for at sætte apparatet i standbytilstand (fig. 18) 4 Tryk på knappen til formaling af kaffe for at slukke for kværnen (fig. 7 Tryk på knappen for formaling af kaffe for at slukke for kværnen.

9 Sikkerhed og support Hvis du brug for hjælp eller support, bedes du besøge www. □• Når du bruger kaffebønner, skal du sørge for, at du ikke trykker på knappen til formaling af kaffe, da det slukker for kværnen. 1) 1 Filterkurv 2 Dryppstopp 3 Steng av kaffebønnerennen 4 Bryter for malevalg 5 Skjerm 6 Knappen STRENGTH 7 Knappen for 2-10 kopper 8 Filterkurvholder 9 Kannelokk 10 Glasskane 11 Kokeplate 12 Hull til overflødig vann 13 Vannbeholder med vannåvindu 14 Knappen OPEN for filterkurvholder 15 Av/på, start/standby-knapp 16 Knapp for forhåndsmalt kaffe 17 Dampventil 18 Lokk på kaffebønnerenne 19 Lokk på vannbeholder 20 Kaffebønnebeholder 21 Lokk på kaffebønnebeholder 22 Rengjøringsbørste •• Apparatet må ikke senkes ned i vann eller annen væske, og det må heller ikke skylles under rennende vann. 7 Trykk på knappen for forhåndsmaling av kaffe for å slå av maleren (fig. 4 Elektromagnetiske felt (EMF) Dette Philips-apparatet overholder alle standarder som gjelder for elektromagnetiske felt (EMF). Sørg for at det er nok kaffebønner i beholderen for den mengden kaffe du ønsker å trakte (fig. 4 Vri på bryteren for malevalg for å velge ønsket type maling, fra fin til grov. 9 Hvis du ikke trenger varmeplaten for å holde kaffen varm, trykker du på start/standbyknappen for å sette apparatet i standbymodus (fig. 18) 4 Trykk på knappen for forhåndsmaling av kaffe for å slå av maleren (fig. 7 Trykk på knappen for malt kaffe for å slå av kvernen.

□• Sørg for at antallet kopper du velger med knappen for 2-10 kopper, passer til mengden vann i vannbeholderen. □• Når du bruker kaffebønner, må du sørge for ikke å trykke på knappen for forhåndsmalt kaffe, siden maleren da blir slått av.



[You're reading an excerpt. Click here to read official PHILIPS](#)

[HD7751/00 user guide](#)

<http://yourpdfguides.com/dref/5476110>

*D Nota: Se não conhecer a dureza da água na sua área e não for possível contactar a direcção da companhia das águas local, aconselhamo-lo a proceder à descalcificação do aparelho sempre que a mensagem "CALC" for apresentada no visor. P ortuguês 89 S venska 1 Introdution Grattis till inköpet och välkommen till Philips! 1 Fara 2 Allmän beskrivning (Bild 1) 1 Filterkorg 2 Droppstopp 3 Lås för rännan för kaffeböner 4 Vred för val av malning 5 Teckenfönster 6 Knapp för val av kaffestyrka 7 Knapp för 2-10 koppar 8 Filterkorghållare 9 Kannlock 10 Glaskanna 11 Värmeplatta 12 Översvänningshål 13 Vattenbehållare med vattennivåfönster 14 Knapp för öppning av filterkorghållaren 15 På/av-, start/standby-knapp 16 Knapp för förmalet kaffe 17 Ångöppning 18 Lock till rännan för kaffeböner 19 Lock till vattenbehållaren 20 Behållare för kaffeböner 21 Lock till behållaren för kaffeböner 22 Rengöringsborste •• Sänk aldrig ned apparaten i vatten eller någon annan vätska och skölj den inte under kranen. 7 Stäng locket till rännan för kaffeböner och vrid låset till det låsta läget (Bild 22).*

*9 Garanti och support Om du behöver information eller support kan du gå till [www. .](http://www.philips.com)*



**[You're reading an excerpt. Click here to read official PHILIPS HD7751/00 user guide](http://www.philips.com)**  
**<http://yourpdfguides.com/dref/5476110>**