




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for PHILIPS HD7761/00. You'll find the answers to all your questions on the PHILIPS HD7761/00 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual PHILIPS HD7761/00
User guide PHILIPS HD7761/00
Operating instructions PHILIPS HD7761/00
Instructions for use PHILIPS HD7761/00
Instruction manual PHILIPS HD7761/00

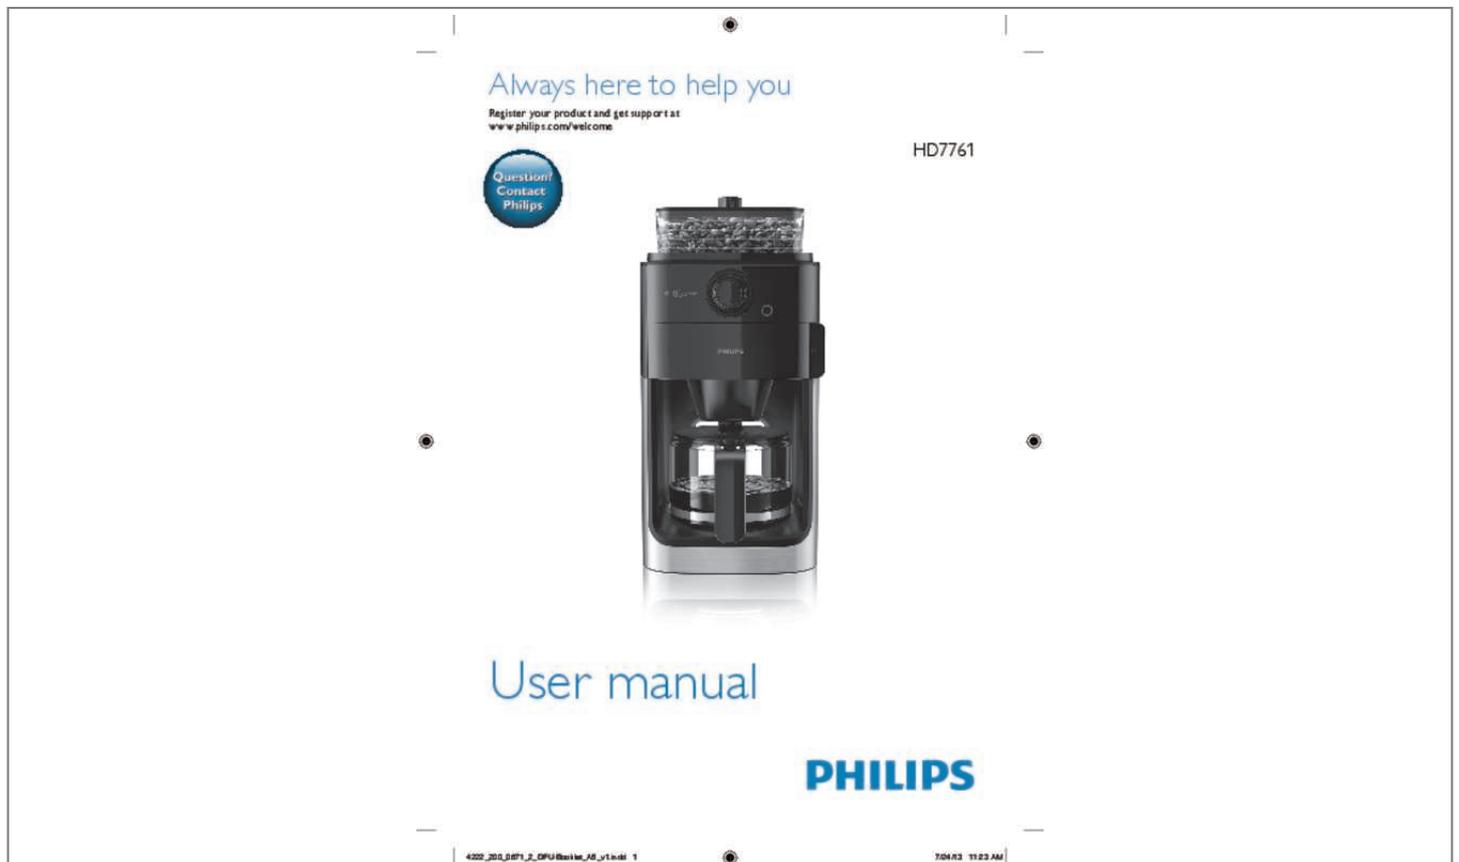

[You're reading an excerpt. Click here to read official PHILIPS HD7761/00 user guide](http://yourpdfguides.com/dref/5563913)
<http://yourpdfguides.com/dref/5563913>

Manual abstract:

Indd 3 HD7761 IIB 7/24/13 11:23 AM 4 English Introduction Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.com/welcome. Important Read this user manual carefully before you use the appliance and save it for future reference. Danger -- Never immerse the appliance in water or any other liquid, nor rinse it under the tap. Warning -- Check if the voltage indicated on the bottom of the appliance corresponds to the local mains voltage before you connect the appliance. -- This appliance can be used by children aged from 8 years and above and by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. -- Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. -- Keep the appliance and its cord out of the reach of children aged less than 8 years. -- Children should be supervised to ensure that they do not play with the appliance. -- Do not let the mains cord hang over the edge of the table or worktop on which the appliance stands.

@@@) out of the reach of children, as they are not a toy. -- Do not touch the hot surfaces of the appliance when it operates. -- This appliance is designed to grind beans and make coffee. @@@@Only empty the water reservoir by following the flush instruction. 4222_200_0671_2_DFU-Booklet_A5_v1. Indd 4 7/24/13 11:23 AM English 5 -- Do not use the appliance if the plug, the mains cord or the appliance itself is damaged. -- If a problem occurs that you cannot solve by means of this user manual, contact the Consumer Care Centre in your country. If the problem cannot be solved, take the appliance to a service centre authorised by Philips for examination or repair. Do not attempt to repair the appliance yourself, otherwise your guarantee becomes invalid. Caution -- Do not place the appliance on a hot surface and prevent the mains cord from coming into contact with hot surfaces.

-- Unplug the appliance if problems occur during grinding or brewing and before you clean it. -- Do not move the appliance while it is operating. -- The appliance becomes hot during use. Let the appliance cool down before you store it. -- During brewing, the lower part of the appliance and the bottom of the jug become hot. -- After you have unpacked the appliance, make sure it is complete and undamaged. If in doubt, do not use the appliance but contact the Consumer Care Centre in your country. -- This appliance is intended for normal household use only. It is not intended for use in environments such as staff kitchens of shops, offices, farms or other work environments. Nor is it intended to be used by clients in hotels, motels, bed and breakfasts and other residential environments.

electromagnetic fields (EMF) This Philips appliance complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user manual, the appliance is safe to use based on scientific evidence available today. Ordering accessories To buy accessories or spare parts, visit www. You can also contact the Philips Consumer Care Centre in your country (see the worldwide guarantee leaflet for contact details). @@By doing this, you help to preserve the environment (Fig. 1). @@@@ philips. @@Fill the water reservoir with water. @@When I use the grinder, the coffee is too weak. @@@@ use coffee beans of a stronger blend or flavour.

@@When I use pre-ground coffee, the coffee is too weak. @@@@Use ground coffee of a stronger blend or flavour. @@@@ the dripping is caused by condensation of steam. It is completely normal that the coffeemaker drips for some time. If the dripping does not stop, the drip stop may be clogged.

@@Take out the filter basket. Then rinse the filter basket and the drip stop under the tap. If you remove the jug for more than 20 seconds during the brewing process, the drip stop causes the filter basket to overflow. 4222_200_0671_2_DFU-Booklet_A5_v1. Indd 6 7/24/13 11:23 AM English Problem The coffee is not hot enough.

Possible solution Use thin-walled cups, because they absorb less heat from the coffee than thick-walled cups. Do not use milk that comes directly out of the fridge. descale the coffeemaker. See section 'Descaling the coffeemaker' in chapter 'Cleaning and maintenance'. The coffeemaker does not Make sure the coffeemaker is connected to the mains. start cleaning the coffee bean chute. Make sure the lid of the coffee bean chute is opened before pressing and holding the grinder button for 4 seconds. start cleaning the coffee bean chute. The appliance is steaming and it takes longer to brew coffee. descale the appliance.

See section 'Descaling the coffeemaker' in chapter 'Cleaning and maintenance'. Sikkerhed og support Hvis du brug for hjælp eller support, bedes du besøge www. Indd 27 7/24/13 11:23 AM 28 Svenska Introduktion Grattis till inköpet och välkommen till Philips! Garanti och support Om du behöver information eller support kan du gå till www. Se till att kaffebryggaren är ansluten till elnätet. Se till att locket till rännan för kaffebönor är öppet innan du håller kvarknappen intryckt i 4 sekunder. Indd 32 7/24/13 11:23 AM EN ☐ need to flush the coffeemaker once You before first use. @@@@You can adjust the strength of your coffee. @@@@Indd 37 7/24/13 11:23 AM EN ☐ Whenever you switch between coffee beans, there will always be traces left of the previously ground type of coffee beans that can affect the taste of your coffee. Clean the coffee bean chute every 1 to 2 weeks to prevent freshly ground coffee and traces in the coffee bean chute from mixing together. After you switch to a new type of coffee beans, follow the steps below to ensure optimal taste. Indd 39 7/24/13 11:23 AM CALC EN ☐ Descal the coffeemaker when you notice excessive steaming or when the brewing time increases. it is advisable to descale it every two months. Only use white vinegar to descale, as other products may cause damage to the coffeemaker. .



[You're reading an excerpt. Click here to read official PHILIPS](#)

[HD7761/00 user guide](#)

<http://yourpdfguides.com/dref/5563913>