



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for PHILIPS HP6577/00. You'll find the answers to all your questions on the PHILIPS HP6577/00 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual PHILIPS HP6577/00
User guide PHILIPS HP6577/00
Operating instructions PHILIPS HP6577/00
Instructions for use PHILIPS HP6577/00
Instruction manual PHILIPS HP6577/00

Always here to help you

Register your product and get support at
www.philips.com/welcome



HP6582
HP6581
HP6579
HP6577
HP6575



User manual

PHILIPS



[You're reading an excerpt. Click here to read official PHILIPS HP6577/00 user guide](http://yourpdfguides.com/dref/5569642)
<http://yourpdfguides.com/dref/5569642>

Manual abstract:

□□ 1 Epilating discs 2 Epilating head 3 Opti-Light 4 On/off button -- Press once for speed II -- Press twice for speed I 5 Light for speed I 6 Light for speed II 7 Charging light 8 Epilator 9 Release button 10 Trimming comb (HP6582/HP6581/HP6577 only) 11 Shaving head (HP6582/HP6581/HP6577 only) 12 Basic epilating cap 13 Sensitive area cap (HP6582/HP6575 only) 14 Adapter 15 Cleaning brush 16 On/off slide (HP6581/HP6579 only) 17 Precision epilator (HP6581/HP6579 only) 18 Disposable non-rechargeable batteries (HP6581/HP6579 only) 19 Storage case of Smart Tweezers (HP6582/HP6581 only) 20 Smart Tweezers (HP6582/HP6581 only) 21 Light of Smart Tweezers (HP6582/HP6581 only) 22 On/off slide for light (HP6582/HP6581 only) 23 Pouch

English Important Read this user manual carefully before you use the epilator, the precision epilator and the Smart Tweezers and save it for future reference. danger -- Keep the adapter dry. -- If you charge the epilator in the bathroom, do not use an extension cord (Fig. 2). 7 Warning -- Do not use an appliance, an attachment or the adapter if it is damaged. Do not use the Smart Tweezers if they are damaged. -- If the adapter is damaged, always have it replaced with one of the original type in order to avoid a hazard. -- The adapter contains a transformer. Do not cut off the adapter to replace it with another plug, as this causes a hazardous situation. -- The epilator, precision epilator and Smart Tweezers are not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.

-- Children should be supervised to ensure that they do not play with the epilator, precision epilator and Smart Tweezers. -- Keep the button batteries of the Smart Tweezers out of the reach of children and pets. button batteries are a potential choking hazard. @@@@Do not use it for any other purpose. @@@@8 English -- To prevent damage and injuries, keep operating appliances (with or without attachment) away from scalp hair, eyebrows, eyelashes, clothes, threads, cords, brushes etc.

-- Do not use the epilator, precision epilator and Smart Tweezers on irritated skin or skin with varicose veins, rashes, spots, moles (with hairs) or wounds without consulting your doctor first. People with a reduced immune response or people who suffer from diabetes mellitus, haemophilia or immunodeficiency should also consult their doctor first. -- Your skin may become a little red and irritated the first few times you use the epilator or precision epilator. This phenomenon is absolutely normal and quickly disappears. As you epilate more often, your skin gets used to epilation, skin irritation decreases and regrowth becomes thinner and softer.

If the irritation has not disappeared within three days, we advise you to consult a doctor. -- Do not use bath or shower oils when you epilate under wet conditions, as this may cause serious skin irritation. -- Do not clean the epilator, precision epilator and Smart Tweezers with water that is hotter than shower temperature (max. 40°C). -- Never use scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone for cleaning purposes. -- Charge, use and store the epilator at a temperature between 10°C and 30°C. -- Do not look directly into the Opti-light of the epilator to avoid being dazzled by the light. -- Do not use the epilating head of the epilator without one of the epilation caps. -- Fully charge the epilator every 3 to 4 months, even if you do not use the epilator for a longer time. @@@@ (Fig.

@@For safety reasons, the epilator can only be used cordlessly. The epilator does not work when it is connected to the mains. @@@@You find its contact details in the worldwide guarantee leaflet. You can also visit www. @@@@By doing this, you help to preserve the environment (Fig. 4).

@@@@ 5). @@@@ 6). @@ 7). @@ this is dangerous.

@@Do not throw away non-rechargeable batteries with the normal household waste, but dispose of them at an official collection point for batteries. Always remove the non-rechargeable batteries before you discard and hand in the appliance at an official collection point (precision epilator) or dispose of it with the normal household waste (Smart Tweezers) (Fig. 5). English 11 Guarantee and support If you need information or support, please visit www. Troubleshooting This chapter summarises the most common problems you could encounter with the appliances.

□□ If you are unable to solve the problem with the information below, contact the Consumer Care Centre in your country. problem The epilator does not work. Possible cause The socket used to charge the epilator does not work. Solution Make sure the socket you use to charge the epilator is live. The charging light goes on to indicate that the epilator is charging.

If you connect the epilator to a socket in a bathroom cabinet, you may need to switch on the light in the bathroom to make sure the socket is live. □ If you press the epilating head too hard onto your skin or when the rotating discs of the epilating head get blocked (for instance because a piece of clothing has got stuck between the epilating discs), the epilator switches off automatically. Then the speed lights flash red for 5 seconds. Turn the epilating discs with your thumb until you can remove whatever is blocking the epilating discs. Then switch on the epilator again. During use, the epilator suddenly stops operating.

Then the speed lights flash red for 5 seconds The overload protection has been activated. 12 English Possible cause The overheat protection has been activated. Solution The epilator is equipped with integrated overheat protection, which prevents the epilator from becoming too hot.

@@@@Replace the batteries or insert them correctly (see the user manual).

Problem During use, the epilator becomes hot and suddenly stops operating. @@The precision The epilator does disposable not work. Batteries are empty or have been inserted incorrectly. The precision epilator is operating, but its performance is poor. After 40 minutes, the disposable batteries are almost empty and no longer have enough power to guarantee good performance. Insert new batteries (see the user manual). 1) 1 Epilační kotoučky 2 Epilační hlava 3

Světlo Opti-light 4 Vypínač -- Jedním stiskem nastavíte rychlost II -- Dvěma stisknutími nastavíte rychlost I 5 Kontrolka pro rychlost I 6 Kontrolka pro rychlost II 7 Kontrolka nabíjení 8 Epilátor 9 Uvolňovací tlačítko 10 Nastavec pro citlivé oblasti (pouze modely HP6582/HP6581/HP6577) 11 Holicí hlava (pouze modely HP6582/HP6581/HP6577) 12 Základní epilační kryt 13 Nástavec pro citlivé oblasti (pouze modely HP6582/HP6575) 14 Adaptér 15 Čisticí kartáč 16 Posuvný vypínač (pouze model HP6581/HP6579) 17 Přesný epilátor (pouze model HP6581/HP6579) 18 Baterie na jedno použití (pouze model HP6581/HP6579) 19 Pouzdro pro ukládání pinzety Smart Tweezers (pouze modely HP6582/HP6581) 20 Pinzeta Smart Tweezers (pouze modely HP6582/HP6581) 21 Kontrolka pinzety Smart Tweezers (pouze modely HP6582/HP6581) 22 Vypínač světla (pouze modely HP6582/HP6581) 23 Pouzdro 22

Čeština Důležité Před použitím epilátoru, přesného epilátoru a pinzety Smart Tweezers si pečlivě přečtěte tuto uživatelskou příručku a uschovejte si ji pro budoucí použití.



[You're reading an excerpt. Click here to read official PHILIPS](#)

[HP6577/00 user guide](#)

<http://yourpdfguides.com/dref/5569642>

-- Epilatorul, epilatorul de precizie și pensetele inteligente nu trebuie utilizate de către persoane (inclusiv copii) care au capacități fizice, mentale sau senzoriale reduse sau sunt lipsite de experiență și cunoștințe, cu excepția cazului în care sunt supravegheate sau instruite cu privire la utilizarea aparatului de către o persoană responsabilă pentru siguranța lor. 1) 1 Epilačné disky 2 Epilačná hlava 3 Svetlo Opti-Light 4 Vypínač -- Rýchlosť II zapnite jedným stlačením -- Rýchlosť I zapnite dvomi stlačeniami 5 Kontrolné svetlo rýchlosti I 6 Kontrolné svetlo rýchlosti II 7 Kontrolné svetlo nabíjania 8 Epilátor 9 Uvoľňovacie tlačidlo 10 Hrebeň na zastrihávanie (len model HP6582/HP6581/HP6577) 11 Holiaca hlava (len model HP6582/HP6581/HP6577) 12 Základný epilačný kryt 13 Kryt na epiláciu citlivých oblastí (len model HP6582/HP6575) 14 Adaptér 15 Čistiaca kefka 16 Vypínač (len model HP6581/HP6579) 17 Epilátor na presnú epiláciu (len model HP6581/HP6579) 18 Jednorazové nenabíjateľné batérie (len model HP6581/HP6579) 19 Odkladacie puzdro na pinzetu Smart Tweezers (len model HP6582/HP6581) 20 Pinzeta Smart Tweezers (len model HP6582/HP6581) 21 Svetlo pinzety Smart Tweezers (len model HP6582/HP6581) 22 Posuvn.



[You're reading an excerpt. Click here to read official PHILIPS
HP6577/00 user guide
http://yourpdfguides.com/dref/5569642](http://yourpdfguides.com/dref/5569642)