



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for PHILIPS HQ6926/16. You'll find the answers to all your questions on the PHILIPS HQ6926/16 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual PHILIPS HQ6926/16  
User guide PHILIPS HQ6926/16  
Operating instructions PHILIPS HQ6926/16  
Instructions for use PHILIPS HQ6926/16  
Instruction manual PHILIPS HQ6926/16

Always here to help you

Register your product and get support at  
[www.philips.com/welcome](http://www.philips.com/welcome)



HQ6900 series



User manual

**PHILIPS**



[You're reading an excerpt. Click here to read official PHILIPS HQ6926/16 user guide](http://yourpdfguides.com/dref/5323258)  
<http://yourpdfguides.com/dref/5323258>

**Manual abstract:**

@@@The Close Cut system ensures a close and easy shave every day. @@What's in the box -----Shaver Protection cap Cleaning brush Mains cord with plug User manual Local guarantee leaflet World wide guarantee leaflet General description (Fig. □) 1 2 3 4 5 6 7 8 Protection cap Shaving unit Shaver on/off slide Mains cord with plug Appliance plug Trimmer (HQ6946,HQ6940 only) Trimmer slide (HQ6946,HQ6940 only) Cleaning brush Using the appliance Shaving 1 Put the appliance plug in the shaver. 2 Put the mains plug in the wall socket. 3 Push the on/off slide upwards to switch on the shaver. 4 Move the shaving heads over your skin. Make both straight and circular movements. Shaving on a dry face gives the best results. Your skin may need 2 or 3 weeks to get accustomed to the Philips shaving system. 5 Push the on/off slide downwards to switch off the shaver.

English 6 Put the protection cap on the shaver every time you have used it, to prevent damage. 7 Trimming (HQ6946/HQ6940 only) You can use the trimmer to trim your sideburns and moustache. 1 Push the slide upwards to open the trimmer. The trimmer can be activated while the motor is running. cleaning and maintenance Regular cleaning guarantees better shaving performance.

This appliance is not washable. Never immerse the appliance in water, nor rinse it under the tap. □ Never use scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance. -- For easy and optimal cleaning , Philips Shaving Head Cleaning Spray (HQ110) is available. Ask your Philips dealer for information.

note: Philips Shaving Head Cleaning Spray may not be available in all countries. @@@@2 Clean the top of the appliance first. use the cleaning brush supplied. @@@@5 Put the shaving unit back onto the shaver. Every two months: shaving heads 1 Switch off the shaver. @@2 Press the release button (1) and remove the shaving unit (2). @@@@ Brush carefully in the direction of the arrow. 6 Brush the guard. 7 Put the shaving heads back into the shaving unit. @@8 Put the shaving unit back onto the shaver.

@@To remove the shaving heads, follow steps 1 to 4 described above. @@@@ 1 Switch off the shaver. @@10 English 2 Clean the trimmer with the cleaning brush supplied. Tip: Lubricate the trimmer teeth with a drop of sewing machine oil every six months. Replacement Replace the shaving heads every two years for optimal shaving results. @@2 Press the release button (1) and remove the shaving unit (2). @@4 Remove the shaving heads and place new ones in the shaving unit. English 5 @@6 Put the shaving unit back onto the shaver. 11 Troubleshooting This chapter summarises the most common problems you could encounter with the appliance. □If you are unable to solve the problem with the information below, visit [www.philips.com/support](http://www.philips.com/support) for a list of frequently asked questions or contact the Consumer Care Centre in your country. @@ long hairs obstruct the shaving heads. Solution Clean the shaver thoroughly before you continue shaving. see chapter 'Cleaning and maintenance'.

Clean the cutters and guards with the cleaning brush supplied. @@Replace the shaving heads every 2 years for optimal shaving results. see chapter 'Replacement'. Put the mains plug in the wall socket. The shaving heads are damaged or worn.

The shaver does not work when I push the on/off slide upwards. skin irritation. The shaver is not connected to the mains. Your skin needs time to get used to the Philips shaving system. Skin irritation during the first 2-3 weeks of use is normal. After this period, the skin irritation usually disappears. @@.



[You're reading an excerpt. Click here to read official PHILIPS](#)

[HQ6926/16 user guide](#)

<http://yourpdfguides.com/dref/5323258>