



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for PHILIPS MCM2150. You'll find the answers to all your questions on the PHILIPS MCM2150 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual PHILIPS MCM2150
User guide PHILIPS MCM2150
Operating instructions PHILIPS MCM2150
Instructions for use PHILIPS MCM2150
Instruction manual PHILIPS MCM2150

Always there to help you

Register your product and get support at
www.philips.com/welcome



MCM2150



User manual

PHILIPS



[You're reading an excerpt. Click here to read official PHILIPS MCM2150 user guide](http://yourpdfguides.com/dref/4672759)
<http://yourpdfguides.com/dref/4672759>

Press to play the programmed tracks. »» During play, [PROG] (program) is displayed. @@@@Press PROG, and then press select a number from 1–20. / to Press PROG to confirm.

@@@@ • Unsupported file formats are skipped. @@ • WMA, AAC, WAV, PCM audio files • DRM protected WMA files (.wav, .m4a, .m4p, .mp4, .aac) • WMA files in Lossless format Supported MP3 disc formats ••••• ISO9660, Joliet Maximum title number: 128 (depending on file name length) Maximum album number: 99 Supported sampling frequencies: 32 kHz, 44.1 kHz, 48 kHz Supported Bit-rates: 32~256 (kbps), variable bit rates 14 EN 8 Troubleshooting Warning •• Never remove the casing of this device. ••••• Insert the battery with its polarities (+/- signs) aligned as indicated. Replace the battery. Aim the remote control directly at the sensor on the front of the unit. To keep the warranty valid, never try to repair the system yourself. If you encounter problems when using this device, check the following points before requesting service. If the problem remains unsolved, go to the Philips Web page (www.philips.

com/support). When you contact Philips, make sure that the device is nearby and the model number and serial number are available. No power •• Make sure that the AC cord of the apparatus is connected properly. •• Make sure that there is power at the AC outlet. @@ No sound or poor sound •• Adjust the volume. •• Check that the speakers are connected correctly. •• Check if the stripped speaker wires are clamped. @@@@ Remote control does not work •• Before you press any function button, first select the correct source with the remote control instead of the main unit. •• Reduce the distance between the remote control and the unit. No disc detected •• Insert a disc. •• Check if the disc is inserted upside down. •• Wait until the moisture condensation at the lens has cleared. •• Replace or clean the disc. •• Use a finalized CD or correct format disc. Cannot display some files in USB device •• The number of folders or files in the USB device has exceeded a certain limit. This phenomenon is not a malfunction. •• The formats of these files ar.



[You're reading an excerpt. Click here to read official PHILIPS MCM2150 user guide](http://yourpdfguides.com/dref/4672759)
<http://yourpdfguides.com/dref/4672759>