

You can read the recommendations in the user guide, the technical guide or the installation guide for PHILIPS PERFECTCARE PURE GC7620/30. You'll find the answers to all your questions on the PHILIPS PERFECTCARE PURE GC7620/30 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual PHILIPS PERFECTCARE PURE GC7620/30
User guide PHILIPS PERFECTCARE PURE GC7620/30
Operating instructions PHILIPS PERFECTCARE PURE GC7620/30
Instructions for use PHILIPS PERFECTCARE PURE GC7620/30
Instruction manual PHILIPS PERFECTCARE PURE GC7620/30

## Always here to help you

Register your product and get support at www.philips.com/welcome



GC7600



User manual

## **PHILIPS**



You're reading an excerpt. Click here to read official PHILIPS PERFECTCARE PURE GC7620/30 user guide http://yourpdfguides.com/dref/5509888

## Manual abstract:

philips. Com/welcome GC7600 User manual 4 -- ANTI-CALC: Important information: ANTI-KALK: Wichtige Informationen: Cartouche anticalcaireâ□: Informations importantesâ□: ANTICALCARE: informazioni importanti ANTIKALK: belangrijke informatie: -- Replace the ANTI-CALC cartridge when the ANTI-CALC replacement light flashes and the appliance beeps. If you do not, the product will stop working to prevent damaging itself. You could either replace the cartridge or use demineralised water with exhausted cartridge. -- To purchase more ANTI-CALC cartridges, go to your local Philips dealer or search for GC002 or GC006 in the online shop at www. Save both documents for future reference. To fully benefit from the support that Philips offers, register your product at www. Before first use - Placing the ANTI-CALC cartridge Note: The appliance does not produce steam if the ANTI-CALC cartridge is not in place. 1 Press the carry lock release button (specific types only) and remove the iron from the iron platform. 2 Open the ANTI-CALC cartridge compartment.

English 7 3 Take the ANTI-CALC cartridge out of its package (1) and pull the rubber cap from its bottom (2). Place the ANTI-CALC cartridge in the compartment and press it down until it locks into place (3). Then close the ANTI-CALC cartridge compartment lid. Note: Some water droplets may fall out of the ANTI-CALC cartridge when you place it into the compartment. This is normal and the water is harmless.

@ @You can refill the water tank at any time during use. @ @ @ This sensor informs you when the cartridge needs to be replaced. @ Make sure that the ANTI-CALC cartridge is always in place, as the cartridge serves as a link between the water tank and the iron. When you use demineralised water, the ANTI-CALC cartridge is not used and therefore replacement of the cartridge is not necessary. 3 Descaled water from the IronCare The IronCare removes scale from tap water to ensure optimum performance for your iron.

Caution: Do not use perfumed water, water from a tumble dryer, rainwater, vinegar, mineral water, magnetically treated water (Aqua+), water from a drinking water filter, starch, descaling agents, ironing aids, salt or chemicals in the water tank. These types of water have been tested. They are not suitable and may even cause damage to the appliance. If you use any of these types of water, your guarantee becomes invalid. 1 Open the filling funnel lid. 8 English 2 Fill the water tank with tap water up to the MAX indication. then close filling funnel lid (â□□clickâ□□). Using the appliance OptimalTemp technology Do not ironâ□¬non-ironable fabrics. This appliance is equippedâ□¬withâ□¬OptimalTemp technology, which enables you to iron all types of ironable fabrics without adjusting the iron temperature or steam setting. -- Fabrics with these symbols are ironable,â□¬for example linen, cotton, polyester, silk, wool, viscose and rayon.

-- Fabrics with this symbol are notâl ironable. 2 Make sure that there is enough water in the water tank (see section âl liftlling the water tankâl in chapter âl lipteraing for useâl i). 3 Plug in the appliance and press the on/off button, wait for approx. 2 minutes until the âl liptor readyâl light stops flashing, english 9 4 Press and hold the steam trigger to start ironing. Keep the steam trigger pressed continuously when you move the iron over the fabric. Note: When you use the appliance for the first time or after replacement of the ANTI-CALC cartridge, it may take 10 seconds for steam to come out of the appliance. Note: The steam generator is equipped with aâl pump to guarantee a powerful steam performance. The pump is activated each time you press the steam trigger.

It produces a loud pumping sound when there is no water in the water tank. steam boost function -- Use the steam boost function to remove stubborn creases.

Press the steam trigger twice quickly, vertical steam ironing Hot steam is emitted from the iron. Never attempt to remove creases from a garment thatâ - someone is wearing.

Do not apply steam near your or someone elseâ□□s hand. @@@@@@@@@@@@@@@@D English 1 To activate the ECO mode, press the ECO button. The light in the ECO button goes on. @@@@@@@@@@@@@@@@.-- You can still continue steam ironing for 15-30 min. @@@@@@@@@@@@@@@@@@@@@Cleaning To properly maintain your appliance, clean it regularly.

I Clean the appliance with a moist cloth. @@2 Pour the water out of the water tank into the sink. 3 Fold the supply hose. @@Push the rest of the supply hose into the storage compartment (3). 5 Fold the mains cord and fasten it with the Velcro strip. @@@@Â\pi\f\ gou are unable to solve the problem with the information below, visit www. philips. Com/support for a list of frequently asked questions or contact the Consumer Care Centre in your country. Problem

The appliance does not produce any steam. Possible cause There is not enough water in the water tank.

You have not pressed the steam trigger. Solution Fill the water tank beyond the MIN indication. Press the steam trigger and keep it pressed when you iron. You have just installed a new Press and hold the steam trigger for 10 seconds ANTI-CALC cartridge. Until steam comes out. The ANTI-CALC cartridge is not placed properly. The appliance beeps and less or no steam comes out of the iron when I press the steam trigger. You have to replace the ANTI-CALC cartridge. Press down the ANTI-CALC cartridge until it locks into position. Replace the ANTI-CALC cartridge (see chapter â□□IMPORTANT: Replacing the ANTI-CALC cartridgeâ□□).

You can also use demineralised water or descaled water from the IronCare. @@12 English Possible cause You have to replace the ANTI-CALC cartridge. Solution Replace the ANTI-CALC cartridge (see chapter â□□IMPORTANT: Replacing the ANTI-CALC cartridgeâ□□). You can also use demineralised water or descaled water from the IronCare. @@ problem The â□□ANTICALC cartridge replacementâ□□ light keeps flashing.

The appliance produces a loud pumping sound. You have just installed a new Continue to press the steam trigger until the ANTI-CALC cartridge. Pumping sound stops and steam comes out of the soleplate. the water tank is empty. Refill the water tank with water and press the steam trigger until the pumping sound stops and steam comes out of the soleplate.

Place the ANTI-CALC cartridge (see chapter â□□Before first use - Placing the ANTI-CALC cartridgeâ□□). Press the on/off button to reactivate the steam generator. The ANTI-CALC cartridge is not in place. the appliance has switched off. The safety auto-off function is activated automatically when the steam generator has not been used for more than 5 minutes. @@Because you were ironing over a seam or a fold in the garment. @@@@ perfect Care is safe on all garments. @@Avoid ironing over seams or folds or you can place a cotton cloth over the area to be ironed to avoid imprints.



You're reading an excerpt. Click here to read official PHILIPS PERFECTCARE PURE GC7620/30 user guide http://yourpdfguides.com/dref/5509888

Replace the ironing board cover if the foam material has worn out. You can also add an extra layer of felt material under the ironing board cover to prevent condensation on the ironing board.

Put an extra layer of felt material under the ironing board cover to prevent condensation on the ironing board. Activate the ECO mode to iron with a lower steam output. See section  $\hat{a} \square \square$ Energy saving $\hat{a} \square \square$  in this user manual. You may have an ironing board that is not designed to cope with the high steam rate of the steam generator. There is too much steam coming out of the iron. The default setting of the iron is the OptimalTemp setting. In this setting the iron provides a high steam output. This iron has been approved by The Woolmark Company Pty Ltd for the ironing of wool only products provided that the garments are ironed according to the instructions on the garment label and those issued by the manufacturer of this iron.



You're reading an excerpt. Click here to read official PHILIPS PERFECTCARE PURE GC7620/30 user guide

http://yourpdfguides.com/dref/5509888