



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for PHILIPS PT 720. You'll find the answers to all your questions on the PHILIPS PT 720 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual PHILIPS PT 720
User guide PHILIPS PT 720
Operating instructions PHILIPS PT 720
Instructions for use PHILIPS PT 720
Instruction manual PHILIPS PT 720

PHILIPS
NORELCO



PT730
PT725
PT720

*Rechargeable Cordless/Cord
Tripleheader Razor*

Register your product and get support at
www.norelco.com/register



[You're reading an excerpt. Click here to read official PHILIPS PT 720 user guide](http://yourpdfguides.com/dref/4264066)
<http://yourpdfguides.com/dref/4264066>

Manual abstract:

norelco.com/register 2 ENGLISH 4 Congratulations on your purchase and welcome to Philips Norelco! To fully benefit from the support that Philips Norelco offers, register your product at www.norelco.com/register PT730/PT725/PT720 4 ENGLISH ENGLISH 5 IMPORTANT SAFETY INSTRUCTIONS precautions should always be followed when using an electric appliance, including the following: Read all instructions before using this appliance. DANGER of electric shock: To reduce the risk 1. Do not reach for a corded razor that has fallen into water. Unplug immediately. 2. Use razor only in dry condition. Do not use a razor while bathing or in a shower.

3. Do not submerge razor in water. 4. Do not place or store a razor where it can fall or be pulled into a tub or sink. Do not place or drop a razor into water or other liquid.

5. Always unplug this razor from the electrical outlet immediately after use, except when razor is (re)charging. 6. Unplug and remove power supply cord from razor before cleaning. 7.

The batteries used in this device may present a fire or chemical burn hazard if mistreated. Do not disassemble, heat above 100°C (212°F) or incinerate. plug, if it is not working properly, if it has been dropped or damaged, or dropped into water while plugged in. For assistance call 1-800-243-3050. 4. Keep the razor, cord and charging plug away from heated surfaces. 5. Never drop or insert any object into any opening. 6. @ @7.

@ @8. For corded use, always attach plug to razor first, then to outlet. @ @To disconnect, turn razor off then remove charging plug from outlet. 9. Never put the razor in direct sunlight or store at a temperature above 140°F (60°C). 10. Razor can be rinsed under running tap water. Never use water hotter than 175°F (80°C). Do not charge or operate razor corded until fully dried. 11.

@ @12. @ @ @ @2. Use this razor for its intended household use as described in this manual. Do not use attachments not recommended by Philips Electronics North America Corporation. 3.

Never operate this razor if it has a damaged cord or charging SAVE THESE INSTRUCTIONS a transformer. Do not IMPORTANT: The power plug contains cut off the power plug to replace it with another plug, as this will cause a hazardous condition. 6 ENGLISH ENGLISH 7 Table of Contents Features ...

.....

.....

.....

.....

.....

... 8-9 LED Multi-Purpose Display ..

.....

.....

.....10 Before First Use

.....

.....

.....

.....

....11 Charging .

.....

.....

.....

.....

.....

.....

11-12 Recharging

.....

.....

.....

.....

.....

.....

...12 Quick Charge

.....

.....

.....

.....

.....

.....

13 Put It To The Test & Shaving Tips

...13 How to Shave With An Electric Razor

.....
.....
.....

...14 Trimming

.....
.....
.....

.....
.....
.....
.....

15 Cleaning

.....
.....
.....

.....
.....
.....

..15-20 Replacing the Razor Heads

.....20-21 Storage.

.....
.....
.....

.....
.....
.....
.....

.....22 Assistance .

.....
.....
.....

.....
.....
.....
.....

...22 Battery Removal

.....
.....
.....

.....23-24 Accessories .

.....
.....
.....

.....
.....
.....
.....

24 Warranty

.....
.....
.....

.....
.....
.....

.....25 45 - DAY MONEY-BACK GUARANTEE To enjoy the closest and most comfortable shave from your new Philips Norelco Men's Razor, the razor should be used exclusively for 3 weeks. This allows your hair and skin enough time to adapt to the Philips Norelco Shaving System. If, after that period of time, you are not fully satisfied with your Philips Norelco Men's Razor, send the product back along with dated sales receipt and we'll refund you the full purchase price. @@ We cannot be responsible for lost mail.

@@@@@@@@@ Make sure the razor is switched off before you start charging it. Important Only use the power cord provided to charge the razor. @@ After approximately 30 minutes, the charging light goes out to save energy. Charging or recharging at temperatures below 40°F or higher than 95°F adversely affects lifetime of batteries. Charging or recharging requires eight full hours. A fully charged razor has a cordless shaving time of up to 40 minutes. When charging razor for the first time or after a long period of non-use, charge until the charging light lights up continuously. Do not charge razor in a pouch. Do not charge/recharge or use razor until fully dried. Low Battery Indicator C When the battery is almost empty (5 or less shaving minutes left), the charging light starts to blink orange.

When you turn the razor OFF the charging light blinks orange for a few seconds. Quick Charge Indicator When you charge the empty battery, the charging light alternately blinks orange and green. @@@@ Stick with it! @@@@ 2 Charging and recharging requires a full 8 hours. @@@@ Stretch your skin with your free hand so blades can cut whiskers. Gently press razor to skin so the floating heads can follow the contours of your face.

DO NOT press too hard. Too much pressure can pinch the skin into the combs. Turn razor OFF by pressing the on/off button once. Clean the razor after each use (see chapter 'Cleaning'). Put the Protective Cap on the razor to protect razor heads.

2 Push down spring-release trimmer switch. C The trimmer can be activated while the razor is running. C 3 C 4 5 2 Hold trimmer as shown and move in downward strokes with gentle pressure. Close trimmer by pressing trimmer down. Turn razor OFF. 3 4 Cleaning C This symbol indicates that the razor can be C 5 Replace your Philips Norelco razor heads (model #HQ8) once a year for optimal shaving results. rinsed under running tap water. Always clean your razor after each use. Always switch razor OFF, unplug and remove power cord before cleaning. Never clean, remove or replace head assembly while motor is on.

Do not apply pressure to combs. @@ Do not use razor if combs are damaged or broken. @@ Regular cleaning guarantees better shaving results. Do not immerse razor in water. While rinsing razor heads, water may drip out of the base of razor. This is a normal occurrence. @@@@ This could damage the shaving heads. @@@@ 1 Turn razor OFF, remove the charging plug from the outlet and power cord from the razor. C 2 C 3 Clean inside razor heads and hair chamber by running under hot water. 18 ENGLISH ENGLISH 19 C 2 Press the Razor Head Release Button to open the Razor Head Assembly.

C 7 Clean the inside and outside of the comb with the brush supplied. 3 Pull the shaving unit off the razor. For optimum performance, razor cutters and combs should be cleaned in a degreasing liquid (e.g. Philips Norelco Shaving Head Cleaning Spray, Model Hmpt to replace battery. Insulate battery ends by covering with tape and/or place battery in a small plastic bag. 24 ENGLISH 9 Discard your razor. Do not attempt to plug power cord into the outlet or recharge the razor after the battery has been removed. Contact your local town or city officials for battery disposal information or call 1-800-8-BATTERY or www.rbrc.

com for battery drop-off locations. ENGLISH FULL TWO YEAR WARRANTY Philips Electronics North America Corporation warrants each new Philips Norelco Product, Model PT730/PT725/PT720 (except cutters and combs) against defects in materials or workmanship for a period of two years from the date of purchase, and agrees to repair or replace any defective product without charge. IMPORTANT: This warranty does not cover damage resulting from accident, misuse or abuse, lack of reasonable care, the affixing of any attachment not provided with the product or loss of parts or subjecting the product to any but the specified voltage.



[You're reading an excerpt. Click here to read official PHILIPS PT 720 user guide](http://yourpdfguides.com/dref/4264066)
<http://yourpdfguides.com/dref/4264066>

** Use of unauthorized replacement parts will void this warranty. @@@@Damage occurring during shipment is not covered by this warranty. @@@Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above exclusion and limitations may not apply to you. * Read enclosed instructions carefully. Manufactured for: Philips Consumer Lifestyle A Division of Philips Electronics North America Corporation P.O.Box 10313, Stamford, CT 06904 This symbol on the product's nameplate means it is listed by Underwriters' Laboratories, Inc.*

Norelco and Tripleheader are Registered Trademarks of Philips Electronics North America Corporation. is a Trademark of Philips Electronics North America Corporation. PHILIPS is a Registered Trademark of Koninklijke Philips Electronics N.V. 25 10 Accessories C Replacement-Heads Model HQ8 For maximum razor performance, replace your Philips Norelco razor heads once a year. Shaving Head Cleaning Spray HQ110 - Philips Norelco Shaving Head Cleaning Spray Philips Norelco Razor Accessories may be purchased at a store near you, or on our website www.philips.com/store © 2012 Philips Electronics North America Corporation. All Rights Reserved. .



[You're reading an excerpt. Click here to read official PHILIPS PT 720 user guide](http://yourpdfguides.com/dref/4264066)

<http://yourpdfguides.com/dref/4264066>