



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for PHILIPS QG3320/15 . You'll find the answers to all your questions on the PHILIPS QG3320/15 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual PHILIPS QG3320/15
User guide PHILIPS QG3320/15
Operating instructions PHILIPS QG3320/15
Instructions for use PHILIPS QG3320/15
Instruction manual PHILIPS QG3320/15

Always here to help you

Register your product and get support at
www.philips.com/welcome



QG3320



User manual

PHILIPS



[You're reading an excerpt. Click here to read official PHILIPS QG3320/15 user guide](http://yourpdfguides.com/dref/5325571)
<http://yourpdfguides.com/dref/5325571>

Manual abstract:

13 QG3320 6 English Introduction Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com. 1 Beard trimmer 2 Handle 3 On/off slide 4 Cleaning brush 5 Nose/ear trimmer 6 Beard comb 7 Guiding grooves 8 Setting indicator 9 Adapter Important Read this user manual carefully before you use the appliance and save it for future reference. **danger** -- Keep the adapter dry. **Warning** -- Check if the voltage indicated on the adapter corresponds to the local mains voltage before you connect the appliance. -- The adapter contains a transformer. Do not cut off the adapter to replace it with another plug, as this causes a hazardous situation. -- Keep the appliance and its cord out of reach of children. -- Always check the appliance before you use it. -- Do not use the appliance in the bath or in the shower. **caution** -- Only use the adapter supplied.

-- Use, charge and store the appliance at a temperature between 5°C and 35°C. -- Make sure the appliance is switched off and disconnected from the mains before you clean it under the tap. -- If the adapter is damaged, always have it replaced with one of the original type in order to avoid a hazard. -- Never use compressed air, scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance. -- Noise level: Lc = 75dB(A) English Compliance with standards -- This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields (EMF).

charging Standard charging takes approximately 10 hours. When the appliance is fully charged, it has an operating time of up to 35 minutes. 1 Switch off the appliance before you charge it. 2 Insert the appliance plug into the appliance. 3 Put the adapter in the wall socket.

Do not move the trimmer too fast. make smooth and gentle movements. Turn the trimmer clockwise to fix it (2). 8 English 3 Press the setting selector (1) and slide the comb to the desired hair length setting (2). You can choose any setting between 1 and 18mm. 4 Switch on the appliance. 5 Slowly move the trimmer against the hair growth direction. Press lightly and always make sure the surface of the comb is in full contact with the skin. Note: When you trim for the first time, start at the highest setting (18mm) to familiarise yourself with the appliance. Trimming nose and ear hair Trimming nose/hair 1 Place the nose/ear trimmer on the handle (1).

Turn the nose/ear trimmer clockwise to fix it (2). 2 Make sure your nostrils are clean. 3 Switch on the appliance and insert the tip of the trimmer into one of your nostrils. Do not insert the tip more than 0.5cm into your nostril. 4 Slowly move the tip in and out while turning it round at the same time to remove unwanted hair. To reduce the tickling effect, make sure that you press the side of the tip firmly against the skin. Trimming ear hair 1 Attach the nose/ear trimmer onto the handle. 2 Clean the outer ear channel. Make sure it is free from wax.

4 Carefully insert the tip into the outer ear channel. Do not insert the tip more than 0.5cm. Always keep the adapter dry. Clean the appliance after each use. 2 Remove any attachments from the appliance.

You find its contact details in the worldwide guarantee leaflet. By doing this, you help to preserve the environment. -- The built-in rechargeable battery contains substances that may pollute the environment. Always remove the battery before you discard and hand in the appliance at an official collection point. Dispose of the battery at an official collection point for batteries.

If you have trouble removing the battery, you can also take the appliance to a Philips service centre. Make sure the battery is completely empty when you remove it. Be careful, the battery strips and housing parts are very sharp. 1 Make sure the appliance is disconnected from the mains. 2 Remove any attachment. 3 Remove the on/off slide with a flathead screwdriver. 6 Pull the inner part out of the handle. 7 Remove the white round disc. 9 Cut the wires to separate the rechargeable battery from the inner part. Guarantee and support If you need information or support, please visit www.philips.com.

Guarantee restrictions Cutting units are not covered by the terms of the international guarantee because they are subject to wear. Troubleshooting This chapter summarises the most common problems you could encounter with the appliance. If you are unable to solve the problem with the information below, visit www.philips.com. Problem The beard comb does not stay attached to the handle. Possible cause You do not attach the beard comb correctly. The guiding grooves are dirty. the comb is broken. The appliance does not work anymore. the rechargeable battery is empty.

Clean the appliance and the guiding grooves thoroughly. charge the appliance (see chapter Charging). Make sure you switch off the appliance before you charge it. If the charging light does not light up, check whether there is a power failure or if the wall socket is live. If there is no power failure and the wall socket is live but the charging light still does not light up, take the appliance to your dealer or a Philips service centre. Switch off the appliance and charge it for 10 hours (see chapter Charging). The appliance does not work when it is connected to the mains. The appliance is not designed to work from the mains. 12 English Possible cause Solution Problem The appliance does not charge when it is connected to the mains. The appliance does not trim as well as it used to.

the appliance becomes hot. The appliance has to Switch off the appliance. Be switched off when you charge it. The cutting element of the attachment you are using is dirty. The cutting element of the attachment you are using is dirty. Remove the attachment from the appliance. clean the attachment under a lukewarm tap. Remove the attachment from the appliance. .



[You're reading an excerpt. Click here to read official PHILIPS](http://yourpdfguides.com/dref/5325571)

[QG3320/15 user guide](http://yourpdfguides.com/dref/5325571)

<http://yourpdfguides.com/dref/5325571>