



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for PHILIPS RQ1155/32 SENSOTOUCH 2D. You'll find the answers to all your questions on the PHILIPS RQ1155/32 SENSOTOUCH 2D in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual PHILIPS RQ1155/32 SENSOTOUCH 2D**  
**User guide PHILIPS RQ1155/32 SENSOTOUCH 2D**  
**Operating instructions PHILIPS RQ1155/32 SENSOTOUCH 2D**  
**Instructions for use PHILIPS RQ1155/32 SENSOTOUCH 2D**  
**Instruction manual PHILIPS RQ1155/32 SENSOTOUCH 2D**

Always here to help you  
Register your product and get support at  
[www.philips.com/welcome](http://www.philips.com/welcome)

Question? Contact Philips

RQ1100 series



User manual

**PHILIPS**



[You're reading an excerpt. Click here to read official PHILIPS RQ1155/32 SENSOTOUCH 2D user guide](http://yourpdfguides.com/dref/5510773)  
<http://yourpdfguides.com/dref/5510773>

### Manual abstract:

philips. @@@@ general description (Fig. @@Note: In this user manual the term 'appliances' refers to the shaver and the Jet Clean System. If your shaver does not come with a Jet Clean System, it refers to the shaver only. ENGLISH General Danger -- Make sure the adapter does not get wet. 5 Warning -- The adapter contains a transformer. Do not cut off the adapter to replace it with another plug, as this causes a hazardous situation. -- These appliances are not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of these appliances by a person responsible for their safety. -- Children should be supervised to ensure that they do not play with the shaver and the Jet Clean System. -- Be careful with hot water when you clean the appliances.

Always check if the water is not too hot, to prevent your hands from getting burnt. Caution -- Never immerse the Jet Clean System and the charger in water nor rinse them under the tap. -- The appliances and accessories are not dishwasher-proof. -- Always place and use the appliances on a surface that is fluid-resistant. -- Use, charge and store the shaver at a temperature between 5°C and 35°C.

-- Only use the accessories supplied with this shaver or that have been specifically developed for this shaver. -- If the adapter or any of the other accessories is damaged, always have it replaced with one of the original type in order to avoid a hazard. -- The adapter transforms 100-240 volts to a safe low voltage of less than 24 volts. -- Do not use the appliances and accessories if they are damaged. -- Water may leak from the socket at the bottom of the shaver when you rinse it.

This is normal and not dangerous because all electronics are enclosed in a sealed power unit inside the shaver. Jet Clean system (RQ1197CC, RQ1195CC, RQ1185CC, RQ1180CC, RQ1175CC only) Caution -- Only use the Jet Clean System with the original HQ200 cleaning fluid. -- Always place and use the Jet

Clean System on a stable, level and horizontal fluid-resistant surface to prevent leakage. -- Never immerse the Jet Clean System in water. -- Empty the cleaning chamber and clean it thoroughly by rinsing it with hot tap water every 15 days. -- The Jet Clean System thoroughly cleans but does not disinfect your shaver, therefore do not share the shaver with others. -- The cleaning chamber of the Jet Clean System is not dishwasher-proof. -- When the Jet Clean System is ready for use, do not move it to prevent leakage of cleaning fluid. 6 ENGLISH Beard Styler attachment (RQ1195, RQ1175 only) Caution -- Only use the Beard Styler attachment to trim facial hair (beard, moustache and sideburns). Do not use it to trim body parts below the neckline.

-- Only use the Beard Styler attachment in combination with the following shaver types: RQ12xx, RQ11xx, RQ10xx. -- The Beard Styler attachment is not dishwasher-proof. Compliance with standards -- This shaver complies with the internationally approved safety regulations and can be safely used in the bath or shower and cleaned under the tap. -- These Philips appliances comply with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user manual, the appliances are safe to use based on scientific evidence available today. The display Note: If there is a protective foil on the display, remove it before you use the shaver for the first time. The various shaver types have different displays, which are shown in the figures below. 7 RQ1197, RQ1195, RQ1180, RQ1175 -- When the shaver is charging, first the bottom charging light flashes, then the second charging light, and so on until the shaver is fully charged. -- Quick charge: When the shaver contains enough energy for one shave, the bottom charging light alternately flashes orange and white. □ RQ1185, RQ1167, RQ1160, RQ1155, RQ1151, RQ1150, RQ1145, RQ1141, RQ1131 Note: The displays of the various shaver types look different, but work in the same way.

-- When the shaver is charging, first the plug symbol and the battery symbol flash alternately. After some time, the plug symbol goes out and the battery symbol continues to flash until the shaver is fully charged. -- Quick charge: When the shaver contains enough energy for one shave, the alternate flashing of the plug symbol and battery symbol stops and only the battery symbol flashes. Battery fully charged RQ1197, RQ1195, RQ1180, RQ1175 -- When the battery is fully charged, all charging lights light up continuously. after approx.

30 minutes, the display automatically switches off again. RQ1185, RQ1167, RQ1160, RQ1155, RQ1151, RQ11510, RQ1145, RQ1141, RQ1131 Note: The displays of the various shaver types look different, but work in the same way. -- When the battery is fully charged, the battery symbol lights up continuously. after approx. 30 minutes, the display automatically switches off again.

8 ENGLISH Battery low RQ1197, RQ1195, RQ1180, RQ1175 -- When the battery is almost empty (when there are only 5 or fewer shaving minutes left), the bottom charging light flashes orange. -- When you switch off the shaver, the bottom charging light continues to flash for a few seconds. RQ1185, RQ1167, RQ1160, RQ1155, RQ1151, RQ11510, RQ1145, RQ1141, RQ1131 Note: The displays of the various shaver types look different, but work in the same way. -- When the battery is almost empty (when there are only 5 or fewer shaving minutes left), the plug symbol flashes. -- When you switch off the shaver, the plug symbol continues to flash for a few seconds. Remaining battery capacity RQ1197, RQ1195, RQ1180, RQ1175 -- The remaining battery capacity is indicated by the number of charging lights that are on. Travel lock You can lock the shaver when you are going to travel. The travel lock prevents the shaver from being switched on by accident. Activating the travel lock 1 Press the on/off button for 3 seconds to enter the travel lock mode. ENGLISH ,, The lock symbol lights up on the display.

Deactivating the travel lock 1 Press the on/off button for 3 seconds. ,, The motor starts running to indicate that the travel lock has been deactivated. The shaver is now ready for use again. 9 Note: The displays of the various shaver types look different, but show the same symbol. Note: When you place the shaver in the plugged-in charger or Jet Clean System, the travel lock is automatically deactivated. Replace shaving head holder Note: The displays of the various shaver types look different, but show the same symbol. For maximum shaving performance, we advise you to replace the shaving head holder every two years. -- To remind you to replace the shaving head holder, the appliance is equipped with a replacement reminder which is activated automatically after approx. two years. The replacement reminder is repeated at 9 successive shaves or until you reset the shaver.

Charge the shaver before you use it for the first time and when the display indicates that the battery is almost empty (see section 'Battery low' in chapter 'The display').



[You're reading an excerpt. Click here to read official PHILIPS RQ1155/32 SENSOTOUCH 2D user guide](http://yourpdfguides.com/dref/5510773)  
<http://yourpdfguides.com/dref/5510773>

*Quick charge After the shaver has charged for 5 minutes, it contains enough energy for one shave. 10 ENGLISH Charging in the charger 1 Insert the small plug into the charger. 2 Unfold the charger ('click'). 3 Put the adapter in the wall socket.*

*4 Put the shaver in the charger (1) and press it backwards until it locks into place (2). , The display shows that the shaver is charging (see section 'Charging' in chapter 'The display'). Charging in the Jet Clean System (RQ1197CC, RQ1195CC, RQ1185CC, RQ1180ICC, RQ1175CC only) 1 Put the small plug in the Jet Clean System. 2 Put the adapter in the wall socket. 3 Hold the shaver upside down above the holder with the back of the shaver pointing towards the holder.*

*Note: RQ1197, RQ1195, RQ1180, RQ1175: when you turn the shaver upside down, the battery indication on the display is also turned upside down so you can still see to what level the battery is charged. 4 Place the shaver body in the holder behind the two clips (1) and press it down until it locks into place (2).*

*Note: The shaver cannot be placed in the Jet Clean System when the protection cap is on the shaving unit or when the trimmer is placed on the shaver.*

*@@ENGLISH Using the shaver Shaving 11 Skin adaptation period Your first shaves may not bring you the result you expect and your skin may even become slightly irritated. this is normal. Your skin and beard need time to adapt to any new shaving system. We advise you to shave regularly (at least 3 times a week) for a period of 3 weeks to allow your skin to adapt to the new shaver. During this period, use your new electric shaver exclusively and do not use other shaving methods. If you use different shaving methods, it is more difficult for your skin to adapt to the new shaving system. 1 Press the on/off button once to switch on the shaver.*

*, , RQ1197, RQ1195, RQ1185, RQ1180, RQ1175: The display lights up for a few seconds. 2 Move the shaving heads over your skin in circular movements. -- Do not make straight movements. 3 Press the on/off button once to switch off the shaver. , RQ1197, RQ1195, RQ1185, RQ1180, RQ1175: The display lights up for a few seconds and then shows the remaining battery capacity. Wet shaving You can also use this shaver on a wet face with shaving foam or shaving gel. To shave with shaving foam or shaving gel, follow the steps below: 1 Apply some water to your skin. 2 Apply shaving foam or shaving gel to your skin. 3 Rinse the shaving unit under the tap to ensure that the shaving unit glides smoothly over your skin. 4 Press the on/off button once to switch on the shaver. 5 Move the shaving heads over your skin in circular movements. Note: Rinse the shaver under the tap regularly to ensure that it continues to glide smoothly over your skin. 6 Dry your face and thoroughly clean the shaver after use (see chapter 'Cleaning and maintenance'). Note: Make sure you rinse all foam or shaving gel off the shaver. Using the trimmer (RQ1197, RQ1185, RQ1180, RQ1160, RQ1155, RQ1151 only) You can use the trimmer to groom your sideburns and moustache.*

*1 Pull the shaving unit straight off the shaver. Note: Do not twist the shaving unit while you pull it off the shaver. 12 ENGLISH 2 Insert the lug of the trimmer into the slot in the top of the shaver (1). Then press down the trimmer (2) to attach it to the shaver ('click'). 3 Press the on/off button once to switch on the trimmer.*

*, , RQ1180: The display lights up for a few seconds. 4 You can now start trimming. 5 Press the on/off button once to switch off the trimmer. , RQ1180: The display lights up for a few seconds to show the remaining battery capacity. 6 Pull the trimmer straight off the shaver. Note: Do not twist the trimming unit while you pull it off the shaver. @@@@Using the Beard Styler attachment (RQ1195, RQ117 Jet Clean System off the cleaning chamber (2). , , The cleaning chamber remains behind. 4 Unscrew the cap from the bottle with HQ200 cleaning fluid. @@6 Place the Jet Clean System back onto the cleaning chamber.*

*Make sure the release buttons click back into place. @@@@This guarantees an optimal lifetime for the cleaning fluid. @@@@@@@@, The shaver display stops showing the charging indication. @@@@@@@@This phase takes approx. 2 hours. The shaver stays in this position until the end of the program. @@@@@@@@The holder remains in its current position. @@@@@@@ every 15 days. @@@@You can wipe the outside of the Jet Clean System with a damp cloth. @@@Then lift the Jet Clean System off the cleaning chamber (2).*

*, , The cleaning chamber remains behind. 2 Pour any remaining cleaning fluid out of the cleaning chamber. You can simply pour the cleaning fluid down the sink. 3 Rinse the cleaning chamber under the tap. The cleaning chamber is not dishwasher-proof.*

*@@ENGLISH 5 Place the Jet Clean System back onto the cleaning chamber. Make sure the release buttons click back into place. 19 Extra-thorough cleaning method Make sure the appliance is switched off. 1 Pull the shaving head holder off the bottom part of the shaving unit. 2 Slide the green retaining frame in the direction of the arrows indicated on the retaining frame.*

*3 Lift the retaining frame out of the shaving head holder. 4 Remove the cutter from the shaving guard. Note: Do not clean more than one cutter and shaving guard at a time, since they are all matching sets. If you accidentally put a cutter in the wrong shaving guard, it may take several weeks before optimal shaving performance is restored. 20 ENGLISH 5 Clean the cutter with the cleaning brush supplied. 6 Clean the inside of the shaving guard. 7 After cleaning, place the cutter back into the shaving guard with the cutter legs pointing downwards. 8 Place the retaining frame back onto the shaving head holder. 9 Slide the guard back into place ('click'). ENGLISH 21 10 Reattach the shaving head holder to the bottom part of the shaving unit.*

*Cleaning the trimmer (RQ1197, RQ1185, RQ1180, RQ1160, RQ1155, RQ1151 only) Clean the trimmer every time you have used it. 1 Switch on the appliance with the trimmer attached. 2 Rinse the trimmer under a hot tap for some time. 3 After cleaning , switch off the appliance. Tip: For optimal trimmer performance, lubricate the trimmer teeth with a drop of sewing machine oil every six months. Cleaning the Beard Styler attachment (RQ1195, RQ1175 only) Clean the Beard Styler attachment every time you have used it. 1 Pull the comb off the Beard Styler attachment. 2 Rinse the Beard Styler attachment and the comb separately under a hot tap for some time. Note: You can also clean the Beard Styler attachment and the comb with the cleaning brush supplied. 3 Lubricate the trimmer teeth with a drop of sewing machine oil every six months.*

*Storage 1 Slide the protection cap onto the shaving unit to prevent damage to the shaving heads. 2 RQ1197 , RQ1195 , RQ1185 , RQ1180 , RQ1175 , RQ1160 , RQ1155 , RQ1151 only: Store the shaver in the pouch supplied. 22 ENGLISH Replacement For maximum shaving performance, we advise you to replace the shaving head holder every two years.*



[You're reading an excerpt. Click here to read official PHILIPS RQ1155/32 SENSOTOUCH 2D user guide](http://yourpdfguides.com/dref/5510773)  
<http://yourpdfguides.com/dref/5510773>

Only replace the shaving head holder with an original RQ11 Philips Shaving Head Holder. Replacement reminder To remind you to replace the shaving head holder, the appliance is equipped with a replacement reminder which is activated automatically after approx. two years. The replacement reminder is repeated at 9 successive shaves or until you reset the shaver. 1 The shaving unit symbol flashes when you switch off the shaver. Note: The displays of the various shaver types look different, but show the same symbol. 2 Pull the shaving head holder off the bottom part of the shaving unit.

3 Attach the new shaving head holder to the bottom part of the shaving unit ('click'). 4 To reset the shaver, press and hold the on/off button for approx. 10 seconds. Note: If you do not reset the shaver at the first replacement reminder, it continues to show the shaving unit symbol at 8 more shaves or until you reset the shaver. ENGLISH Ordering accessories 23 To purchase accessories for this appliance, please visit our online shop at www. If the online shop is not available in your country, go to your Philips dealer or a Philips service centre. If you have any difficulties obtaining accessories for your appliance, please contact the Philips Consumer Care Centre in your country. You find its contact details in the worldwide guarantee leaflet. The following parts are available -- HQ8505 adapter -- RQ11 Philips Shaving Head Holder -- HQ110 Philips Shaving Head Cleaning Spray -- HQ200 Philips Cleaning Fluid -- RQ111 Beard Styler attachment Shaving head holder -- We advise you to replace the shaving head holder every two years. Always replace the shaving head holder with an original RQ11 Philips Shaving Head Holder.

Cleaning -- RQ1197CC, RQ1195CC, RQ1185CC, RQ1180CC, RQ1175CC only: use Jet Clean Solution (HQ200) for regular cleaning of the shaving heads. Environment -- Do not throw away the shaver and the Jet Clean System (RQ1197CC, RQ1195CC, RQ1185CC, RQ1180CC, RQ1175CC only) with the normal household waste at the end of their life, but hand them in at an official collection point for recycling. By doing this, you help to preserve the environment. -- The built-in rechargeable shaver battery contains substances that may pollute the environment. Always remove the battery before you discard or hand in the shaver at an official collection point. Dispose of the battery at an official collection point for batteries. If you have trouble removing the battery, you can also take the appliance to a Philips service centre. The staff of this centre will remove the battery for you and will dispose of it in an environmentally safe way. 24

ENGLISH Removing the rechargeable shaver battery Only remove the rechargeable battery when you discard the shaver. Make sure the battery is completely empty when you remove it.

Be careful, the battery strips are sharp. 1 Remove the back panel of the shaver with a screwdriver. 2 Remove the rechargeable battery. Guarantee and support If you need information or support, please visit www.philips.

Com/ support or read the separate worldwide guarantee leaflet. Guarantee restrictions The shaving heads (cutters and shaving guards) are not covered by the terms of the international guarantee because they are subject to wear. Troubleshooting This chapter summarises the most common problems you could encounter with the appliance. If you are unable to solve the problem with the information below, visit www.philips.

Com/support for a list of frequently asked questions or contact the Consumer Care Centre in your country. Problem The shaver does not shave as well as it used to. Solution Replace the shaving head holder (see chapter 'Replacement'). Clean the shaving heads by following the steps of the extra-thorough cleaning method (see chapter 'Cleaning and maintenance'). Clean the shaver thoroughly before you continue shaving. If necessary, clean and refill the cleaning chamber (see chapter 'Cleaning and maintenance'). RQ1197CC, RQ1195CC, RQ1185CC, RQ1180CC, RQ1175CC only: The Jet Clean System has not cleaned the shaver properly, because the cleaning fluid in the cleaning chamber is soiled or the cleaning fluid level is too low. ENGLISH Problem The shaver does not work when I press the on/off button. The shaving head holder is soiled or damaged to such an extent that the motor cannot run. The temperature of the shaver is too high.

In this case, the shaver does not work. RQ1197CC, RQ1195CC, RQ1185CC, RQ1180CC, RQ1175CC only: The shaver is not entirely clean after I clean it in the Jet Clean System. The cleaning fluid in the cleaning chamber is soiled. Press the on/off button for 3 seconds to deactivate the travel lock. Clean the shaving head holder or replace it (see chapters 'Cleaning and maintenance' and 'Replacement'). Let the shaver cool down. As soon as the temperature of the shaver has dropped sufficiently, you can switch on the shaver again. Empty and rinse the cleaning chamber and refill it with new cleaning fluid. The cleaning fluid level is too low. If the fluid volume in the cleaning chamber drops below the minimum level during the cleaning program, the program aborts.

The cleaning light and the 'cleaning chamber empty' symbol flash at intervals and the holder returns to its starting position. You have used another cleaning fluid than the original Philips cleaning fluid. RQ1197CC, RQ1195CC, RQ1185CC, RQ1180CC, RQ1175CC only: The Jet Clean System does not work when I press the on/off button. The Jet Clean System is not connected to the mains. Refill the cleaning chamber with cleaning fluid to a level between the two lines (see chapter 'Cleaning and maintenance').

only use HQ200 Philips Cleaning Fluid. Put the small plug in the Jet Clean System and put the adapter in the wall socket. Press the shaver tightly into the There is no electrical connection between the Jet Clean System and the holder to lock it into place. shaver. @@@@ @@@@ I Tryk én gang på tænd/sluk-knappen for at tænde for shaveren.

3 Tryk én gang på tænd/sluk-knappen for at slukke for shaveren. 4 Tryk én gang på tænd/sluk-knappen for at tænde for shaveren. Bemærk: Sørg for at rense shaveren for al skum eller gel. 3 Tryk én gang på tænd/sluk-knappen for at tænde for trimmeren. 5 Tryk én gang på tænd/sluk-knappen for at slukke for trimmeren. 3 Tryk på on/off-knappen på shaveren for at tænde for den. 2 Tryk en gang på on/off-knappen for at tænde for shaveren. Sikkerhed og support Hvis du brug for hjælp eller support, bedes du besøge www. Remplacez toujours le support de la tête de rasage par un support de tête de rasage RQ11 Philips. Remplacez toujours le support de la tête de rasage par un support de tête de rasage RQ11 Philips.

94 FRANÇAIS Cause possible Solution Problème Le support de la tête de rasage est Nettoyez le support de la tête de sale ou endommagé de sorte que le rasage ou remplacez-le (voir les moteur ne peut pas fonctionner).



[You're reading an excerpt. Click here to read official PHILIPS](#)

[RQ1155/32 SENSOTOUCH 2D user guide](#)

<http://yourpdfguides.com/dref/5510773>

□1) A Barbermaskin 1 Skjerm 2 Av/på-knapp for barbermaskinen 3 Beskyttelsesdeksel 4 RQ11 – skjæreenhet B CRP331-trimmer (kun RQ1197, RQ1185, RQ1180, RQ1160, RQ1155, RQ1151) C RQ111-skjeggstylertilbehør (kun RQ1195, RQ1175) 1 Hårlengdevelger 2 Kam på skjeggstylertilbehør D Jet Clean-systemet (kun RQ1197CC, RQ1195CC, RQ1185CC, RQ1180CC, RQ1175CC, RQ1160CC) 1 Barbermaskinholder 2 Rengjøringskammeret er tomt-symbol 3 Rengjøringsymbol 4 Tørkesymbol 5 Av/på-knapp for Jet Clean-systemet 6 Utløserknapp for rengjøringskammer E Adapter F Lader G Rengjøringsbørste H HQ200-rengjøringsvæske (kun RQ197CC, RQ1195CC, RQ1185CC, RQ1180CC, RQ1175CC, RQ1160CC) I Etui (kun RQ1197, RQ1195, RQ1185, RQ1180, RQ1175, RQ1160, RQ1155, RQ1151) Viktig Les denne brukerveiledningen nøye før du bruker barbermaskinen og Jet Clean-systemet, og ta vare på den til senere referanse. -- Hvis adapteren eller noe av det andre tilbehøret blir ødelagt, må du alltid sørge for å bytte ut adapteren eller tilbehøret med den originale typen for å unngå at farlige situasjoner oppstår. -- Disse Philips-apparatene overholder alle standarder som gjelder for elektromagnetiske felt (EMF). Lad opp barbermaskinen før du bruker den for første gang, og når det vises i displayet at batteriet nesten er tomt for strøm (se under Lav batterikapasitet i avsnittet Displayet). Klargjør Jet Clean-systemet for bruk Fyll rengjøringskammeret før du bruker enheten for første gang. Nivået for rengjøringsvæske er for lavt. 258 SVENSKA Introduktion Gratulerar till inköpet och välkommen till Philips! SVENSKA 277 Beställa tillbehör Om du vill köpa tillbehör till den här apparaten kan du gå till vår onlinebutik på www. Garanti och support Om du behöver information eller support kan du gå till www. .



[You're reading an excerpt. Click here to read official PHILIPS RQ1155/32 SENSOTOUCH 2D user guide](http://yourpdfguides.com/dref/5510773)  
<http://yourpdfguides.com/dref/5510773>