



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for PHILIPS RQ1285/17. You'll find the answers to all your questions on the PHILIPS RQ1285/17 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual PHILIPS RQ1285/17
User guide PHILIPS RQ1285/17
Operating instructions PHILIPS RQ1285/17
Instructions for use PHILIPS RQ1285/17
Instruction manual PHILIPS RQ1285/17

Always here to help you

Register your product and get support at
www.philips.com/welcome



RQ1200 series



User manual

PHILIPS



[You're reading an excerpt. Click here to read official PHILIPS RQ1285/17 user guide](http://yourpdfguides.com/dref/5563335)
<http://yourpdfguides.com/dref/5563335>

Manual abstract:

philips. @@@@ general description (Fig. @@ Save this leaflet for future reference. Do not cut off the adapter to replace it with another plug, as this causes a hazardous situation. 5 Warning -- The adapter contains a transformer. -- Children should be supervised to ensure that they do not play with the shaver, the Jet Clean system and the charging stand. -- Always unplug the shaver before you clean it under the tap. Caution -- Never immerse the Jet Clean system or the charging stand in water nor rinse it under the tap. -- Never use water hotter than 80°C to rinse the shaver. -- Do not use the shaver, Jet Clean system, adapter, charging stand or any other part if it is damaged, as this may cause injury.

Always replace a damaged adapter, charging stand or part with one of the original type. -- Only use the Jet Clean system with the original HQ200 Jet Clean solution. -- Always place the Jet Clean system on a stable, level and horizontal surface to prevent leakage. -- When the Jet Clean system is ready for use, do not move it to prevent leakage of cleaning fluid. -- The Jet Clean system thoroughly cleans but does not disinfect your shaver, therefore do not share the shaver with others.

-- Never use compressed air, scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance. -- Water may leak from the socket at the bottom of the shaver when you rinse it. This is normal and not dangerous because all electronics are enclosed in a sealed power unit inside the shaver. Compliance with standards -- This shaver is waterproof and complies with the internationally approved safety regulations. 5 Warning -- The adapter contains a transformer.

For safety reasons, the shaver can therefore only be used cordlessly. -- The shaver and the Jet Clean system comply with all applicable standards and regulations regarding exposure to electromagnetic fields. General -- The adapter is equipped with an automatic voltage selector and is suitable for mains voltages ranging from 100 to 240 volts. -- The adapter transforms 100-240 volts to a safe low voltage of less than 24 volts. 5 Warning -- The adapter contains a transformer. The various shaver types have different displays, which are shown in the figures below. -- Quick charge: When the shaver contains enough energy for one shave, the display shows 5 minutes in red. RQ127x, RQ126x, RQ125x Note: The displays of the various shaver types look different, but the charging lights work in the same way. -- When the shaver is charging, first the bottom charging light flashes, then the second charging light, and so on until the shaver is fully charged. -- Quick charge: When the shaver contains enough energy for one shave, the bottom charging light alternately flashes orange and white.

MINUTES LEFT ENGLISH Battery fully charged RQ129x, RQ128x -- When the battery is fully charged, the minutes indication lights up continuously. after approx. 30 minutes, the display automatically switches off again. 7 MINUTES LEFT MINUTES LEFT MINUTES LEFT MINUTES LEFT Note: The shaver is equipped with an intelligent self-learning system that monitors the shaver's energy consumption and converts the remaining battery capacity into shaving minutes. The energy consumption and therefore the remaining number of shaving minutes depend on your skin and beard type and your shaving behaviour (e. If the number of shaving minutes of the fully charged shaver is less than 60 minutes, this is completely normal and does not mean that the battery capacity of the shaver has diminished. RQ127x, RQ126x, RQ125x Note: The displays of the various shaver types look different, but the charging lights work in the same way. 30 minutes, the display automatically switches off again. □ Battery low RQ129x, RQ128x -- When the battery is almost empty (when there are only 5 or fewer shaving minutes left), the minutes indication starts to flash. -- When you switch off the shaver, the shaving minutes continue to flash for a few more seconds.

You hear a beep when there are no shaving minutes left. RQ127x, RQ126x, RQ125x Note: The displays of the various shaver types look different, but the charging lights work in the same way. -- When the battery is almost empty (when there are only 5 or fewer shaving minutes left), the bottom charging light flashes orange. □ -- When you switch off the shaver, the bottom charging light continues to flash orange for a few seconds. 8 ENGLISH Remaining battery capacity RQ129x, RQ128x -- The remaining battery capacity is indicated by the number of shaving minutes shown on the display.

RQ127x, RQ126x, RQ125x Note: The displays of the various shaver types look different, but the charging lights work in the same way. MINUTES LEFT MINUTES LEFT MINUTES LEFT -- The remaining battery capacity is indicated by the flashing charging lights. Clean shaver For optimal shaving performance, we advise you to clean the shaver after every use. MINUTES LEFT Note: The displays of the various shaver types look different, but show the same symbol. -- The tap symbol flashes to remind you to clean the shaver.

Replace shaving unit For maximum shaving performance, we advise you to replace the shaving unit every two years. MINUTES LEFT MINUTES LEFT Note: The displays of the various shaver types look different, but show the same symbol. -- To remind you to replace the shaving unit, the appliance is equipped with a replacement reminder which is activated automatically after approx. two years. The replacement reminder is repeated at 9 successive shaves (RQ128x, RQ127x, RQ126x, RQ125x only) or until you reset the shaver. Travel lock (RQ128x, RQ127x, RQ126x, RQ125x only) You can lock the shaver when you are going to travel. The travel lock prevents the shaver from being switched on by accident. Note: The displays of the various shaver types look different, but show the same symbol. ENGLISH Activating the travel lock 9 1 Press the on/off button for 3 seconds to enter the travel lock mode. ,, RQ128x: The display starts to count down from 3.

At 1, the appliance beeps to indicate that it is locked. ,, The lock symbol lights up on the display. After a few seconds it goes out. Deactivating the travel lock 1 Press the on/off button for 3 seconds. ,, The motor starts running to indicate that the travel lock has been deactivated. The shaver is now ready for use again. Note: When you place the shaver in the plugged-in charger or Jet Clean System, the travel lock is automatically deactivated. power-saving mode (RQ129x only) The appliance is equipped with an automatic power-saving mode. When the shaver enters the power-saving mode, the light in the on/off button goes out to save energy. -- When the appliance is switched off but detects movement for 5 minutes (for instance when you are travelling with the shaver in your suitcase), it automatically goes into power-saving mode.

This mode prevents the shaver from being switched on by accident. ,, The lock symbol flashes on the display to indicate that the appliance is in power-saving mode.



[You're reading an excerpt. Click here to read official PHILIPS](http://yourpdfguides.com/dref/5563335)

[RQ1285/17 user guide](http://yourpdfguides.com/dref/5563335)

<http://yourpdfguides.com/dref/5563335>

-- To deactivate the power-saving mode, simply press the on/off button. Blocked shaving heads Note: The displays of the various shaver types look different, but show the same symbol. -- If the shaving heads are blocked, the shaving unit symbol, the tap symbol and the exclamation mark flash.

□ In this case, the motor cannot run because the shaving heads are soiled or damaged. □ -- When this happens, you have to clean the shaving unit or replace it. -- The shaving unit symbol, the tap symbol and the exclamation mark continue to flash until you unblock the shaving heads. Note: RQ129x, RQ128x: When the battery is fully charged, the display shows the actual remaining shaving minutes (see section 'Battery fully charged' in chapter 'The display'). Charging in the charger 1 Insert the small plug into the charger.

2 Unfold the charger ('click'). 3 Put the adapter in the wall socket. 4 Put the shaver in the charger. @@ Charging in the Jet Clean System (RQ1296CC, RQ1295CC, RQ1290CC, RQ1286CC, RQ1285CC, RQ1284CC, RQ1280CC, RQ1275CC, RQ1265CC, RQ1260CC, RQ1252CC, RQ1251CC, RQ1250CC only) 1 Put the small plug in the Jet Clean System. 2 Put the adapter in the wall socket. 3 Hold the shaver upside down above the holder with the back of the shaver pointing towards the holder. Note: The shaver cannot be placed in the Jet Clean System when the protection cap is on the shaving unit. Note: RQ129x only: when you turn the shaver upside down, the minutes indication on the display is also turned upside down so you can still see to what level the battery is charged. ENGLISH 11 4 Place the shaver body in the holder behind the two clips (1) and press it down until it locks into place (2). , The display shows that the shaver is charging (see section 'Charging' in chapter 'The display').

Using the shaver Shaving Skin adaptation period Your first shaves may not bring you the result you expect and your skin may even become slightly irritated. this is normal. Your skin and beard need time to adapt to any new shaving system. □ We advise you to shave regularly (at least 3 times a week) for a period of 3 weeks to allow your skin to adapt to the new shaver. During this period, use your new electric shaver exclusively and do not use other shaving methods. If you use different shaving methods, it is more difficult for your skin to adapt to the new shaving system. 1 Press the on/off button once to switch on the shaver. , The display lights up for a few seconds. 2 Move the shaving heads over your skin in circular movements. -- Do not make straight movements.

3 Press the on/off button once to switch off the shaver. , The display lights up for a few seconds and then shows the remaining battery capacity. Wet shaving You can also use this shaver on a wet face with shaving foam or shaving gel. To shave with shaving foam or shaving gel, follow the steps below: 1 Apply some water to your skin. 4 Press the on/off button once to switch on the shaver.

5 Move the shaving heads over your skin in circular movements. 2 Apply shaving foam or shaving gel to your skin. @@ Note: Make sure you rinse all foam or shaving gel off the shaver. @@ 1 Pull the shaving unit straight off the shaver. Note: Do not twist the shaving unit while you pull it off the shaver.

2 Press the on/off button once to switch on the shaver. , The display lights up for a few seconds. 3 Slide the trimmer slide forwards to slide out the trimmer. 4 You can now start trimming. 5 Slide the trimmer slide backwards to retract the trimmer. 6 Press the on/off button once to switch off the shaver. @@ 7 gh cleaning program. -- Type RQ1007 has one automatic cleaning program. @@@@ 1 Put the small plug in the Jet Clean System. 2 Put the adapter in the wall socket.

, , The holder automatically moves to the highest position. @@ Then lift the Jet Clean System off the cleaning chamber (2). , , The cleaning chamber remains behind. 4 Unscrew the cap from the bottle with HQ200 cleaning fluid. @@ 6 Place the Jet Clean System back onto the cleaning chamber. Make sure the release buttons click back into place. @@ This guarantees an optimal lifetime for the cleaning fluid. @@@@ 3 RQ1008: Press the up/down button to select a cleaning program. @@ , The shaver display stops showing the charging indication. @@@@ The intensive program takes approx.

35 minutes. @@@@ This phase takes approx. 2 hours. The shaver stays in this position until the end of the program. @@@@ The holder remains in its current position.

@@ -- When the cleaning fluid drops below the minimum level, the 'cleaning chamber empty' symbol starts to flash and the holder returns to its starting position. -- If you use the Jet Clean System to clean your shaver every day, you need to refill the cleaning chamber approx. every 15 days. Cleaning the Jet Clean System Clean the cleaning chamber every 15 days. You can wipe the outside of the Jet Clean System with a damp cloth.

ENGLISH 1 Simultaneously press the release buttons on both sides of the Jet Clean System (1). Then lift the Jet Clean System off the cleaning chamber (2). , , The cleaning chamber remains behind. 19 2 Pour any remaining cleaning fluid out of the cleaning chamber. You can simply pour the cleaning fluid down the sink. 3 Rinse the cleaning chamber under the tap. The cleaning chamber is not dishwasher-proof. 4 Fill the cleaning chamber with HQ200 cleaning fluid to a level between the two lines. 5 Place the Jet Clean System back onto the cleaning chamber. Make sure the release buttons click back into place.

20 20 ENGLISH Extra-thorough cleaning method Make sure the appliance is switched off. 1 Pull the shaving unit straight off the shaver. Note: Do not twist the shaving unit while you pull it off the shaver. 2 Pull open the three shaving heads one by one. 3 Press the retainer release tab (1) until the retainer opens (2). Note: Do not clean more than one cutter and shaving guard at a time, since they are all matching sets. If you accidentally put a cutter in the wrong shaving guard, it may take several weeks before optimal shaving performance is restored. 4 Remove the cutter from the shaving guard. □ 5 Clean the cutter with the cleaning brush supplied. ENGLISH 6 Clean the inside of the shaving guard.

21 7 After cleaning, place the cutter back into the shaving guard with the cutter legs pointing downwards. 8 Press down the retainer over the cutter. 9 Close the shaving heads. 10 Insert the lug of the shaving unit into the slot in the top of the shaver (1). Then press the shaving unit downwards (2) to attach it to the shaver ('click').

Cleaning the trimmer Clean the trimmer every time you have used it. 1 Slide the trimmer slide forwards to slide out the trimmer. 9 Close the shaving heads. 3 Slide the trimmer slide backwards to retract the trimmer. Tip: For optimal trimmer performance, lubricate the trimmer teeth with a drop of sewing machine oil every six months.



[You're reading an excerpt. Click here to read official PHILIPS](http://yourpdfguides.com/dref/5563335)

[RQ1285/17 user guide](http://yourpdfguides.com/dref/5563335)

<http://yourpdfguides.com/dref/5563335>

Cleaning the Beard Styler attachment (RQ1296, RQ1295, RQ1286, RQ1285, RQ1275, RQ1265 only) Clean the Beard Styler attachment every time you have used it. 1 Pull the comb off the Beard Styler attachment. 9 Close the shaving heads. Note: You can also clean the Beard Styler attachment and the comb with the cleaning brush supplied. 3 Lubricate the trimmer teeth with a drop of sewing machine oil every six months. Storage 1 Slide the protection cap onto the shaving unit to prevent damage to the shaving heads. 2 Store the shaver in the pouch supplied. Replacement For maximum shaving performance, we advise you to replace the shaving unit every two years. Only replace the shaving unit with an original RQ12 Philips Shaving unit. 1 The shaving unit symbol flashes (all types) and you hear a beep (RQ129x, RQ128x only) when you switch off the shaver.

Note: The displays of the different types look different, but show the same symbol. MINUTES LEFT MINUTES LEFT ENGLISH 2 Pull the old shaving unit straight off the shaver. Note: Do not twist the shaving unit while you pull it off the shaver. 23 3 Insert the lug of the new RQ12 shaving unit into the slot in the top of the shaver (1). Then press down the shaving unit (2) to attach it to the shaver ('click'). Note: If you do not reset the shaver at the first replacement reminder, it continues to beep (RQ128x only) and show the shaving unit symbol at 8 more shaves or until you reset the shaver. Note for RQ129x: You do not need to reset the shaver. After 3 shaves, the replacement reminder (flashing shaving unit symbol and beeping) is deactivated automatically. Ordering accessories To purchase accessories for this appliance, please visit our online shop at [www](http://www.philips.com). If the online shop is not available in your country, go to your Philips dealer or a Philips service centre.

If you have any difficulties obtaining accessories for your appliance, please contact the Philips Consumer Care Centre in your country. You find its contact details in the worldwide guarantee leaflet. The following parts are available: -- HQ8505 adapter -- RQ12 Philips Shaving Unit -- HQ110 Philips Shaving Head Cleaning Spray -- HQ200 Philips Cleaning Fluid -- RQ111 Beard Styler attachment 24 24 ENGLISH Shaving heads -- We advise you to replace your shaving heads every two years. Always replace the shaving unit with an original RQ12 Philips Shaving Unit. Cleaning -- Specific types only: use Jet Clean Solution (HQ200) for regular cleaning of the shaving heads.

Environment -- Do not throw away the appliances with the normal household waste at the end of their life, but hand them in at an official collection point for recycling. By doing this, you help to preserve the environment. -- The built-in rechargeable shaver battery contains substances that may pollute the environment. Always remove the battery before you discard or hand in the shaver at an official collection point. Dispose of the battery at an official collection point for batteries.

If you have trouble removing the battery, you can also take the appliance to a Philips service centre. The staff of this centre will remove the battery for you and will dispose of it in an environmentally safe way. Removing the rechargeable shaver battery Only remove the rechargeable battery when you discard the shaver. Make sure the battery is completely empty when you remove it. Be careful, the battery strips are sharp. 1 Remove the back panel of the shaver with a screwdriver. 2 Remove the rechargeable battery. Guarantee and support If you need support or if you have a problem, please visit [www](http://www.philips.com). Guarantee restrictions The shaving heads (cutters and shaving guards) are not covered by the terms of the international guarantee because they are subject to wear. ENGLISH Troubleshooting 25 This chapter summarises the most common problems you could encounter with the appliance.

If you are unable to solve the problem with the information below, visit www.philips.com/support for a list of frequently asked questions or contact the Consumer Care Centre in your country. Problem The shaver does not shave as well as it used to. possible cause The shaving heads are damaged or worn. Solution Replace the shaving unit (see chapter 'Replacement'). Clean the shaving heads by following the steps of the extra-thorough cleaning method (see chapter 'Cleaning and maintenance'). Clean the shaver thoroughly before you continue shaving. If necessary, clean and refill the cleaning chamber (see chapter 'Cleaning and maintenance'). recharge the battery (see chapter 'Charging').

Press the on/off button for 3 seconds to deactivate the travel lock. Clean the shaving unit or replace it (see chapters 'Cleaning and maintenance' and 'Replacement'). Switch off the shaver and let it cool down. As soon as the temperature of the shaver has dropped sufficiently, you can switch on the shaver again. long hairs obstruct the shaving heads.

Specific types only: The Jet Clean System has not cleaned the shaver properly, because the cleaning fluid in the cleaning chamber is soiled or the cleaning fluid level is too low. The shaver does not work when I press the on/off button. The shaving unit is soiled or damaged to such an extent that the motor cannot run. In this case, the shaving unit symbol, the tap symbol and the exclamation mark flash. The temperature of the shaver is too high.

@@@The cleaning fluid level is too low. If the fluid volume in the cleaning chamber drops below the minimum level during the cleaning program, the program aborts. The cleaning light and the 'cleaning chamber empty' symbol flash at intervals and the holder returns to its starting position. You have used another cleaning fluid than the original Philips cleaning fluid. The Jet Clean System does not work when I press the on/off button. The Jet Clean System is not connected to the mains. Refill the cleaning chamber with cleaning fluid to a level between the two lines (see chapter 'Cleaning and maintenance'). only use HQ200 Philips Cleaning Fluid. Put the small plug in the Jet Clean System and put the adapter in the wall socket. Press the shaver tightly into the holder to lock it into place.

You have not placed the shaver in the Jet Clean System properly, so there is no electrical connection between the Jet Clean System and the shaver. The shaver is not fully charged after I charge charger/Jet Clean System (specific types only) properly. it in the charger/Jet Clean System. Make sure you press the shaver until it locks into place. ENGLISH Problem RQ129x/RQ128x: The shaver is fully charged, but the display shows less than 60 shaving minutes. Possible cause The shaver is equipped with an intelligent self-learning system that monitors the shaver's energy consumption and converts the remaining battery capacity into shaving minutes. The energy consumption and therefore the remaining number of shaving minutes depend on your skin and beard type and your shaving behaviour (e.



[You're reading an excerpt. Click here to read official PHILIPS](http://yourpdfguides.com/dref/5563335)

[RQ1285/17 user guide](http://yourpdfguides.com/dref/5563335)

<http://yourpdfguides.com/dref/5563335>

You have selected another cleaning program. The Jet Clean System has three cleaning programs: the eco program, the normal program and the intensive program. Each of these programs has a different operating time.

Solution 27 If the number of shaving minutes of the fully charged shaver is less than 60 minutes, this is completely normal and does not mean that the battery capacity of the shaver has diminished. RQ1008: The operating time of the Jet Clean System is suddenly shorter or longer than it used to be. Press the up/down button on the Jet Clean System to select the cleaning program of your preference (see chapter 'Cleaning and maintenance'). Når shaveren går i strømbesparelsestilstand, går lyset i tænd/sluk-knappen ud for at spare energi. Bemærk: Økoprogrammet har kortere tørretid for at spare energi.

Når barbermaskinen går i energisparemodus, slås lyset av i av/på-knappen for å spare strøm. Merk: Spareprogrammet har en kortere tørketid for å spare strøm. 272 SVENSKA Introduktion Gratulerar till inköpet och välkommen till Philips! Garanti och support Om du behöver support har något problem kan du gå till [www. .](http://www.philips.com)



[You're reading an excerpt. Click here to read official PHILIPS RQ1285/17 user guide](http://www.philips.com)
<http://yourpdfguides.com/dref/5563335>