



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for PIONEER AVH-270BT. You'll find the answers to all your questions on the PIONEER AVH-270BT in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual PIONEER AVH-270BT  
User guide PIONEER AVH-270BT  
Operating instructions PIONEER AVH-270BT  
Instructions for use PIONEER AVH-270BT  
Instruction manual PIONEER AVH-270BT

**Pioneer**

English

**AVH-270BT  
AVH-170DVD**  
DVD EDS AV RECEIVER

Operation Manual



[You're reading an excerpt. Click here to read official PIONEER AVH-270BT user guide](http://yourpdfguides.com/dref/5793257)  
<http://yourpdfguides.com/dref/5793257>

**Manual abstract:**

.....  
.....  
.....  
.....3  Radio....

.....  
.....  
.....  
.....13 Important safety information.

.....  
.....  
.....  
.....3 To ensure safe driving..

.....  
.....  
.....  
.....3 When using a display connected to V OUT..  
...3 To avoid battery exhaustion.

.....  
.....  
.....  
.....  
4 Rear view camera.....

.....  
.....  
.....  
.....  
4 Handling the USB connector.....  
.....  
.....  
.....4 In case of trouble.

.....  
.....  
.....  
.....  
.....  
.....  
.....  
4 Visit our website.....

.....  
.....  
.....  
.....  
.....  
.....  
.....  
...4 About this product.....

.....  
.....  
.....  
.....  
.....  
.....  
.....  
...4 Protecting the LCD panel and screen..  
.....

*...4 Notes on internal memory.....*

.....  
.....  
.....

*.....4 About this manual....*

.....  
.....  
.....

.....  
.....  
.....

*.4 Starting procedure.....*

.....  
.....  
.....  
.....

*...13 Storing the strongest broadcast frequencies...13 Displaying the "Radio settings" screen...*

.....

*...13 Tuning into strong frequencies.*

.....

.....

*...13 Setting the FM tuning step..*

.....  
.....

.....

*...13 Switching the sound quality of the FM tuner..*

*..13 Setting the alternative frequency search...*

*.....13 Setting the Auto PI search....*

.....

.....

.....

*.....14 Limiting stations to regional programing...*

*.....14 Receiving traffic announcements (TA)...*

.....

.....

*14 Receiving news announcements.....*

.....

*14 □ AUX source....*

.....  
.....

*...23 Starting procedure.....*

.....  
.....  
.....

.....

.....

*23 Setting the video signal....*

.....

.....

.....

.....

*23 Creating a shortcut.....*

.....  
.....





.....  
.....  
.....

.....  
.....  
.....  
.....

.....40 DivX.....

.....  
.....  
.....

.....  
.....  
.....  
.....

.....40 AAC.

.....  
.....  
.....

.....  
.....  
.....  
.....

.....40 Detailed information regarding connected iPod devices..

.....  
.....

.....  
.....  
.....  
.....

.....40 Using app-based connected content..

.....  
.....

.....41 Notice regarding video viewing.....

.....  
.....

.....41 Notice regarding DVD-Video viewing....

.....

.....41 Notice regarding MP3 file usage.....

.....  
.....

.....41 Using the LCD screen correctly.....

.....  
.....41 Specifications.  
.....  
.....

.....  
.....  
.....  
.....

.....42 □ Basic operation.....

.....  
.....

..5 □ Disc.....

.....  
.....  
.....

.....15 Starting procedure..

.....  
.....  
.....

16 Checking part names and functions.....

.....5 Remote control..

.....  
.....  
.....

..5 Inserting/ejecting/connecting media...

.....

....5 On first-time startup.....

.....  
.....  
.....

.5 How to use the screens...

.....

.....  
.....  
.....

...6 Supported AV source.....

.....  
.....  
.....

...7 Selecting a source.....

.....  
.....  
.....

..7 Using the touch panel...

.....

.....  
.....  
.....

.....7 Selecting files from the file name list....

.16 Switching the media file type....

.....  
.....

.....16 Searching for the part you want to play..  
.....  
....16 Operating the DVD menu.  
.....  
.....  
.....  
.....  
.16 Switching the subtitle/audio language.....  
....16 □ Audio adjustments.....  
.....  
27 Displaying the “Audio” setting screen.....  
.....27 Using fader/balance adjustment.  
.....  
.....  
.....  
.27 Using balance adjustment.....  
.....  
.....  
.....  
..27 Adjusting source levels.....  
.....  
.....  
.....  
.....27 Adjusting loudness...  
.....  
.....  
.....  
.....  
.....27 Using the subwoofer output.  
.....  
.....  
.....  
.....27 Adjusting the subwoofer settings...  
.....  
.....  
.....27 Switching the rear speaker output..  
.....  
.....  
.....  
..27 Switching the RCA rear output...  
.....  
.....  
.....  
.27 Boosting the bass...  
.....  
.....  
.....  
.....  
.....28 Setting the high pass filter.....  
.....  
.....  
.....  
.....28 Using the equalizer.....  
.....  
.....



.....  
.....  
.....28 □ Registration and connection of Bluetooth device....  
.....  
.....8 Displaying the “Bluetooth” screen.  
.....  
.....  
.....8 Registering your Bluetooth devices....  
.....  
.....  
8 Connecting a registered Bluetooth device manually.....  
.....  
.....  
.....  
.....  
.....8 Switching visibility.....  
.....  
.....  
.....  
.....8 Entering the PIN code for Bluetooth wireless connection.  
.....  
.....  
.....  
.....  
.....  
.....  
8 □ Compressed audio files.... 17 Starting procedure (for Disc).....  
.....  
.....  
.....  
.....17 Starting procedure (for USB).....  
.....  
.....  
.....17 Selecting files from the file name list..  
.....  
.....17 Switching the media file type..  
.....  
.....  
.....  
17 □ Compressed video files....18 Starting procedure.  
.....  
.....  
.....  
.....  
.....18 Selecting files from the file name list....  
.....  
.....  
.....18 2 □ Still image files....  
.....  
.....19 □ Theme menu..



□ In some countries the viewing of video image on a display inside a vehicle even by persons othepots, colored stripes, etc.

□ To protect the LCD screen from damage, be sure to touch the touch panel keys only with your finger and do so gently. □ Checking part names and functions on page 5 Settings and recorded contents are reset to the factory settings. About this manual This manual uses diagrams of actual screens to describe operations. However, the screens on some units may not match those shown in this manual depending on the model used. CAUTION The rear view mode is to use this product as an aid to keep an eye on the trailers, or while backing up. Do not use this function for entertainment purposes. Handling the USB connector □ To prevent data loss and damage to the storage device, never remove it from this product while data is being transferred. □ Pioneer cannot guarantee compatibility with all USB mass storage devices and assumes no responsibility for any loss of data on media players, iPhone, smartphone, or other devices while using this product. Meanings of Symbols Used in This Manual 270BT This indicates model name that are supported the described operations.

This indicates to touch an appropriate soft key on the touch screen.

This indicates to touch and hold an appropriate soft key on the touch screen. This indicates that there is a reference or supplementary for the key or screen. CAUTION Notes on internal memory Before removing the vehicle battery □ Some of the settings and recorded contents will not be reset. HOLD Data subject to erasure The information is erased by disconnecting the yellow lead from the battery (or removing the battery itself). □ Some of the settings and recorded contents will not be reset. In case of trouble Should this product fail to operate properly, contact your dealer or nearest authorized Pioneer Service Station. Visit our website Visit us at the following site: <http://www.pioneer.eu> □ Register your product. We will keep the details of your purchase on file to help you refer to this information in the event of an insurance claim such as loss or theft.

Resetting the microprocessor CAUTION Pressing the RESET button resets settings and recorded contents to the factory settings. □ Do not perform this operation when a device is connected to this product. 4 Basic operation Checking part names and functions 7 1 2 3 4 5 6 8 9 Inserting/ejecting/connecting media CAUTION Do not insert anything other than a disc into the disc-loading slot. After a short pause, the splash screen comes on for a few seconds. The “Select Program Language” screen appears.

p From the second time on, the screen shown will differ depending on the previous conditions. 2 Touch the language that you want to use on screen. The top menu screen appears. Inserting and ejecting a disc Inserting a disc □ Insert a disc into the disc-loading slot. 3 Touch . Ejecting a disc 1 2 3 4 5 6 7 8 9 RESET □ Resetting the microprocessor on page 4 button Volume (+/-) button MUTE Press to switch the mute setting to on or off. button Press to switch the display between the top menu screen and the current source screen. DISP Press to turn the display on or off. button Track ( Performs manual seek tuning, fast forward, / reverse and track search controls. ) button Disc □ Inserting and ejecting a disc on page 5 loading slot LCD screen □ Press button to eject a disc. Plugging and unplugging a USB storage device p This product may not achieve optimum performance with some USB storage devices. p Connection via a USB hub is not possible. p A USB cable is required for connection. 1 Pull out the plug from the USB port of the USB cable. 2 Plug a USB storage device into the USB cable.

1 2 Remote control The remote control CD-R33 is sold separately. For details concerning operations, see the remote control manual. 1 USB cable 2 USB storage device Check that no data is being accessed before pulling out the USB storage device. On first-time startup 1 Start the engine to boot up the system. 5 Basic operation How to use the screens Time and date setting screen 10 6 2014 12 22 Month/Date Time Format d/m/y 12hour m/d/y 24hour Setting menu screen Top menu screen Current source System Radio 6/10 21 48 Phone menu screen AUX Rear View ON OFF Phone Book abcdefghi abcdefghi abcdefghi abcdefghi abcdefghi 3 ABC AV source icons Radio Disc iPod Bluetooth Audio A By pressing the button on any screen you can display the Top menu screen. 6 Basic operation Supported AV source You can play or use the following sources with this product. □ Radio □ CD □ ROM (compressed audio files) □ DVD-Video The following sources can be played back or used by connecting an auxiliary device. □ USB □ iPod □ Bluetooth audio (AVH-270BT) □ AUX Using the common touch panel keys □ □ : Returns to the previous screen. : Closes the screen. Operating list screens 1 ROOT abcdefghi abcdefghi abcdefghi abcdefghi abcdefghi 2 Selecting a source Source on the Top menu screen 1 Press .

3 p When you select “OFF”, the AV source is turned off. 2 Touch the source icon you want to select. Source on the source list 1 Display the source list. 1 Touching an item on the list allows you to narrow down the options and proceed to the next operation. 2 Appears when all characters are not displayed on the display area.

If you touch the key, the rest are scrolled for display. 3 Appears when items cannot be displayed on a single page. Touch or to view any hidden items. CD Track 99 Pause 9999'99” Operating the time bar 6/10 21 48 1 9999'99” -9999'99” -9999'99” 1 Displays the source list. 1 You can change the playback point by dragging the key.

p This function is not available when the Bluetooth Audio is selected as the AV source. 2 Touch the source key you want to select. Switching the operation panel □ : Switches the operation panel of AV sources. 7 Using the touch panel You can operate this product by touching the keys on the screen directly with your fingers. p To protect the LCD screen from damage, be sure to touch the screen only with your finger gently. This key is not available on all sources. Registration and connection of Bluetooth device 270BT Connecting to a Bluetooth device automatically This function connects the last connected Bluetooth device to this product automatically as soon as the two devices are less than a few meters apart. □ Displaying the “Bluetooth” screen on page 8 □ Displaying the “Bluetooth” screen on page 8 1 Display the “Bluetooth” screen. Displaying the “Bluetooth” screen 1 Press 2 Touch . , and then .

The “Bluetooth” screen appears. 2 Touch [Visibility] to switch “On” (default) or “Off”. 1 Display the “Bluetooth” screen. Entering the PIN code for Bluetooth wireless connection To connect your Bluetooth device to this product, you need to enter a PIN code.



[You're reading an excerpt. Click here to read official PIONEER](#)

[AVH-270BT user guide](#)

<http://yourpdfguides.com/dref/5793257>

You can change the PIN code with this function. □ Displaying the “Bluetooth” screen on page 8 2 Touch [Auto Connect] to switch “On” (default) or “Off”. Registering your Bluetooth devices p If three devices are already paired, “Memory Full” is displayed. Delete a paired device first. □ Deleting a registered device on page 8 Deleting a registered device CAUTION Never turn this product off while the paired Bluetooth device is being deleted. □ Displaying the “Bluetooth” screen on page 8 1 Display the “Bluetooth” screen.

2 Touch [PIN Code Input]. 3 Touch [0] to [9] to input the pin code (up to 8 -digits). p The default PIN code is “0000”. 1 Activate the Bluetooth wireless technology on your devices. □ Displaying the “Bluetooth” screen on page 8 1 Display the “Bluetooth” screen.

2 Touch [Connection]. 3 Touch . 4 Touch . 2 Display the “Bluetooth” screen. 3 Touch [Connection].

The system searches for Bluetooth devices waiting for a connection and displays them in the list if a device is found. 4 Touch . Connecting a registered Bluetooth device manually Connect the Bluetooth device manually in the following cases: □ Two or more Bluetooth devices are registered, and you want to manually select the device to be used. □ You want to reconnect a disconnected Bluetooth device. □ Connection cannot be established automatically for some reason. Displaying the device information □ Displaying the “Bluetooth” screen on page 8 The device name and address of the Bluetooth device and this product are displayed. 1 Display the “Bluetooth” screen. 2 Touch [Device Information]. p If your device supports SSP (Secure Simple Pairing), a sixdigit number appears on the display of this product. Touch [Yes] to pair the device.

p Once the connection is established, the device name is displayed. Touch the device name to disconnect. After the device is successfully registered, a Bluetooth connection is established from the system. p The Bluetooth connection can be also made by detecting this product from the Bluetooth device. Before registration, make sure that “Visibility” in the “Bluetooth” menu is set to “On”. For details on a Bluetooth device operations, refer to the operating instructions supplied with the Bluetooth device. □ Switching visibility on page 8 5 Touch the Bluetooth device name you want to register. Clearing the Bluetooth memory p This setting is available only when you stop your vehicle in a safe place and apply the parking brake. 1 Activate the Bluetooth wireless technology on your devices. □ Displaying the “Bluetooth” screen on page 8 2 Display the “Bluetooth” screen.

3 Touch [Connection]. CAUTION Never turn this product off while the Bluetooth memory is being cleared. □ Displaying the “Bluetooth” screen on page 8 4 Touch the name of the device that you want to connect. 1 Display the “Bluetooth” screen. 2 Touch [Bluetooth Memory Clear].

The confirmation screen appears. Switching visibility 8 This function sets whether or not to make this product visible to the other device. 3 Touch [Clear]. Registration and connection of Bluetooth device Updating Bluetooth software This function is used to update this product with the latest Bluetooth software.

For details on Bluetooth software and updating, refer to our website.

p The source is turned off and the Bluetooth connection is disconnected before the process starts. p This setting is available only when you stop your vehicle in a safe place and apply the parking brake. p You need to store the version up file to the USB storage device in advance. CAUTION Never turn this product off and never disconnect the phone while the software is being updated. □ Plugging and unplugging a USB storage device on page 5 □ Displaying the “Bluetooth” screen on page 8 1 Connect the USB storage device stored the version up file to this unit. 2 Display the “Bluetooth” screen. 3 Touch [BT Software Update]. Follow the on-screen instructions to finish updating the Bluetooth software. 4 Touch [Start]. Displaying the Bluetooth software version If this product fails to operate properly, you may need to consult your dealer for repair.

In such cases, perform the following procedure to check the software version on this unit. □ Displaying the “Bluetooth” screen on page 8 The version of this product’s Bluetooth module appears. 1 Display the “Bluetooth” screen. 2 Touch [BT Version Info]. 9 Hands-free phoning 270BT Bluetooth telephone connected indicator The device number of the connected device is displayed. Displaying the Phone menu screen 1 Press 2 Touch . . The Phone menu screen appears. 2 Touch . The following items are available: □ : Received call list □ : Dialed call list □ : Missed call list 3 Touch the item to switch the history list. Reception status of the cellular phone Battery status of the cellular phone Phone Book \*1 \*2 \*3 \*4 abcdefghi abcdefghi abcdefghi abcdefghi 3 ABC Making a phone call You can make a phone call in many different ways. The dial screen appears and dialing starts. 4 Touch the desired entry on the list to make a call. 5 Touch to end the call. Direct dialing □ Displaying the Phone menu screen on page 10 Using the preset dial lists Registering a phone number You can easily store up to six phone numbers per device as presets.

□ Displaying the Phone menu screen on page 10 On the “Phone Book” screen, touch the desired name. 1 Display the “Phone menu” screen. 2 Touch . A 3 Touch the number keys to enter the phone number. 4 Touch 5 Touch to make a call.

to end the call. 1 Display the “Phone menu” screen. 2 Touch 3 Touch or . p You may hear a noise when you hang up the phone. . Switches to the initial search. \*1 \*2 \*3 \*4 Displays the preset dial screen. □ Using the preset dial lists on page 10 Switches to the phone book list. □ Calling a number in the phone book on page 10 Switches to the missed, received and dialed call lists. □ Dialing from the history on page 10 Switches the mode to enter the phone number directly.

□ Direct dialing on page 10 Calling a number in the phone book p The contacts on your phone will be automatically transferred to this product. p “Visibility” of the “Bluetooth” screen should be on. □ Switching visibility on page 8 □ Displaying the Phone menu screen on page 10 Dialing from the preset dial list □ Displaying the Phone menu screen on page 10 1 Display the “Phone menu” screen. 2 Touch . 1 Display the “Phone menu” screen. 2 Touch . The dial screen appears and dialing starts. 3 Touch the desired item you want to dial. Receiving a phone call 1 Touch to answer the call. □ If you touch while getting a call waiting, you can switch to the talking person.



[You're reading an excerpt. Click here to read official PIONEER AVH-270BT user guide](http://yourpdfguides.com/dref/5793257)  
<http://yourpdfguides.com/dref/5793257>

□ Touch 2 Touch to reject the call. to end the call. 3 Touch the desired name on the list. The dial screen appears and dialing starts. 4 Touch the phone number you want to dial.

5 Touch to end the call. CAUTION For your safety, avoid talking on the phone as much as possible while driving. To use this function you need to connect your cellular phone to this product via Bluetooth in advance. □ Registration and connection of Bluetooth device on page 8 10 Dialing from the history □ Displaying the Phone menu screen on page 10 1 Display the “Phone menu” screen. Hands-free phoning Changing the phone settings Answering a call automatically □ Displaying the “Bluetooth” screen on page 8 Notes for hands-free phoning General notes □ Connection to all cellular phones featuring Bluetooth wireless technology is not guaranteed.

□ The line-of-sight distance between this product and your cellular phone must be 10 meters or less when sending and receiving voice and data via Bluetooth technology. □ With some cellular phones, the ring sound may not be output from the speakers. □ If private mode is selected on the cellular phone, hands-free phoning may be disabled. □ Depending on the cellular phone, phone book transfer may not be available. 1 Display the “Bluetooth” screen. 2 Touch [Auto Answer] to switch “On” or “Off” (default). Switching the ring tone You can select whether or not to use this product’s ring tone. □ Displaying the “Bluetooth” screen on page 8 Registration and connection 1 Display the “Bluetooth” screen. 2 Touch [Ring Tone] to switch “On” (default) or “Off”. □ Cellular phone operations vary depending on the type of cellular phone.

Refer to the instruction manual that came with your cellular phone for detailed instructions. □ When phone book transfer does not work, disconnect your phone and then perform pairing again from your phone to this product. Inverting names in the phone book □ Displaying the “Bluetooth” screen on page 8 Making and receiving calls 1 Display the “Bluetooth” screen. 2 Touch [Invert Name]. Setting the private mode During a conversation, you can switch to private mode (talk directly on your cellular phone). □ Touch off. or to turn private mode on or □ You may hear a noise in the following situations: — When you answer the phone using the button on the phone. — When the person on the other end of the line hangs up the phone. □ If the person on the other end of the line cannot hear the conversation due to an echo, decrease the volume level for hands-free phoning. □ With some cellular phones, even after you press the accept button on the cellular phone when a call comes in, handsfree phoning may not be performed.

□ The registered name will appear if the phone number is already registered in the phone book. When one phone number is registered under different names, only the phone number will be displayed. Adjusting the other party’s listening volume This product can be adjusted to the other party’s listening volume. The received call and the dialed number histories □ You cannot make a call to the entry of an unknown user (no phone number) in the received call history. □ If calls are made by operating your cellular phone, no history data will be recorded in this product.

Phone book transfers p Settings can be stored for each device. □ Touch to switch between the three volume levels. □ If there are more than 1 000 phone book entries on your cellular phone, not all entries may download completely. □ Depending on the phone, this product may not display the phone book correctly. □ If the phone book in the phone contains image data, the phone book may not be transferred correctly.

11 Setup for iPod When using an iPod with this product, configure the settings of this product according to the device to be connected. iPod / iPhone with a 30-pin connector When connecting via CD-IU201V (sold separately) □ Available sources iPod (audio) iPod (video) iPod compatibility This product supports only the following iPod models and iPod software versions. Others may not work correctly. □ iPhone 4, 4s, 5, 5s, 5c: iOS 7.0 or later. □ iPhone 3GS: iOS 6.0.1 □ iPod touch (4th, 5th generation): iOS 6.0.1 □ iPod touch (3rd generation): iOS 5.

1.1 □ iPod touch (2nd generation): iOS 4.2.1 □ iPod classic 160GB (2009): Ver. 2.0.4 □ iPod classic 160GB (2008): Ver. 2.0.1 □ iPod classic 80GB: Ver. 1.1.2 □ iPod nano (7th generation) □ iPod nano (6th generation): Ver. 1.2 □ iPod nano (5th generation): Ver. 1.0.2 □ iPod nano (4th generation): Ver. 1.0.

4 □ iPod nano (3rd generation): Ver. 1.1.3 p You can connect and control an iPod compatible with this product by using separately sold connector cables. p Operation methods may vary depending on the iPod model and the software version. p Depending on the software version of the iPod, it may not be compatible with this product. For details about iPod compatibility with this product, refer to the information on our website. This manual applies to the following iPod models. iPod with 30-pin connector □ iPhone 3GS, 4, 4s □ iPod touch 2nd, 3rd, 4th generation □ iPod classic 80GB, 160GB □ iPod nano 3rd, 4th, 5th, 6th generation iPod with Lightning connector □ iPhone 5, 5s, 5c □ iPod touch 5th generation □ iPod nano 7th generation iPod / iPhone with a Lightning connector When connecting via CD-IU52 (sold separately) □ Available sources iPod (audio) Information on the connections and functions The settings and cables required for connecting each device, and the available sources are as follows. 12 Radio Displays the preset channel list.

Select an item on the list (“1” to “6”) to switch to the preset channel. Starting procedure 1 Press . The “Radio” screen appears. Selects the FM1, FM2, FM3, MW or LW band. 2 Touch [Radio]. 1 2 3 4 5 6 Radio 6/10 21 48 FM1 MW Storing the strongest broadcast frequencies The BSM (best stations memory) function automatically stores the six strongest broadcast frequencies under the preset tuning keys “1” to “6”. p Storing broadcast frequencies with BSM may replace those you have already saved. p Previously stored broadcast frequencies may remain stored if the number of frequencies stored has not reached the limit. □ Off (default): Turns the seek tuning setting off. □ Level1 to Level4: Sets the level of sensitivity for FM to Level1 to Level4 (for MW and LW to Level1 or Level2).

p The FM “Level4” (MW and LW “Level2”) setting allows reception of only stations with the strongest signals. 3 Touch the item you want to set. Setting the FM tuning step You can switch the seek tuning step for FM band. p The tuning step remains at 50 kHz during manual tuning. □ Source on the Top menu screen on page 7 □ Displaying the “Radio settings” screen on page 13 Abcdefghi Abcdefghi Abcdefghi 1 Turn the source off.



[You're reading an excerpt. Click here to read official PIONEER](http://yourpdfguides.com/dref/5793257)

[AVH-270BT user guide](http://yourpdfguides.com/dref/5793257)

<http://yourpdfguides.com/dref/5793257>

2 Display the "Radio Settings" screen. 1 Touch . to begin a search. Performs manual tuning. HOLD 3 Touch [FM Step] to switch the step to "100kHz" (default) or "50kHz".

Performs seek tuning or non stop seek tuning. Releasing the key in a few seconds, skips to the nearest station from the current frequency. If you touch again while the system is searching, cancels seek tuning and performs manual tuning. Keeping holding the key for a long seconds, performs non stop seek tuning. While the message is displayed, the six strongest broadcast frequencies will be stored under the preset tuning keys in order of their signal strength. 2 Touch Switching the sound quality of the FM tuner p This function is available only when you receive the FM band. □ Displaying the "Radio settings" screen on page 13 □ Music (default): Gives priority to the sound quality. □ Talk: Gives priority to noise prevention. □ Standard: Gives no effect. □ If you touch [Cancel], the storage process is canceled.

1 Display the "Radio Settings" screen. Displaying the "Radio settings" screen 1 Press 2 Touch . , and then . 2 Touch [Tuner Sound] to select the item. Recalls the preset channel stored to a key from memory. HOLD 3 Touch [AV Source Settings]. 4 Touch [Radio Settings]. Stores the current broadcast frequency to a key. Tuning into strong frequencies p You can use this function when "Radio" is selected as the source. Local seek tuning allows you to only tune into those radio stations with sufficiently strong signals.

□ Displaying the "Radio settings" screen on page 13 Setting the alternative frequency search When the tuner cannot get a good reception, tunes to another broadcast station that supports the same program in the current network. □ Displaying the "Radio settings" screen on page 13 p By pressing or , you can also switch the preset channels. p By pressing and hold or and release, you can also perform seek tuning. p By keeping pressing and holding or , you can perform non stop seek tuning. If you press again, non stop seek tuning is canceled and the preset channel is switched.

1 Display the "Radio Settings" screen. 2 Touch [Alternative FREQ] to switch "On"(default) or "Off". 1 Display the "Radio Settings" screen. 2 Touch [Local]. 13 Radio Setting the Auto PI search When you switch to the broadcast station containing RDS data, searches for the same PI (Program Identification) code broadcast station from all frequency band automatically.

□ Source on the Top menu screen on page 7 □ Displaying the "Radio settings" screen on page 13 1 Turn the source off. 2 Display the "Radio Settings" screen. p Even if you set to "Off", the PI search is automatically performed when the tuner cannot get a good reception. 3 Touch [Auto PI] to switch "On" or "Off" (default). Limiting stations to regional programing You can switch whether the area code is checked during the auto PI search. □ Displaying the "Radio settings" screen on page 13 1 Display the "Radio Settings" screen. 2 Touch [Regional] to switch "On"(default) or "Off". Receiving traffic announcements (TA) The traffic announcement can be received from the last selected frequency, interrupting the other sources. □ Displaying the "Radio settings" screen on page 13 1 Display the "Radio Settings" screen. 2 Touch [TA Interrupt] to switch "On" or "Off" (default).

Receiving news announcements The news can be received from the last selected frequency, interrupting the other sources. □ Displaying the "Radio settings" screen on page 13 1 Display the "Radio Settings" screen. 2 Touch [News Interrupt] to switch "On" or "Off" (default). 14 Disc Track number indicator Audio source screen 1 Hides the touch panel keys. To display again the keys, touch anywhere on the screen. Video source screen 2 CD 6/10 21 48 \*1 HOLD Performs frame-by-frame playback. Performs slow-motion playback. Each time you touch it changes the speed in four steps in the following order: 1/16 → 1/8 → 1/4 → 1/2 DVD Stop 99 99 L+R 01 6/10 21 48 Track 99 Pause 9999'99" -9999'99" Pause 9999'99" -9999'99" Video source screen 1 \*2 Skips files forward or backward. DVD Stop 99 Full 6/10 21 48 \*3 \*4 Sets a repeat play range. : Repeats all files.

: Repeats the current chapter. : Repeats the current title. Switches between playback and pause. Plays files in random order. This function is available for music CD.

: Does not play tracks in random order. : Plays all tracks in random order. 99 01 OFF \*5 Pause -9999'99" Changes the viewing angle (Multi-angle). This function is available for DVDs featuring multi-angle recordings. 9999'99" Performs fast reverse or fast forward.

Touch again to change the playback speed. Selects the audio output from [L+R], [Left], [Right], [Mix]. This function is available for Video-CDs and DVDs recorded with LPCM audio. Audio source screen 2 CD 6/10 21 48 Stops playback. Track 99 Sets a repeat play range. : Repeats the current disc. : Repeats the current track. 15 Disc Video source screen 2 DVD Stop 99 99 L+R 01 6/10 21 48 p If a Video-CD with PBC On is being played, appears. p Changing the wide screen mode. □ Common operations on page 33 You can play a normal music CD, Video-CD or DVD-Video using the built-in drive of this product.

2 Touch the item to select the search function. p To cancel an input number, touch [C]. 3 Touch [0] to [9] to input the desired number. 4 Touch to start playback from the number you registered. CAUTION For safety reasons, video images cannot be viewed while your vehicle is in motion. To view video images, stop in a safe place and apply the parking brake. Pause Operating the DVD menu You can operate the DVD menu by touching the menu item on the screen directly. p This function may not work properly with some DVD disc content. In that case, use touch panel keys to operate the DVD menu. 9999'99" -9999'99" Starting procedure 1 Press .

The source changes and then playback will start. □ Inserting and ejecting a disc on page 5 p If the disc is already set, select [Disc] as the playing source. This function is available for DVD-Video. You can memorize one point as a Bookmark for a disc (up to five discs). To clear the bookmark on the disc, touch and hold this key.

Resumes playback (Bookmark). 2 Insert the disc you want to play. 1 Touch or . 2 Touch the desired menu item. Selecting files from the file name list 1 Touch . 2 Touch a track on the list to play back. Switching the subtitle/audio language □ □ Returns and begins playback from the specified point.



[You're reading an excerpt. Click here to read official PIONEER AVH-270BT user guide](http://yourpdfguides.com/dref/5793257)  
<http://yourpdfguides.com/dref/5793257>

This function is available for DVD-Video and Video-CDs featuring PBC (playback control). □ Touch : Changes the subtitle language. : Changes the audio language. or to change the language. Switching the media file type When playing a digital media containing a mixture of various media file types you can switch between media file types to play. □ Setting the top-priority languages on page 30 □ You can also switch the subtitle/audio languages using the "DVD/DivX Setup" menu. \*1 \*2 \*3 \*4 \*5 Selects a track from the list. □ Selecting files from the file name list on page 16 Switches the media file type.

□ Switching the media file type on page 16 Searches for the part you want to play. □ Searching for the part you want to play on page 16 Displays the DVD menu. □ Operating the DVD menu on page 16 Switches the subtitle/audio language. □ Switching the subtitle/audio language on page 16 1 Touch . □ Music: Switches the media file type to music (compressed audio). □ Video: Switches the media file type to video. □ CD-DA: Switches the media file type to CD (audio data (CD-DA)). 2 Touch the item you want to set. Searching for the part you want to play p For DVD-Videos, you can select [Title], [Chapter] or [10Key]. p For Video-CDs, you can select [Track] or [10Key] (PBC only).

16 p By pressing or , you can also skip files/chapters forward or backward. p By pressing and holding or , you can also perform fast reverse or fast forward. 1 Touch . Compressed audio files Displays the artwork when the file with the artwork is being played. Plays files in random order.

: Does not play files in random order. : Plays all files within the repeat range in random order. Starting procedure (for Disc) 1 Press . The source changes and then playback will start. □ Inserting and ejecting a disc on page 5 p If the disc is already set, select [Disc] as the playing source.

The artwork file type needs to be JPEG, and the file size should be less than 99 KB. 2 Insert the disc you want to play. Playback screen 1 (Example: USB) Abcdefghi Abcdefghi ABC USB R&B 9999'99" 6/10 21 48 \*1 Playback screen 2 (Example: USB) Abcdefghi Abcdefghi ABC USB 6/10 21 48 Starting procedure (for USB) 1 Press . □ Plugging and unplugging a USB storage device on page 5 p Play back is performed in order of folder numbers. Folders are skipped if they contain no playable files. 2 Plug the USB storage device. 3 Touch [USB]. R&B -9999'99" \*2 Skips files forward or backward. Sets a repeat play range. or : Repeats all files.

: Repeats the current folder. : Repeats the current file. Selecting files from the file name list You can find files or folders to play back using the file name or folder name list. Switches between playback and pause. Switches the current music information display. 1 Touch . Selects the previous folder or the next folder. \*1 \*2 Selects a file from the list. □ Selecting files from the file name list on page 17 Switches the media file type. □ Switching the media file type on page 17 p Files are played back in file number order.

2 Touch a file on the list to play back. Switching the media file type When playing a digital media containing a mixture of various media file types you can switch between media file types to play. 1 Touch . p By pressing or , you can also skip files forward or backward. p By pressing and holding or , you can perform fast reverse or fast forward.

You can play compressed audio files stored in a disc or a USB storage device. □ Media compatibility chart on page 39 □ Music: Switches the media file type to music (compressed audio). □ Video: Switches the media file type to video. □ CD-DA: Switches the media file type to CD (audio data (CD-DA)). □ Photo: Switches the media file type to still image (JPEG or BMP data).

2 Touch the item you want to set. 17 Compressed video files Hides the touch panel keys. To display again the keys, touch anywhere on the screen. (Example: Disc) (Example: Disc) ROM Stop Starting procedure 6/10 21 48 □ Compressed audio files on page 17 ROM Stop 6/10 21 48 \*1 Selecting files from the file name list Abcdefghi 01 OFF Abcdefghi Full You can select files to view using the file name list. 1 Touch . 9999'99" Pause -9999'99" Abcdefghi Full Abcdefghi 01 OFF \*2 \*3 p Files are played back in file number order and folders are skipped when they contain no files. 2 Touch a file on the list to play back. 9999'99" Pause -9999'99" Performs fast reverse or fast forward. Touch again to change the playback speed. □ Touch the playback sign of the thumbnail to preview the file.

Sets a repeat play range. or : Repeats all files. : Repeats the current folder. : Repeats the current file. Switches between playback and pause. \*1 \*2 \*3 Selects a file from the list. □ Selecting files from the file name list on page 18 Switches the subtitle/audio language. □ Switching the subtitle/audio language on page 16 Switches the media file type. □ Switching the media file type on page 17 Performs frame-by-frame playback. HOLD Performs slow-motion playback.

Stops playback. p By pressing or , you can also skip files forward or backward. p By pressing and holding or , you can perform fast reverse or fast forward. p Changing the wide screen mode. □ Common operations on page 33 You can play compressed video files stored on a disc or in an USB storage device.

□ Media compatibility chart on page 39 CAUTION For safety reasons, video images cannot be viewed while your vehicle is in motion. To view video images, stop in a safe place and apply the parking brake. 18 Still image files Hides the touch panel keys. To display again the keys, touch anywhere on the screen. USB Abcdefghi Full 6/10 21 48 Selecting files from the file name list You can select files to view using the file name list.

Rotates the displayed picture 90° clockwise. Selects the previous or next folder. 1 Touch Abcdefghi . p Touching a folder on the list shows its contents. You can play a file on the list by touching it. 2 Touch a file on the list to play back. USB Abcdefghi Full 6/10 21 48 \*1 Switching the media file type Skips files forward or backward. Switches between playback and pause. \*1 \*2 Selects a file from the list. □ Selecting files from the file name list on page 19 Switches the media file type.

□ Switching the media file type on page 19 \*2 When playing a digital media containing a mixture of various media file types you can switch between media file types to play. 1 Touch . Abcdefghi □ Music: Switches the media file type to music (compressed audio). □ Video: Switches the media file type to video. □ Photo: Switches the media file type to still image (JPEG data). 2 Touch the item you want to set. Sets a repeat play range. : Repeats all files. : Repeats the current folder. Setting the slideshow interval JPEG or BMP files can be viewed as a slideshow on this product.



[You're reading an excerpt. Click here to read official PIONEER](http://yourpdfguides.com/dref/5793257)

[AVH-270BT user guide](http://yourpdfguides.com/dref/5793257)

<http://yourpdfguides.com/dref/5793257>

In this setting, the interval between each image can be set. p This setting is available during playback of the JPEG or BMP files. Plays files in random order. : Does not play files in random order. : Plays all files in the current repeat play range in random order.

p JPEG images are not displayed in the rear display. p By pressing or , you can also skip files forward or backward. p By pressing and holding or , you can search 10 files at a time. If the file currently being played is the first or last file in the folder, the search is not performed. p Changing the wide screen mode. □ Common operations on page 33 You can view still images stored in an USB storage device. □ Media compatibility chart on page 39 1 Display the “Video Setup” screen. Starting procedure 1 Press . □ Plugging and unplugging a USB storage device on page 5 p Playback is performed in order of folder numbers. Folders are skipped if they contain no playable files. The image is displayed on the screen. 2 Touch [Time Per Photo Slide]. The following items are available: “10sec” (default), “5sec”, “15sec”, “Manual”. 3 Touch the item you want to set. 2 Plug the USB storage device.

3 Touch [USB]. 19 iPod Audio source screen 1 Abcdefghi Abcdefghi ABC Pops 99999/99999 9999’99” -9999’99” iPod 6/10 21 48 Sets a shuffle play. : Plays randomly songs or videos within the selected list. : Plays album randomly. Video source screen iPod Full 6/10 21 48 Abcdefghi 99999/99999 Audio source screen 2 Abcdefghi Abcdefghi ABC Pops 99999/99999 iPod 6/10 21 48 9999’99” -9999’99” Skips files forward or backward. Switches between playback and pause. Performs fast reverse or fast forward. Selects a track from the list. □ Selecting song or video sources from the playlist screen on page 21 p By pressing the or button, you can also skip files forward or backward. p By pressing and hold the or button, you can also perform fast reverse or fast forward. p Changing the wide screen mode. □ Common operations on page 33 x1 Sets a repeat play range. : Repeats all in the selected list. : Repeats the current song or video. Changes the audiobook speed.

1 2 : Normal playback : Fast playback Connecting your iPod For iPod with a 30-pin connector users Via USB cable p Depending on your iPod, a USB interface cable for iPod / iPhone (CD-IU201V) (sold separately), is required to connect. iPod audio and/or video sources are enabled if either of the cables is connected. p For details on how to connect an iPhone with 30-pin connector, refer to the installation manual. 1/2 : Slow-motion playback For iPod / iPhone with a Lightning connector users Via USB cable p With a USB interface cable for iPod/iPhone (CD-IU52) (sold separately), iPod audio source is available. However, functions related to iPod video files are not available. p For details on how to connect an iPhone with Lightning connector, refer to the installation manual. 20 iPod CAUTION For safety reasons, video images cannot be viewed while your vehicle is in motion. To view video images, stop in a safe place and apply the parking brake. Starting procedure □ Connecting your iPod on page 20 The source changes and then playback will start. p If connecting an iPhone or iPod touch, quit applications before. 1 Connect your iPod. 2 Press . 3 Touch [iPod]. Selecting song or video sources from the playlist screen You can search for the song or video you want to play from the playlist screen. 1 Touch .

to switch the music or video 2 Touch or category list. If you use English as the system language, the alphabet search function is available. Touch the initial search bar to use this function. 3 Touch the category you want to search for. 4 Touch the title of the list that you want to play. p Depending on the generation or version of the iPod, some functions may not be available. p You can play playlists created with the MusicSphere application. The application is available on our website. 5 Start playback of the selected list. 21 Bluetooth audio player 270BT Playback screen 1 Abcdefghi Abcdefghi ABC Bluetooth 6/10 21 48 House 9999 9999’99” -9999’99” p By pressing the or button, you can also skip files forward or backward. p By pressing and hold the or button, you can also perform fast reverse or fast forward. p Before using the Bluetooth audio player, register and connect the device to this product. □ Registering your Bluetooth devices on page 8 p Depending on the Bluetooth device connected to this product, the available operations with this product may be limited or differ from the descriptions in this manual. p While you are listening to songs on your Bluetooth device, please refrain from operating the phone function as much as possible. If you try operating, the signal may cause noise for song playback. p When you are talking on the Bluetooth device connected to this product via Bluetooth, it may pause playback. Skips files forward or backward. You cannot use this function while the audio is played back. Starting procedure 1 Display the “System” setting screen. Track number indicator Plays files in random order.

Playback screen 2 2 Touch [AV Source Settings]. 6/10 Abcdefghi Abcdefghi ABC Bluetooth House 21 48 3 Confirm that “Bluetooth Audio” is turned on. 4 Press . 5 Touch [Bluetooth Audio]. Selecting files from the file name list 9999 p This function may not be available depending on some Bluetooth device. 1 Touch . Sets a repeat play range. Switches between playback and pause. Selects a file from the list. □ Selecting files from the file name list on page 22 2 Touch a file or a folder on the list to play back.

22 AUX source Hides the touch panel keys. To display again the keys, touch anywhere on the screen. The image is displayed on the screen. 4 Touch [AUX]. Setting the video signal When you connect this product to an AUX equipment, select the suitable video signal setting. p You can operate this function only for the video signal input into the AUX input. AUX 6/10 21 48 1 Display the “Video Setup” screen. Full 2 Touch [Video Signal Setting]. Switches between the screen to operate video files and that to operate music files. is only available when there are both audio and video files on the auxiliary equipment. p A Mini-jack AV cable (CD-RM10) (sold separately) is required for connection. □ For details on how to connect the external video component, refer to the installation manual. p 3 Touch [AUX]. The following items are available: Auto (default), PAL, NTSC, PAL-M, PAL-N, SECAM. 4 Touch the item you want to set.

CAUTION For safety reasons, video images cannot be viewed while your vehicle is in motion. To view video images, stop in a safe place and apply the parking brake. Starting procedure You can display the video image output by the device connected to video input. 1 Display the “System” setting screen.



[You're reading an excerpt. Click here to read official PIONEER](http://yourpdfguides.com/dref/5793257)

[AVH-270BT user guide](http://yourpdfguides.com/dref/5793257)

<http://yourpdfguides.com/dref/5793257>



2 Confirm that "AUX Input" is turned on.

3 Press . 23 System settings Displaying the "System" setting screen 1 Press 2 Touch . , and then . The "System" setting screen appears. Rear View can be displayed at all times. Please note that with this setting, the camera image is not resized to fit, and that a portion of what is seen by the camera is not viewable. CAUTION Pioneer recommends the use of a camera which outputs mirror reversed images, otherwise the screen image may appear reversed. p Immediately verify whether the display changes to a rear view camera image when the shift lever is moved to REVERSE (R) from another position. p When the screen changes to full-screen rear view camera image during normal driving, switch to the opposite setting in "Camera Polarity". If no operations are performed for seven seconds on the AV operation screen, the camera view will appear automatically.

p To set the rear view camera for Rear View mode, set "Back Camera Input" to "On". □ Setting rear view camera activation on page 24 2 Touch [Rear View] to switch "On" or "Off" (default). Activating the Bluetooth audio source 270BT □ Displaying the "System" setting screen on page 24 Setting the safe mode You can set the safe mode that regulate operating some functions only when you stop your vehicle in a safe place and apply the parking brake. □ Displaying the "System" setting screen on page 24 1 Display the "System" setting screen. 2 Touch [AV Source Settings]. Setting rear view camera activation □ Displaying the "System" setting screen on page 24 1 Display the "System" setting screen. 1 Display the "System" setting screen. 2 Touch [Camera Settings]. 2 Touch [Safe Mode] to switch "On" (default) or "Off". 3 Touch [Bluetooth Audio] to switch "On" (default) or "Off".

Selecting the system language □ If the embedded language and the selected language setting are not the same, text information may not display properly. □ Some characters may not be displayed properly. □ Displaying the "System" setting screen on page 24 Setting the ever scroll When "Ever Scroll" is set to "On", the recorded text information scrolls continuously in the display. □ Displaying the "System" setting screen on page 24 3 Touch [Back Camera Input] to switch "On" or "Off" (default). Setting the polarity of the rear view camera p This function is available when "Back Camera Input" is "On".

□ Setting rear view camera activation on page 24 □ Displaying the "System" setting screen on page 24 1 Display the "System" setting screen. 2 Touch [System Language]. 1 Display the "System" setting screen. 3 Touch the language that you want to use. 2 Touch [Ever Scroll] to switch "On" or "Off" (default).

1 Display the "System" setting screen. 2 Touch [Camera Settings]. Setting the beep sound □ Displaying the "System" setting screen on page 24 Setting the rear view camera A separately sold rear view camera (e.g. ND-BC6) is required for utilizing the rear view camera function. (For details, consult your dealer.) 1 Display the "System" setting screen. Rear view camera This product features a function that automatically switches to the full-screen image of the rear view camera installed on your vehicle, when the shift lever is in the REVERSE (R) position. p When the shift lever is aligned to the REVERSE (R) position immediately after the system of this product is started up, only the camera image will be displayed and the parking assist guidelines will not be displayed. □ Battery (default): The polarity of the connected lead is positive.

□ Ground: The polarity of the connected lead is negative. 3 Touch [Camera Polarity]. 2 Touch [Beep Tone] to switch "On" (default) or "Off". Setting the camera for Rear View mode To display "Rear View" at all times, "Rear View" needs to be set to "On". Adjusting the response positions of the touch panel (touch panel calibration) If you feel that the touch panel keys on the screen deviate from the actual positions that respond to your touch, adjust the response positions of the touch panel screen. p This setting is available only when you stop your vehicle in a safe place and apply the parking brake. Camera for Rear View mode 24 1 Press . System settings p Do not use sharp pointed tools such as a ballpoint or mechanical pen, which could damage the screen. p Do not turn off the engine while saving the adjusted position data. □ Displaying the "System" setting screen on page 24 Setting the dimmer duration in day or night p You can use this function when "Dimmer Trigger" is set to "Manual".

p This setting is available only when you stop your vehicle in a safe place and apply the parking brake. □ Displaying the "System" setting screen on page 24 1 Display the "System" setting screen. 2 Touch [Touch Panel Calibration]. p When the cursor for on time setting is placed on the left end and the cursor for off time setting is placed on the right end, the dimmer available time is 24 hours. placed on the right end, the dimmer available time is 0 hours.

3 Touch four corners of the screen along the arrows. The adjustment results are saved. Proceed to 16-point adjustment. 1 Display the "System" setting screen. 2 Touch [Dimmer Settings].

□ Setting the time and date on page 33 □ The time display of the dimmer duration adjusting bar is depending on the clock display setting. 4 Press 5 Press . Adjusting the picture You can adjust the picture for each source and rear view camera. once again. The target indicates the order. 6 Gently touch the center of the "+" mark displayed on the screen. □ When you press tion returns. , the previous adjustment posi, the adjustment is □ Day (default): Turns the dimmer manually to off. □ Night: Turns the dimmer manually to on. 3 Touch [Day/Night] to switch the following items.

CAUTION For safety reasons, you cannot use some of these functions while your vehicle is in motion. To enable these functions, you must stop in a safe place and apply the parking brake. Refer to Important Information for the User (a separate manual). □ When you press and hold canceled. The adjustment results are saved. Setting the dimmer duration optional You can adjust the time that the dimmer is turned on or off. p You can use this function when "Dimmer Trigger" is set to "Time". p This setting is available only when you stop your vehicle in a safe place and apply the parking brake.



[You're reading an excerpt. Click here to read official PIONEER](#)

[AVH-270BT user guide](#)

<http://yourpdfguides.com/dref/5793257>

□ Displaying the “System” setting screen on page 24 1 Display the screen you wish to adjust. □ Displaying the “System” setting screen on page 24 2 Display the “System” setting screen.

3 Touch [Picture Adjustment]. 7 Press and hold . Setting the dimmer Setting the dimmer trigger p This setting is available only when you stop your vehicle in a safe place and apply the parking brake. □ Displaying the “System” setting screen on page 24 1 Display the “System” setting screen. 2 Touch [Dimmer Settings].

The “Duration Setting” screen appears. 3 Touch [Dimmer Duration]. 1 Display the “System” setting screen. 2 Touch [Dimmer Settings]. 3 Touch [Dimmer Trigger].

4 Touch the item. 4 Touch the time display to activate the adjustment mode. 5 Touch the graph to set the dimmer duration. □ You can also set the dimmer duration touching or . Each touch of or moves the cursor backward or forward in the 15 minute width. □ When the cursors are placed on the same point, the dimmer available time is 0 hours. □ When the cursor for off time setting is placed on the left end and the cursor for on time setting is □ Brightness: Adjusts the black intensity. (-24 to +24) □ Contrast: Adjusts the contrast. (-24 to +24) □ Color: Adjusts the color saturation. (-24 to +24) □ Hue: Adjusts the tone of color (which color is emphasized, red or green).

(-24 to +24) □ Dimmer: Adjusts the brightness of the display. (+1 to +48) 4 Touch the item to select the function to be adjusted. □ With some pictures, you cannot adjust Hue and Color. □ When you touch [Rear View], the mode changes to the picture adjustment for rear view. By touching [Source], you can return to the picture adjustment for AV source. 5 Touch , , , to adjust. □ The adjustments of “Brightness”, “Contrast” and “Dimmer” are stored separately when your 25 □ Auto (default): Switches the dimmer to on or off automatically according to your vehicle’s headlight turning on or off. □ Manual: Switches the dimmer to on or off manually. □ Time: Switches the dimmer to on or off at the time you adjusted. p The default setting is 18:00-6:00 (6:00 PM-6:00 AM). System settings vehicle’s headlights are off (daytime) and on (nighttime). □ “Brightness” and “Contrast” are switched automatically depending on whether the vehicle’s headlights are on or off. □ “Dimmer” can be changed the setting or the time to switch it to on or off. □ Setting the dimmer on page 25 □ The setting contents can be memorized separately. 26 Audio adjustments Displaying the “Audio” setting screen 1 Press 2 Touch .

, and then . The “Audio” setting screen appears. Adjusting source levels SLA (source level adjustment) lets you adjust the volume level of each source to prevent radical changes in volume when switching between sources. p Settings are based on the FM tuner volume level, which remains unchanged. p This function is not available when the FM tuner is selected as the AV source.

Adjusting the subwoofer settings p This function is available only when “Subwoofer” is “On”. □ Using the subwoofer output on page 27 @@2 Touch [Subwoofer Settings]. Using fader/balance adjustment p This function is available when “Rear Speaker” is set to “Full”, and “Preout” is set to “Rear”. □ Displaying the “Audio” setting screen on page 27 1 Compare the FM tuner volume level with the level of the source you want to adjust. □ Displaying the “Audio” setting screen on page 27 2 Display the “Audio” setting screen. 3 Touch [Source Level Adjuster]. 3 Touch or to turn the subwoofer phase to normal or reverse. 4 Touch or to adjust the subwoofer level between -24 and 6. 5 Touch or frequency. to adjust the subwoofer 1 Display the “Audio” setting screen.

2 Touch [Fader/Balance]. 3 Touch or balance. 4 Touch or balance. to adjust the front/rear speaker to adjust the left/right speaker p “Front15” to “Rear15” is displayed as the front/rear speaker balance moves from the front to rear. p “Left15” to “Right15” is displayed as the left/right speaker balance moves from the left to right. p The default setting is “F/R 0 L/R 0”. p If you directly touch the area where the cursor can be moved, the SLA setting will be changed to the value of the touched point. p “+4” to “-4” is displayed as the source volume is increased or decreased. p The default setting is “0”. 4 Touch or to adjust the source volume.

The following items are available: 80Hz(default), 50Hz, 63Hz, 80Hz, 100Hz, 125Hz. Adjusting loudness This function compensates for deficiencies in the low-frequency and high-frequency ranges at low volume. p This function is not available while you make or receive a call using the hands-free function. □ Displaying the “Audio” setting screen on page 27 Switching the rear speaker output 1 Turn the source off. □ Displaying the “Audio” setting screen on page 27 □ You can also set the fader/balance by touching the point on the displayed table.

2 Display the “Audio” setting screen. 3 Touch [Rear Speaker]. Using balance adjustment p This function is available when “Rear Speaker” and “Preout” are set to “Subwoofer Settings”. @@2 Touch [Loudness]. 4 Touch to switch “Full” (default) or “Subwoofer Settings”.

□ When this function is set to “Subwoofer Settings”, “Preout” is fixed to “Subwoofer Settings”. 1 Display the “Audio” setting screen. 2 Touch [Balance]. 3 Touch or balance. The following items are available: Off (default), Low, Mid, High. 3 Touch the item. to adjust the left/right speaker Using the subwoofer output This product is equipped with a subwoofer output mechanism, which can be turned on or off. □ Displaying the “Audio” setting screen on page 27 Switching the RCA rear output When “Rear Speaker” is set to “Subwoofer Settings”, this setting is fixed to “Subwoofer Settings”. □ Displaying the “Audio” setting screen on page 27 p “Left15” to “Right15” is displayed as the left/right speaker balance moves from the left to right. p The default setting is “L/R 0”.

1 Display the “Audio” setting screen. 1 Display the “Audio” setting screen. □ You can also set the balance by touching the point on the displayed table. 2 Touch [Subwoofer] to switch “On” (default) or “Off”. 2 Touch [Preout] to switch “Subwoofer Settings”(default) or “Rear”.



[You're reading an excerpt. Click here to read official PIONEER](http://yourpdfguides.com/dref/5793257)

[AVH-270BT user guide](http://yourpdfguides.com/dref/5793257)

<http://yourpdfguides.com/dref/5793257>