



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for PIONEER AVH-P3350BT. You'll find the answers to all your questions on the PIONEER AVH-P3350BT in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual PIONEER AVH-P3350BT
User guide PIONEER AVH-P3350BT
Operating instructions PIONEER AVH-P3350BT
Instructions for use PIONEER AVH-P3350BT
Instruction manual PIONEER AVH-P3350BT

Pioneer

Owner's Manual

DVD RDS AV RECEIVER

AVH-P4350DVD
AVH-P3350BT



English



[You're reading an excerpt. Click here to read official PIONEER AVH-P3350BT user guide](http://yourpdfguides.com/dref/3755740)

<http://yourpdfguides.com/dref/3755740>

Manual abstract:

3 Pay close attention to all warnings in this manual and follow the instructions carefully. 4 Do not allow other persons to use this system until they have read and understood the operating instructions. 5 Do not install the display where it may (i) obstruct the driver's vision, (ii) impair the performance of any of the vehicle's operating systems or safety features, including air bags, hazard lamp buttons or (iii) impair the driver's ability to safely operate the vehicle.

@@@ @@@@ If you are ever in an accident, your injuries can be considerably more severe if your seat belt is not properly buckled. 8 Never use headphones while driving. 9 To promote safety, certain functions are disabled unless the parking brake is on, and the vehicle is not in motion. 10 Never set the volume of your display so high that you cannot hear outside traffic and emergency vehicles. 01 Precautions **WARNING ! Do not attempt to install or service your display by yourself. Installation or servicing of the display by persons without training and experience in electronic equipment and automotive accessories may be dangerous and could expose you to the risk of electric shock or other hazards. To ensure safe driving WARNING ! LIGHT GREEN LEAD AT POWER CONNECTOR IS DESIGNED TO DETECT PARKED STATUS AND MUST BE CONNECTED TO THE POWER SUPPLY SIDE OF THE PARKING BRAKE SWITCH.**

IMPROPER CONNECTION OR USE OF THIS LEAD MAY VIOLATE APPLICABLE LAW AND MAY RESULT IN SERIOUS INJURY OR DAMAGE. ! To avoid the risk of damage and injury and the potential violation of applicable laws, this unit is not for use with a video screen that is visible to the driver. ! To avoid the risk of accident and the potential violation of applicable laws, no viewing of front seat video should ever occur while the vehicle is being driven. Also, rear displays should not be in a location where they are visibly distracting to the driver. ! In some countries or states the viewing of images on a display inside a vehicle even by persons other than the driver may be illegal.

Where such regulations apply, they must be obeyed and this unit's DVD features should not be used. When you attempt to watch a video image while driving, the warning Viewing of front seat video source while driving is strictly prohibited. will appear on the front display. En 5 Section 01 Precautions To watch a video image on the front display, park your vehicle in a safe place and apply the parking brake. To avoid battery exhaustion Keep the vehicle engine running when using this unit to avoid draining the battery power.

! When no power is supplied to this unit, such as when the vehicle battery is being replaced, the microcomputer of this unit returns to its initial condition. We recommend that you transcribe the audio adjustment data. When using a display connected to V OUT Passengers in the rear seat can also watch DVDs or the TV if you connect this unit to a display using the V OUT. **WARNING NEVER install the rear display in a location where the driver can watch a DVD or TV while driving. WARNING Do not use with vehicles that do not feature an ACC position. When using the rear view camera With an optional rear view camera, this unit can be used as an aid to keep an eye on trailers, or when backing into a tight parking spot. WARNING ! SCREEN IMAGE MAY APPEAR REVERSED. ! USE INPUT ONLY FOR REVERSE OR MIRROR IMAGE REAR VIEW CAMERA. OTHER USE MAY RESULT IN INJURY OR DAMAGE. CAUTION ! The rear view camera function is to be used as an aid to keep an eye on trailers, or while backing up.**

Do not use for entertainment purposes. ! Please note that the edges of the rear view camera images may differ slightly according to whether full screen images are displayed when backing up, and whether the images are used for checking the rear when the vehicle is moving forward. 6 En Section Before you start About this unit **CAUTION This product is a class 1 laser product classified under the Safety of laser products, IEC 60825-1:2007, and contains a class 1M laser module. To ensure continued safety, do not remove any covers or attempt to gain access to the inside of the product. Refer all servicing to qualified personnel. 02 DVD video disc region numbers Only DVD video discs with compatible region numbers can be played on this player. You can find the region number of the player on the bottom of this unit and in this manual (refer to Specifications on page 108). Before you start Operating environment This unit should be used within the temperature ranges shown below. Operating temperature range: 10 °C to +60 °C EN300328 ETC test temperature: 20 °C and +55 °C CAUTION--CLASS 1M VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN, DO NOT VIEW DIRECTLY WITH OPTICAL INSTRUMENTS. In case of trouble CAUTION: USE OF CONTROL OR ADJUSTMENT OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.**

CAUTION: THE USE OF OPTICAL INSTRUMENTS WITH THIS PRODUCT WILL INCREASE EYE HAZARD. Should this product fail to operate properly, please contact your dealer or nearest authorized Pioneer Service Station. Resetting the microprocessor By pressing RESET, you can reset the microprocessor to its initial settings without changing the bookmark information. The microprocessor must be reset in the following situations: ! Before using this unit for the first time after installation ! If the unit fails to operate properly ! When strange or incorrect messages appear on the display 1 Turn the ignition switch OFF. **CAUTION ! Do not allow this unit to come into contact with liquids.**

Electrical shock could result. Also, damage to this unit, smoke, and overheating could result from contact with liquids. ! Keep this manual handy for future reference. ! Always keep the volume low enough to hear outside sounds. ! Avoid exposure to moisture.

! If the battery is disconnected or discharged, any preset memory will be erased. En 7 Section 02 Before you start 2 Press RESET with a pen tip or other pointed instrument. Adjusting the response positions of the touch panels (Touch Panel Calibration) If you feel that the touch panel keys on the screen deviate from the actual positions that respond to your touch, adjust the response positions of the touch panel. Refer to Adjusting the response positions of the touch panels (Touch Panel Calibration) on page 73. RESET button (AVH-P4350DVD) Use and care of the remote control Installing the battery RESET button (AVH-P3350BT) Note Switch your engine ON or set the ignition switch to ACC ON before pressing RESET in the following situations: ! After completing connections ! When erasing all stored settings ! When resetting the unit to its initial (factory) settings Slide the tray on the back of the remote control out and insert the battery with the plus (+) and minus (-) poles aligned properly. ! When using for the first time, pull out the film protruding from the tray.



[You're reading an excerpt. Click here to read official PIONEER AVH-P3350BT user guide](http://yourpdfguides.com/dref/3755740)

<http://yourpdfguides.com/dref/3755740>

WARNING Demo mode The feature demo automatically starts when you select Source Off for the source and continues while the ignition switch is set to ACC or ON. To cancel the feature demo, press and hold MUTE. Press and hold MUTE again to restart. Operating the feature demo while the car engine is turned off it may drain the battery power.

Important Failure to connect the red lead (ACC) of this unit to a terminal coupled with ignition switch on/off operations may lead to battery drain. Keep it !
Disc Built-in DVD player ! USB/iPod USB/iPod ! SD SD memory card ! EXT1 External unit 1 ! EXT2 External unit 2 ! AUX AUX ! TEL/Audio Bluetooth telephone/audio player (Function of AVH-P4350DVD) ! When the source icon is not displayed, it can be displayed by touching the screen. ! While operating the menu, you cannot select a source by touching the source icon. Adjusting the volume 1 Press +/- (VOLUME/VOL) to adjust the volume. ! Touch panel keys 1 Displaying the source menu. Switching to clock adjustment display. Refer to Setting the clock on page 15. Source icon Selecting a favorite source. When the source icon is not displayed, it can be displayed by touching the screen. Switching the output source for the rear monitor.

Refer to Setting rear monitor output on page 72. Switching the rear view image on or off. Turning the unit off. 2 12:45 PM Wed 28 may 3 Radio 4 Rear Front Rear View 5 6 Turning the unit on using the buttons 1 Press SRC/OFF to turn the unit on. Turning the unit off using the buttons 1 Press SRC/OFF and hold until the unit turns off.

Notes ! In this manual, iPod and iPhone will be referred to as "iPod". ! The USB/iPod icon will change as follows: -- USB is displayed when a USB storage device is connected. -- iPod is displayed when an iPod is connected. -- USB/iPod is displayed when no device is connected. ! When appropriately set up, the image from the rear view camera can be displayed automatically.

For details, refer to Setting the rear view camera (back up camera) on page 66. ! An external unit refers to a Pioneer product, such as those which will be available in the future. Although incompatible as a source, the basic functions of up to two external units can be controlled with this unit. When two external units are connected, the external units are automatically allocated to external unit 1 or external unit 2. 12 En Section Basic operations Operating the scroll bar and the scrubber bar 1 Audio Fader/Balance Graphic EQ Auto EQ Sonic Center Control Loudness Subwoofer Off F/R 0 L/R 0 Super Bass On L/R:0 8 12 01 01 01 L+R Wed 28 may 04 Activating the touch panel keys 1 12:45 PM 12 Basic operations Abcdeabcdeabcdeabcdeab 21 Wed 28 may 01:45 -02:45 1 22 1 Return 12:45 PM 01 01 01 L+R Abcdeabcdeabcdeabcdeab 3 2 1 Touch panel keys Perform various operations by touching the panel. 2 Open/close keys Control the touch panel key area by touching these keys. Turning the display to simplified display. Returning to the normal display by touching the screen when playing moving images. Returning to the normal display by touching same icon when playing audio. Viewing the hidden touch panel keys.

Shorten the touch panel area. 8 12 01:45 -02:45 2 1 Scroll icon Appears when selectable items are hidden. 2 Scrubber bar Appears when the playback point can be specified or set by dragging. Viewing the hidden items 1 Touch the scroll icon or drag the scrubber bar to view any hidden items. Specifying the playback point 1 Drag the scrubber bar on the screen. (Not available when the scrubber bar is grayed out.) 1 2 3 En 13 Section 04 Basic operations Common operations for menu settings/lists (AVH-P3350BT only) Starting the Bluetooth telephone menu. Refer to Introduction of Bluetooth telephone operations on page 24. Displaying the list menu. Starting the search function.

Displaying the menu. Refer to Introduction of menu operations on page 46. Displaying still images as a slide show when listening to another source. Viewing slide shows. Refer to Introduction of still image playback operations on page 22.

Returning to the previous display. Returning to the previous list/category (the folder/category one level higher.) 2 Adjust the LCD panel to an easily viewable angle. Laying the panel down. Returning the panel to the upright position.

As the set angle is saved, the LCD panel will automatically be adjusted to the same position the next time the LCD panel is opened. Ejecting a disc (AVH-P4350DVD) 1 Press h(eject) to display the ejecting menu. 2 Eject a disc. Ejecting a disc. ! Press and hold MENU to display Picture Adjustment. Refer to Changing the picture adjustment on page 72. Ejecting a disc Adjusting the LCD panel angle (Function of AVH-P4350DVD) (AVH-P3350BT) % Press h (eject). CAUTION Keep hands and fingers clear of the unit when opening, closing, or adjusting the LCD panel. Be especially cautious of children's hands and fingers. Ejecting an SD (AVH-P4350DVD) 1 Press h(eject) to display the ejecting menu.

2 Eject an SD. Ejecting an SD. 1 Press h(eject) to display the ejecting menu. 3 Press an SD to eject. Refer to Operating the DVD menu on page 30. k c Returning to the top menu during DVD playback. Stopping playback. Stopping playback at the point set in Resume playback. Touch one more time to stop playback completely when playing DivX. Refer to Resume playback (Bookmark) on page 33.

Displaying arrow keys to operate the DVD menu. Refer to Using the arrow keys on page 31. Moving ahead one frame at a time during playback. Refer to Frame-by-frame playback on page 34. Touch and hold for more than two seconds to slow down playback speed.

Speeding up the playback speed in four steps during slow motion playback on DVD video/Video CD. Speeding down the playback speed in four steps, during slow motion playback on Video CD. Returning to the specified scene to which the DVD currently being played has been preprogrammed to return. Refer to Return to the specified scene on page 35. Playing the video on your iPod in a random order.

Refer to Random play (shuffle) on page 32. Switching the Advanced sound retriever function setting when playing a video on your iPod. Refer to Using advanced sound retriever on page 36. Conducting operation from your iPod and listening to it using your car's speakers. Refer to Operating this unit's iPod function from your iPod on page 31. Switching between media file types to play on DVD/CD/ USB/SD. Refer to Switching the media file type on page 30. 8 g h 9 i Return a j b l d m e f Skipping to another title. Selecting a folder during DivX file playback. 18 En Section Playing moving images Playing back videos 1 Insert the disc into the disc loading slot with the label side up.

Playback will automatically start. ! If you are playing a DVD or Video CD, a menu may appear.



You're reading an excerpt. Click here to read official PIONEER AVH-P3350BT user guide
<http://yourpdfguides.com/dref/3755740>

Refer to Operating the DVD menu on page 30 and PBC playback on page 35. ! When the automatic playback function is on, the unit will skip the DVD menu and automatically start playback from the first chapter of the first title. Refer to Automatic playback of DVDs on page 63. ! While an iPod is connected to this unit, PIONEER, Accessory Attached or (check mark) is displayed on the iPod. ! When the source icon is not displayed, it can be displayed by touching the screen. ! Disconnect headphones from the iPod before connecting it to this unit. ! Depending on the iPod model and the amount of data stored in the iPod, it may take some time for playback to begin. ! Use the touch panel keys to select the iPod after connecting it to this unit.

! No Device is displayed when disconnecting the iPod. ! If a message is displayed after loading a disc containing DivX VOD content, touch Play. Refer to Playing DivX VOD content on page 37. Ejecting a disc 1 Refer to Ejecting a disc on page 14 or Ejecting an SD on page 14. Selecting a chapter using the buttons 1 Press c or d (TRACK/SEEK).

Fast forwarding or reversing using the buttons 1 Press and hold c or d (TRACK/SEEK). ! Fast forward/fast rewind may not always be possible on some discs. In such cases, normal playback will automatically resume. 06 tails, refer to Resume playback (Bookmark) on page 33. ! Some operations may not be available while watching a DVD due to the programming of the disc.

In such cases, the icon appears on the screen. ! To ensure proper operation, connect the dock connector cable from the iPod directly to this unit. ! While the iPod is connected to this unit, the iPod cannot be turned on or off. However, the iPod can be turned on or off when you select an SD as the source. Playing moving images Notes ! This DVD player can play back a DivX file recorded on CD-R/RW or DVD-R/RW. (Please see the following section for files that can be played back. Refer to page 102.) ! Do not insert anything other than a DVD (-R/RW) or CD (-R/-RW) into the disc loading slot. ! If the bookmark function is on, DVD playback resumes from the selected point. For more de- En 19 Section 07 Playing audio Introduction of sound playback operations You can listen to DVD-R/DVD-RW/CD/CD-R/ CD-RW/USB/SD/iPod sound files.

CD 4 Switching the equalizer curves. Refer to Using the equalizer on page 47. Touch and hold for more than two seconds to turn the auto-equalizer on or off. Refer to Using the autoequalizer on page 48. Displaying a list of track titles/file names to select songs on a CD. Refer to Selecting tracks from the track title list on page 36. Displaying the file name list to select the files. Refer to Selecting files from the file name list on page 36. Displaying iPod menus. Refer to Browsing for a video/music on the iPod on page 33.

Pausing and starting playback. Switching the text information to display on this unit when playing MP3/WMA/AAC files. 12 ROM ALL Songs 34 S.Rtrv Wed 28 may 5 12:45 PM Abcdeabcdeabcdeabcdeab Abcdeabcdeabcdeabcdeab Abcdeabcdeabcdeabcdeab 87 125 01:45 -02:45 6 iPod audio 7 8 9 5 5 f iPod 1 a b 3 4 i S.Rtrv ALL Songs Wed 28 may 12:45 PM Abcdeabcdeabcdeabcdeab Abcdeabcdeabcdeabcdeab Abcdeabcdeabcdeabcdeab 2067/12345 6 01:45 -02:45 6 h g cde 7 You can control an iPod with this unit by using a cable such as the CD-IU50 (sold separately).

! Touch panel keys Selecting the repeat range. Refer to Repeating playback on page 32. Playing songs in random order. Refer to Random play (shuffle) on page 32. Switching the Advanced sound retriever function setting when playing audio.

Refer to Using advanced sound retriever on page 36. 8 Selecting a folder. 1 9 2 Switching between media file types on a DVD/CD/USB/SD. Refer to Switching the media file type on page 30. Playing songs on the iPod in random order. Refer to Random play (shuffle) on page 32. Changing the speed of audiobook playback on the iPod. Refer to Changing audiobook speed on page 36. a 3 b 20 En Section Playing audio Switching to Link Search mode to play songs related to the currently playing song on the iPod. Refer to Displaying lists related to the currently playing song (Link Search) on page 36.

Playing all songs on the iPod in random order. Refer to Playing all songs in random order (shuffle all) on page 32. Conducting operation from your iPod and listening to it using your car's speakers. Refer to Operating this unit's iPod function from your iPod on page 31. Playing back sound 1 Insert the disc into the disc loading slot with the label side up. Playback will automatically start. ! While an iPod is connected to this unit, PIONEER, Accessory Attached or (check mark) is displayed on the iPod. ! When the source icon is not displayed, it can be displayed by touching the screen. ! Disconnect headphones from the iPod before connecting it to this unit. ! Depending on the iPod model and the amount of data stored in the iPod, it may take some time for playback to begin. ! Use the touch panel keys to select the iPod after connecting it to this unit. ! No Device is displayed when disconnecting the iPod. Ejecting a disc 1 Refer to Ejecting a disc on page 14 or Ejecting an SD on page 14. Selecting a track using the buttons 1 Press c or d (TRACK/SEEK). Fast forwarding or reversing using the buttons 1 Press and hold c or d (TRACK/SEEK).

07 c d Playing audio e ! Text information Displaying the Songs list on the iPod. Refer to Searching for a video/music by category on page 33. Displaying the Artists list on the iPod. Refer to Searching for a video/music by category on page 33. Displaying the Albums list on the iPod.

Refer to Searching for a video/music by category on page 33. f g h ! Artwork display Starting Album Link Search on your iPod when you touch the artwork display. Refer to Displaying lists related to the currently playing song (Link Search) on page 36. i Notes ! When playing back files recorded as VBR (variable bit rate) files, the play time will not be correctly displayed if fast forward or reverse operations are used. ! To ensure proper operation, connect the dock connector cable from the iPod directly to this unit. ! While the iPod is connected to this unit, the iPod cannot be turned on or off. However, the iPod can be turned on or off when you select an SD as the source. ! If the characters recorded on the disc are not compatible with this unit, those characters will not be displayed. ! Text information may not be correctly displayed depending on the recorded environment. ! Disconnect the USB portable audio player/ USB memory when you are done using it.

! When you select Clock or Speana on Selecting the background display on page 71, the artwork is not displayed. En 21 Section 08 Playing still images Introduction of still image playback operations You can view still images saved in CD-R/CDRW/USB/SD. CD 5 Starting or pausing the slideshow.



[You're reading an excerpt. Click here to read official PIONEER AVH-P3350BT user guide](http://yourpdfguides.com/dref/3755740)

<http://yourpdfguides.com/dref/3755740>

Rotating the displayed picture 90° clockwise. Capturing an image in JPEG files. Refer to Capture an image in JPEG files on page 37. 6 123 Photo Wed 28 may 4 7 12:45 PM Off Full Abcdeabcdeabcde Abcdeabcdeabcde 8 2 2 Capture Selecting a folder. 5 67 8 9 When playing a disc containing a mixture of various media file types 01:45 -02:45 Switching between media file types. Refer to Switching the media file type on page 30. When loading a CD-R/RW/USB/SD containing JPEG picture files, this unit starts a slideshow from the first folder/picture on the disc/device.

The player displays the pictures in each folder in alphabetical order. The table below shows the controls for viewing a slideshow. ! Touch panel keys Touch any of the following touch panel keys to select the function to be adjusted. 1 Selecting the repeat range. Refer to Repeating playback on page 32.

Playing files in a random order. Refer to Random play (shuffle) on page 32. Changing the screen mode Refer to Changing the wide screen mode on page 37. Displaying the file name list to select the files. Refer to Selecting files from the file name list on page 36.

Playing still images 1 Insert the disc into the disc loading slot with the label side up. Playback will automatically start. ! When the source icon is not displayed, it can be displayed by touching the screen. Ejecting a disc 1 Refer to Ejecting a disc on page 14 or Ejecting an SD on page 14. Selecting a file using the buttons 1 Press c or d (TRACK/SEEK). Fast file searching 1 Press and hold c or d (TRACK/SEEK). ! You can search 10 JPEG files at a time. 2 3 Notes ! This unit can play back a JPEG file recorded on CD-R/CD-RW/SD/USB storage device. (Please see the following section for files that can be played back. Refer to page 102.

) ! Files are played back in file number order and folders are skipped if they contain no files. (If folder 01 (ROOT) contains no files, playback commences with folder 02.) 4 22 En Section Playing still images Introduction of still image playback as a slideshow operations You can view still images saved in CD-R/CDRW/USB/SD as a slideshow when listening to another source. 08 6 Starting or pausing the slideshow. Rotating the displayed picture 90° clockwise Capturing an image in JPEG files. Refer to Capture an image in JPEG files on page 37. 7 123 Off Full 4 5 8 1 Start slideshow when listening to another source. Refer to Common operations for menu settings/lists on page 14. Playing still images Capture 6 78 Displaying still images as a slide show. The table below shows the controls for viewing a slideshow.

1 Touch panel keys Touch any of the following touch panel keys to select the function to be adjusted. 1 Selecting the repeat range. Refer to Repeating playback on page 32. Playing files in a random order. Refer to Random play (shuffle) on page 32.

Changing the screen mode. Refer to Changing the wide screen mode on page 37. 2 Select the device containing the files that you want to display. ! Disc Built-in DVD player ! USB USB ! SD SD memory card # To cancel searching, touch Cancel. Note When the USB or SD source is selected, this unit cannot view still images on USB/SD as a slideshow.

2 3 4 Selecting a folder. 5 Selecting a file. En 23 Section 09 Bluetooth Telephone Introduction of Bluetooth telephone operations 1 Radio Abcdeabcdeabcde Abcdeabcdeabcde P.CH 2 Off Band: Wed 28 may ! Be sure to park your vehicle in a safe place and apply the parking brake when performing this operation. 1 Incoming call notice Indicates that an incoming call has been received and has not been checked yet. 12:45 PM 1 ABCDEHGH I 01 012345678901 ! Not displayed for calls made when your cellular phone is disconnected from this unit. 2 Touch panel keys Switching the mode to enter the phone number directly. Refer to Making a call by entering phone number on page 41. Switching to the call history list. Refer to Using the missed, received and dialed call lists on page 39.

Switching to the phone book mode. Refer to Calling a number in the phone book on page 38. Refer to Selecting a number by alphabet search mode on page 38. Turning automatic answering on or off. Refer to Setting automatic answering on page 40. Turning the ring tone for incoming calls on or off. Refer to Switching the ring tone on page 40. Displaying the preset dial screen. Refer to Using the preset dial lists on page 40. Displaying the Bluetooth connection menu.

Refer to the instructions from page 41 to page 43. Turning private mode on or off. Refer to Setting the private mode on page 41. On FM1 87.50 MHz 457 1 2 63 Telephone standby display 1 Wed 28 may 12:45 PM 1 2 1 4 7 2 5 8 0 3 6 9 # C ABCDEHGH I 01 012345678901 Off * + 3 2 8 a 9b When switching to the entering phone number mode 4 You can use Bluetooth telephone (AVH-P3350BT only).

Important ! Since this unit is on standby to connect with your cellular phone via Bluetooth wireless technology, using it without the engine running can drain the battery power. ! Advanced operations that require attention such as dialing numbers on the monitor, etc., are prohibited while driving. Park your vehicle in a safe place when using these advanced operations. ! Operations available may be limited depending on the cellular phone connected to this unit.

5 6 7 8 24 En Section Bluetooth Telephone Adjusting the other party's listening volume. Refer to Adjusting the other party's listening volume on page 40. Accepting an incoming call. Making a phone call, when selecting a phone number. Switching between callers on hold. Ending a call. Rejecting an incoming call. Canceling call waiting. 09 9 a b Accepting an incoming call Ending a call 1 Press MUTE. Notes ! Private mode can only be operated while you are talking on the phone.

! To end the call, both you and the other caller must hang up your phones. Setting up for hands-free phoning Before you can use the hands-free phoning function you must set up the unit for use with your cellular phone. This entails establishing a Bluetooth wireless connection between this unit and your phone, registering your phone with this unit, and adjusting the volume level. 1 Connection First, you need to connect a Bluetooth telephone to this unit. For detailed instructions on connecting your phone to this unit via Bluetooth wireless technology, see following section. Using a Bluetooth device to pair on page 42 and Pairing from this unit on page 41. ! You may also need to enter a PIN code into this unit. If your telephone requires a PIN code to establish a connection, look for the code on the telephone or in its accompanying documentation. Refer to Entering PIN code for Bluetooth wireless connection on page 43. 2 Volume adjustment Adjust the earpiece volume of your cellular phone to your preference.

The unit will record the adjusted volume level as the default setting.



[You're reading an excerpt. Click here to read official PIONEER AVH-P3350BT user guide](http://yourpdfguides.com/dref/3755740)
<http://yourpdfguides.com/dref/3755740>

! The volume of the caller's voice and ring tone may vary depending on the type of cellular phone. ! If there is a large volume difference between the ring tone and caller's voice, the overall volume level may become unstable. ! Make sure to adjust the volume to a proper level before disconnecting the cellular phone from the unit. If the volume is muted (zero level) on your cellular phone, the volume level of your cellular phone remains muted even after the cellular phone is disconnected.

En 25 Bluetooth Telephone Section 10 TV tuner Introduction of TV tuner operations 1 TV Manual tuning (step by step) using the buttons 1 Press c or d (TRACK/SEEK). Seek tuning using the buttons 1 Press and hold c or d (TRACK/SEEK). 2 Wed 28 may 3 12:45 PM Notes ! Refer to Setting the video signal on page 67 to set the TV signal. ! Refer to Selecting the area group on page 67 to select the area group. Band: TV1 CH12 P.

CH12 4 5 You can use this unit to control a TV tuner, such as the GEX-P5750TVP (sold separately). For details concerning operation, refer to the TV tuner's operation manual. This section provides information on TV operations with this unit, which differs from that described in the TV tuner's operation manual. !

Touch panel keys 1 Changing the screen mode. Refer to Changing the wide screen mode on page 37. Switching the equalizer curves. Refer to Using the equalizer on page 47. Touch and hold for more than two seconds to turn the auto-equalizer on or off. Refer to Using the autoequalizer on page 48. Displaying the preset screen.

Refer to Storing and recalling stations on page 30. Refer to Storing the strongest stations on page 30. 2 3 4 Band: Selecting a band. 5 Recalling radio station frequencies assigned to preset tuning keys. Refer to Storing and recalling stations on page 30. 26 En Section Using Bluetooth wireless technology Introduction of Bluetooth telephone operations 2 TEL Abcdeabc 11 Switching the equalizer curves. Refer to Using the equalizer on page 47. Touch and hold for more than two seconds to turn the auto-equalizer on or off. Refer to Using the autoequalizer on page 48. Accepting an incoming call.

Making a phone call, when selecting a phone number from the dialed and received call history. Ending a call. Rejecting an incoming call. Canceling call waiting. Displaying the received/ missed call history.

Selecting a phone number from the call history. Refer to Using the missed, received and dialed call lists on the optional Bluetooth adapter on page 39. Displaying the dialed call history. Selecting a phone number from the call history. Refer to Using the missed, received and dialed call lists on the optional Bluetooth adapter on page 39.

Scrolling the phone number. Touch and hold for more than two seconds to activate connection mode on this unit and establish a Bluetooth wireless connection from your phone. Refer to Using a cellular phone to initiate a connection on page 43. 3 1 Wed 28 may 1 12:45 PM 2 Text Scroll REG 456789

During a call 3 Text Scroll REG a Except during a call 4 Using Bluetooth wireless technology You can control the Bluetooth telephone if you connect a Bluetooth adapter, such as the CDBTB200 (sold separately), to the AVHP4350DVD. But the available features are limited. Important ! In some countries, CDBTB200 is not sold on the market. ! Since this unit is on standby to connect with your cellular phone via Bluetooth wireless technology, using it without the engine running can drain the battery power. ! Advanced operations that require attention such as dialing numbers on the monitor, etc., are prohibited while driving. Park your vehicle in a safe place when using these advanced operations.

! Operations available may be limited depending on the cellular phone connected to this unit. 1 Touch panel keys 5 6 Text Scroll En 27 Section 11 Using Bluetooth wireless technology Registering connected cellular phone to take full advantage of the features available with Bluetooth wireless technology. Refer to Registering a connected cellular phone on page 44. Touch and hold for more than two seconds to terminate the Bluetooth wireless connection. Turning automatic answering on or off. Refer to Setting automatic answering on page 40. Touch and hold for more than two seconds to connect to a Bluetooth telephone automatically. Refer to Connecting to a Bluetooth device automatically on page 42. Turning the ring tone for incoming calls on or off. Refer to Switching the ring tone on page 40.

Touch and hold for more than two seconds to display the Bluetooth device address of your cellular phone and the Bluetooth adapter. Refer to Displaying Bluetooth Device address on page 44. Switching between Bluetooth telephone and Bluetooth audio. Touch and hold for more than two seconds to start voice recognition. Refer to Voice recognition on page 44.

7 8 1 Connection First, you need to connect a Bluetooth telephone to this unit. For detailed instructions on connecting your phone to this unit via Bluetooth wireless technology, see following section. Using a cellular phone to initiate a connection on page 43 and Registering a connected cellular phone on page 44.

2 Volume adjustment Adjust the earpiece volume of your cellular phone to your preference. The unit will record the adjusted volume level as the default setting.

! The volume of the caller's voice and ring tone may vary depending on the type of cellular phone. ! If there is a large volume difference between the ring tone and caller's voice, the overall volume level may become unstable. ! Make sure to adjust the volume to a proper level before disconnecting the cellular phone from the unit. If the volume is muted (zero level) on your cellular phone, the volume level of your cellular phone remains muted even after the cellular phone is disconnected. 9 Bluetooth audio operations You can control Bluetooth audio if you connect a Bluetooth adapter, such as the CDBTB200 (sold separately), to the AVHP4350DVD. Important ! Depending on the Bluetooth audio player connected to this unit, the available operations will be limited to the following two levels: -- A2DP profile (Advanced Audio Distribution Profile): You can only playback songs on your audio player. -- AVRCP profile (Audio/Video Remote Control Profile): You can perform playback, pause playback, select songs, etc. a Setting up for hands-free phoning Before you can use the hands-free phoning function you must set up the unit for use with your cellular phone. This entails establishing a Bluetooth wireless connection between this unit and your phone, registering your phone with this unit, and adjusting the volume level. 28 En Section Using Bluetooth wireless technology ! Since there are a number of Bluetooth audio players available on the market, available operations will vary extensively.

When operating your player with this unit, refer to the instruction manual that came with your Bluetooth audio player as well as this manual.



[You're reading an excerpt. Click here to read official PIONEER AVH-P3350BT user guide](http://yourpdfguides.com/dref/3755740)
<http://yourpdfguides.com/dref/3755740>

! Information related to a song (such as the elapsed playing time, song title, song index, etc.) cannot be displayed on this unit. ! As the signal from your cellular phone may cause noise, avoid using it when you are listening to songs on your Bluetooth audio player. ! When a call is in progress on the cellular phone connected to this unit via Bluetooth wireless technology, the sound of the Bluetooth audio player connected to this unit is muted. ! When the Bluetooth audio player is in use, you cannot connect to a Bluetooth telephone automatically. ! Playback continues even if you switch from your Bluetooth audio player to another source while listening to a song. 1 Touch panel keys Switching between Bluetooth telephone and Bluetooth audio. Skipping back or forward to another track when Auto is set for the auto/manual setting. Performing fast forward or rewind when Manual is set for the auto/manual setting. Pausing a song. Touch and hold for more than two seconds to activate connection mode on this unit and establish a Bluetooth wireless connection from your player. Refer to Connecting a Bluetooth audio player on page 44. Playback starts. Touch and hold for more than two seconds to terminate the Bluetooth wireless connection.

11 Setting the action for c and d icons. Auto Switching the equalizer curves. Refer to Using the equalizer on page 47. Touch and hold for more than two seconds to turn the auto-equalizer on or off. Refer to Using the auto-equalizer on page 48.

Setting up for Bluetooth audio Before you can use the Bluetooth audio function you must set up the unit for use with your Bluetooth audio player. This entails establishing a Bluetooth wireless connection between this unit and your Bluetooth audio player, and pairing your Bluetooth audio player with this unit. 1 Connection First, you need to connect a Bluetooth audio to this unit. For detailed instructions on connecting your Bluetooth audio to this unit via Bluetooth wireless technology, see Connecting a Bluetooth audio player on page 44. Using Bluetooth wireless technology F1 F2 En 29 Section 12 Detailed instructions Storing and recalling stations You can easily store up to six(for tuner)/12(for TV) stations for each band as presets. 1 Display the preset screen. Refer to Introduction of tuner operations on page 16. Refer to Introduction of TV tuner operations on page 26. The preset screen appears in the display. 2 Touch and hold one of the preset tuning keys to store the selected frequency in the memory.

The selected radio/TV station frequency has been stored in the memory. 3 Touch one of the preset tuning keys to select the desired station. 2 Touch BSM/BSSM to turn BSM on. The six(for tuner)/12(for TV) strongest broadcast frequencies will be stored under preset tuning keys in order of their signal strength. # To cancel the storage process, touch Cancel. Tuning in to strong signals Local seek tuning lets you tune in to only those radio stations with sufficiently strong signals for good reception. -- -- FM: off -- -- AM: off -- -- The larger the setting number, the higher the signal level. The highest level setting allows reception of only the strongest stations, while lower settings let you receive progressively weaker stations. Displaying radio text Radio text data transmitted by RDS stations, such as station information, the name of the currently broadcast song and the name of the artist, can be displayed on this tuner. ! When no radio text is received, No Text appears in the display.

Switching the media file type When playing a disc containing a mixture of various media file types, such as DivX and MP3, you can switch between media file types to play. Audio data (CD-DA) and JPEG picture files on DVD-R/RW/ROM cannot be played back on this unit. CD (audio data (CD-DA))--Music (compressed audio)--Video (DivX video files)-- Photo (JPEG picture files) Storing the strongest stations BSM (best stations memory) automatically stores the six (for tuner)/12 (for TV) strongest stations. Storing broadcast frequencies with BSM may replace broadcast frequencies you have saved using the preset tuning keys. 1 Display the preset screen.

Refer to Introduction of tuner operations on page 16. Refer to Introduction of TV tuner operations on page 26. The preset screen appears in the display. Operating the DVD menu (Function for DVD video) Some DVDs allow you to make a selection from the disc contents using a menu. 30 En Section Detailed instructions Using the arrow keys 1 Display arrow keys to operate the DVD menu.

Refer to Playing moving images on page 17. 2 Select the desired menu item. App Mode is selected with following iPod models. ! iPod nano 1st generation ! iPod 5th generation APP mode is compatible with the following iPod models. ! iPhone 4 (software version 4.1 or later) ! iPhone 3GS (software version 4.1 or later) ! iPhone 3G (software version 4.1 or later) ! iPhone (software version 3.1.3 or later) ! iPod touch 3rd generation (software version 4.

0 or later) ! iPod touch 2nd generation (software version 4.0 or later) ! iPod touch 1st generation (software version 3.1.3 or later) ! While this function is in use, the iPod will not turn off even if the ignition key is turned off. Operate the iPod to turn off the power. 1 Switch the control mode to App Mode. Refer to Introduction of video playback operations on page 17. Refer to Introduction of sound playback operations on page 20. 2 Operate the connected iPod to select a video/song and play. Note The following functions are still accessible from the unit even if the control mode is set to App Mode.

! Pausing ! Fast forwarding/reversing ! Tracking up/down ! Moving to a chapter up/down 12 Selecting the desired menu item. Starting playback from the selected menu item. Operating the DVD menu by directly touching the menu item. # When operating the DVD menu by directly touching the menu item, touch the icon to operate. Returning to the normal DVD video display.

Detailed instructions Displaying arrow keys. # Ways to display the menu will differ depending on the disc. # Depending on the contents of the DVD disc, this function may not work properly. In such cases, use the touch panel keys to operate the DVD menu. Operating this unit's iPod function from your iPod You can listen to the sound from your iPod applications using your car's speakers, when En 31 Section 12 Detailed instructions Random play (shuffle) iPod-videos/songs can be played back in random order.

! Songs Play back videos/songs in the selected list in random order. ! Albums Play back videos/songs from a randomly selected album in order. ! Folder Play back songs/tracks in the selected folder in random order. ! Disc Play back songs/tracks in the selected disc in random order. ! On Play back files in random order within the repeat range, Folder and Disc. ! Off Cancel random play. ! When playing discs with compressed audio and audio data (CD-DA), playback is repeated within the type of data currently playing even if Disc is selected.



[You're reading an excerpt. Click here to read official PIONEER AVH-P3350BT user guide](http://yourpdfguides.com/dref/3755740)

<http://yourpdfguides.com/dref/3755740>

*! If you select another folder during repeat play, the repeat play range changes to Disc. If you select USB or SD source, the repeat play range changes to All.
! If you perform track search or fast forward/ reverse during File, the repeat play range changes to Folder.*

! If you perform title/chapter search or fast forward/reverse during Chapter, the repeat play range changes to OFF. ! If you perform track search or fast forward/ reverse during Track, the repeat play range changes to Disc. ! When Folder is selected, it is not possible to play back a subfolder of that folder.

Playing all songs in random order (shuffle all) (Function for iPod) This method plays all songs on the iPod randomly. Playing videos from your iPod (Function for iPod) Videos can be played on this unit if an iPod with video capabilities is connected. ! This unit can play back "Movies", "Music videos", "Video Podcast" and "TV show" which are downloaded from the iTunes store. ! Before you display the video screen, be sure to change the video setting on the iPod so that the iPod can output the video to an external device. 1 Display the iPod menus. Refer to Playing moving images on page 17. 2 Switch to iPod video mode.

Repeating playback ! ! ! ! ! Disc Play through the current disc Chapter Repeat the current chapter Title Repeat the current title Track Repeat the current track File Repeat the current file Folder Repeat the current folder One Repeat just the current video/song/ track ! All Repeat all videos/songs in the selected list on the iPod Repeat all files ! This function cannot be operated during Video CD playback featuring PBC (playback control). ! If you perform chapter search, fast forward/ reverse, frame-by-frame playback or slow motion playback, the repeat play will stop. Video 3 Switching to iPod video mode. Play the video from the iPod. # If you want to switch to iPod music mode, touch the icon.

32 En Section Detailed instructions Searching the list by alphabet Music Switching to iPod music mode. 12 (Function for iPod) 1 Select a category. Refer to Searching for a video/music by category on this page. Browsing for a video/music on the iPod (Function for iPod) To make operating and searching easy, operations to control an iPod with this unit are designed to be as similar to the iPod as possible. 2 Switch to alphabet search mode.

Switching to alphabet search mode. Alphabet search mode is displayed. 3 Touch the first letter of the title of the video/song you are looking for. While searching, touch panel key operation is not available. # To refine the search with a different letter, touch Cancel. Searching for a video/music by category 1 Display the iPod menus. Refer to Playing moving images on page 17. Refer to Playing audio on page 20. 2 Touch one of the categories in which you want to search for a video/music. ! ! ! ! ! ! ! ! ! ! Video Playlists (video playlists) Movies (movies) Music Videos (music videos) Video Podcasts (video podcasts) TV Shows (TV shows) Playlists (playlists) Artists (artists) Albums (albums) Songs (songs) Podcasts (podcasts) Genres (genres) Composers (composers) Audiobooks (audiobooks) 4 Touch the title of the list that you want to play.

Repeat this operation until you find the desired song/video. 5 Start playback of the selected list. Starting playback of the selected list. Detailed instructions Resume playback (Bookmark) (Function for DVD video) By using the Bookmark function, you can resume playback from a selected scene the next time the disc is loaded. The selected scene will be bookmarked so that playback resumes from that point next time. ! To clear the bookmark on a disc, touch and hold the button during playback. ! The oldest bookmark is replaced by the new one. 3 Touch the title of the list that you want to play. Repeat this operation until you find the desired video/music. 4 Start playback of the selected list.

Starting playback of the selected list. En 33 Section 12 Detailed instructions Frame-by-frame playback (Function for DVD video/video CD/DivX file) Note Images during frame-by-frame playback may be unclear for some discs. 4 Start playback from the selected part. Registering the numbers and starting playback. Slow motion playback Notes ! There is no sound during slow motion playback.

! Images during slow motion playback may be unclear for some discs. ! Reverse slow motion playback is not available. Note With discs featuring a menu, you can also use the DVD menu to make your selection. Refer to Playing moving images on page 17. Changing audio language during playback (Multi-audio)

With DVDs/DivX files that provides audio playback in different languages and different audio systems (Dolby Digital, DTS, etc.), you can switch between languages/audio systems during playback. Notes ! With some DVDs, switching between languages/audio systems may only be possible using a menu display. ! You can also switch between languages/audio systems using Video Setup . For details, refer to Setting the audio language on page 60. ! Only digital output of DTS audio is possible. If the unit's optical digital outputs are not connected, select an audio setting other than DTS. ! Depending on the setting, the video may not be played back with the audio system used to record the DVD. ! You will return to normal playback if you change the Audio during fast forward/fast rewind, pause or slow motion playback. Searching for the part you want to play You can use the search function to find the part you want to play. For DVD videos, you can select Title (title), Chapter (chapter) or 10key (numeric keypad).

For video CDs, you can select Track(track) or 10key(numeric keypad). ! Chapter search is not available when disc playback is stopped. ! This function cannot be operated during some DVD videos or Video CD playback featuring PBC (playback control). 1 Start the search function. Refer to Playing moving images on page 17. 2 Touch the desired search option (e.g., Chapter). 3 Touch 0 to 9 to input the desired number. # To cancel the entered numbers, touch C.

Changing the subtitle language during playback (Multi-subtitle) With DVDs/DivX files featuring multi-subtitle recordings, you can switch between subtitle languages during playback. 34 En Section Detailed instructions Notes ! With some DVDs, switching between subtitle languages may only be possible using a menu display. ! You can also switch between subtitle languages using Video Setup . For details, refer to Setting the subtitle language on page 60. ! You will return to normal playback if you change the Subtitle during fast forward/fast rewind, pause or slow motion playback.

12 ! This function is not available when disc playback is stopped. ! If you select Linear PCM, you can operate this function when playing a disc recorded on a dual mono mode. (Refer to Setting for digital output on page 63.



[You're reading an excerpt. Click here to read official PIONEER AVH-P3350BT user guide](http://yourpdfguides.com/dref/3755740)
<http://yourpdfguides.com/dref/3755740>

)!!! L+R left and right Left left Right right Mix mixing left and right Changing the viewing angle during playback (Multi-angle) With DVDs featuring multi-angle (scenes shot from multiple angles) recordings, you can switch among viewing angles during playback. ! During playback of a scene shot from multiple angles, the angle icon is displayed.

Use the Video Setup to turn the angle icon display on or off. For details, refer to Setting the multi-angle DVD display on page 61. Note You will return to normal playback if you change the viewing angle during fast forward/fast rewind, pause or slow motion playback. You may not be able to select or use this function depending on the disc and the playback location. PBC playback (Function for Video CDs) During playback of Video CDs featuring PBC (Playback Control), PBC ON is displayed. 1 Start the search function. Refer to Playing moving images on page 17. 2 Touch 10key to display the numeric keypad. 3 Touch 0 to 9 corresponding to a menu number. 4 Start playback from the selected part.

Registering the numbers and starting playback. Detailed instructions Return to the specified scene (Function for DVD video) This function cannot be used if a specified scene has not been preprogrammed on the DVD disc. Selecting audio output When playing DVD video discs recorded with LPCM audio, you can switch the audio output. When playing video CDs, you can switch between stereo and monaural audio output. Notes ! You can display the menu by touching Return during PBC playback. For details, refer to the instructions provided with the disc. ! PBC playback of a Video CD cannot be canceled. ! During playback of Video CDs featuring PBC (Playback Control), you cannot select the repeat play range or use the search function. En 35 Section 12 Detailed instructions Selecting tracks from the track title list You can select tracks to playback using the track title list which is a list of the tracks recorded on a disc. 1 Display the track title list.

Refer to Playing audio on page 20. 2 Touch your favorite track title. Playback begins. Using advanced sound retriever Automatically enhances compressed audio and restores rich sound. Off--! -- is more effective than .

Selecting files from the file name list (Function for USB/SD/DivX) File name list is a list of file names (or folder names) from which you can select a file (or folder) to play back. 1 Display the file (or folder) name list. Refer to Playing audio on page 20. Refer to Introduction of still image playback operations on page 22. 2 Touch your favorite file (or folder) name.

When you have selected a folder, a list of the names of the files (or the folders) in it can be viewed. Repeat this operation to select the desired file name. # If folder 01 (ROOT) contains no files, playback commences with folder 02. Note When you use this unit with a multi-channel processor (DEQ-P7650/DEQ-P6600) and switch the , advanced sound retriever function to or the volume will become slightly lower. The volume than it will for will become much lower for . Take care when you increase the volume for and then switch to Off, because the volume will suddenly seem much louder. Changing audiobook speed (Function for iPod)! Playback at a speed faster than normal Playback at normal speed !! Playback at a speed slower than normal Displaying lists related to the currently playing song (Link Search) (Function for iPod) 1 Start Link Search. Refer to Introduction of sound playback operations on page 20. 2 Touch one of the categories in which you want to play. ! Artist Displays an album list of the artist currently being played.

! Album Displays a song list from the album currently being played. ! Genre Displays an album list from the genre currently being played. 3 Start playback of the selected list. Starting playback of the selected list. 36 En Section Detailed instructions # To cancel searching, touch Cancel. 12 Capture an image in JPEG files You can capture image data and use it as wallpaper. Images can be stored and recalled easily in this unit. ! Only one image can be stored on this unit. Old images are overwritten with the new ones. 1 Pause the slideshow when the desired image is displayed.

Refer to Introduction of still image playback operations on page 22. Refer to Introduction of still image playback as a slideshow operations on page 23. 2 Capture the image. Refer to Introduction of still image playback operations on page 22. Refer to Introduction of still image playback as a slideshow operations on page 23.

3 When Do you save this image? is displayed, touch Yes. While storing the image to this unit, Saving the image Don't switch off the battery. is displayed. When the process is finished, Image saved. is displayed.

To cancel the storage process, touch No. 3 Touch the title of the list that you want to play. 4 Start playback of the selected list. Starting playback of the selected list. Playing DivX VOD content Some DivX VOD (video on demand) content may only be playable a fixed number of times. When you load a disc containing this type of content, the remaining number of times it can be played is shown on-screen. You can then decide whether or not to play the disc. ! If there is no limit to the number of times the DivX VOD content can be viewed, then you may load the disc into your player and play the content as often as you like, and no message will be displayed. ! You can confirm the number of times that the content can be played by checking the number displayed after Remaining Views:. Important ! In order to play DivX VOD contents on this unit, you first need to register the unit with your DivX VOD contents provider.

For details on your registration code, refer to Displaying the DivX VOD registration code on page 63. ! DivX VOD content is protected by a DRM (Digital Rights Management) system. This restricts playback of content to specific, registered devices. Detailed instructions Changing the wide screen mode You can select a desired mode for enlarging a 4:3 picture to a 16:9 picture. 1 Display the screen mode. Refer to Introduction of video playback operations on page 17. Refer to Introduction of still image playback operations on page 22. Refer to Introduction of still image playback as a slideshow operations on page 23. 2 Touch the desired wide mode setting. % If a message is displayed after loading a disc containing DivX VOD content, touch Play.

Playback of the DivX VOD content will start. # To skip to the next file, touch Next Play. # If you do not want to play the DivX VOD content, touch Stop. En 37 Section 12 Detailed instructions Full (full screen) The 4:3 picture is enlarged in the horizontal direction only, giving you a 4:3 TV picture (normal picture) without any omissions. Just (just) The picture is enlarged slightly at the center and the amount of enlargement increases horizontally toward the edges of the screen, enabling you to enjoy a 4:3 picture without sensing any disparity even when viewing on a wide screen.



[You're reading an excerpt. Click here to read official PIONEER AVH-P3350BT user guide](http://yourpdfguides.com/dref/3755740)
<http://yourpdfguides.com/dref/3755740>

Cinema (cinema) The picture is enlarged by the same proportion as Full or Zoom in the horizontal direction and by an intermediate proportion between Full and Zoom in the vertical direction; ideal for a cinemasized picture (wide screen picture) where captions lie outside the picture. Zoom (zoom) The 4:3 picture is enlarged in the same proportion both vertically and horizontally; ideal for a cinema sized picture (wide screen picture). Normal (normal) The 4:3 picture is displayed as it is, giving you no sense of disparity since its proportions are the same as that of the normal picture. Notes ! You cannot operate this function while driving. ! Different settings can be stored for each video source.

! When a video is viewed in a wide screen mode that does not match its original aspect ratio, it may appear different. ! Remember that using the wide mode feature of this system for commercial or public viewing purposes may constitute an infringement on the author's rights protected by the Copyright Law. ! The video image will appear coarser when viewed in Cinema or Zoom mode. Calling a number in the phone book (Function of AVH-P3350BT) The phone book in your cellular phone will be transferred automatically when the phone is connected to this unit. After finding the number you want to call in the phone book, you can select the entry and make the call. 1 Switch to phone book mode. Refer to Introduction of Bluetooth telephone operations on page 24. The phone book display appears. 2 Select the phone number list. The detailed phone number list of the selected entry is displayed.

3 Select the phone number. # If you want to store the phone number, touch and hold the list. 4 Make the call. Refer to Introduction of Bluetooth telephone operations on page 24. 5 End the call. Refer to Introduction of Bluetooth telephone operations on page 24. Note Depending on the cellular phone, the phone book may not be transferred automatically. In this case, operate your cellular phone to transfer the phone book. The visibility of this unit should be on. Refer to Switching visible unit on page 43.

Selecting a number by alphabet search mode (Function of AVH-P3350BT) If a lot of numbers are registered in the phone book, you can search for the phone number by alphabet search mode. 38 En Section Detailed instructions 1 Switch to phone book mode. Refer to Introduction of Bluetooth telephone operations on page 24. The phone book display appears. 2 Touch ABC to switch to alphabet search mode.

3 Touch the first letter of the entry you are looking for. The Phone Book entries starting with that letter (e.g. "Ben", "Brian" and "Burt" when "B" is selected) will be displayed. # If you want to change the character to Russian, touch the icon.

To return to English, touch the icon again. Changing the character to Russian. 12 The 80 most recent calls dialed, received, and missed are stored in the memory. You can browse them and call numbers from these lists. 1 Switch to the call history list. Refer to Introduction of Bluetooth telephone operations on page 24. 2 Select Missed Calls, Dialed Calls or Received Calls. Displaying the received call list. Displaying the dialed call list. Displaying the missed call list.

The order of the first name and last name may be different from that of the cellular phone. 4 Touch the list to display the phone number list of the selected entry. # If several phone numbers are included in an entry, select one by touching the list. # If you want to switch to the call history list, touch the icon.

Switching to the call history list. 3 Touch the list number to select a phone number. Name and phone number are displayed in the detailed list. # If you want to store the phone number, touch and hold the list. Detailed instructions 4 Make the call. Refer to Introduction of Bluetooth telephone operations on page 24.

5 End the call. Refer to Introduction of Bluetooth telephone operations on page 24. 5 Make the call. Refer to Introduction of Bluetooth telephone operations on page 24. 6 End the call.

Refer to Introduction of Bluetooth telephone operations on page 24. Using the missed, received and dialed call lists on the optional Bluetooth adapter (Function of AVH-P4350DVD) The 80 most recent calls dialed, received, and missed are stored in the memory. You can browse them and call numbers from these lists. Using the missed, received and dialed call lists (Function of AVH-P3350BT) En 39 Section 12 Detailed instructions 1 Switch to the call history list. Refer to Introduction of Bluetooth telephone operations on page 27.

2 Touch a phone number or name (if entered) you want to call. 3 Make the call. Refer to Introduction of Bluetooth telephone operations on page 27. 4 End the call. Refer to Introduction of Bluetooth telephone operations on page 27. Switching the ring tone You can select whether or not to use this unit's ring tone. If this function is set to on, the ring tone for this unit will sound. 1 Connect your cellular phone to this unit. 2 Turn ring tone on or off. (AVH-P4350DVD) Refer to Introduction of Bluetooth telephone operations on page 27.

(AVH-P3350BT) Refer to Introduction of Bluetooth telephone operations on page 24. Setting automatic answering If this function is on, this unit automatically answers all incoming calls. % Turn automatic answering on or off. (AVH-P4350DVD) Refer to Introduction of Bluetooth telephone operations on page 27. (AVH-P3350BT) Refer to Introduction of Bluetooth telephone operations on page 24. Using the preset dial lists (Function of AVH-P3350BT) You can easily store up to six phone numbers as presets. 1 Display the preset screen. Refer to Introduction of Bluetooth telephone operations on page 24. 2 Touch one of preset dial keys to select the desired phone number. # If you want to delete a preset phone number, touch and hold the preset dial key.

Adjusting the other party's listening volume (Function of AVH-P3350BT) To maintain the good sound quality, this unit can adjust the other party's listening volume. If the volume is not loud enough for the other party, use this function. % Select Far-End VOL. Refer to Introduction of Bluetooth telephone operations on page 24. 1--2--3 # This function can be performed even while talking on the phone.

Settings can be stored for each device. 3 Make the call. Refer to Introduction of Bluetooth telephone operations on page 24. 4 End the call. Refer to Introduction of Bluetooth telephone operations on page 24.

*40 En Section Detailed instructions Making a call by entering phone number (Function of AVH-P3350BT) Wed 28 may 12 Pairing from this unit (Function of AVH-P3350BT) Connection 12:45 PM 1 1 4 7 2 5 8 0 3 6 9 # C ABCDEFGHI 01 012345678901 Off 01: Phone1 02: Phone2 03: Phone3 04: Phone4 05: Phone5 * + Important Be sure to park your vehicle in a safe place and apply the parking brake when performing this operation.*



[You're reading an excerpt. Click here to read official PIONEER AVH-P3350BT user guide](http://yourpdfguides.com/dref/3755740)

<http://yourpdfguides.com/dref/3755740>