



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for PIONEER AVH-P4050DVD. You'll find the answers to all your questions on the PIONEER AVH-P4050DVD in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual PIONEER AVH-P4050DVD
User guide PIONEER AVH-P4050DVD
Operating instructions PIONEER AVH-P4050DVD
Instructions for use PIONEER AVH-P4050DVD
Instruction manual PIONEER AVH-P4050DVD

Pioneer *sound.vision.soul*

Operation Manual

DVD AV RECEIVER

AVH-P4050DVD

SUPER TUNER III D

English



[You're reading an excerpt. Click here to read official PIONEER AVH-P4050DVD user guide](http://yourpdfguides.com/dref/3008547)

<http://yourpdfguides.com/dref/3008547>

Manual abstract:

4 Do not allow other persons to use this system until they have read and understood the operating instructions. 5 Do not install the display where it may (i) obstruct the driver's vision, (ii) impair the performance of any of the vehicle's operating systems or safety features, including air bags, hazard lamp buttons or (iii) impair the driver's ability to safely operate the vehicle. 6 Do not operate this display if doing so in any way will divert your attention from the safe operation of your vehicle. Always observe safe driving rules and follow all existing traffic regulations. If you experience difficulty in operating the system or reading the display, park your vehicle in a safe location and make necessary adjustments. 7 Please remember to wear your seat belt at all times while operating your vehicle. If you are ever in an accident, your injuries can be considerably more severe if your seat belt is not properly buckled. 8 Never use headphones while driving. 9 To promote safety, certain functions are disabled unless the parking brake is on, and the vehicle is not in motion. 10 Never set the volume of your display so high that you cannot hear outside traffic and emergency vehicles.

WARNING ! Do not attempt to install or service your display by yourself. Installation or servicing of the display by persons without training and experience in electronic equipment and automotive accessories may be dangerous and could expose you to the risk of electric shock or other hazards. To ensure safe driving WARNING ! LIGHT GREEN LEAD AT POWER CONNECTOR IS DESIGNED TO DETECT PARKED STATUS AND MUST BE CONNECTED TO THE POWER SUPPLY SIDE OF THE PARKING BRAKE SWITCH. IMPROPER CONNECTION OR USE OF THIS LEAD MAY VIOLATE APPLICABLE LAW AND MAY RESULT IN SERIOUS INJURY OR DAMAGE. ! To avoid the risk of damage and injury and the potential violation of applicable laws, this unit is not for use with a video screen that is visible to the driver.

! To avoid the risk of accident and the potential violation of applicable laws, the front DVD or TV (sold separately) feature should never be used while the vehicle is being driven. Also, rear displays should not be in a location where it is a visible distraction to the driver. ! In some countries or states the viewing of images on a display inside a vehicle even by persons other than the driver may be illegal. Where such regulations apply, they must be obeyed and this unit's DVD features should not be used. When you attempt to watch a DVD, Video CD or TV while driving, the warning Viewing of front seat video source while driving is strictly prohibited.

will appear on the front display. 6 En Section Precautions To watch a DVD, Video CD or TV on the front display, park your vehicle in a safe place and apply the parking brake. 01 To avoid battery exhaustion Be sure to run the vehicle engine while using this unit. Using this unit without running the engine can result in battery drainage. ! When no power is supplied to this unit because of a replacement of the vehicle battery or for some similar reason, the microcomputer of this unit is returned to its initial condition. We recommend that you transcribe the audio adjustment data. Precautions When using a display connected to REAR MONITOR OUTPUT This unit's REAR MONITOR OUTPUT is for connection of a display to enable passengers in the rear seats to watch the DVD or TV. **WARNING NEVER** install the rear display in a location that enables the driver to watch the DVD or TV while driving. **WARNING Do not use with vehicles that do not feature an ACC position. When using a rear view camera With an optional rear view camera, you are able to use this unit as an aid to keep an eye on trailers, or backing into a tight parking spot.**

WARNING ! SCREEN IMAGE MAY APPEAR REVERSED. ! USE IN Inquire at the manufacturer about your USB portable audio player/USB memory. This unit corresponds to the following. -- USB MSC (Mass Storage Class) compliant portable audio player and memory -- WMA, MP3, AAC and WAV file playback For details about the compatibility, refer to Compressed audio compatibility on page 85. iPod® compatibility This unit can control and listen to songs on an iPod. ! This unit supports only the following iPods. Supported iPod software versions are shown below. Older versions of iPod software may not be supported. -- iPod third generation (software version 2.3).

0) -- iPod fourth generation (software version 3.1.1) -- iPod photo (software version 1.2.1) -- iPod fifth generation (software version 1.2.1) -- iPod mini (software version 1.4.1) -- iPod nano first generation (software version 1.3).

1) -- iPod nano second generation (software version 1.1.3) -- iPod nano third generation (software version 1.0.2) -- iPod classic (software version 1.0.2) -- iPod touch (software version 1.1.1) En 9 Section 02 Before You Start ! Music files on iPod touch can be played back. ! When using an iPod, Interface Cable for iPod (e.

g., CD-I200) is required. ! Operations may vary depending on the software version of iPod. ! iPod is a trademark of Apple Inc., registered in the U.S. and other countries. Note This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners.

Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited. satellite, cable and/or any other media), broadcasting/streaming via internet, intranets and/ or other networks or in other electronic content distribution systems, such as pay-audio or audio-on-demand applications. An independent license for such use is required. For details, please visit <http://www.mp3licensing.com>. About AAC This unit plays back AAC files encoded by iTunes®. ! iTunes is a trademark of Apple Inc., registered in the U.

S. and other countries. About DivX About WMA DivX is a compressed digital video format created by the DivX® video codec from DivX, Inc. This unit can play DivX video files recorded on CD-R/RW/ROM and DVD-R/RW/ROM discs. Keeping the same terminology as DVD video, individual DivX video files are called "Titles". When naming files/titles on a CD-R/RW or a DVD-R/RW disc prior to burning, keep in mind that by default they will be played in alphabetical order. Official DivX® Certified product Plays all versions of DivX® video (including DivX® 6) with standard playback of DivX® media files ! DivX, DivX Certified, and associated logos are trademarks of DivX, Inc. and are used under license. The Windows Media™ logo printed on the box indicates that this unit can play back WMA data. ! Windows Media and the Windows logo are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.



[You're reading an excerpt. Click here to read official PIONEER AVH-P4050DVD user guide](http://yourpdfguides.com/dref/3008547)
<http://yourpdfguides.com/dref/3008547>

! This unit may not operate correctly depending on the application used to encode WMA files. About MP3 Supply of this product only conveys a license for private, non-commercial use and does not convey a license nor imply any right to use this product in any commercial (i.e. revenue-generating) real time broadcasting (terrestrial, 10 En Section Before You Start To protect the LCD screen ! Do not allow direct sunlight to fall on the display when this unit is not being used. Extended exposure to direct sunlight can result in LCD screen malfunction due to the resulting high temperatures. ! When using a cellular phone, keep the antenna of the cellular phone away from the display to prevent disruption of the video by the appearance of spots, colored stripes, etc. ! Never touch the screen with anything besides your finger when operating the touch panel function. The screen can scratch easily. 02 What the marks on DVDs indicate Before You Start The marks below may be found on DVD disc labels and packages. They indicate the type of images and audio recorded on the disc, and the functions you can use.

Mark 2 Meaning Indicates the number of audio systems. 2 Indicates the number of subtitle languages. Indicates the number of viewing angles. Indicates the picture size (aspect ratio: screen width-to-height ratio) type. 3 16 : 9 LB For viewing LCD comfortably Due to its construction, the viewing angle of the LCD screen is limited.

You can adjust it by changing either screen size or picture adjustment. 2 3 4 ALL Indicates the number of the region where playback is possible. Changing the wide screen size By changing the screen size from 4:3 to 16:9, you can adjust the screen so that the screen can fit to the video image you are playing. For details concerning operation, refer to Changing the wide screen mode on page 45. When an operation is prohibited When you are watching a DVD and attempt to perform an operation, it may not be performed because of the programming on the disc.

When this happens, the icon appears on the screen. ! The icon may not appear with certain discs. Changing the picture adjustment You can make the best adjustment to the picture display by changing BRIGHTNESS, CONTRAST, COLOR and HUE. You can also dim or enlighten the overall picture image using DIMMER. For details concerning operation, refer to Changing the picture adjustment on page 45. Resetting the microprocessor Pressing RESET lets you reset the microprocessor to its initial settings without changing the bookmark information. The microprocessor must be reset under the following conditions: ! Prior to using this unit for the first time after installation ! If the unit fails to operate properly ! When strange or incorrect messages appear on the display En 11 Section 02 1 Before You Start Turn the ignition switch OFF. ! When using for the first time, pull out the film protruding from the tray. 2 Press RESET with a pen tip or other pointed instrument. WARNING RESET button Keep the battery out of the reach of children.

Should the battery be swallowed, consult a doctor immediately. Note After completing connections or when you want to erase all memorized settings or return the unit to its initial (factory) settings, switch your engine ON or set the ignition switch to ACC ON before pressing RESET. CAUTION ! Use one CR2025 (3 V) lithium battery. ! Remove the battery if the remote control is not used for a month or longer. ! There is a danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent type. ! Do not handle the battery with metallic tools. ! Do not store the battery with metallic objects. ! If the battery leaks, wipe the remote control completely clean and install a new battery. ! When disposing of used batteries, comply with governmental regulations or environmental public institutions' rules that apply in your country/area.

Feature demo mode The feature demo automatically starts when you select the source OFF. The demo continues while the ignition switch is set to ACC or ON. To cancel the feature demo, press and hold VOLUME/MUTE. To restart the feature demo, press and hold VOLUME/MUTE again. Remember that if the feature demo continues operating when the car engine is turned off, it may drain battery power.

Important The red lead (ACC) of this unit should be connected to a terminal coupled with ignition switch on/off operations. If this is not done, the vehicle battery may be drained. Using the remote control Point the remote control in the direction of the front panel to operate. ! The remote control may not function properly in direct sunlight. Important ! Do not store the remote control in high temperatures or direct sunlight.

! Do not let the remote control fall onto the floor, where it may become jammed under the brake or accelerator pedal. Use and care of the remote control Installing the battery Slide the tray on the back of the remote control out and insert the battery with the plus (+) and minus (-) poles aligned properly. 12 En Section Operating this unit 1 23 4 03 Operating this unit 87 6 5 8 AUX1 input jack (3.5 mm stereo/video jack) Use to connect an auxiliary device. What's What Head unit 1 SRC button This unit is turned on by selecting a source. Press to cycle through all the available sources. 2 h (eject) button Press to eject a disc from this unit. 3 RESET button Press to return to the factory settings (initial settings). 4 Disc loading slot Insert a disc to play. 5 VOLUME/MUTE button Rotate it to increase or decrease the volume.

Press to cut the sound. 6 EQ button Press to select various equalizer curves. 7 DISP OFF button Press to turn the information display on or off. En 13 Section 03 Operating this unit 23 4 1 1 k j i h g f 5 6 7 8 9 b c d e a Remote control Button names 1 2 3 4 Remote control selection switch SRC button ATT button VOLUME buttons AUDIO button 5 SUBTITLE button ANGLE button 6 RETURN button AVH mode DVD mode Switch to change the setting of the remote control. For details, refer to Setting remote control code type on page 41. Press to cycle through all the available sources. Press and hold to turn the source off. Press to quickly lower the volume level by about 90%. Press once more to return to the original volume level. Press to increase or decrease the volume. Press to change the audio language during DVD playback. Press to change the subtitle language during DVD playback. Press to change the viewing angle during DVD playback. Press to display the PBC (playback control) menu during PBC playback. Remote control code: AVH or B Not used.

Remote control code: A Press to select the next/previous disc. 7 a/b buttons (DISC) Not used. 14 En Section Operating this unit Switch the operation mode between AVH, DVD and TV modes. Normally, set to AVH. For details, refer to Using the remote control operation mode switch on the next page.



[You're reading an excerpt. Click here to read official PIONEER AVH-P4050DVD user guide](http://yourpdfguides.com/dref/3008547)
<http://yourpdfguides.com/dref/3008547>

Press to operate the preprogrammed functions for each source. (Refer to Using the PGM button on page 50.) Not used. Remote control code: AVH Not used. Remote control code: A or B Press to turn the DVD player on or off. Remote control code: AVH Not used. Remote control code: A or B Press to select different displays. Press to turn the bookmark function on or off when your DVD player features bookmark function. For details, refer to DVD player's operation manual. 03 8 Remote control operation mode switch 9 BOOK MARK button/ PGM button DIRECT button Operating this unit 10 11 REAR SOURCE button Not used.

12 DISPLAY button Press to select different displays. 13 ENTERTAINMENT button Not used. Press 0 to 10 to input numbers. Buttons 1 to 6 can operate the preset tuning for the tuner or disc changing for DVD player or multi-CD player. Press CLEAR to clear the input numbers. Press to return to the previous display. Press to select the tuner band when tuner is selected as a source. Also used to cancel the control mode of functions. Press to switch mode between compressed audio and audio data (CD-DA) when playing discs with compressed audio and audio data (CD-DA) such as CD-EXTRA and MIXED-MODE CDs. 14 0 to 10 buttons, CLEAR button Press to select a menu item on the Video CDs featuring PBC (playback control).

Not used. 15 BACK button 16 BAND/ESC button Press to switch mode between compressed audio and audio data (CD-DA) when playing discs with compressed audio and audio data (CD-DA) such as CD-EXTRA and MIXED-MODE CDs. PLAY/PAUSE (f) button REVERSE (m) button FORWARD (n) button 17 PREVIOUS (o) button NEXT (p) button STEP (r/q) buttons STOP (g) button 18 19 AUTO PLAY button a/b buttons (FOLDER) Press to switch sequentially between playback and pause. Press to perform fast reverse. Press to perform fast forward.

Press to return to the previous track (chapter). Press to go to the next track (chapter). Press to move ahead one frame at a time during DVD/VideoCD playback. Press and hold for one second to activate slow playback. Press to stop playback. Press to turn the DVD auto-playback function on or off. Press to select the next/previous folder. En 15 Section 03 Operating this unit Move to do fast forward, reverse and track search controls. Click to recall MENU. 20 Thumb pad MENU button Move to select a menu on the DVD menu. Press to display the DVD menu during DVD playback. Press to return to the top menu during DVD playback. 21 TOP MENU button Using the remote control operation mode switch There are three remote control operation modes on the remote control. Basic Operations Power ON/OFF 1 AVH mode operation When operating this unit by remote control, the mode is normally switched to AVH. DVD mode operation If you switch the mode to DVD, the thumb pad and 0 to 10 operations are changed for the DVD player.

% When you want to operate the following functions, switch the mode to DVD: ! When operating the DVD menu by using the thumb pad. (Refer to Operating the DVD menu on page 22.) ! When operating the PBC menu by using 0 to 10. (Refer to PBC playback on page 23.) 1 Source icon Turning the unit on % When using the touch panel keys, touch the source icon and then touch the desired source name. The source names are displayed and selectable ones are highlighted. % When using the button, press SRC to turn the unit on. TV mode operation TV operations available with a Pioneer TV tuner (e.g. GEX-P5750TV(P)) can be controlled with AVH mode.

TV mode is not used with this unit. ! For details concerning operation, refer to the TV tuner's operation manuals. Turning the unit off % When using the touch panel keys, touch the source icon and then touch OFF. # When the source icon is not displayed, you can display it by touching the screen. % When using the button, press SRC and hold until the unit turns off.

16 En Section Operating this unit Selecting a source You can select a source you want to listen to. To switch to the DVD player, load a disc in the unit. To switch to the iPod or USB, connect an iPod or USB portable audio player/USB memory to this unit. % When using the touch panel keys, touch the source icon and then touch the desired source name. The source names are displayed and selectable ones are highlighted.

DVD Built-in DVD player RADIO Radio iPod iPod USB USB portable audio player/USB memory ! TEL Bluetooth telephone ! BT-Audio Bluetooth audio player ! S-DVD DVD player/multi-DVD player ! MCD Multi-CD player ! AUX 1 AUX 1 ! AUX 2 AUX 2 ! AV AV input ! TV Television ! EXT 1 External unit 1 ! EXT 2 External unit 2 ! REARVIEW Rear view camera ! OFF Turn the unit off # When the source icon is not displayed, you can display it by touching the screen. # While operating the menu, you cannot select a source by touching the source icon. # To close source select menu, touch ESC. ! ! ! ! -- When AUX (auxiliary input) is set to off (refer to page 42). -- When the AV (AV input) is not set to VIDEO (refer to page 46). AUX1 is set to VIDEO by default. Set the AUX1 to OFF when not in use (refer to Switching the auxiliary setting on page 42). REARVIEW (rear view camera) cannot be selected by pressing SRC. Image from rear view camera can be displayed automatically when the appropriate setting is conducted. For details, refer to Setting for rear view camera (back up camera) on page 47.

External unit refers to a Pioneer product (such as ones available in the future) that, although incompatible as a source, enables control of basic functions with this unit. Two external units can be controlled with this unit. When two external units are connected, the external unit is automatically allocated to external unit 1 or external unit 2 by this unit. When this unit's blue/white lead is connected to the vehicle's auto-antenna relay control terminal, the vehicle's antenna extends when this unit's source is turned on. To retract the antenna, turn the source off. 03 ! Operating this unit ! ! ! ! Adjusting the volume % Use VOLUME/MUTE to adjust the sound level. Rotate VOLUME/MUTE to increase or decrease the volume. % When using the button, press SRC repeatedly to select a desired source. Notes ! In the following cases, the sound source will not change. -- When no unit corresponding to the selected source is connected. -- When there is no disc or magazine in the player. En 17 Section 03 Operating this unit Touch panel key basic operation Activating the touch panel keys Touch to select various sound quality controls. 3 SYSTEM MENU key Touch to select various setup functions. 4 ESC key Touch to cancel the control mode of functions. 1 Touch AV MENU to display MENU.

The menu names are displayed and operable ones are highlighted. 1 1 Touch panel keys Touch to do various operations. # When AV MENU is not displayed, you can display it by touching the screen.



[You're reading an excerpt. Click here to read official PIONEER AVH-P4050DVD user guide](http://yourpdfguides.com/dref/3008547)
<http://yourpdfguides.com/dref/3008547>

2 Touch the desired key to display the function names you want to operate. # To go to the next group of function names, touch NEXT.

To return to the previous group of function names, touch PREV. 1 Touch the screen to activate the touch panel keys corresponding to each source. The touch panel keys appear on the display. # To go to the next group of touch panel keys, touch NEXT. # To return to the previous group of touch panel keys, touch PREV. 3 Touch ESC to return to the display of each source. 2 Touch HIDE to hide the touch panel keys. Note If you do not use the touch panel keys within 30 seconds, they will be hidden automatically when selecting video sources. Operating the menu 123 4 1 FUNCTION MENU key Touch to select functions for each source. 2 AUDIO MENU key 18 En Section Operating this unit Radio Basic Operations Important If you are using this unit in North, Central or South America, reset the AM tuning step (see Setting the AM tuning step on page 42).

If you keep touching c or d you can skip stations. Seek tuning starts as soon as you release the key. Note Listening AM radio while an iPod is charged from this unit may generate noise. In this case, turn the iPod charge setting off and noise is disappeared. (Refer to Switching the iPod charge setting on page 47.) 03 Operating this unit 12 3 4 Storing and recalling broadcast frequencies You can easily store up to six broadcast frequencies for later recall. ! Up to 18 FM stations, six for each of the three FM bands, and six AM stations can be stored in memory. 1 Touch LIST to display the preset list. 65 1 2 3 4 5 Source icon Band indicator Preset number indicator Frequency indicator LOCAL indicator Appears when local seek tuning is on. 6 5 (stereo) indicator Appears when the selected frequency is being broadcast in stereo.

1 Touch the source icon and then touch RADIO to select the radio. 2 Touch BAND to select a band. Touch BAND until the desired band (FM1, FM2, FM3 for FM or AM) is displayed. 3 To perform manual tuning, briefly touch c or d. 4 To perform seek tuning, keep touching c or d for about one second and release. The tuner will scan the frequencies until a broadcast strong enough for good reception is found. # You can cancel seek tuning by briefly touching either c or d.

2 When you find a frequency that you want to store in memory keep touching one of preset tuning keys P1 to P6 until the beep sounds. The selected radio station frequency has been stored in memory. The next time you touch the same preset tuning key the radio station frequency is recalled from memory.

3 Touch ESC to return to the ordinary display. Note You can also use a and b to recall radio station frequencies assigned to preset tuning keys P1 to P6. En 19 Section 03 Operating this unit Introduction of advanced operations 1 Touch AV MENU and then touch FUNCTION MENU to display the function names.

The function names are displayed and operable ones are highlighted. 2 Touch ESC to return to the frequency display. # To return to the previous display, touch BACK. FM: OFF--LEVEL1--LEVEL2--LEVEL3-- LEVEL4 AM: OFF--LEVEL1--LEVEL2 The LEVEL4 setting allows reception of only the strongest stations, while lower settings let you receive progressively weaker stations. Storing the strongest broadcast frequencies BSM (best stations memory) lets you automatically store the six strongest broadcast frequencies under preset tuning keys P1 to P6 and once stored there you can tune in to those frequencies with the touch of a key. ! Storing broadcast frequencies with BSM may replace broadcast frequencies you have saved using P1 to P6. % Touch BSM on the function menu to turn BSM on.

BSM begins to flash. While BSM is flashing the six strongest broadcast frequencies will be stored under preset tuning keys P1 to P6 in order of their signal strength. When finished, BSM stops flashing. # To cancel the storage process, touch BSM again. Tuning in strong signals Local seek tuning lets you tune in only those radio stations with sufficiently strong signals for good reception. % Touch LOCAL on the function menu to set the sensitivity. Touch LOCAL repeatedly until the desired level of sensitivity appears in the display. There are four levels of sensitivity for FM and two levels for AM: 20 En Section Operating this unit Built-in DVD player Basic Operations 12 3 4 5 # With some DVD discs, a menu may be displayed. (Refer to Operating the DVD menu on the next page.) # With a Video CD featuring the PBC (playback control) function, a menu is displayed.

(Refer to PBC playback on page 23.) # To eject a disc, press h (eject). 03 Operating this unit 2 Touch the screen to display the touch panel keys. 3 When playing a compressed audio or DivX, touch a or b to select a folder. 6 1 Source icon 2 Media indicator Shows the type of disc currently playing.

3 Title/Folder number indicator DVD: shows the title currently playing. Compressed audio and DivX: shows the folder currently playing. 4 Chapter/track/file number indicator DVD: shows the chapter currently playing. Video CD and CD: shows the track currently playing. Compressed audio and DivX: shows the file currently playing.

5 Play time indicator 6 Variable message area DVD video: shows the subtitle language, audio language and viewing angle. CD TEXT, compressed audio, DivX and DVDVR: shows the text information of currently playing disc. # To return to folder 01 (ROOT), touch and hold . However, if folder 01 (ROOT) contains no files, playback commences with folder 02. is displayed only when the list is operated. 4 To skip back or forward to another chapter/track, briefly touch o or p. # During PBC playback, a menu may be displayed if you perform these operations. 5 To perform fast forward or reverse, keep touching o or p. When DVD, DivX disc or Video CD is playing, if you keep touching o or p for five seconds, the icon m or n is highlighted. When this happens, fast reverse/fast forward continues even if you release o or p.

To resume playback at a desired point, touch de. # When playing DVD video or Video CD, fast forward/fast reverse may not be possible at certain locations on some discs. If this happens, normal playback automatically resumes. Notes ! If you do not use the touch panel keys within 30 seconds, they will be hidden automatically when displaying video image. ! Read the precautions for discs and player on Handling guideline of discs and player on page 82. ! If an error message such as ERROR-02-XX is displayed, refer to Error messages on page 79. 1 Insert a disc into the disc loading slot. Playback will automatically start.

Be sure to turn up the label side of a disc. # After a disc has been inserted, use touch panel keys to select the DVD player.

When the automatic playback function is on, this unit will cancel the DVD menu and automatically start playback from the first chapter of the first title. Refer to Automatic playback of DVDs on page 26. En 21 Section 03 Operating this unit ! If bookmark function is on, DVD playback resumes from the selected point.



[You're reading an excerpt. Click here to read official PIONEER AVH-P4050DVD user guide](http://yourpdfguides.com/dref/3008547)

<http://yourpdfguides.com/dref/3008547>

For more details, refer to Resume playback (Bookmark) on page 24. ! If a disc contains a mixture of various media file types such as DivX and MP3, you can switch between media file types to play.

Refer to Switching the media file type on this page. ! There is sometimes a delay between starting up disc playback and the sound being issued. When being read, FORMAT READ is displayed. ! When playing back files recorded as VBR (variable bit rate) files, the play time will not be correctly displayed if fast forward or reverse operations are used. ! When playing back WMA files, album title list does not appear.

! If the characters recorded on the disc are not compatible with this unit, those characters will not be displayed. in certain parts of the disc. This is not a malfunction. Switching the media file type When playing a disc containing a mixture of various media file types such as DivX and MP3, you can switch between media file types to play. ! This unit allows playback of the following media file type recorded on CD-R/RW/ROM discs. -- Audio data (CD-DA) -- Compressed audio files (WMA/MP3/AAC) -- DivX video files ! In case of DVD-R/RW/ROM, this unit does not allow playback of audio data (CD-DA). % Touch MEDIA to switch between media file types. Touch MEDIA repeatedly to switch between the following media file types: CD (audio data (CD-DA))--WMA/MP3/AAC (compressed audio)--DivX (DivX video files) Basic playback controls The table below shows the basic controls for playing discs. The following chapters cover other playback features in more details. Key de g What it does Starts playback, pauses a disc that's playing or restarts a paused disc.

Stops playback. Skips to the start of the current track, chapter or file, then to previous tracks/chapters/files. ! Performs fast reverse by touching and holding o. Skips to the next track, chapter or file. ! Performs fast forward by touching and holding p. Operating the DVD menu Some DVDs allow you to select from the disc contents using a menu. ! This function is available for DVD video. ! You can display the menu by touching MENU or TOP MENU while a disc is playing. Touching either of these keys again lets you start playback from the location selected from the menu. For details, refer to the instructions provided with the disc.

o p Using DVD menu direct touch control This function allows you to operate the DVD menu by touching the menu item directly. % Touch the desired menu item on the DVD menu directly. # Depending on the contents of DVD discs, this function may not work properly. In this case, using touch panel keys operate the DVD menu. Notes ! You can also perform fast forward or reverse by pressing and holding m or n on the remote control.

! You may find with some DVD or Video CD discs that some playback controls do not work 22 En Section Operating this unit Using the touch panel keys 1 Touch to display touch panel keys to operate the DVD menu. # When the touch panel keys are not displayed, you can display them by touching the screen. # To switch to the DVD menu direct touch control, touch TOUCH. ! During playback of Video CDs featuring PBC (Playback Control), PBC ON, search and time search functions cannot be used nor can you select the range for repeat play. 03 Operating this unit Playing DivX® VOD content Some DivX VOD (video on demand) content may only be playable a fixed number of times.

When you load a disc containing this type of DivX VOD content, the remaining number of plays is shown on-screen and you then have the option of playing the disc (thereby using up one of the remaining plays), or stopping. If you load a disc that contains expired DivX VOD content (for example, content that has zero remaining plays), Rental Expired. is displayed. ! If your DivX VOD content allows an unlimited number of plays, then you may load the disc into your player and play the content as often as you like, and no message will be displayed. Important ! In order to play DivX VOD content on this unit, you first need to register the unit with your DivX VOD content provider. About your regis® tration code, refer to Displaying your DivX VOD registration code on page 41. ! DivX VOD content is protected by a DRM (Digital Rights Management) system. This restricts playback of content to specific, registered devices. 2 Touch a, b, c or d to select the desired menu item. 3 Touch ENTER.

Playback starts from the selected menu item. # If you switch the remote control operation mode to DVD, the thumb pad on the remote control can also operate the DVD menu. (Refer to page 16.) # The way to display the menu differs depending on the disc. PBC playback During playback of Video CDs featuring PBC (Playback Control), PBC ON is displayed. You can operate PBC menu with 10Key. ! This function is available for Video CD. 1 When PBC menu is displayed, touch SEARCH and then touch 10Key. # Depending on the discs, the menu may be two or more pages long. In such case, touch o or p to display the next or previous menu.

2 Touch 0 to 9 corresponding to a menu number and then touch ENTER to start playback. Playback starts from the selected menu item. 3 Touch ESC to hide the touch panel keys. Notes ! You can display the menu by touching RETURN during PBC playback. For details, refer to the instructions provided with the disc.

! PBC playback of Video CD cannot be cancelled. % If the message is displayed after loading a disc containing DivX VOD content, touch PLAY. Playback of the DivX VOD content will start. # To skip to the next file, touch NEXT PLAY. # If you do not want to play the DivX VOD content, touch STOP.

En 23 Section 03 Operating this unit Skipping back or forward to another title ! This function is available for DVD. % To skip back or forward to another title, touch a or b. Touching a skips to the start of the next title. Touching b skips to the start of the previous title. Title numbers are displayed for eight seconds. # To switch between groups of touch panel keys, touch NEXT or PREV. Resume playback (Bookmark) The Bookmark function lets you resume playback from a selected scene the next time the disc is loaded. ! This function is available for DVD video. % During playback, touch BOOKMARK at the point you want to resume playback next time. The selected scene will be bookmarked so that playback resumes from that point next time.

You can bookmark up to five discs. After that, the oldest bookmark is replaced by the new one. # To switch between groups of touch panel keys, touch NEXT or PREV. # To clear the bookmark on a disc, keep touching BOOKMARK during playback. # If you switch the remote control operation mode to DVD, you can also bookmark a disc using BOOK MARK on the remote control. (Refer to page 16.) # You can also bookmark a disc by pressing and holding EJECT at the point you want to bookmark. Next time you load the disc, playback will resume from the bookmarked point. Note that you can only bookmark one disc using this method. To clear the bookmark on a disc, press EJECT.



[You're reading an excerpt. Click here to read official PIONEER AVH-P4050DVD user guide](http://yourpdfguides.com/dref/3008547)
<http://yourpdfguides.com/dref/3008547>

Selecting the play mode You have two methods for playing DVD-VR disc; ORIGINAL (original) and PLAYLIST (playlist). ! Titles created with DVD recorders are called original. Based on original, rearranged titles are called playlist. Playlists are created on DVD-R/RW discs. ! This function is available for DVD-VR.

% Touch MODE CHANGE to switch the play mode. If the play mode is changed, playback starts from the beginning of the selected play mode. CM skip/CM back This function skips a reproduced image for a specified time. If the currently playing disc contains commercials, it is possible to skip them. ! This function is available for DVD.

% To skip progressively backward or forward, touch or . Each time you touch or it changes steps in the following order: CM back 5 sec.--15 sec.--30 sec.--1.0 min.--2.0 min.--3.0 min.

--0 sec. CM skip 30 sec.--1.0 min.--1.5 min.--2.0 min.--3.0 min.
--5.0 min.--10.0 min.--0 sec.

Searching for the part you want to play You can use the search function to find the part you want to play. ! This function is available for DVD, DivX disc and Video CD. ! Chapter search, track search and time search are not possible when disc playback has been stopped. ! During playback of Video CDs featuring PBC (playback control), this function cannot be operated. 1 Touch SEARCH.

To switch between groups of touch panel keys, touch NEXT or PREV. 24 En Section Operating this unit 2 Touch the desired search option (e.g., CHAP.). # You cannot operate this step during DivX disc playback. nected, DTS audio will not be output, so select an audio setting other than DTS. ! Display indications such as Dolby D and 5.1ch indicate the audio system recorded on the DVD. Depending on the setting, playback may not be with the same audio system as that indicated.

! Touching AUDIO during fast forward/fast reverse, pause or slow motion playback returns you to normal playback. 03 Operating this unit 3 Touch 0 to 9 to input the desired number. # To cancel the inputted numbers, touch C. # In the time search function, to select 1 hour 11 minutes, convert the time into 71 minutes 00 seconds and touch 7, 1, 0 and 0 in that order. 4 Touch ENTER. This starts playback from the selected part. Note With DVD discs featuring a menu, you can also touch MENU or TOP MENU and then make selections from the displayed menu. Changing the subtitle language during playback (Multi-subtitle) With DVDs featuring multi-subtitle recordings, you can switch between subtitle languages during playback. ! This function is available for DVD and DivX disc. % Touch SUBTITLE during playback.

Each time you touch SUBTITLE it switches between subtitle languages. # To switch between groups of touch panel keys, touch NEXT or PREV. Notes ! With some DVDs, switching between subtitle languages may only be possible using a menu display. ! You can also switch between subtitle languages using DVD SETUP. For details, refer to Setting the subtitle language on page 38.

! Touching SUBTITLE during fast forward/fast reverse, pause or slow motion playback returns you to normal playback. Changing audio language during playback (Multi-audio) DVDs can provide audio playback with different languages and different systems (Dolby Digital, DTS etc.). With DVDs featuring multiaudio recordings, you can switch between languages/audio systems during playback. ! This function is available for DVD and DivX disc.

% Touch AUDIO during playback. Each time you touch AUDIO it switches between audio systems. # To switch between groups of touch panel keys, touch NEXT or PREV. Notes ! With some DVDs, switching between languages/audio systems may only be possible using a menu display. ! You can also switch between languages/audio systems using DVD SETUP. For details, refer to Setting the audio language on page 38. ! Only digital output of DTS audio is possible. If this unit's optical digital outputs are not con- En 25 Section 03 Operating this unit Changing the viewing angle during playback (Multi-angle) With DVDs featuring multi-angle (scenes shot from multiple angles) recordings, you can switch among viewing angles during playback. ! This function is available for DVD video. ! During playback of a scene shot from multiple angles, the angle icon is displayed.

Turn angle icon display on or off using DVD SETUP. For details, refer to Setting the angle icon display on page 39. % Touch ANGLE during playback of a scene shot from multiple angles. Each time you touch ANGLE it switches between angles. # To switch between groups of touch panel keys, touch NEXT or PREV. Note Touching ANGLE during fast forward/fast reverse, pause or slow motion playback returns you to normal playback. % Keep touching r until is displayed during playback. The icon is displayed, forward slow motion playback begins. # Touching r during slow motion playback, you can change the playback speed in four steps as follows: 1/16--1/8--1/4--1/2 # To switch between groups of touch panel keys, touch NEXT or PREV. # To return to normal playback, touch de.

Notes ! There is no sound during slow motion playback. ! With some discs, images may be unclear during slow motion playback. ! Reverse slow motion playback is not possible. Return to the specified scene You can return to the specified scene where the DVD you are currently playing has been preprogrammed to return. ! This function is available for DVD video.

% Touch RETURN to return to the specified scene. # To switch between groups of touch panel keys, touch NEXT or PREV. # If a specified scene has not been preprogrammed in DVD disc, this function is not possible. Frame-by-frame playback This lets you move ahead one frame at a time during playback. ! This function is available for DVD and Video CD.

% Touch r during playback. Each time you touch r, you move ahead one frame. # To return to normal playback, touch de. # To switch between groups of touch panel keys, touch NEXT or PREV. # With some discs, images may be unclear during frame-by-frame playback. Automatic playback of DVDs When a DVD disc with DVD menu is inserted, this unit will cancel the DVD menu automatically and start playback from the first chapter of the first title. ! This function is available for DVD video. ! Some DVDs may not operate properly. If this function is not fully operated, turn this function off and start playback. Slow motion playback This lets you slow down playback speed.

! This function is available for DVD and Video CD. 26 En Section Operating this unit % Touch AUTO PLAY to turn automatic playback on. # To turn automatic playback off, touch AUTO PLAY again. # You can also turn automatic playback on or off by pressing AUTO PLAY button on the remote control. # To switch between groups of touch panel keys, touch NEXT or PREV. # When the automatic playback is on, you cannot operate repeating play of DVD disc (refer to Repeating play on the next page). ! If specific information has not been recorded on a CD TEXT disc, No XXXX will be displayed (e.g., No name). ! If specific information has not been recorded on a compressed audio disc, No XXXX will be displayed (e.



[You're reading an excerpt. Click here to read official PIONEER AVH-P4050DVD user guide](http://yourpdfguides.com/dref/3008547)

<http://yourpdfguides.com/dref/3008547>

g., No name). ! When playing back WMA files, album title is not displayed. 03 Operating this unit Selecting tracks from the track list Track list lets you see the list of tracks on a disc and select one of them to play back. When playing a CD TEXT disc, track titles are displayed.

! This function is available for CD. 1 Touch LIST. to switch between the Text information Text information recorded on a disc can be displayed. Text information is displayed on variable message area. ! This function is available for CD TEXT, compressed audio disc, DivX disc and DVD-VR.

2 Touch or lists of tracks. Displaying text information % Touch INFO. Touch INFO repeatedly to switch between the following settings: For CD TEXT discs : disc title-- : disc artist name-- : track title-- : track artist name For compressed audio discs : folder name-- : file name-- : album title-- : track title-- : artist name For DivX discs : folder name-- : file name For DVD-VR discs / : playback mode-- : title name Notes ! Some discs have certain information encoded on the disc during manufacture. These discs may contain such information as the CD title, track title, artist's name and playback time and are called CD TEXT discs. 3 Touch your favorite track. That selection will begin to play. 4 Touch ESC to return to the ordinary display. Selecting files from the file name list File name list lets you see the list of file names (or folder names) and select one of them to play back. ! This function is available for compressed audio disc and DivX disc. 1 Touch LIST.

to switch between the 2 Touch or lists of titles. 3 Touch your favorite file name (or folder name). That selection will begin to play. # When you have selected a folder, a list of the names of the files (or the folders) in it can be viewed. Repeat steps 2 and 3 to select the desired file name. En 27 Section 03 Operating this unit # To return to the previous list (the folder one level higher), touch . # To return to folder 01 (ROOT), touch and hold . However, if folder 01 (ROOT) contains no files, playback commences with folder 02. 4 Touch ESC to return to the ordinary display. For Video CD and CD, play range can be selected from DISC (disc repeat) and TRACK (track repeat).

For compressed audio and DivX, play range can be selected from DISC (disc repeat), FOLDER (folder repeat) and FILE (file repeat). ! During playback of Video CDs featuring PBC (playback control), this function cannot be operated. % Touch REPEAT on the function menu to select the repeat range. ! ! ! ! ! TITLE Repeat the current title CHAPTER Repeat the current chapter TRACK Repeat the current track FILE Repeat just the current file FOLDER Repeat the current folder DISC Play through the current disc Notes ! If you perform chapter search or fast forward/ reverse, the repeat play range changes to DISC. ! If you select another folder during repeat play, the repeat play range changes to DISC.

! When playing back compressed audio or DivX, if you perform track search or fast forward/reverse during FILE, the repeat play range changes to FOLDER. ! When playing back Video CD or CD, if you perform track search or fast forward/reverse during TRACK, the repeat play range changes to DISC. ! When FOLDER is selected, it is not possible to play back a subfolder of that folder. ! When playing discs with compressed audio and audio data (CD-DA), repeat play performs within the currently playing data type even if DISC is selected. Selecting titles from the title list Title list lets you see the list of titles on a disc and select one of them to play back.

! This function is available for DVD-VR. 1 Touch LIST. to switch between the 2 Touch or lists of titles. 3 Touch your favorite title. That selection will begin to play. 4 Touch ESC to return to the ordinary display. Introduction of advanced operations 1 Touch AV MENU and then touch FUNCTION MENU to display the function names. The function names are displayed and operable ones are highlighted. 2 Touch ESC to return to the playback display. # To return to the previous display, touch BACK.

Repeating play Tracks in a play range are played repeatedly. Play range varies depending on the media. For DVD, play range can be selected from DISC (disc repeat), TITLE (title repeat) and CHAPTER (chapter repeat). Playing tracks in random order Tracks in a selected repeat range are played in random order. ! This function is available for CD and compressed audio disc. 28 En Section Operating this unit 1 Select the repeat range. Refer to Repeating play on the previous page. 2 Touch RANDOM on the function menu to turn random play on. Tracks will play in a random order within the previously selected repeat range. # To turn random play off, touch RANDOM again.

03 can operate this function. (Refer to Setting for digital output on page 41.) % Touch L/R SELECT on the function menu to select the audio output. Touch L/R SELECT repeatedly until the desired audio output appears in the display. ! ! ! L+R left and right LEFT left RIGHT right MIX mixing left and right Note Depending on the disc and the playback location on the disc, the function may not be selectable, indicating that operating this function is not possible. Operating this unit Scanning tracks or folders Scan play lets you hear the first 10 seconds of each track on the CD. When playing the compressed audio disc, the first 10 seconds of each track of the current folder (or the first track of each folder) is played. ! This function is available for CD and compressed audio disc. 1 Select the repeat range. Refer to Repeating play on the previous page.

2 Touch SCAN on the function menu to turn scan play on. The first 10 seconds of each track is played. 3 When you find the desired track (or folder) touch SCAN again. Note After track or folder scanning is finished, normal playback of the tracks will begin again. Using compression Using the COMP (compression) function lets you adjust the sound playback quality of this unit. % Touch COMPRESSION on the function menu to select your favorite setting. OFF--COMP1--COMP2 Selecting audio output When playing DVD video discs recorded with LPCM audio, you can switch the audio output. When playing Video CD discs, you can switch between stereo and monaural audio output. ! This function is available for DVD and Video CD. ! This function is not possible when disc playback has been stopped.

! If you select Linear PCM, when playing a disc recorded on a dual mono mode, you En 29 Section 03 Operating this unit Playing songs on iPod Basic Operations You can use this unit to control an iPod by using a cable (e.g., CD-I200), which is sold separately. # When removing the iPod from this unit, this unit is turned off. 2 To skip back or forward to another song, touch o or p. 3 To perform fast forward or reverse, keep touching o or p. 4 When playing a file with chapter, touch o or p to select a chapter.



[You're reading an excerpt. Click here to read official PIONEER AVH-P4050DVD user guide](http://yourpdfguides.com/dref/3008547)

<http://yourpdfguides.com/dref/3008547>

1 2 3 4 5 6 # To switch between groups of touch panel keys, touch NEXT or PREV. Notes 8 7 1 Source icon 2 Repeat indicator Shows when repeat range is set to ONE or ALL. 3 Song number indicator 4 Title indicator 5 Shuffle indicator Shows when random play is set to SONGS or ALBUMS.

6 Play time indicator 7 Song information Shows detailed information of currently playing song. 8 Battery charging indicator Shows when the battery charge setting is on. ! Read the precautions for iPod on page 86. ! If an error message or icon such as ERROR-11 or is displayed, refer to Error messages on page 79. ! Connect directly the dock connector cable to the iPod so that this unit works properly.

! When the ignition switch is set to ACC or ON, the iPod's battery is charged while the iPod is connected to this unit. ! While the iPod is connected to this unit, the iPod cannot be turned on or off. ! The iPod is turned off about two minutes after the ignition switch is set to OFF. Playing video This unit can play video if an iPod with video capabilities is connected. ! To pause video playback, touch MENU.

! This unit can play back "Movies", "Music videos", "Video Podcast" and "TV show" which are downloaded from iTunes store. ! Change the video setting on the iPod so that the iPod can output the video to an external device, before you display the video screen. ! For details, refer to the iPod's manuals. 1 Touch Video. # To return to the music operation screen, touch Music. 1 Connect the iPod to this unit. Playback will automatically start. While connected to this unit, PIONEER, Accessory Attached or (check mark) is displayed on the iPod. # Before connecting the dock connector of this unit to the iPod, disconnect the headphones from the iPod. # Depending on the model of iPod or the data size in the iPod, there may be a delay to start playing after connection.

After the iPod has been connected to this unit, use touch panel keys to select the iPod. 2 Play video on the iPod. 30 En Section Operating this unit Browsing for a song/video Operations to control an iPod with this unit is designed to be as close to the iPod as possible to make operation and song/video search easy. ! If the characters recorded on the iPod are not compatible with this unit, those characters are not displayed. 1 Touch MENU to display iPod menus. 03 Displaying text information on iPod % Touch INFO to select the desired text information. : song title-- : artist name-- : album title # If the characters recorded on the iPod are not compatible with this unit, those characters are not displayed. Operating this unit 2 Touch one of the categories in which you want to search for a song/video. When browsing for a song ! ! ! ! ! ! PLAYLISTS (playlists) ARTISTS (artists) ALBUMS (albums) SONGS (songs) PODCASTS (podcasts) GENRES (genres) COMPOSERS (composers) AUDIOBOOKS (audiobooks) Repeating play For playback of the songs on the iPod, there are two repeat play ranges: ONE (repeat one song) and ALL (repeat all songs in the list). ! While repeat play range is set to ONE, you cannot select the other songs.

However, you can select other songs while browsing. 1 2 Touch NEXT. Touch to select the repeat range. When browsing for a video ! V.PLAYLISTS (playlists) ! MOVIES (movies) ! MUSICVIDEOS (music video) ! V.

PODCASTS (video podcasts) ! TV SHOWS (TV shows) # To switch between groups of categories, touch PREV or NEXT. ! ONE Repeat just the current song ! ALL Repeat all songs in the selected list # To switch between groups of touch panel keys, touch NEXT or PREV. Playing songs in a random order (shuffle) For playback of songs on the iPod, there are two random play methods: SONGS (play back songs in a random order) and ALBUMS (play back albums in a random order). % Touch method. to select the random play 3 Touch a list title that you want to play.

Repeat this operation until you find the desired song/video. # You can start playback throughout the selected list by touching and holding desired list title. # You can start a playback of all the songs in the selected list (GENRES, ARTISTS, COMPOSERS or ALBUMS). To do this, touch ALL. # You can start a playback of all the videos in the selected list (MUSICVIDEOS or TV SHOWS). To do this, touch ALL. # To switch between the lists of titles, touch or . # To return to the previous menu, touch MENU. ! SONGS Play back songs in the selected list in random order. ! ALBUMS Play back songs from a randomly selected album in order.

repeat# To cancel the random play, touch edly until the shuffle icon is turned off. 4 Touch ESC to return to the ordinary display. Playing all songs in a random order (shuffle all) This method plays all songs on the iPod randomly. % Touch to turn shuffle all on. All songs on the iPod play randomly. En 31 Section 03 Operating this unit Operating this unit's iPod function from your iPod This unit's iPod function can be operated from your iPod. Sound can be heard from car's speaker, and operation can be conducted from your iPod. ! While this function is in use, even if the ignition key is turned off, iPod is not turned off. To turn off power, operate the iPod. 1 Touch to iPod.

to switch the control mode 3 Touch a list title that you want to play. For more details about the selecting operation, refer to step 3 of Browsing for a song/video on the previous page. Note If link search is aborted, NOT FOUND is displayed. Changing audiobook speed While listening to an audiobook on iPod, playback speed can be changed. % Touch A.

Book to select your favorite setting. ! FASTER Playback faster than normal speed ! NORMAL Playback in normal speed ! SLOWER Playback slower than normal speed # To switch between groups of touch panel keys, touch NEXT or PREV. # Touching switches the control mode to this unit. # While using this function, play time and titles are not displayed on this unit. # Even if this function is performed, track up/ down, chapter up/down and fast forward/reverse can be operated from this unit.

While using this function, browse function cannot be operated from this unit. 2 Operate the connected iPod to select a song/video and play. Pausing a song % Touch de during playback. # To resume playback at the same point that you turned pause on, touch de again. Selecting songs from album list of currently playing artist Album list of the currently selected artist is displayed. You can select an album or song from the artist name. ! This function is not available for video files. ! Depending on the number of files in the iPod, there may be a delay when displaying a list. 1 Touch NEXT. 2 Touch LINK SEARCH to turn link search on.

Searches albums of the artist and displays the list. 32 En Section Operating this unit Playing songs on USB portable audio player/USB memory Basic Operations For details about the supported device, refer to Portable audio player compatibility on page 9.



[You're reading an excerpt. Click here to read official PIONEER AVH-P4050DVD user guide](http://yourpdfguides.com/dref/3008547)
<http://yourpdfguides.com/dref/3008547>

Notes ! Optimum performance of this unit may not be obtained depending on the connected USB portable audio player/USB memory. ! If folder 01 (ROOT) contains no files, playback commences with folder 02. ! When the USB portable audio player having battery charging function is connected to this unit and the ignition switch is set to ACC or ON, the battery is charged. ! You can disconnect the USB portable audio player/USB memory anytime you want to finish listening to it. ! If USB portable audio player/USB memory is connected to this unit, the source is changed to USB automatically. If you do not use an USB device, disconnect it from this unit. Depending on the connected USB device, turning on the ignition switch while USB device is connected to this unit may change the source automatically. 03 Operating this unit 12 345 6 7 1 Source icon 2 Media indicator Shows the type of file currently playing.

3 Folder number indicator 4 File number indicator 5 Title indicator 6 Play time indicator 7 Song information Shows detailed information of currently playing song. Pausing compressed audio playback % Touch de during playback. # To resume playback at the same point that you turned pause on, touch de again. 1 Touch the source icon and then touch USB to select the USB. # When the source icon is not displayed, you can display it by touching the screen.

Introduction of advanced operations 1 Touch AV MENU and then touch FUNCTION MENU to display the function names. The function names are displayed and operable ones are highlighted. 2 Touch ESC to return to the playback display. # To return to the previous display, touch BACK. 2 # To return to folder 01 (ROOT), touch and hold .

However, if folder 01 (ROOT) contains no files, playback commences with folder 02. is displayed only when the list is operated. # You cannot select a folder that does not have a compressed audio file recorded in it. Touch a or b to select a folder. 3 To perform fast forward or reverse, keep touching o or p. 4 To skip back or forward to another compressed audio file, briefly touch o or p. En 33 Section 03 Operating this unit Function and operation REPEAT, RANDOM and SCAN operations are basically the same as that of the built-in DVD player. Function name Operation Refer to Repeating play on page 28. However, the repeat play ranges you can select are different from that of the built-in DVD player. The repeat play ranges of the USB portable audio player/USB memory are: ! FILE Repeat just the current file ! FOLDER Repeat the current folder ! ALL Repeat all files Refer to Playing tracks in random order on page 28.

Refer to Scanning tracks or folders on page 29. Selecting files from the file name list The operation is the same as that of the builtin DVD player. Refer to Selecting files from the file name list on page 27. REPEAT RANDOM SCAN Notes ! If you select another folder during repeat play, the repeat play range changes to ALL. ! If you perform track search or fast forward/reverse during FILE, the repeat play range changes to FOLDER. ! When FOLDER is selected, it is not possible to play back a subfolder of that folder. ! After file or folder scanning is finished, normal playback of the files begins again. Displaying text information of an audio file The operation is the same as that of the builtin DVD player. Refer to Text information on page 27. ! If the characters recorded on the audio file are not compatible with this unit, those characters will not be displayed.

34 En Section Operating this unit Audio Adjustments Introduction of audio adjustments 1 Touch FADER/BALANCE on the audio function menu. # When the rear output setting is S.W, BALANCE will be displayed instead of FADER/BALANCE. Refer to Setting the rear output and subwoofer controller on page 43. 03 Operating this unit 1 1 Audio display Shows the audio adjustment status.

Important If the multi-channel processor (DEQ-P7650) is connected to this unit, the audio function will be changed to the multi-channel processor's audio menu. For details, refer to Introduction of DSP adjustments on page 66. 2 Touch a or b to adjust front/rear speaker balance. Each time you touch a or b it moves the front/rear speaker balance towards the front or the rear. FRONT:15 to REAR:15 is displayed as the front/rear speaker balance moves from front to rear.

FR: 0 is the proper setting when only two speakers are used. # When the rear output setting is S.W, you cannot adjust front/rear speaker balance. Refer to Setting the rear output and subwoofer controller on page 43. 1 Touch AV MENU and then touch AUDIO MENU to display the audio function names. The audio function names are displayed and operable ones are highlighted. # To go to the next group of function names, touch NEXT. # To return to the previous group of function names, touch PREV. # When selecting FM and Bluetooth telephone as the source, you cannot switch to SLA. 3 Touch c or d to adjust left/right speaker balance.

Each time you touch c or d it moves the left/ right speaker balance towards the left or the right. LEFT:15 to RIGHT:15 is displayed as the left/ right speaker balance moves from left to right. Using the equalizer The equalizer lets you adjust the equalization to match the car's interior acoustic characteristics as desired. 2 Touch ESC to return to the ordinary display. # To return to the previous display, touch BACK. Recalling equalizer curves There are six stored equalizer curves which you can easily recall at any time. Here is a list of the equalizer curves. Display POWERFUL NATURAL VOCAL CUSTOM Equalizer curve Powerful Natural Vocal Custom Using balance adjustment You can change the fader/balance setting so that it can provide the ideal listening environment in all occupied seats. En 35 Section 03 Operating this unit FLAT SUPER BASS Flat Super bass ! CUSTOM is an adjusted equalizer curve that you create. If you make adjustments to an equalizer curve, the equalizer curve setting is memorized in CUSTOM.

! When FLAT is selected, no supplement or correction is made to the sound. This is useful to check the effect of the equalizer curves by switching alternatively between FLAT and a set equalizer curve. % Press EQ to select the equalizer. Press EQ repeatedly to switch between the following equalizers:

POWERFUL--NATURAL--VOCAL--CUSTOM --FLAT--SUPER BASS 4 Touch c or d next to FREQUENCY to select the frequency to adjust. Low: 40Hz--80Hz--100Hz--160Hz Mid: 200Hz--500Hz--1kHz--2kHz High: 3.

15kHz--8kHz--10kHz--12.5kHz 5 Touch c or d next to Q.FACTOR to select the Q factor. 2W--1W--1N--2N 6 Touch a or b to adjust the level of the equalizer band. +12dB to -12dB is displayed as the level is increased or decreased.

You can then select another band and adjust the level. Adjusting loudness Loudness compensates for deficiencies in the low- and high-sound ranges at low volume. 1 Touch LOUDNESS on the audio function menu.



[You're reading an excerpt. Click here to read official PIONEER AVH-P4050DVD user guide](http://yourpdfguides.com/dref/3008547)

<http://yourpdfguides.com/dref/3008547>