



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for PIONEER AVH-P4250DVD-AVH-P3250DVD-AVH-P3250BT. You'll find the answers to all your questions on the PIONEER AVH-P4250DVD-AVH-P3250DVD-AVH-P3250BT in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual PIONEER AVH-P4250DVD-AVH-P3250DVD-AVH-P3250BT**

**User guide PIONEER AVH-P4250DVD-AVH-P3250DVD-AVH-P3250BT**

**Operating instructions PIONEER AVH-P4250DVD-AVH-P3250DVD-AVH-P3250BT**

**Instructions for use PIONEER AVH-P4250DVD-AVH-P3250DVD-AVH-P3250BT**

**Instruction manual PIONEER AVH-P4250DVD-AVH-P3250DVD-AVH-P3250BT**

***Pioneer***

---

**Operation Manual**

DVD AV RECEIVER

**AVH-P4250DVD  
AVH-P3250DVD  
AVH-P3250BT**

---

*English*



[You're reading an excerpt. Click here to read official PIONEER AVH-P4250DVD-AVH-P3250DVD-AVH-P3250BT user guide](http://yourpdfguides.com/dref/3008540)  
<http://yourpdfguides.com/dref/3008540>

**Manual abstract:**

3 Pay close attention to all warnings in this manual and follow the instructions carefully. 4 Do not allow other persons to use this system until they have read and understood the operating instructions. 5 Do not install the display where it may (i) obstruct the driver's vision, (ii) impair the performance of any of the vehicle's operating systems or safety features, including air bags, hazard lamp buttons or (iii) impair the driver's ability to safely operate the vehicle. 6 Do not operate this display if doing so in any way will divert your attention from the safe operation of your vehicle. Always observe safe driving rules and follow all existing traffic regulations. If you experience difficulty in operating the system or reading the display, park your vehicle in a safe location and make necessary adjustments. 7 Please remember to wear your seat belt at all times while operating your vehicle. If you are ever in an accident, your injuries can be considerably more severe if your seat belt is not properly buckled. 8 Never use headphones while driving. 9 To promote safety, certain functions are disabled unless the parking brake is on, and the vehicle is not in motion.

10 Never set the volume of your display so high that you cannot hear outside traffic and emergency vehicles. **WARNING ! Do not attempt to install or service your display by yourself. Installation or servicing of the display by persons without training and experience in electronic equipment and automotive accessories may be dangerous and could expose you to the risk of electric shock or other hazards. To ensure safe driving WARNING ! LIGHT GREEN LEAD AT POWER CONNECTOR IS DESIGNED TO DETECT PARKED STATUS AND MUST BE CONNECTED TO THE POWER SUPPLY SIDE OF THE PARKING BRAKE SWITCH. IMPROPER CONNECTION OR USE OF THIS LEAD MAY VIOLATE APPLICABLE LAW AND MAY RESULT IN SERIOUS INJURY OR DAMAGE.**

**! To avoid the risk of damage and injury and the potential violation of applicable laws, this unit is not for use with a video screen that is visible to the driver. ! To avoid the risk of accident and the potential violation of applicable laws, the front DVD or TV (sold separately) feature should never be used while the vehicle is being driven. Also, rear displays should not be in a location where they are visibly distracting to the driver. ! In some countries or states the viewing of images on a display inside a vehicle even by persons other than the driver may be illegal. Where such regulations apply, they must be obeyed and this unit's DVD features should not be used.**

When you attempt to watch a video image while driving, the warning Viewing of front seat video source while driving is strictly prohibited, will appear on the front display. 4 En Section Precautions To watch a video image on the front display, park your vehicle in a safe place and apply the parking brake. 01 To avoid battery exhaustion Keep the vehicle engine running when using this unit to avoid draining the battery power. ! When no power is supplied to this unit, such as when the vehicle battery is being replaced, the microcomputer of this unit returns to its initial condition. We recommend that you transcribe the audio adjustment data. Precautions When using a display connected to V OUT Passengers in the rear seat can also watch DVDs or the TV if you connect this unit to a display using the V OUT. **WARNING NEVER install the rear display in a location where the driver can watch a DVD or TV while driving. WARNING Do not use with vehicles that do not feature an ACC position. When using the rear view camera With an optional rear view camera, this unit can be used as an aid to keep an eye on trailers, or when backing into a tight parking spot.**

**WARNING ! SCREEN IMAGE MAY APPEAR REVERSED. ! USE INPUT ONLY FOR REVERSE OR MIRROR IMAGE REAR VIEW CAMERA. OTHER USE MAY RESULT IN INJURY OR DAMAGE. CAUTION ! The rear view camera function is to be used as an aid to keep an eye on trailers, or while backing up.**

Do not use for entertainment purposes. ! Please note that the edges of the rear view camera images may differ slightly according to whether full screen images are displayed when backing up, and whether the images are used for checking the rear when the vehicle is moving forward. En 5 Section 02 Before You Start About this unit **CAUTION: USE OF CONTROL OR ADJUSTMENT OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. CAUTION: THE USE OF OPTICAL INSTRUMENTS WITH THIS PRODUCT WILL INCREASE EYE HAZARD.** About this manual This unit features a number of sophisticated functions ensuring superior reception and operation. All the functions have been designed for the easiest possible use, but many are not self-explanatory.

This operation manual will help you benefit fully from this unit's potential and to maximize your listening enjoyment. We recommend that you familiarize yourself with the functions and their operation by reading through the manual before you begin using this unit. **CAUTION ! Do not allow this unit to come into contact with liquids. Electrical shock could result. Also, damage to this unit, smoke, and overheating could result from contact with liquids.**

**! Keep this manual handy for future reference. ! Always keep the volume low enough to hear outside sounds. ! Avoid exposure to moisture. ! If the battery is disconnected or discharged, any preset memory will be erased. In case of trouble Should this product fail to operate properly, please contact your dealer or nearest authorized Pioneer Service Station.**

Visit our website Visit us at the following site: <http://pioneer.jp/group/index-e.html> ! We offer the latest information about Pioneer Corporation on our website. DVD video disc region numbers Only DVD video discs with compatible region numbers can be played on this player. You can find the region number of the player on the bottom of this unit and in this manual (refer to Specifications on page 92). Resetting the microprocessor By pressing RESET, you can reset the microprocessor to its initial settings without changing the bookmark information. The microprocessor must be reset in the following situations: ! Before using this unit for the first time after installation ! If the unit fails to operate properly ! When strange or incorrect messages appear on the display 1 Turn the ignition switch OFF. Operating environment This unit should be used within the temperature ranges shown below. Operating temperature range: -10 °C to +60 °C EN300328 ETC test temperature: -20 °C and +55 °C 6 En Section Before You Start 2 Press RESET with a pen tip or other pointed instrument. Important Failure to connect the red lead (ACC) of this unit to a terminal coupled with ignition switch on/off operations may lead to battery drain.

02 Before You Start RESET button Use and care of the remote control Installing the battery Slide the tray on the back of the remote control out and insert the battery with the plus (+) and minus (-) poles aligned properly.



**[You're reading an excerpt. Click here to read official PIONEER AVH-P4250DVD-AVH-P3250DVD-AVH-P3250BT user guide](http://yourpdfguides.com/dref/3008540)**  
<http://yourpdfguides.com/dref/3008540>

*! When using for the first time, pull out the film protruding from the tray. (AVH-P4250DVD) RESET button (AVH-P3250DVD/AVHP3250BT) Note Switch your engine ON or set the ignition switch to ACC ON before pressing RESET in the following situations: ! After completing connections ! When erasing all stored settings ! When resetting the unit to its initial (factory) settings WARNING Keep the battery out of the reach of children. Should the battery be swallowed, consult a doctor immediately. CAUTION ! Use one CR2025 (3 V) lithium battery. ! Remove the battery if the remote control is not used for a month or longer. ! There is a danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent type. ! Do not handle the battery with metallic tools. ! Do not store thee.*

*! Radio Radio ! TV Television ! AV AV input ! Disc Built-in DVD player ! USB/iPod USB/iPod ! SD SD memory card ! EXT1 External unit 1 ! EXT2 External unit 2 ! AUX AUX ! TEL/Audio Bluetooth telephone/audio (Function of AVH-P4250DVD/AVH-P3250DVD) ! When the source icon is not displayed, it can be displayed by touching the screen. ! While operating the menu, you cannot select a source by touching the source icon. Adjusting the volume 1 Press +/- (VOLUME/VOL) to adjust the volume. 12:45 PM Basic Operations 3 Radio Disc iPod SD 4 Rear 5 Rear View 6 Front SD AUX 1 Touch panel keys 1 Displaying the source menu. Notes 2 Wed 28 may 12:45 PM Switching to clock adjustment display.*

*Refer to Setting the clock on page 14. Source icon Selecting a favorite source. When the source icon is not displayed, it can be displayed by touching the screen. Switching the output source for the rear monitor. Refer to Setting rear monitor output on page 72.*

*Switching the rear view image on or off. Turning the unit off. 3 Radio 4 Rear Front Rear View 5 6 Turning the unit on using the buttons 1 Press SRC/OFF to turn the unit on. Turning the unit off using the buttons 1 Press SRC/OFF and hold until the unit turns off. ! In this manual, iPod and iPhone will be referred to as "iPod". ! The USB/iPod icon will change as follows: -- USB is displayed when a USB storage device is connected. -- iPod is displayed when an iPod is connected. -- USB/iPod is displayed when no device is connected. ! When appropriately set up, the image from the rear view camera can be displayed automatically. For details, refer to Setting the rear view camera (back up camera) on page 66.*

*! An external unit refers to a Pioneer product, such as those which will be available in the future. Although incompatible as a source, the basic functions of up to two external units can be controlled with this unit. When two external units are connected, the external units are automatically allocated to external unit 1 or external unit 2. En 11 Section 04 Basic Operations Operating the scroll bar and the scrubber bar 1 Audio Fader/Balance Graphic EQ Auto EQ Sonic Center Control Loudness Subwoofer Off 01:45 -02:45 :45 45 Activating the touch panel keys 1 Wed 28 may 1 12:45 PM F/R 0 L/R 0 Super Bass On L/R:0 8 12 01 01 01 L+R Abcdeabcdeabcdeabcdeab 21 Wed 28 may 1 2 1 Return 12:45 PM 01 01 01 L+R Abcdeabcdeabcdeabcdeab 3 1 Touch panel keys Perform various operations by touching the panel. 2 Open/close keys Control the touch panel key area by touching these keys. Turning the display to simplified display. Returning to the normal display by touching the screen when playing moving images. Returning to the normal display by touching same icon when playing audio. Viewing the hidden touch panel keys. Shorten the touch panel area.*

*8 12 01:45 -02:45 2 1 Scroll icon Appears when selectable items are hidden. 2 Scrubber bar Appears when the playback point can be specified or set by dragging. Viewing the hidden items 1 Touch the scroll icon or drag the scrubber bar to view any hidden items. Specifying the playback point 1 Drag the scrubber bar on the screen. (Not available when the scrubber bar is grayed out.*

*) 1 2 3 12 En Section Basic Operations Common operations for menu settings/lists (AVH-P3250BT only) Starting the Bluetooth telephone menu. Refer to Introduction of Bluetooth telephone operations on page 24. Displaying the list menu. Starting the search function. Displaying the menu.*

*Refer to Introduction of menu operations on page 45. Displaying still images as a slide show when listening to another source. Viewing slide shows Refer to Introduction of still image playback operations on page 22. Returning to the previous display Returning to the previous list/category (the folder/category one level higher) 04 2 Adjust the LCD panel to an easily viewable angle. Laying the panel down. Returning the panel to the upright position. Basic Operations # As the set angle is saved, the LCD panel will automatically be adjusted to the same position the next time the LCD panel is opened. Ejecting a disc (AVH-P4250DVD) 1 Press h(eject) to display the ejecting menu. 2 Eject a disc Ejecting a disc ! Press and hold MENU to display Picture Adjustment. Refer to Changing the picture adjustment on page 72.*

*Ejecting a disc Adjusting the LCD panel angle (Function of AVH-P4250DVD) (AVH-P3250DVD/AVH-P3250BT) % Press h (eject). CAUTION Keep hands and fingers clear of the unit when opening, closing, or adjusting the LCD panel. Be especially cautious of children's hands and fingers. Ejecting an SD (AVH-P4250DVD) 1 Press h(eject) to display the ejecting menu. 2 Eject an SD Ejecting an SD. 1 Press h(eject) to display the ejecting menu. 3 Press an SD to eject. En 13 Section 04 Basic Operations Ejecting an SD (AVH-P3250DVD/AVH-P3250BT) % Press an SD to eject. Setting the clock 1 Switch to Clock Adjustment display. Refer to Basic Operations on page 11.*

*2 Select the item to set. 3 Touch a or b to set the correct date and time. 14 En Section Tuner Introduction of tuner operations 1 Radio Local 05 Note 2 Wed 28 may 3 12:45 PM Listening AM radio while an iPod is charged from this unit may generate noise. In this case, disconnect the iPod from this unit. 87. 50 MHz P.P.CH 2 Band: Tuner FM1 87.50 MHz 4 1 Touch panel keys 5 1 Turning local seek tuning on and off. Refer to Tuning in to strong signals on page 30. Switching the equalizer curves.*

*Refer to Using the equalizer on page 46. Touch and hold for more than two seconds to turn the auto-equalizer on or off. Refer to Using the autoequalizer on page 47. Displaying the preset channel list. Refer to Storing and recalling stations on page 30. Refer to Storing the strongest stations on page 30. Refer to Storing and recalling stations on page 30. 2 3 4 Band: Selecting a band (FM1, FM2, FM3 for FM or AM). Recalling radio station frequencies assigned to preset tuning keys.*



**[You're reading an excerpt. Click here to read official PIONEER AVH-P4250DVD-AVH-P3250DVD-AVH-P3250BT user guide](http://yourpdfguides.com/dref/3008540)**  
<http://yourpdfguides.com/dref/3008540>

Refer to Storing and recalling stations on page 30.

5 Manual tuning (step by step) using the buttons 1 Press c or d (TRACK/SEEK). Seek tuning using the buttons 1 Press and hold c or d (TRACK/SEEK). En 15 Section 06 Playing moving images Introduction of video playback operations You can view DVD/DVD-R/DVD-RW/CD/CD-R/ CD-RW/USB/SD/iPod. you can enjoy the video contents of the iPod as an iPod source. ! (AVH-P3250DVD/AVH-P3250BT) If an iPod with video capabilities is connected to this unit using an interface cable such as the CD-IU50V (sold separately), you can enjoy the video contents of the iPod as an iPod source. 1 Touch panel keys 1 -02:45 45 Wed 28 may 12:45 PM 01 01 01 L+R Abcdeabcdeabcdeabcdeab 8 12 Selecting the repeat range. Refer to Repeating playback on page 31. During playback, touch the point at which you want to resume playback the next time the disc is loaded. Refer to Resume playback (Bookmark) on page 33. Changing the screen mode.

Refer to Changing the wide screen mode on page 37. Switching the equalizer curves. Refer to Using the equalizer on page 46. Touch and hold for more than two seconds to turn the auto-equalizer on or off. Refer to Using the autoequalizer on page 47.

Switching between audio languages during playback. Refer to Changing audio language during playback (Multiaudio) on page 34. Switching between subtitle languages during playback. Refer to Changing the subtitle language during playback (Multi-subtitle) on page 34. Switching among viewing angles during playback.

Refer to Changing the viewing angle during playback (Multi-angle) on page 34. 01:45 Return 2 DVD video 3 Return Video CD 4 iPod S.Rtrv ALL Songs g Wed 28 may 12:45 PM Abcdeabcdeabcdeabcdeab Abcdeabcdeabcdeabcdeab Abcdeabcdeabcdeabcdeab 2067/12345 5 -02:45 01:45 iPod video 01:45 -02:45 6 When playing a disc containing a mixture of various media file types 7 ! (AVH-P4250DVD) If an iPod with video capabilities is connected to this unit using an interface cable such as the CD-IU200V (sold separately), 16 En Section Playing moving images Switching the audio output, when playing video discs recorded with LPCM audio. Refer to Selecting audio output on page 35. Switching between stereo and monaural audio output, when playing Video CD discs. Starting the search function. Refer to Searching for the part you want to play on page 33. Refer to Selecting files from the file name list on page 35. Displaying iPod menus. Refer to Playing videos from your iPod on page 32 and Browsing for a video/music on the iPod on page 32.

Returning to normal playback during paused, slow motion, or frame-by-frame playback. j Pausing playback Displaying the DVD menu during DVD playback. Refer to Operating the DVD menu on page 30. Returning to the top menu during DVD playback. Stopping playback. Stopping playback at the point set in Resume playback. Touch one more time to stop playback completely. Refer to Resume playback (Bookmark) on page 33. Displaying arrow keys to operate the DVD menu. Refer to Using the arrow keys on page 30.

l Moving ahead one frame at a time during playback. Refer to Frame-by-frame playback on page 33. Touch and hold for more than two seconds to slow down playback speed. Speeding up the playback speed in four steps during slow motion playback on DVD video/Video CD. Speeding down the playback speed in four steps, during slow motion playback on Video CD.

Returning to the specified scene to which the DVD currently being played has been preprogrammed to return. Refer to Return to the specified scene on page 34. Playing the video on your iPod in a random order. Refer to Random play (shuffle) on page 31. Switching the Advanced sound retriever function setting when playing a video on your iPod.

Refer to Using advanced sound retriever on page 36. Conducting operation from your iPod and listening to it using your car's speaker's. Refer to Operating this unit's iPod function from your iPod on page 31. Switching between media file types to play on DVD/CD/ USB/SD. Refer to Switching the media file type on page 30. 06 8 g Playing moving images h 9 i Return a b k c d m e f Skipping to another title. Selecting a folder during DivX file playback. En 17 Section 06 Playing moving images Playing back videos 1 Insert the disc into the disc loading slot with the label side up. Playback will automatically start. ! If you are playing a DVD or Video CD, a menu may appear.

Refer to Operating the DVD menu on page 30 and PBC playback on page 35. ! When the automatic playback function is on, the unit will skip the DVD menu and automatically start playback from the first chapter of the first title. Refer to Automatic playback of DVDs on page 62. 1 If a disc has already been inserted, press SRC/ OFF or touch the source icon to select the source. ! While an iPod is connected to this unit, PIONEER, Accessory Attached or (check mark) is displayed on the iPod. ! When the source icon is not displayed, it can be displayed by touching the screen. ! Disconnect headphones from the iPod before connecting to this unit. ! Depending on the iPod model and the amount of data stored in the iPod, it may take some time for playback to begin. ! Use the touch panel keys to select the iPod after connecting it to this unit. ! No Device is displayed when disconnecting the iPod.

l If a message is displayed after loading a disc containing DivX VOD content, touch Play. Refer to Playing DivX VOD content on page 36. Ejecting a disc 1 Refer to Ejecting a disc on page 13 or Ejecting an SD on page 13. Selecting a chapter using the buttons 1 Press c or d (TRACK/SEEK). Fast forwarding or reversing using the buttons 1 Press and hold c or d (TRACK/SEEK).

! Fast forward/fast rewind may not always be possible on some discs. In such cases, normal playback will automatically resume. ! If the bookmark function is on, DVD playback resumes from the selected point. For more details, refer to Resume playback (Bookmark) on page 33. ! Some operations may not be available while watching a DVD due to the programming of the disc.

In such cases, the icon appears on the screen. ! To ensure proper operation, connect the dock connector cable from the iPod directly to this unit. ! If the ignition switch is set to ACC or ON, the iPod battery will be charged while connected. However, the iPod battery is not charged when you select an SD as the source. ! While the iPod is connected to this unit, the iPod cannot be turned on or off. However, the iPod can be turned on or off when you select an SD as the source. Notes ! This DVD player can play back a DivX file recorded on CD-R/RW or DVD-R/RW. (Please see the following section for files that can be played back. Refer to page 85.) ! Do not insert anything other than a DVD (-R/RW) or CD (-R/-RW) into the disc loading slot.

18 En Section Playing audio Introduction of sound playback operations You can listen to DVD-R/DVD-RW/CD/CD-R/ CD-RW/USB/SD/iPod sound files.



[You're reading an excerpt. Click here to read official PIONEER AVH-P4250DVD-AVH-P3250DVD-AVH-P3250BT user guide](http://yourpdfguides.com/dref/3008540)  
<http://yourpdfguides.com/dref/3008540>

4 Switching the equalizer curves. Refer to Using the equalizer on page 46. Touch and hold for more than two seconds to turn the auto-equalizer on or off. Refer to Using the autoequalizer on page 47. Displaying a list of track titles/file names to select songs on a CD. Refer to Selecting tracks from the track title list on page 35. Displaying the file name list to select the files. Refer to Selecting files from the file name list on page 35. Displaying iPod menus. Refer to Browsing for a video/music on the iPod on page 32. 07 12 ROM ALL Songs g 34 S.Rtrv Wed 28 may 5 12:45 PM Abcdeabcdeabcdeabcdeab Abcdeabcdeabcdeabcdeab Abcdeabcdeabcdeabcdeab 87 125 Playing audio 01:45 -02:45 6 CD 7 8 9 5 5 f iPod 1 a b 3 4 i S.Rtrv ALL Songs Wed 28 may 12:45 PM Abcdeabcdeabcdeabcdeab Abcdeabcdeabcdeabcdeab Abcdeabcdeabcdeabcdeab 2067/12345 6 01:45 -02:45 Pausing and starting playback 6 iPod audio h g cde 7 Switching the text information to display on this unit when playing MP3/ WMA/AAC files. You can control an iPod with this unit by using a cable such as the CD-IU50 (sold separately).

1 Touch panel keys Selecting the repeat range. Refer to Repeating playback on page 31. Playing songs in random order. Refer to Random play (shuffle) on page 31. Switching the Advanced sound retriever function setting when playing audio. Refer to Using advanced sound retriever on page 36. 8 Selecting a folder. 1 2 9 Switching between media file types on a DVD/CD/USB/SD. Refer to Switching the media file type on page 30. Playing songs on the iPod in random order. Refer to Random play (shuffle) on page 31. 3 a En 19 Section 07 Playing audio Changing the speed of audiobook playback on the iPod. Refer to Changing audiobook speed on page 36. Switching to Link Search mode to play songs related to the currently playing song on the iPod. Refer to Displaying lists related to the currently playing song (Link Search) on page 36.

Playing all songs on the iPod in random order. Refer to Playing all songs in random order (shuffle all) on page 31. Conducting operation from your iPod and listening to it using your car's speaker's. Refer to Operating this unit's iPod function from your iPod on page 31. Playback sound 1 Insert the disc into the disc loading slot with the label side up. Playback will automatically start. 1 If a disc has already been inserted, press SRC/ OFF or touch the source icon to select the source. ! While an iPod is connected to this unit, PIONEER, Accessory Attached or (check mark) is displayed on the iPod. ! When the source icon is not displayed, it can be displayed by touching the screen. ! Disconnect headphones from the iPod before connecting to this unit.

! Depending on the iPod model and the amount of data stored in the iPod, it may take some time for playback to begin. ! Use the touch panel keys to select the iPod after connecting it to this unit. ! No Device is displayed when disconnecting the iPod. Ejecting a disc 1 Refer to Ejecting a disc on page 13 or Ejecting an SD on page 13. Selecting a track using the buttons 1 Press c or d (TRACK/SEEK).

Fast forwarding or reversing using the buttons 1 Press and hold c or d (TRACK/SEEK). b c d e 2 Text information Displaying the Songs list on the iPod. Refer to Searching for a video/music by category on page 32. Displaying the Artists list on the iPod. Refer to Searching for a video/music by category on page 32. Displaying the Albums list on the iPod. Refer to Searching for a video/music by category on page 32. f Notes ! When playing back files recorded as VBR (variable bit rate) files, the play time will not be correctly displayed if fast forward or reverse operations are used. ! To ensure proper operation, connect the dock connector cable from the iPod directly to this unit. ! If the ignition switch is set to ACC or ON, the iPod battery will be charged while connected. However, the iPod battery is not charged when you select an SD as the source. ! While the iPod is connected to this unit, the iPod cannot be turned on or off. However, the iPod can be turned on or off when you select an SD as the source. ! If the characters recorded on the disc are not compatible with this unit, those characters will not be displayed. g h 3 Artwork display Starting Album Link Search on your iPod when you touch the artwork display.

Refer to Displaying lists related to the currently playing song (Link Search) on page 36. i 20 En Section Playing audio ! Text information may not be correctly displayed depending on the recorded environment. ! USB storage device that can be charged via USB will be recharged when plugged in and the ignition switch is set to ACC or ON. However, the USB storage device that can be charged via USB will not be recharged when you select an SD as the source. ! Disconnect the USB portable audio player/ USB memory when you are done using it. ! When you select Clock or Speana on Selecting the background display on page 70, the artwork is not displayed. 07 En 21 Playing audio Section 08 Playing still images Introduction of still image playback operations You can view still images saved in CD-R/CDRW/USB/SD. Displaying the file name list to select the files. Refer to Selecting files from the file name list on page 35. 4 123 Photo Wed 28 may 4 5 12:45 PM Off Full Starting or pausing the slideshow. Abcdeabcdeabcde Abcdeabcdeabcde 6 2 2 Capture Rotating the displayed picture 90° clockwise Capturing an image in JPEG files. Refer to Capture an image in JPEG files on page 37. 5 CD 01:45 67 8 7 -02:45 8 Selecting a folder. When playing a disc containing a mixture of various media file types When loading a CD-R/RW/USB/SD containing JPEG picture files, this unit starts a slideshow from the first folder/picture on the disc/device. The player displays the pictures in each folder in alphabetical order.

The table below shows the controls for viewing a slideshow. 1 Touch panel keys Touch any of the following touch panel keys to select the function to be adjusted. 1 Selecting the repeat range. Refer to Repeating playback on page 31. Playing files in a random order. Refer to Random play (shuffle) on page 31. Changing the screen mode Refer to Changing the wide screen mode on page 37. 9 Switching between media file types. Refer to Switching the media file type on page 30. Playing still images 1 Insert the disc into the disc loading slot with the label side up. Playback will automatically start. 1 If a disc has already been inserted, press SRC/ OFF or touch the source icon to select the source. ! When the source icon is not displayed, it can be displayed by touching the screen. Ejecting a disc 1 Refer to Ejecting a disc on page 13 or Ejecting an SD on page 13. Selecting a file using the buttons 1 Press c or d (TRACK/SEEK).

Fast file searching 1 Press and hold c or d (TRACK/SEEK).



**[You're reading an excerpt. Click here to read official PIONEER AVH-P4250DVD-AVH-P3250DVD-AVH-P3250BT user guide](http://yourpdfguides.com/dref/3008540)**  
<http://yourpdfguides.com/dref/3008540>

*! You can search 10 JPEG files at a time. 2 3 22 En Section Playing still images Notes ! This unit can play back a JPEG file recorded on CD-R/RW/ROM/SD/USB storage device. (Please see the following section for files that can be played back. Refer to page 85.) ! Files are played back in file number order and folders are skipped if they contain no files. (If folder 01 (ROOT) contains no files, playback commences with folder 02.) 4 Selecting a folder. 08 5 Selecting a file. Introduction of still image playback as a slideshow operations You can view still images saved in CD-R/CDRW/USB/SD as a slideshow when listening to another source.*

*6 Starting or pausing the slideshow. Playing still images 7 Rotating the displayed picture 90° clockwise Capturing an image in JPEG files. Refer to Capture an image in JPEG files on page 37. 123 Off Full 4 5 8 1 Start slideshow when listening to another source. Refer to Common operations for menu settings/lists on page 13.*

*Capture 6 78 Displaying still images as a slide show. The table below shows the controls for viewing a slideshow. 1 Touch panel keys Touch any of the following touch panel keys to select the function to be adjusted. 1 Selecting the repeat range. Refer to Repeating playback on page 31. Playing files in a random order. Refer to Random play (shuffle) on page 31. Changing the screen mode Refer to Changing the wide screen mode on page 37. 2 Select the device containing the files that you want to display. ! Disc Built-in DVD player ! USB USB ! SD SD memory card # To cancel searching, touch Cancel. Note When the USB or SD source is selected, this unit cannot view still images on USB/SD as a slideshow. 2 3 En 23 Section 09 Bluetooth Telephone Introduction of Bluetooth telephone operations 1 Radio Wed 28 may ! Be sure to park your vehicle in a safe place and apply the parking brake when performing this operation. 1 Incoming call notice Indicates that an incoming call has been received and has not been checked yet. 12:45 PM 1 ABCDEHGHI 01 012345678901 ! Not displayed for calls made when your cellular phone is disconnected from this unit. 2 Touch panel keys Switching the mode to enter the phone number directly.*

*Refer to Making a call by entering phone number on page 40. Switching to the call history list. Refer to Using the missed, received and dialed call lists on page 39. Switching to the phone book mode. Refer to Calling a number in the phone book on page 38. Refer to Selecting a number by alphabet search mode on page 38. Turning automatic answering on or off. Refer to Setting automatic answering on page 39. Turning the ring tone for incoming calls on or off. Refer to Switching the ring tone on page 40.*

*Displaying the preset dial screen. Refer to Using the preset dial lists on page 40. Displaying the Bluetooth connection menu. Refer to the instructions from page 41 to page 43. Turning private mode on or off. Refer to Setting the private mode on page 41. P.CH 2 Off Band: On FM1 87.50 MHz 457 1 2 63 Telephone standby display 1 Wed 28 may 12:45 PM 1 2 1 4 7 2 5 8 0 3 6 9 # C ABCDEHGHI 01 012345678901 Off \* + 3 8 a 9b When switching to the entering phone number mode 4 You can use Bluetooth telephone (AVH-P3250BT only). Important ! Since this unit is on standby to connect with your cellular phone via Bluetooth wireless technology, using it without the engine running can drain the battery power.*

*! Advanced operations that require attention such as dialing numbers on the monitor, etc., are prohibited while driving. Park your vehicle in a safe place when using these advanced operations. ! Operations available may be limited depending on the cellular phone connected to this unit. 5 6 7 8 24 En Section Bluetooth Telephone Adjusting the other party's listening volume. Refer to Adjusting the other party's listening volume on page 39. Accepting an incoming call. Making a phone call, when selecting a phone number. Switching between callers on hold. Ending a call.*

*Rejecting an incoming call. Canceling call waiting. 09 9 a b Accepting an incoming call Ending a call 1 Press MUTE. Notes ! Private mode can only be operated while you are talking on the phone. ! To end the call, both you and the other caller must hang up your phones. Setting up for hands-free phoning Before you can use the hands-free phoning function you must set up the unit for use with your cellular phone. This entails establishing a Bluetooth wireless connection between this unit and your phone, registering your phone with this unit, and adjusting the volume level. 1 Connection First, you need to connect a Bluetooth telephone to this unit. For detailed instructions on connecting your phone to this unit via Bluetooth wireless technology, see following section.*

*Using a Bluetooth device to pair on page 41 and Pairing from this unit on page 41.*

*! You may also need to enter a PIN code into this unit. If your telephone requires a PIN code to establish a connection, look for the code on the telephone or in its accompanying documentation. Refer to Entering PIN code for Bluetooth wireless connection on page 43. 2 Volume adjustment Adjust the earpiece volume of your cellular phone to your preference. The unit will record the adjusted volume level as the default setting.*

*! The volume of the caller's voice and ring tone may vary depending on the type of cellular phone. ! If there is a large volume difference between the ring tone and caller's voice, the overall volume level may become unstable. ! Make sure to adjust the volume to a proper level before disconnecting the cellular phone from the unit. If the volume is muted (zero level) on your cellular phone, the volume level of your cellular phone remains muted even after the cellular phone is disconnected. En 25 Bluetooth Telephone Section 10 TV tuner Introduction of TV tuner operations 1 TV Manual tuning (step by step) using the buttons 1 Press c or d (TRACK/SEEK).*

*Seek tuning using the buttons 1 Press and hold c or d (TRACK/SEEK). 2 Wed 28 may 3 12:45 PM Notes ! Refer to Setting the TV signal on page 66 to set the TV signal. ! Refer to Selecting the area group on page 67 to select the area group. Band: TV1 CH12 P. CH12 P 4 5 You can use this unit to control a TV tuner, such as the GEX-P5700TVP (sold separately). For details concerning operation, refer to the TV tuner's operation manual. This section provides information on TV operations with this unit, which differs from that described in the TV tuner's operation manual. 1 Touch panel keys 1 Changing the screen mode. Refer to Changing the wide screen mode on page 37. Switching the equalizer curves.*

*Refer to Using the equalizer on page 46. Touch and hold for more than two seconds to turn the auto-equalizer on or off. Refer to Using the autoequalizer on page 47.*



[You're reading an excerpt. Click here to read official PIONEER AVH-P4250DVD-AVH-P3250DVD-AVH-P3250BT user guide](http://yourpdfguides.com/dref/3008540)  
<http://yourpdfguides.com/dref/3008540>

Displaying the preset screen. Refer to Storing and recalling stations on page 30. Refer to Storing the strongest stations on page 30. 2 3 4 Band: Selecting a band. 5 Recalling radio station frequencies assigned to preset tuning keys. Refer to Storing and recalling stations on page 30. 26 En Section Using Bluetooth wireless technology Introduction of Bluetooth telephone operations 2 TEL Abcdeabc 11 Switching the equalizer curves.

Refer to Using the equalizer on page 46. Touch and hold for more than two seconds to turn the auto-equalizer on or off. Refer to Using the autoequalizer on page 47. Accepting an incoming call. Making a phone call, when selecting a phone number from the dialed and received call history.

Ending a call. Rejecting an incoming call. Canceling call waiting. Displaying the received/ missed call history. Selecting a phone number from the call history.

Refer to Using the missed, received and dialed call lists on page 39. Displaying the dialed call history. Selecting a phone number from the call history. Refer to Using the missed, received and dialed call lists on page 39. Scrolling the phone number. Touch and hold for more than two seconds to activate connection mode on this unit and establish a Bluetooth wireless connection from your phone. Refer to Using a cellular phone to initiate a connection on page 43.

Registering connected cellular phone to take full advantage of the features available with Bluetooth wireless technology. Refer to Registering a connected cellular phone on page 43. Touch and hold for more than two seconds to terminate the Bluetooth wireless connection.

3 1 Wed 28 may 1 12:45 PM 2 T Text Scroll REG 456789a 3 When you connect a Bluetooth adapter (e.g. CD-BTB200)(sold separately) to AVHP4250DVD/AVH-P3250DVD, you can control Bluetooth telephone. Important ! In some countries, CD-BTB200 is not sold on the market. ! Since this unit is on standby to connect with your cellular phone via Bluetooth wireless technology, using it without the engine running can drain the battery power. !

Advanced operations that require attention such as dialing numbers on the monitor, using the phone book, etc., are prohibited while driving. Park your vehicle in a safe place when using these advanced operations. ! Operations available may be limited depending on the cellular phone connected to this unit. 1

Touch panel keys 4 Using Bluetooth wireless technology 5 6 Text Scroll 7 En 27 Section 11 Using Bluetooth wireless technology Turning automatic answering on or off.

Refer to Setting automatic answering on page 39. Touch and hold for more than two seconds to connect to a Bluetooth telephone automatically. Refer to Connecting to a Bluetooth device automatically on page 44. Turning the ring tone for incoming calls on or off. Refer to Switching the ring tone on page 40. Touch and hold for more than two seconds to display the BD address of your cellular phone and the Bluetooth adapter. Refer to Displaying BD (Bluetooth Device) address on page 44. Switching between Bluetooth telephone and Bluetooth audio. Touch and hold for more than two seconds to start voice recognition. Refer to Voice recognition on page 44.

8 9 1 Connection First, you need to connect a Bluetooth telephone to this unit. For detailed instructions on connecting your phone to this unit via Bluetooth wireless technology, see following section. Using a cellular phone to initiate a connection on page 43 and Registering a connected cellular phone on page 43.

2 Volume adjustment Adjust the earpiece volume of your cellular phone to your preference. The unit will record the adjusted volume level as the default setting. ! The volume of the caller's voice and ring tone may vary depending on the type of cellular phone. ! If there is a large volume difference between the ring tone and caller's voice, the overall volume level may become unstable. ! Make sure to adjust the volume to a proper level before disconnecting the cellular phone from the unit. If the volume is muted (zero level) on your cellular phone, the volume level of your cellular phone remains muted even after the cellular phone is disconnected. a Bluetooth audio operations When you connect a Bluetooth adapter (e.

g. CD-BTB200)(sold separately) to AVHP4250DVD/AVH-P3250DVD, you can control Bluetooth audio. Important ! Depending on the Bluetooth audio player connected to this unit, the available operations will be limited to the following two levels: -- A2DP profile (Advanced Audio Distribution Profile): You can only playback songs on your audio player. -- AVRCP profile (Audio/Video Remote Control Profile): You can perform playback, pause playback, select songs, etc. Setting up for hands-free phoning Before you can use the hands-free phoning function you must set up the unit for use with your cellular phone. This entails establishing a Bluetooth wireless connection between this unit and your phone, registering your phone with this unit, and adjusting the volume level. 28 En Section Using Bluetooth wireless technology ! Since there are a number of Bluetooth audio players available on the market, available operations will vary extensively. When operating your player with this unit, refer to the instruction manual that came with your Bluetooth audio player as well as this manual.

! Information related to a song (such as the elapsed playing time, song title, song index, etc.) cannot be displayed on this unit.

! As the signal from your cellular phone may cause noise, avoid using it when you are listening to songs on your Bluetooth audio player. ! When a call is in progress on the cellular phone connected to this unit via Bluetooth wireless technology, the sound of the Bluetooth audio player connected to this unit is muted. ! When the Bluetooth audio player is in use, you cannot connect to a Bluetooth telephone automatically. ! Playback continues even if you switch from your Bluetooth audio player to another source while listening to a song. 1 Touch panel keys Switching between Bluetooth telephone and Bluetooth audio.

Skipping back or forward to another track when Auto is set for the Auto/manual setting. Performing fast forward or rewind when Manual is set for the Auto/manual setting. Pausing a song. Touch and hold for more than two seconds to activate connection mode on this unit and establish a Bluetooth wireless connection from your player. Refer to Connecting a Bluetooth audio player on page 44.

Playback starts. Touch and hold for more than two seconds to terminate the Bluetooth wireless connection. 11 Setting the action for c and d icons. Auto Switching the equalizer curves. Refer to Using the equalizer on page 46. Touch and hold for more than two seconds to turn the auto-equalizer on or off. Refer to Using the auto-equalizer on page 47. Setting up for Bluetooth audio Before you can use the Bluetooth audio function you must set up the unit for use with your Bluetooth audio player.



[You're reading an excerpt. Click here to read official PIONEER AVH-P4250DVD-AVH-P3250DVD-AVH-P3250BT user guide](http://yourpdfguides.com/dref/3008540)  
<http://yourpdfguides.com/dref/3008540>

This entails establishing a Bluetooth wireless connection between this unit and your Bluetooth audio player, and pairing your Bluetooth audio player with this unit. 1 Connection First, you need to connect a Bluetooth audio to this unit.

For detailed instructions on connecting your Bluetooth audio to this unit via Bluetooth wireless technology, see Connecting a Bluetooth audio player on page 44. Using Bluetooth wireless technology F1 F2 En 29 Section 12 Detailed instructions Storing and recalling stations You can easily store up to six(for tuner)/12(for TV) stations for each band as presets. ! Six stations for each band can be stored in memory. 1 Display the preset screen. Refer to Introduction of tuner operations on page 15. Refer to Introduction of TV tuner operations on page 26. The preset screen appears in the display. 2 Touch and hold one of the preset tuning keys to store the selected frequency in the memory. The selected radio/TV station frequency has been stored in the memory. 3 Touch one of the preset tuning keys to select the desired station.

Tuning in to strong signals Local seek tuning lets you tune in to only those radio stations with sufficiently strong signals for good reception. --- FM: off --- AM: off --- The larger the setting number, the higher the signal level. The highest level setting allows reception of only the strongest stations; while lower settings let you receive progressively weaker stations. Switching the media file type When playing a disc containing a mixture of various media file types, such as DivX and MP3, you can switch between media file types to play. Audio data (CD-DA) and JPEG picture files on DVD-R/RW/ROM cannot be played back on this unit.

CD (audio data (CD-DA))--ROM-Audio (compressed audio)--DivX (DivX video files)-- JPEG (JPEG picture files) Storing the strongest stations BSM (best stations memory) automatically stores the six (for tuner)/12 (for TV) strongest stations in the order of their signal strength. Storing broadcast frequencies with BSM may replace broadcast frequencies you have saved using the preset tuning keys. 1 Display the preset screen. Refer to Introduction of tuner operations on page 15. Refer to Introduction of TV tuner operations on page 26.

The preset screen appears in the display. 2 Touch BSM/BSSM to turn BSM on. The six(for tuner)/12(for TV) strongest broadcast frequencies will be stored under preset tuning keys in order of their signal strength. # To cancel the storage process, touch Cancel. Operating the DVD menu (Function for DVD video) Some DVDs allow you to make a selection from the disc contents using a menu. Using the arrow keys 1 Display arrow keys to operate the DVD menu. Refer to Playing moving images on page 16. 30 En Section Detailed instructions 2 Select the desired menu item. Refer to Introduction of sound playback operations on page 19. 2 Operate the connected iPod to select a video/song and play.

Selecting the desired menu item. 12 Random play (shuffle) Videos/songs can be played back in random order. Starting playback from the selected menu item. Operating the DVD menu by directly touching the menu item. # When operating the DVD menu by directly touching the menu item, touch the icon to operate. Returning to the normal DVD video display. ! Songs Play back videos/songs in the selected list in random order. ! Albums Play back videos/songs from a randomly selected album in order. ! Folder Play back songs/tracks in the selected folder in random order. ! Disc Play back songs/tracks in the selected disc in random order.

! On Play back files in random order within the repeat range, Folder and Disc. ! Off Cancel random play. Detailed instructions Displaying arrow keys. Playing all songs in random order (shuffle all) (Function for iPod) This method plays all songs on the iPod randomly. # Ways to display the menu will differ depending on the disc.

# Depending on the contents of the DVD disc, this function may not work properly. In such cases, use the touch panel keys to operate the DVD menu. Repeating playback ! ! ! ! ! Disc Play through the current disc Chapter Repeat the current chapter Title Repeat the current title Track Repeat the current track File Repeat the current file Folder Repeat the current folder One Repeat just the current video/song/ track ! All Repeat all videos/songs in the selected list on the iPod Repeat all files Operating this unit's iPod function from your iPod ! While this function is in use, the iPod will not turn off even if the ignition key is turned off. Operate the iPod to turn off the power. ! When the control mode is set to iPod, the signal can be changed between PAL and NTSC from the iPod.

I Switch the control mode to iPod. Refer to Playing moving images on page 16. En 31 Section 12 Detailed instructions ! This function cannot be operated during Video CD playback featuring PBC (playback control). ! If you perform chapter search, fast forward/ reverse, frame-by-frame playback or slow motion playback, the repeat play will stop. ! When playing discs with compressed audio and audio data (CD-DA), playback is repeated within the type of data currently playing even if Disc is selected. ! If you select another folder during repeat play, the repeat play range changes to Disc. If you select USB or SD source, the repeat play range changes to All. ! If you perform track search or fast forward/ reverse during File, the repeat play range changes to Folder. ! If you perform track search or fast forward/ reverse during Chapter, the repeat play range changes to Title. ! If you perform track search or fast forward/ reverse during Track, the repeat play range changes to Disc.

! When Folder is selected, it is not possible to play back a subfolder of that folder. 2 Switch to iPod video mode. Video 3 Switching to iPod video mode. Play the video from the iPod. # If you want to switch to iPod music mode, touch the icon. Switching to iPod music mode. Music Browsing for a video/music on the iPod (Function for iPod) To make operating and searching easy, operations to control an iPod with this unit are designed to be as similar to the iPod as possible. ! Incompatible text saved on the iPod will not be displayed by the unit. Playing videos from your iPod (Function for iPod) Videos can be played on this unit if an iPod with video capabilities is connected. ! This unit can play back "Movies", "Music videos", "Video Podcast" and "TV show" which are downloaded from the iTunes store.

! Before you display the video screen, be sure to change the video setting on the iPod so that the iPod can output the video to an external device. 1 Display the iPod menus. Refer to Playing moving images on page 16. Searching for a video/music by category 1 Display the iPod menus. Refer to Playing moving images on page 16.



[You're reading an excerpt. Click here to read official PIONEER AVH-P4250DVD-AVH-P3250DVD-AVH-P3250BT user guide](http://yourpdfguides.com/dref/3008540)  
<http://yourpdfguides.com/dref/3008540>



Refer to Playing audio on page 19. 2 Touch one of the categories in which you want to search for a video/music. ! ! ! ! ! ! ! ! ! ! Video Playlists (video playlists) Movies (movies) Music Videos (music videos) Video Podcasts (video podcasts) TV Shows (TV shows) Playlists (playlists) Artists (artists) Albums (albums) Songs (songs) Podcasts (podcasts) Genres (genres) Composers (composers) Audiobooks (audiobooks) 32 En Section Detailed instructions 3 Touch the title of the list that you want to play. Repeat this operation until you find the desired video/music. 4 Start playback of the selected list.

Starting playback of the selected list. 12 By using the Bookmark function, you can resume playback from a selected scene the next time the disc is loaded. The selected scene will be bookmarked so that playback resumes from that point next time. ! To clear the bookmark on a disc, touch and hold the button during playback. ! The oldest bookmark is replaced by the new one. Searching the list by alphabet (Function for iPod) 1 Select a category. Refer to Searching for a video/music by category on the previous page. 2 Switch to alphabet search mode. Frame-by-frame playback (Function for DVD video/video CD/DivX file) Images during frame-by-frame playback may be unclear for some discs. Slow motion playback Switching to alphabet search mode.

Notes ! There is no sound during slow motion playback. ! Images during slow motion playback may be unclear for some discs. ! Reverse slow motion playback is not available. Alphabet search mode is displayed. 3 Touch the first letter of the title of the video/song you are looking for. While searching, touch panel key operation is not available. # To refine the search with a different letter, touch Cancel. Detailed instructions 4 Touch the title of the list that you want to play.

Repeat this operation until you find the desired song/video. 5 Start playback of the selected list.

Starting playback of the selected list. Searching for the part you want to play You can use the search function to find the part you want to play. For DVD videos, you can select Title (title), Chapter (chapter) or 10key (numeric keypad). For video CDs, you can select Track(track) or 10key(numeric keypad). !

Chapter search is not available when disc playback is stopped.

! This function cannot be operated during some DVD videos or Video CD playback featuring PBC (playback control). 1 Start the search function. Refer to Playing moving images on page 16. En Resume playback (Bookmark) (Function for DVD video) 33 Section 12 Detailed instructions 2 Touch the desired search option (e.g.

, Chapter). 3 Touch 0 to 9 to input the desired number. # To cancel the entered numbers, touch C. Changing the subtitle language during playback (Multi-subtitle) With DVDs/DivX files featuring multi-subtitle recordings, you can switch between subtitle languages during playback. Notes ! With some DVDs, switching between subtitle languages may only be possible using a menu display. ! You can also switch between subtitle languages using DVD setup menu. For details, refer to Setting the subtitle language on page 59. ! You will return to normal playback if you change the Subtitle during fast forward/fast rewind, pause or slow motion playback. 4 Start playback from the selected part. Registering the numbers and starting playback.

Note With discs featuring a menu, you can also use the DVD menu to make your selection. Refer to Playing moving images on page 16. Changing audio language during playback (Multi-audio) With DVDs/DivX files that provides audio playback in different languages and different audio systems (Dolby Digital, DTS, etc.), you can switch between languages/audio systems during playback. Notes ! With some DVDs, switching between languages/audio systems may only be possible using a menu display. ! You can also switch between languages/audio systems using DVD setup menu. For details, refer to Setting the audio language on page 59. ! Only digital output of DTS audio is possible. If the unit's optical digital outputs are not connected, select an audio setting other than DTS. ! Depending on the setting, the video may not be played back with the audio system used to record the DVD.

! You will return to normal playback if you change the Audio during fast forward/fast rewind, pause or slow motion playback. Changing the viewing angle during playback (Multi-angle) With DVDs featuring multi-angle (scenes shot from multiple angles) recordings, you can switch among viewing angles during playback. ! During playback of a scene shot from multiple angles, the angle icon is displayed. Use the DVD setup menu to turn the angle icon display on or off. For details, refer to Setting the multi-angle DVD display on page 60.

Note You will return to normal playback if you change the viewing angle during fast forward/fast rewind, pause or slow motion playback. Return to the specified scene (Function for DVD video) 34 En Section Detailed instructions This function cannot be used if a specified scene has not been preprogrammed on the DVD disc. Notes ! You can display the menu by touching Return during PBC playback. For details, refer to the instructions provided with the disc. ! PBC playback of a Video CD cannot be canceled.

! During playback of Video CDs featuring PBC (Playback Control), you cannot select the repeat play range or use the search function. 12 Selecting audio output When playing DVD video discs recorded with LPCM audio, you can switch the audio output. When playing video CDs, you can switch between stereo and monaural audio output. ! This function is not available when disc playback is stopped. ! If you select Linear PCM, you can operate this function when playing a disc recorded on a dual mono mode. (Refer to Setting for digital output on page 62.) ! ! ! L+R left and right Left left Right right Mix mixing left and right Selecting tracks from the track title list You can select tracks to playback using the track title list which is a list of the tracks recorded on a disc. 1 Display the track title list. Refer to Playing audio on page 19. 2 Touch your favorite track title.

Playback begins. You may not be able to select or use this function depending on the disc and the playback location. Detailed instructions PBC playback (Function for Video CDs) During playback of Video CDs featuring PBC (Playback Control), PBC ON is displayed. 1 Start the search function. Refer to Playing moving images on page 16. 2 Touch 10key to display the numeric keypad. 3 Touch 0 to 9 corresponding to a menu number. 4 Start playback from the selected part. Registering the numbers and starting playback. Selecting files from the file name list (Function for USB/SD/DivX) File name list is a list of file names (or folder names) from which you can select a file (or folder) to play back. 1 Display the file (or folder) name list. Refer to Playing audio on page 19.



[You're reading an excerpt. Click here to read official PIONEER AVH-P4250DVD-AVH-P3250DVD-AVH-P3250BT user guide](http://yourpdfguides.com/dref/3008540)  
<http://yourpdfguides.com/dref/3008540>

Refer to Introduction of still image playback operations on page 22. 2 Touch your favorite file (or folder) name. # When you have selected a folder, a list of the names of the files (or the folders) in it can be viewed.

Repeat this operation to select the desired file name. # If folder 01 (ROOT) contains no files, playback commences with folder 02. En 35 Section 12 3 Detailed instructions Start playback of the selected list. Starting playback of the selected list. 2 Touch one of the categories in which you want to play. ! Artist Displays an album list of the artist currently being played. ! Album Displays a song list from the album currently being played. ! Genre Displays an album list from the genre currently being played. # To cancel searching, touch Cancel. Using advanced sound retriever Automatically enhances compressed audio and restores rich sound. Off -- ! -- is more effective than . 3 Touch the title of the list that you want to play. 4 Start playback of the selected list. Starting playback of the selected list. Note When you use this unit with a multi-channel processor (DEQ-P7650) and switch the advanced , the volume sound retriever function to or will become slightly lower.

The volume will bethan it will for . Take come much lower for and care when you increase the volume for then switch to Off, because the volume will suddenly seem much louder. ! If no related albums/songs are found, Not Found is displayed. Playing DivX VOD content Some DivX VOD (video on demand) content may only be playable a fixed number of times. When you load a disc containing this type of content, the remaining number of times it can be played is shown on-screen. You can then decide whether or not to play the disc. ! If there is no limit to the number of times the DivX VOD content can be viewed, then you may load the disc into your player and play the content as often as you like, and no message will be displayed. ! You can confirm the number of times that the content can be played by checking the number displayed after Remaining Views. Important ! In order to play DivX VOD content on this unit, you first need to register the unit with your DivX VOD content provider. For details on your registration code, refer to Displaying the DivX VOD registration code on page 62.

Changing audiobook speed (Function for iPod) Playback at a speed faster than ! normal ! Playback at normal speed ! Playback at a speed slower than normal Displaying lists related to the currently playing song (Link Search) (Function for iPod) 1 Start Link Search. Refer to Introduction of sound playback operations on page 19. 36 En Section Detailed instructions ! DivX VOD content is protected by a DRM (Digital Rights Management) system. This restricts playback of content to specific, registered devices. 12 Changing the wide screen mode You can select a desired mode for enlarging a 4:3 picture to a 16:9 picture.

1 Display the screen mode. Refer to Introduction of video playback operations on page 16. Refer to Introduction of still image playback operations on page 22. Refer to Introduction of still image playback as a slideshow operations on page 23. 2 Touch the desired wide mode setting.

% If a message is displayed after loading a disc containing DivX VOD content, touch Play. Playback of the DivX VOD content will start. # To skip to the next file, touch Next Play. # If you do not want to play the DivX VOD content, touch Stop. Capture an image in JPEG files You can capture image data and use it as wallpaper. Images can be stored and recalled easily in this unit. ! Only one image can be stored on this unit. Old images are overwritten with the new ones. 1 Pause the slideshow when the desired image is displayed. Refer to Introduction of still image playback operations on page 22.

Refer to Introduction of still image playback as a slideshow operations on page 23. 2 Capture the image. Refer to Introduction of still image playback operations on page 22. Refer to Introduction of still image playback as a slideshow operations on page 23. 3 When Do you save this image? is displayed, touch Yes. While storing the image to this unit, Saving the image Don't switch off the battery. is displayed. When the process is finished, Image saved. is displayed. # To cancel the storage process, touch No.

Full (full screen) The 4:3 picture is enlarged in the horizontal direction only, giving you a 4:3 TV picture (normal picture) without any omissions. Just (just) The picture is enlarged slightly at the center and the amount of enlargement increases horizontally toward the edges of the screen, enabling you to enjoy a 4:3 picture without sensing any disparity even when viewing on a wide screen. Cinema (cinema) The picture is enlarged by the same proportion as Full or Zoom in the horizontal direction and by an intermediate proportion between Full and Zoom in the vertical direction; ideal for a cinemasized picture (wide screen picture) where captions lie outside the picture. Zoom (zoom) The 4:3 picture is enlarged in the same proportion both vertically and horizontally; ideal for a cinema sized picture (wide screen picture). Normal (normal) The 4:3 picture is displayed as it is, giving you no sense of disparity since its proportions are the same as that of the normal picture.

Notes ! You cannot operate this function while driving. En 37 Detailed instructions Section 12 Detailed instructions ! Different settings can be stored for each video source. ! When a video is viewed in a wide screen mode that does not match its original aspect ratio, it may appear different. ! Remember that using the wide mode feature of this system for commercial or public viewing purposes may constitute an infringement on the author's rights protected by the Copyright Law. ! The video image will appear coarser when viewed in Cinema or Zoom mode.

Note Depending on the cellular phone, the phone book may not be transferred automatically. In this case, operate your cellular phone to transfer the phone book. The visibility of this unit should be on. Refer to Switching visible unit on page 42. Selecting a number by alphabet search mode (Function of AVH-P3250BT) If a lot of numbers are registered in the phone book, you can search for the phone number by alphabet search mode. 1 Switch to phone book mode. Refer to Introduction of Bluetooth telephone operations on page 24. The phone book display appears. 2 Touch ABC to switch to alphabet search mode. 3 Touch the first letter of the entry you are looking for.

The Phone Book entries starting with that letter (e.g. "Ben", "Brian" and "Burt" when "B" is selected) will be displayed. # If you want to change the character to Russian, touch the icon. To return to English, touch the icon again. Changing the character to Russian. Calling a number in the phone book (Function of AVH-P3250BT) The phone book in your cellular phone will be transferred automatically when the phone is connected to this unit.



[You're reading an excerpt. Click here to read official PIONEER AVH-P4250DVD-AVH-P3250DVD-AVH-P3250BT user guide](http://yourpdfguides.com/dref/3008540)  
<http://yourpdfguides.com/dref/3008540>