



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for PIONEER AVH-X7700BT. You'll find the answers to all your questions on the PIONEER AVH-X7700BT in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual PIONEER AVH-X7700BT**  
**User guide PIONEER AVH-X7700BT**  
**Operating instructions PIONEER AVH-X7700BT**  
**Instructions for use PIONEER AVH-X7700BT**  
**Instruction manual PIONEER AVH-X7700BT**

**Pioneer**

English

**AVH-X7700BT**  
DVD RDS AV RECEIVER

Operation Manual



[You're reading an excerpt. Click here to read official PIONEER AVH-X7700BT user guide](http://yourpdfguides.com/dref/5793263)  
<http://yourpdfguides.com/dref/5793263>

**Manual abstract:**

There is a separate collection system for used electronic products in accordance with legislation that requires proper treatment, recovery and recycling.

Private households in the member states of the EU, in Switzerland and Norway may return their used electronic products free of charge to designated collection facilities or to a retailer (if you purchase a similar new one). For countries not mentioned above, please contact your local authorities for the correct method of disposal. By doing so you will ensure that your disposed product undergoes the necessary treatment, recovery and recycling and thus prevent potential negative effects on the environment and human health. CAUTION This product is a Class 1 laser product classified under the Safety of laser products, IEC 60825-1:2007, and contains a class 1M laser module. To ensure continued safety, do not remove any covers or attempt to gain access to the inside of the product. Refer all servicing to qualified personnel. CAUTION—CLASS 1M VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN, DO NOT VIEW DIRECTLY WITH OPTICAL INSTRUMENTS. When using a display connected to rear monitor output The video output terminal (rear monitor output) is for connection of a display to enable passengers in the rear seats to watch video images. WARNING NEVER install the rear display in a location that enables the driver to watch video images while driving.

4 Precaution To avoid battery exhaustion Be sure to run the vehicle engine while using this product. Using this product without running the engine can drain the battery. □ We offer the latest information about PIONEER CORPORATION on our website. □ Pioneer regularly provides software updates to further improve its products. Please check the support section of the Pioneer website for all available software updates.

□ Some of the settings and recorded contents will not be reset. The microprocessor must be reset under the following conditions: □ Prior to using this product for the first time after installation. □ If this product fails to operate properly. □ If there appears to be problems with the operation of the system. □ If your vehicle position is shown on the map with a significant positioning error.

WARNING Do not install this product in a vehicle that does not have an ACC wire or circuitry available. About this product □ This product does not work correctly in areas other than Europe. The RDS (Radio Data System) function operates only in areas with FM stations broadcasting RDS signals. The RDS-TMC service can also be used in the area where there is a station that broadcasts the RDS-TMC signal. □ The Pioneer CarStereo-Pass is for use only in Germany. Rear view camera With an optional rear view camera, you are able to use this product as an aid to keep an eye on trailers, or backing into a tight parking spot. □ SCREEN IMAGE MAY APPEAR REVERSED. □ USE INPUT ONLY FOR REVERSE OR MIRROR IMAGE REAR VIEW CAMERA. OTHER USE MAY RESULT IN INJURY OR DAMAGE. 1 Turn the ignition switch OFF.

2 Press the RESET button with a pen tip or other pointed implement. WARNING Protecting the LCD panel and screen □ Do not expose the LCD screen to direct sunlight when this product is not used. This may result in LCD screen malfunction due to the resulting high temperatures. □ When using a cellular phone, keep the antenna of the cellular phone away from the LCD screen to prevent disruption of the video in the form of spots, colored stripes, etc. □ To protect the LCD screen from damage, be sure to touch the touch panel keys only with your finger and do so gently. □ Checking part names and functions on page 7 Settings and recorded contents are reset to the factory settings. About this manual This manual uses diagrams of actual screens to describe operations. However, the screens on some units may not match those shown in this manual depending on the model used. CAUTION The rear view mode is to use this product as an aid to keep an eye on the trailers, or while backing up. Do not use this function for entertainment purposes.

Handling the USB connector □ To prevent data loss and damage to the storage device, never remove it from this product while data is being transferred. □ Pioneer cannot guarantee compatibility with all USB mass storage devices and assumes no responsibility for any loss of data on media players, iPhone, smartphone, or other devices while using this product. Meanings of Symbols Used in This Manual This indicates to touch an appropriate soft key on the touch screen. HOLD CAUTION Notes on internal memory Before removing the vehicle battery □ Some of the settings and recorded contents will not be reset. This indicates to touch and hold an appropriate soft key on the touch screen.

This indicates that there is a reference or supplementary for the key or screen. Data subject to erasure The information is erased by disconnecting the yellow lead from the battery (or removing the battery itself). □ Some of the settings and recorded contents will not be reset. In case of trouble Should this product fail to operate properly, contact your dealer or nearest authorized Pioneer Service Station. Protecting your unit from theft The front panel can be detached to deter theft.

Visit our website Visit us at the following site: <http://www.pioneer.eu> □ Register your product. We will keep the details of your purchase on file to help you refer to this information in the event of an insurance claim such as loss or theft. Resetting the microprocessor CAUTION Pressing the RESET button resets settings and recorded contents to the factory settings. □ Do not perform this operation when a device is connected to this product. 5 Precaution Important □ Handle the front panel with care when removing or attaching it. □ Avoid subjecting the front panel to excessive shock. □ Keep the front panel out of direct sunlight and high temperatures. □ If removed, replace the front panel on the unit before starting up your vehicle.

□ To avoid damaging the device or vehicle interior, remove any cables and devices attached to the front panel before detaching it. Removing the front panel □ Pinch the top and bottom of its right side and pull the front panel out. Take care not to pinch it too tightly or to drop it, and also avoid contact with water or other fluids to prevent permanent damage. Re-attaching the front panel The front panel and the head unit are connected on the left side. Make sure that the front panel has been properly connected to the head unit. 1 Slide the front panel to the left. If you can't attach the front panel to the head unit successfully, try again. Forcing the front panel into place may result in damage. 2 Press the right side of the front panel until it is firmly seated. 6 Basic operation Checking part names and functions 1 5 TRK ( / ) button Performs manual seek tuning, fast forward, reverse and track search controls.

Press to display the top menu screen.



[You're reading an excerpt. Click here to read official PIONEER AVH-X7700BT user guide](http://yourpdfguides.com/dref/5793263)

<http://yourpdfguides.com/dref/5793263>

Press and hold to activate the voice recognition function. □ Using the voice recognition function (for iPhone) on page 16 Press OPEN/CLOSE to open the LCD panel. To close the LCD panel, press OPEN/CLOSE again. □ Inserting and ejecting a disc on page 8 □ Resetting the microprocessor on page 5 Opening and closing the LCD panel The LCD panel will open or close automatically when the ignition switch is turned on or off.

You can turn off the automatic close/open function. □ Do not close the LCD panel by force with your hands. That will cause a malfunction. □ The automatic close/open function will operate the display as follows. — When the ignition switch is turned OFF while the LCD panel is opened, the LCD panel will close after six seconds.

— When the ignition switch is turned ON again (or turned to ACC), the LCD panel will open automatically. — Removing or attaching the front panel will automatically close or open the LCD panel. □ Protecting your unit from theft on page 5 □ When the ignition switch is turned OFF after the LCD panel has been closed, turning the ignition switch ON again (or turning it to ACC) will not open the LCD panel. In this case, press OPEN/CLOSE to open the LCD panel. □ When closing the LCD panel, check to make sure that it has closed completely. If the LCD panel has stopped halfway, leaving it like this could result in damage. 6 7 8 9 OPEN/ CLOSE button button Discloading slot 10 RESET button 2 3 4 5 6 5 6 7 8 9 Remote control The remote control CD-R33 is sold separately. For details concerning operations, see the remote control manual. Notes on using the LCD panel a 1 2 LCD screen Volume/ Press to cycle through all the available sources. SRC/OFF On the Application screen or navigation mode, press to display the side control bar.

Press and hold to turn the display off. Press and hold to turn the source off. DISP On the AV operation screen, press to turn the button display off. On the Application screen or navigation mode, press to display the side control bar. Press and hold to turn the display off. p When the display is turned off, touch the screen to revert to the original screen. MODE Press to switch between the Application screen button and the AV operation screen. Press and hold to switch to the camera view mode. □ Keep hands and fingers clear of this product when opening, closing, or adjusting the LCD panel. Be especially cautious of children's hands and fingers.

□ Do not use with the LCD panel left open. It may result in injury in the event of an accident. □ Do not open or close the LCD panel by force. It may cause a malfunction. □ Do not operate this product until the LCD panel has completely opened or closed.

The LCD panel may stop at that angle for safety. □ Do not place a glass or can on the open LCD panel. □ Press OPEN/CLOSE to open the LCD panel. □ To close the LCD panel, press OPEN/CLOSE again. WARNING Setting the automatic open function To prevent the display from hitting the shift lever of an automatic vehicle when it is in the P (park) position, or when you do not wish the display to open/close automatically, you can set the automatic open function to manual mode.

CAUTION 3 1 Display the "System" setting screen. 4 □ On (default): The LCD panel will open or close automatically when the ignition switch is turned on or off. □ Off: You have to press OPEN/CLOSE to open/close the LCD panel. 2 Touch [Auto Flap]. 7 Basic operation Turning the LCD panel horizontally When the LCD panel is upright and hinders the operation of the air conditioner, the panel can be turned horizontally temporarily. Adjusting the LCD panel angle Important □ If you can hear the LCD panel knocking against your vehicle's console or dashboard, touch the flip down temporarily key from the flap menu to temporarily level the LCD panel. □ When adjusting the LCD panel angle, be sure to adjust from the flap menu. Forcibly adjusting the LCD panel by hand may damage it. Returning the panel to the upright position. 1 Press and hold OPEN/CLOSE to display the flap menu.

2 Touch the flip down temporarily key to flip the LCD panel down to the horizontal position. Flips the LCD panel down to the horizontal position temporarily. □ As the set angle is saved, the LCD panel will automatically be adjusted to the same position the next time the LCD panel is opened.

Inserting/ejecting/connecting media CAUTION Do not insert anything other than a disc into the disc-loading slot. □ To return to the original position, press and hold OPEN/CLOSE. □ The LCD panel returns to the original position automatically, indicated with a beeping sound 10 seconds after operation.

Inserting and ejecting a disc Inserting a disc □ Insert a disc into the disc-loading slot. Adjusting the LCD panel slide position You can adjust the LCD panel slide position so that the panel is set back or forward. Ejecting a disc 1 Press and hold OPEN/CLOSE to display the flap menu. 2 Touch the tilt down key or tilt up key to adjust the LCD panel to an easily viewable angle.

□ Press button to eject a disc. 1 Press and hold OPEN/CLOSE to display the flap menu. 2 Touch the slide back key or slide front key to move the LCD panel back and forth. The LCD panel slides to the back. Plugging and unplugging a USB storage device p This product may not achieve optimum performance with some USB storage devices.

p Connection via a USB hub is not possible. p A USB cable is required for connection. 1 Pull out the plug from the USB port of the USB cable. 2 Plug a USB storage device into the USB cable. The LCD panel slides to the front.

1 Laying the panel down. 2 8 Basic operation 1 USB cable 2 USB storage device Check that no data is being accessed before pulling out the USB storage device. Switching the speaker mode □ Restoring the default settings on page 52 □ Restore the default setting. On first-time startup After a short pause, the splash screen comes on for a few seconds. The "Select Program Language" screen appears. p From the second time on, the screen shown will differ depending on the previous conditions. 1 Start the engine to boot up the system. 2 Touch the language that you want to use on screen. The "Speaker Mode Setting" screen appears. □ Standard Mode 4-speaker system with front and rear speakers, or a 6-speaker system with front and rear speakers and subwoofers.

□ Network Mode 2-way+SW Multi amp, multi-speaker system with high speaker, mid speaker and subwoofer for reproduction of high, middle and low frequencies (bands). 3 Touch . 4 Touch the speaker modes that you want to use. WARNING Do not use the unit in standard mode when a speaker system for 3-way network mode is connected to this unit. This may cause damage to the speakers. The "Smartphone Setup" screen appears. □ Information on the connections and functions for each device on page 18 The top menu screen appears. p Once the speaker mode is set, the setting cannot be changed unless this product is restored to the default settings.



[You're reading an excerpt. Click here to read official PIONEER AVH-X7700BT user guide](http://yourpdfguides.com/dref/5793263)  
<http://yourpdfguides.com/dref/5793263>

Restore the default settings to change the speaker mode setting. □ Restoring the default settings on page 52 5 Touch [OK].

6 Touch the item you want to set. 7 Touch . 9 Basic operation How to use the screens Application menu screen \*4 Time and date setting screen 10 Abcdefg Abcdefg Abcdefg Abcdefg Abcdefg 6 2014 12 22 Setting menu screen System Month/Date 6/10 d/m/y m/d/y y/m/d 12hour 24hour 21 48 Time Format Depending on the connection method, the "smartphone setup" screen is displayed. Top menu screen \*4 \*1 \*2 Application operation screen Source Select Abcdefg Abcdefg 6/10 21 48 iPod AV operation screen Abcdefghi iPod Abcdefghi ABC 6/10 21 48 Abcdefg Abcdefg Pops 99999/99999 9999'99" -9999'99" 6/10 21 48 You can control the iPhone or smartphone applications directly on this product. Phone menu screen Favorite source icons \*3 Phone Book abcdefghi abcdefghi abcdefghi abcdefghi abcdefghi Disc Radio AUX iPod 3 Recent application icons \*5 ABC A B C D E F G AV source selection screen 6/10 21 48 Radio USB OFF AV Bluetooth Audio \*1 10 The top menu screen of this manual is the screen when using the AppRadioMode.

The items displayed on the screen may vary depending on the connecting device or mode. When you connect an iPhone via Bluetooth wireless technology or a smartphone via USB cable, "Smartphone Setup" screen appears by touching [APPS]. Basic operation \*2 \*3 \*4 \*5 By pressing the button on any screen you can display the Top menu screen. When you connect the external navigation system to this unit, the navigation mode key is displayed at the left bottom of the display. By pressing the MODE button you can switch between the Application screen and the AV operation screen.

When you connect a MirrorLink device to this unit, the current app icon is displayed instead of recent apps and shortcut app. Supported AV source You can play or use the following sources with this product. □ Radio □ CD □ ROM (compressed audio files) □ DVD-Video □ USB The following sources can be played back or used by connecting an auxiliary device. □ iPod □ Bluetooth audio □ AV input (AV) □ AUX Selecting a source Source on the AV source selection screen 1 Display the "AV source selection" screen. 2 Touch and hold a source icon, and drag the icon to the desired position. Changing the display order of source keys □ Displaying the AV operation screen on page 11 1 Display the source list. 2 Touch . 3 Drag the source key to the desired position. p When you select "OFF", the AV source is turned off. 2 Touch the source icon you want to select.

Displaying the AV operation screen 1 Press . 2 Touch the AV operation key. Using the touch panel You can operate this product by touching the keys on the screen directly with your fingers. p To protect the LCD screen from damage, be sure to touch the screen only with your finger gently. Source on the source list □ Displaying the AV operation screen on page 11 1 Display the source list. 1 2 Touch the source key you want to select. Using the common touch panel keys □ □ : Returns to the previous screen. : Closes the screen. Abcdefghi Abcdefghi ABC iPod Pops 9999'99" -9999'99" 6/10 21 48 Changing the display order of sources Changing the display order of source icons 1 Display the "AV source selection" screen. 99999/99999 1 Displays the source list.

11 Basic operation Operating list screens 1 Songs Playlist Music 2 abcdefghi abcdefghi Artist Album abcdefghi Video 3 Songs abcdefghi Podcast abcdefghi 1 Touching an item on the list allows you to narrow down the options and proceed to the next operation. 2 Appears when all characters are not displayed on the display area. If you touch the key, the rest are scrolled for display. 3 Appears when items cannot be displayed on a single page. Drag the scrubber bar or the list to view any hidden items.

Operating the time bar 1 9999'99" -9999'99" 1 You can change the playback point by dragging the key. p Playback time corresponding to the position of the key is displayed while dragging the key. Switching the operation panel □ : Switches the operation panel of AV sources. This key is not available on all sources. 12 Registration and connection of Bluetooth device Displaying the "Bluetooth" screen 1 Press 2 Touch . , and then . The "Bluetooth" screen appears. □ Displaying the "Bluetooth" screen on page 13 1 Display the "Bluetooth" screen. 2 Touch [Auto Connect] to switch "On" (default) or "Off". Entering the PIN code for Bluetooth wireless connection To connect your Bluetooth device to this product, you need to enter a PIN code. You can change the PIN code with this function. □ Displaying the "Bluetooth" screen on page 13 Deleting a registered device CAUTION Never turn this product off while the paired Bluetooth device is being deleted. □ Displaying the "Bluetooth" screen on page 13 1 Display the "Bluetooth" screen. 2 Touch [PIN Code Input]. Registering your Bluetooth devices p If three devices are already paired, "Memory Full" is displayed.

Delete a paired device first. □ Deleting a registered device on page 13 1 Display the "Bluetooth" screen. 2 Touch [Connection]. 3 Touch . 3 Touch [0] to [9] to input the pin code (up to 8 -digits). p The default PIN code is "0000". 4 Touch . 1 Activate the Bluetooth wireless technology on your devices. □ Displaying the "Bluetooth" screen on page 13 2 Display the "Bluetooth" screen. 3 Touch [Connection].

Connecting a registered Bluetooth device manually Connect the Bluetooth device manually in the following cases: □ Two or more Bluetooth devices are registered, and you want to manually select the device to be used. □ You want to reconnect a disconnected Bluetooth device. □ Connection cannot be established automatically for some reason. Displaying the device information □ Displaying the "Bluetooth" screen on page 13 The device name and address of the Bluetooth device and this product are displayed. 1 Display the "Bluetooth" screen.

2 Touch [Device Information]. The system searches for Bluetooth devices waiting for a connection and displays them in the list if a device is found. 4 Touch . p If your device supports SSP (Secure Simple Pairing), a sixdigit number appears on the display of this product. Touch [Yes] to pair the device. p Once the connection is established, the device name is displayed. Touch the device name to disconnect. After the device is successfully registered, a Bluetooth connection is established from the system. p The Bluetooth connection can be also made by detecting this product from the Bluetooth device. Before registration, make sure that "Visibility" in the "Bluetooth" menu is set to "On".



[You're reading an excerpt. Click here to read official PIONEER AVH-X7700BT user guide](http://yourpdfguides.com/dref/5793263)  
<http://yourpdfguides.com/dref/5793263>

For details on a Bluetooth device operations, refer to the operating instructions supplied with the Bluetooth device. □ Switching visibility on page 13 5 Touch the Bluetooth device name you want to register. 1 Activate the Bluetooth wireless technology on your devices. □ Displaying the “Bluetooth” screen on page 13 Clearing the Bluetooth memory p This setting is available only when you stop your vehicle in a safe place and apply the parking brake. 2 Display the “Bluetooth” screen.

3 Touch [Connection]. CAUTION Never turn this product off while the Bluetooth memory is being cleared. □ Displaying the “Bluetooth” screen on page 13 4 Touch the name of the device that you want to connect. 1 Display the “Bluetooth” screen. Switching visibility This function sets whether or not to make this product visible to the other device. □ Displaying the “Bluetooth” screen on page 13 2 Touch [Bluetooth Memory Clear]. The confirmation screen appears. 3 Touch [Clear]. Connecting to a Bluetooth device automatically This function connects the last connected Bluetooth device to this product automatically as soon as the two devices are less than a few meters apart. 1 Display the “Bluetooth” screen.

Updating Bluetooth software This function is used to update this product with the latest Bluetooth software. For details on Bluetooth software and updating, refer to our website. p The source is turned off and the Bluetooth connection is disconnected before the process starts. 2 Touch [Visibility] to switch “On” (default) or “Off”. 13 Registration and connection of Bluetooth device p This setting is available only when you stop your vehicle in a safe place and apply the parking brake.

p You need to store the version up file to the USB storage device in advance. CAUTION Never turn this product off and never disconnect the phone while the software is being updated. □ Plugging and unplugging a USB storage device on page 8 □ Displaying the “Bluetooth” screen on page 13 1 Connect the USB storage device stored the version up file to this unit. 2 Display the “Bluetooth” screen. 3 Touch [BT Software Update].

Follow the on-screen instructions to finish updating the Bluetooth software. 4 Touch [Start]. Displaying the Bluetooth software version If this product fails to operate properly, you may need to consult your dealer for repair. In such cases, perform the following procedure to check the software version on this unit. □ Displaying the “Bluetooth” screen on page 13 The version of this product’s Bluetooth module appears. 1 Display the “Bluetooth” screen. 2 Touch [Bluetooth Version Information]. 14 Hands-free phoning Bluetooth telephone connected indicator The device number of the connected device is displayed. To use this function you need to connect your cellular phone to this product via Bluetooth in advance. □ Registration and connection of Bluetooth device on page 13 Dialing from the history □ Displaying the Phone menu screen on page 15 Reception status of the cellular phone Battery status of the cellular phone Phone Book 3 ABC Displaying the Phone menu screen 1 Press 2 Touch .

. The Phone menu screen appears. 1 Display the “Phone menu” screen. 2 Touch . The following items are available: □ : Received call list □ : Dialed call list □ : Missed call list 3 Touch the item to switch the history list. \*1 \*2 \*3 \*4 \*5 Making a phone call A B C D E F G abcdefghi abcdefghi abcdefghi abcdefghi You can make a phone call in many different ways. The dial screen appears and dialing starts. 4 Touch the desired entry on the list to make a call. 5 Touch to end the call. Direct dialing □ Displaying the Phone menu screen on page 15 Using the preset dial lists Registering a phone number You can easily store up to six phone numbers per device as presets.

□ Displaying the Phone menu screen on page 15 On the “Phone Book” screen, touch the desired name. 1 Display the “Phone menu” screen. 2 Touch . Switches the search language to English or system language. \*1 \*2 \*3 \*4 \*5 Displays the preset dial screen.

□ Using the preset dial lists on page 15 Switches to the phone book list. □ Calling a number in the phone book on page 15 Switches to the missed, received and dialed call lists. □ Dialing from the history on page 15 Switches the mode to enter the phone number directly. □ Direct dialing on page 15 Switches to the voice recognition function (for iPhone). □ Using the voice recognition function (for iPhone) on page 16 3 Touch the number keys to enter the phone number.

4 Touch 5 Touch to make a call. to end the call. 1 Display the “Phone menu” screen. 2 Touch 3 Touch or . p You may hear a noise when you hang up the phone. Calling a number in the phone book p The contacts on your phone will be automatically transferred to this product. p “Visibility” of the “Bluetooth” screen should be on. □ Switching visibility on page 13 □ Displaying the Phone menu screen on page 15 . Dialing from the preset dial list □ Displaying the Phone menu screen on page 15 1 Display the “Phone menu” screen. 2 Touch .

1 Display the “Phone menu” screen. 2 Touch . The dial screen appears and dialing starts. 3 Touch the desired item you want to dial. 3 Touch the desired name on the list. The dial screen appears and dialing starts. Receiving a phone call 1 Touch to answer the call. □ If you touch while getting a call waiting, you can switch to the talking person. □ Touch to reject the call. 15 4 Touch the phone number you want to dial.

5 Touch to end the call. CAUTION For your safety, avoid talking on the phone as much as possible while driving. Hands-free phoning 2 Touch to end the call. Minimizing the dial confirmation screen p The dial confirmation screen cannot be minimized on the AV operation screen. p AV sources cannot be selected even if the dial confirmation screen is minimized while talking on the phone or receiving an incoming call.

□ Touch off. or to turn private mode on or □ When phone book transfer does not work, disconnect your phone and then perform pairing again from your phone to this product. Adjusting the other party’s listening volume This product can be adjusted to the other party’s listening volume. Making and receiving calls □ Touch □ Touch again. .

to display the dial confirmation screen p Settings can be stored for each device. □ Touch to switch between the three volume levels. Changing the phone settings Answering a call automatically □ Displaying the “Bluetooth” screen on page 13 Using the voice recognition function (for iPhone) By connecting your iPhone to this unit, you can use the voice recognition function (Siri Eyes Free Mode) on this unit. p When an iPhone running iOS 6.



[You're reading an excerpt. Click here to read official PIONEER AVH-X7700BT user guide](http://yourpdfguides.com/dref/5793263)  
<http://yourpdfguides.com/dref/5793263>

1 or higher is used, Siri Eyes Free Mode is available with this product. □ Displaying the Phone menu screen on page 15 The voice recognition function launches and the voice control screen appears. □ You may hear a noise in the following situations: — When you answer the phone using the button on the phone. — When the person on the other end of the line hangs up the phone. □ If the person on the other end of the line cannot hear the conversation due to an echo, decrease the volume level for hands-free phoning. □ With some cellular phones, even after you press the accept button on the cellular phone when a call comes in, handsfree phoning may not be performed.

□ The registered name will appear if the phone number is already registered in the phone book. When one phone number is registered under different names, only the phone number will be displayed. The received call and the dialed number histories 1 Display the “Bluetooth” screen. 1 Display the “Phone menu” screen. 2 Touch . 2 Touch [Auto Answer] to switch “On” or “Off” (default). □ You cannot make a call to the entry of an unknown user (no phone number) in the received call history. □ If calls are made by operating your cellular phone, no history data will be recorded in this product. Phone book transfers Switching the ring tone You can select whether or not to use this product’s ring tone. □ Displaying the “Bluetooth” screen on page 13 □ You can also launch the voice recognition function by pressing and holding .

1 Display the “Bluetooth” screen. Notes for hands-free phoning General notes □ Connection to all cellular phones featuring Bluetooth wireless technology is not guaranteed. □ The line-of-sight distance between this product and your cellular phone must be 10 meters or less when sending and receiving voice and data via Bluetooth technology. □ With some cellular phones, the ring sound may not be output from the speakers. □ If private mode is selected on the cellular phone, hands-free phoning may be disabled.

□ If there are more than 1 000 phone book entries on your cellular phone, not all entries may download completely. □ Depending on the phone, this product may not display the phone book correctly. □ If the phone book in the phone contains image data, the phone book may not be transferred correctly. □ Depending on the cellular phone, phone book transfer may not be available. 2 Touch [Ring Tone] to switch “On” (default) or “Off”.

Inverting names in the phone book □ Displaying the “Bluetooth” screen on page 13 1 Display the “Bluetooth” screen. 2 Touch [Invert Name]. Setting the private mode During a conversation, you can switch to private mode (talk directly on your cellular phone). 16 Registration and connection □ Cellular phone operations vary depending on the type of cellular phone. Refer to the instruction manual that came with your cellular phone for detailed instructions. Setup for iPod / iPhone or smartphone When using an iPod / iPhone or a smartphone with this product, configure the settings of this product according to the device to be connected. This section describes the settings required for each device. iPod compatibility This product supports only the following iPod models and iPod software versions. Others may not work correctly. □ iPhone 4, 4s, 5, 5s, 5c: iOS 7.

0 or later. □ iPhone 3GS: iOS 6.0.1 □ iPod touch (4th, 5th generation): iOS 6.0.1 □ iPod touch (3rd generation): iOS 5.1.1 □ iPod touch (2nd generation): iOS 4.2.1 □ iPod classic 160GB (2009): Ver. 2.0.4 □ iPod classic 160GB (2008): Ver. 2.0.

1 □ iPod classic 80GB: Ver. 1.1.2 □ iPod nano (7th generation) □ iPod nano (6th generation): Ver. 1.

2 □ iPod nano (5th generation): Ver. 1.0.2 □ iPod nano (4th generation): Ver. 1.0.4 □ iPod nano (3rd generation): Ver. 1.1.3 p You can connect and control an iPod compatible with this product by using separately sold connector cables.

p Operation methods may vary depending on the iPod model and the software version. p Depending on the software version of the iPod, it may not be compatible with this product. For details about iPod compatibility with this product, refer to the information on our website. This manual applies to the following iPod models. iPod with 30-pin connector □ iPhone 3GS, 4, 4s □ iPod touch 2nd, 3rd, 4th generation □ iPod classic 80GB, 160GB □ iPod nano 3rd, 4th, 5th, 6th generation iPod with Lightning connector □ iPhone 5, 5s, 5c □ iPod touch 5th generation □ iPod nano 7th generation For details about MirrorLink device compatibility with this product, refer to the information on our website. The basic flow of iPod / iPhone or smartphone setup 1 Select the method for connecting your device. □ Setting the device connection method on page 17 2 Connect your device to this product. □ Connection, refer to installation manual. 3 If necessary, connect your device to this product via Bluetooth connection. □ Registration and connection of Bluetooth device on page 13 Setting the device connection method To use the application for iPhone or smartphone on this product, select the method for connecting your device. Settings are required according to the connected device. 1 Display the “System” setting screen. 2 Touch [Input/Output Settings]. 3 Touch [Smartphone Setup].

□ Device: Select the device to be connected.

□ Connection: Select the connection method. □ Information on the connections and functions for each device on page 18 The setting will change after the following processes are automatically executed. — The source is turned off. — AppRadioMode and MirrorLink mode are exited. — The smartphone connection (USB and Bluetooth) is disconnected.

4 Touch the following settings. Android™ device compatibility p Operation methods may vary depending on the Android device and the software version of the Android OS. p Depending on the version of the Android OS, it may not be compatible with this product. p Compatibility with all Android devices is not guaranteed. For details about Android device compatibility with this product, refer to the information on our website. MirrorLink device compatibility p This product is compatible with MirrorLink version 1.1. p Compatibility with all MirrorLink devices is not guaranteed. 17 Setup for iPod / iPhone or smartphone Information on the connections and functions for each device The settings and cables required for connecting each device, and the available sources are as follows. iPod / iPhone with a 30-pin connector Device connection method Smartphone Setup Bluetooth connection Available sources Device Connection iPod (audio) iPod (video) When connecting via Bluetooth iPhone / iPod Wireless via BT Bluetooth connection is required.

□ — When connecting via CD-IU201V (sold separately) iPhone / iPod USB — □ □ iPod / iPhone with a Lightning connector Device connection method Smartphone Setup Bluetooth connection Available sources Device Connection iPod (audio) iPod (video) AppRadioMode When connecting via Bluetooth iPhone / iPod Wireless via BT Bluetooth connection is required.



[You're reading an excerpt. Click here to read official PIONEER AVH-X7700BT user guide](http://yourpdfguides.com/dref/5793263)

<http://yourpdfguides.com/dref/5793263>

□ — — When connecting via CD-IU52 (sold separately) iPhone / iPod USB — □ — □ Android, MirrorLink device Device connection method Smartphone Setup Bluetooth connection Available sources Device Connection MirrorLink AppRadioMode When connecting via CD-MU200 (sold separately) Others MirrorLink/AppRadioMode — □ When “Connection” of “Smartphone Setup” is set to “MirrorLink”. □ When “Connection” of “Smartphone Setup” is set to “AppRadioMode”. 18 Radio Displays the preset channel list. Select an item on the list (“1” to “6”) to switch to the preset channel. Starting procedure 1 Display the “AV source selection” screen. □ Displaying the “Radio settings” screen on page 19 1 Display the “Radio settings” screen. 2 Touch [Local]. Selects the FM1, FM2, FM3, MW or LW band. 1 2 3 4 5 6 Radio 6/10 21 48 FM1 MW The “Radio” screen appears.

2 Touch [Radio]. Abcdefghi Abcdefghi Abcdefghi Storing the strongest broadcast frequencies The BSM (best stations memory) function automatically stores the six strongest broadcast frequencies under the preset tuning keys “1” to “6”. p Storing broadcast frequencies with BSM may replace those you have already saved. p Previously stored broadcast frequencies may remain stored if the number of frequencies stored has not reached the limit. □ Off (default): Turns the seek tuning setting off.

□ Level1 to Level4: Sets the level of sensitivity for FM to Level1 to Level4 (for MW and LW to Level1 or Level2). p The FM “Level4” (MW and LW “Level2”) setting allows reception of only stations with the strongest signals. 3 Touch the item you want to set. Setting the FM tuning step You can switch the seek tuning step for FM band. p The tuning step remains at 50 kHz during manual tuning.

□ Source on the AV source selection screen on page 11 □ Displaying the “Radio settings” screen on page 19 Seek Performs manual tuning. HOLD 1 Turn the source off. 2 Display the “Radio settings” screen. Performs seek tuning or non stop seek tuning. Releasing the key in a few seconds, skips to the nearest station from the current frequency. Keeping holding the key for a long seconds, performs non stop seek tuning. 1 Touch 2 Touch . to begin a search. 3 Touch [FM Step] to switch the step to “50kHz” (default) or “100kHz”. While the message is displayed, the six strongest broadcast frequencies will be stored under the preset tuning keys in order of their signal strength.

Switching the sound quality of the FM tuner p This function is available only when you receive the FM band. □ Displaying the “Radio settings” screen on page 19 □ Music (default): Gives priority to the sound quality. □ Talk: Gives priority to noise prevention. □ Standard: Gives no effect. □ If you touch [Cancel], the storage process is canceled. 1 Display the “Radio settings” screen. Recalls the preset channel stored to a key from memory. HOLD Stores the current broadcast frequency to a key. Stores song information to an iPod. □ Storing song information to an iPod (iTunes Tagging) on page 50 Displaying the “Radio settings” screen 1 Press 2 Touch . , and then . 2 Touch [Tuner Sound] to select the item. 3 Touch [AV Source Settings]. 4 Touch [Radio settings]. p By pressing or , you can also switch the preset channels.

p By pressing and hold or and release, you can also perform seek tuning. p By keeping touching and holding or , you can perform non stop seek tuning. Touch again to cancel. Tuning into strong frequencies p You can use this function when “Radio” is selected as the source. Local seek tuning allows you to only tune into those radio stations with sufficiently strong signals.

Setting the alternative frequency search When the tuner cannot get a good reception, tunes to another broadcast station that supports the same program in the current network. 1 Display the “Radio settings” screen. 19 Radio □ Displaying the “Radio settings” screen on page 19 2 Touch [Alternative FREQ] to switch “On” (default) or “Off”. 2 Touch [News Interrupt] to switch “On” or “Off” (default). Setting the Auto PI search When you switch to the broadcast station containing RDS data, searches for the same PI (Program Identification) code broadcast station from all frequency band automatically. □ Displaying the “Radio settings” screen on page 19 1 Display the “Radio settings” screen. p Even if you set to “Off”, the PI search is automatically performed when the tuner cannot get a good reception. 2 Touch [Auto PI] to switch “On” or “Off” (default). Limiting stations to regional programming You can switch whether the area code is checked during the auto PI search. □ Displaying the “Radio settings” screen on page 19 1 Display the “Radio settings” screen.

2 Touch [Regional] to switch “On” (default) or “Off”. Receiving traffic announcements (TA) The traffic announcement can be received from the last selected frequency, interrupting the other sources. □ Displaying the “Radio settings” screen on page 19 1 Display the “Radio settings” screen. 2 Touch [TA Interrupt] to switch “On” or “Off” (default). Receiving news announcements The news can be received from the last selected frequency, interrupting the other sources. □ Displaying the “Radio settings” screen on page 19 20 1 Display the “Radio settings” screen. Disc Track number indicator Audio source screen 1 Hides the touch panel keys. To display again the keys, touch anywhere on the screen. Video source screen 2 CD 6/10 21 48 \*1 HOLD Performs frame-by-frame playback. Performs slow-motion playback.

Each time you touch it changes the speed in four steps in the following order: 1/16 → 1/8 → 1/4 → 1/2 DVD Stop 99 L+R 6/10 21 48 Track 99 99 01 99 9999’99” Pause -9999’99” 9999’99” Pause -9999’99” Video source screen 1 \*2 Skips files forward or backward. DVD Stop 99 Full 6/10 21 48 \*3 \*4 Sets a repeat play range. : Repeats all files. : Repeats the current chapter. : Repeats the current title.

Switches between playback and pause. Plays files in random order. This function is available for music CD. : Does not play tracks in random order. : Plays all tracks in random order.

99 01 OFF \*5 Pause -9999’99” Changes the viewing angle (Multi-angle). This function is available for DVDs featuring multi-angle recordings. 9999’99” Performs fast reverse or fast forward. Touch again to change play back the speed.



[You're reading an excerpt. Click here to read official PIONEER AVH-X7700BT user guide](http://yourpdfguides.com/dref/5793263)  
<http://yourpdfguides.com/dref/5793263>

Selects the audio output from [L+R], [Left], [Right], [Mix]. This function is available for Video-CDs and DVDs recorded with LPCM audio. Audio source screen 2 CD 6/10 21 48 Stops playback. Track 99 99 Sets a repeat play range. : Repeats the current disc. : Repeats the current track.

21 Disc Video source screen 2 DVD Stop 99 L+R 6/10 21 48 99 01 p By pressing or , you can also skip files/chapters forward or backward. p By pressing and holding or , you can also perform fast reverse or fast forward. p If a Video-CD with PBC On is being played, appears. p Changing the wide screen mode. □ Common operations on page 50 You can play a normal music CD, Video-CD or DVD-Video using the built-in drive of this product. Searching for the part you want to play p For DVD-Videos, you can select [Title], [Chapter] or [10Key]. p For Video-CDs, you can select [Track] or [10Key] (PBC only). 1 Touch . 2 Touch the item to select the search function. p To cancel an input number, touch [Clear].

CAUTION Pause -9999'99" 3 Touch [0] to [9] to input the desired number. 4 Touch to start playback from the number you registered. 9999'99" \*6 For safety reasons, video images cannot be viewed while your vehicle is in motion. To view video images, stop in a safe place and apply the parking brake. Starting procedure This function is available for DVD-Video.

You can memorize one point as a Bookmark for a disc (up to five discs). To clear the bookmark on the disc, touch and hold this key. Resumes playback (Bookmark). Operating the DVD menu You can operate the DVD menu by touching the menu item on the screen directly. p This function may not work properly with some DVD disc content.

In that case, use touch panel keys to operate the DVD menu. 1 Display the "AV source selection" screen. Returns and begins playback from the specified point. This function is available for DVD-Video and Video-CDs featuring PBC (playback control). The source changes and then playback will start. □ Inserting and ejecting a disc on page 8 p If the disc is already set, select [Disc] as the playing source. 2 Insert the disc you want to play. 1 Touch or . 2 Touch the desired menu item. Selecting files from the file name list 1 Touch .

2 Touch a track on the list to play back. Switching the subtitle/audio language □ □ □ Touch \*1 \*2 \*3 \*4 \*5 \*6 22 Selects a track from the list. □ Selecting files from the file name list on page 22 Switches the media file type. □ Switching the media file type on page 22 Searches for the part you want to play. □ Searching for the part you want to play on page 22 Displays the DVD menu. □ Operating the DVD menu on page 22 Switches the subtitle/audio language. □ Switching the subtitle/audio language on page 22 Displays the DVD menu keypad. □ Operating the DVD menu using touch panel keys on page 22 : Changes the subtitle language. : Changes the audio language. or to change the language.

Switching the media file type When playing a digital media containing a mixture of various media file types you can switch between media file types to play. □ Setting the top-priority languages on page 46 □ You can also switch the subtitle/audio languages using the "DVD/DivX Setup" menu. 1 Touch . Operating the DVD menu using touch panel keys If items on the DVD menu appear, the touch panel keys may overlay them. If so, select an item using those touch panel keys.

□ Music: Switches the media file type to music (compressed audio). □ Video: Switches the media file type to video. □ CD-DA: Switches the media file type to CD (audio data (CD-DA)). 2 Touch the item you want to set. 1 Touch .

, or to select the desired 2 Touch , menu item. 3 Touch . Disc p The way to display the menu differs depending on the disc. □ If you touch directly. , you can operate the DVD menu 23 Compressed audio files Playback screen 1 (Example: USB) Abcdefghi Abcdefghi ABC USB R&B 9999'99" 6/10 21 48 Plays files in random order. \*1 \*2 \*3 \*3 : Does not play files in random order. : Plays all files within the repeat range in random order. \*4 Playback screen 2 (Example: USB) Displays the link search screen. This function is available for the USB storage device only. □ Selecting a song in the album (link search) on page 25 Switches the media file type.

□ Switching the media file type on page 25 -9999'99" Abcdefghi Abcdefghi ABC DB USB 6/10 21 48 \*4 Skips files forward or backward. R&B p By pressing or , you can also skip files forward or backward. p By pressing and holding or , you can perform fast reverse or fast forward. You can play compressed audio files stored in a disc or a USB storage device. □ Media compatibility chart on page 57 Switches between playback and pause. Switches the current music information display. This function is available only for USB. Starting procedure (for Disc) 1 Display the "AV source selection" screen. Sets a repeat play range. or : Repeats all files.

The source changes and then playback will start. □ Inserting and ejecting a disc on page 8 p If the disc is already set, select [Disc] as the playing source. : Repeats the current folder. : Repeats the current file. 2 Insert the disc you want to play.

Selects the previous folder or the next folder. Constructs the database for using the Music Browse mode. This function is available only for USB. Starting procedure (for USB) 1 Display the "AV source selection" screen. \*1 \*2 Displays the MIXTRAX screen.

This function is available for the USB storage device only. □ MIXTRAX on page 36 Selects a file from the list. □ Selecting files from the file name list on page 25 p When you use a USB storage device, you can search a file by Music Browse. □ Selecting a file by Music Browse on page 25 □ Plugging and unplugging a USB storage device on page 8 p Play back is performed in order of folder numbers. Folders are skipped if they contain no playable files. 2 Plug the USB storage device. 3 Touch [USB]. 24 Compressed audio files Selecting files from the file name list You can find files or folders to play back using the file name or folder name list. Switches the media file type to video. □ CD-DA: Switches the media file type to CD (audio data (CD-DA)).

□ Photo: Switches the media file type to still image (JPEG data). 1 Touch . p Files are played back in file number order. 2 Touch a file on the list to play back. Selecting a file by Music Browse You can select files to play back using the file list related to the song currently playing. p This function is available for the USB storage device only. 1 Touch DB to switch to the Music Browse mode and construct the database. 2 Touch . 3 Touch the desired category to display the file list. Refine the item until the desired song title or file name is displayed on the list.

4 Touch the item that you want to refine. 5 Touch the desired song title or file name to play back.



[You're reading an excerpt. Click here to read official PIONEER AVH-X7700BT user guide](http://yourpdfguides.com/dref/5793263)

<http://yourpdfguides.com/dref/5793263>



Selecting a song in the album (link search) 1 Touch the artwork to open the list of songs. 2 Touch the song to play back. Switching the media file type When playing a digital media containing a mixture of various media file types you can switch between media file types to play.

1 Touch .  Music: Switches the media file type to music (compressed audio).  Video: 25 2 Touch the item you want to set. Compressed video files Hides the touch panel keys. To display again the keys, touch anywhere on the screen.

(Example: Disc) (Example: Disc) ROM Stop Starting procedure 6/10 21 48  Compressed audio files on page 24 ROM Stop 6/10 21 48 \*1 Selecting files from the file name list Abcdefghi 01 Abcdefghi Full 9999 99999 OFF You can select files to view using the file name list. 1 Touch . 9999'99" Pause -9999'99" Abcdefghi Full Abcdefghi 01 9999 99999 OFF \*2 \*3 p Files are played back in file number order and folders are skipped when they contain no files. 2 Touch a file on the list to play back. 9999'99" Pause -9999'99" Performs fast reverse or fast forward. Touch again to change the playback speed.  Touch the playback sign of the thumbnail to preview the file. Sets a repeat play range. : Repeats all files. : Repeats the current folder.

: Repeats the current file. Switches between playback and pause. \*1 \*2 \*3 Selects a file from the list.  Selecting files from the file name list on page 26 Switches the subtitle/audio language.  Switching the subtitle/audio language on page 22 Switches the media file type.  Switching the media file type on page 25 Performs frame-by-frame playback. HOLD Performs slow-motion playback. Stops playback. p By pressing or , you can also skip files forward or backward. p By pressing and holding or , you can perform fast reverse or fast forward.

p Changing the wide screen mode.  Common operations on page 50 You can play compressed video files stored on a disc or in an USB storage device.  Media compatibility chart on page 57 CAUTION For safety reasons, video images cannot be viewed while your vehicle is in motion. To view video images, stop in a safe place and apply the parking brake. 26 Still image files Hides the touch panel keys.

To display again the keys, touch anywhere on the screen. USB Abcdefghi Trimming 6/10 21 48  Plugging and unplugging a USB storage device on page 8 p Playback is performed in order of folder numbers. Folders are skipped if they contain no playable files. The image is displayed on the screen. 3 Touch [USB]. Rotates the displayed picture 90° clockwise. Selects the previous or next folder. \*1 Abcdefghi Selecting files from the file name list You can select files to view using the file name list. 1 Touch . USB Abcdefghi Trimming 6/10 21 48 \*2 Skips files forward or backward. Switches between playback and pause. \*1 \*2 Saves the current image as the wallpaper.  Saving the image as the wallpaper on page 27 Selects a file from the list.  Selecting files from the file name list on page 27 Switches the media file type.  Switching the media file type on page 27 \*3 p Touching a folder on the list shows its contents.

You can play a file on the list by touching it. 2 Touch a file on the list to play back. Switching the media file type When playing a digital media containing a mixture of various media file types you can switch between media file types to play. Abcdefghi 1 Touch . Sets a repeat play range. : Repeats all files. : Repeats the current folder. \*3 Plays files in random order. : Does not play files in random order. : Plays all files in the current repeat play range in random order. p JPEG images are not displayed in the rear display. p By pressing or , you can also skip files forward or backward. p By pressing and holding or , you can search 10 JPEG files at a time. If the file currently being played is the first or last file in the folder, the search is not performed. p Changing the wide screen mode.

Common operations on page 50 You can view still images stored in an USB storage device.  Media compatibility chart on page 57  Music: Switches the media file type to music (compressed audio).  Video: Switches the media file type to video.  Photo: Switches the media file type to still image (JPEG data). 2 Touch the item you want to set.

Saving the image as the wallpaper You can save the current displayed image in the memory of this unit and set as the wallpaper as the AV screen or the Home screen. 1 Touch on the image that you want to save. Starting procedure 1 Display the "AV source selection" screen. 2 Plug the USB storage device.  As AVScreen: Saves the image as the wallpaper of AV screen.  As HomeScreen: Saves the image as the wallpaper of Home screen.  As Both: Saves the image as the both wallpaper of AV screen and Home screen. 27 2 Touch the following items to set as the wallpaper. Still image files p Each one image can be saved for AV screen or Home screen. If you save the other image, the current wallpaper is overwritten.

3 Touch "Yes" to overwrite the image. Setting the slideshow interval JPEG files can be viewed as a slideshow on this product. In this setting, the interval between each image can be set. p This setting is available during playback of the JPEG files. 1 Display the "Video Setup" screen. 2 Touch [Time Per Photo Slide]. The following items are available: "10sec" (default), "5sec", "15sec", "Manual". 3 Touch the item you want to set. 28 iPod Audio source screen 1 Abcdefghi Abcdefghi ABC Pops 99999/99999 9999'99" -9999'99" iPod 6/10 21 48 Plays files in random order. \*1 Video source screen : Plays randomly songs or videos within the selected list.

: Plays album randomly. \*2 Abcdefghi 99999/99999 Full iPod 6/10 21 48 \*3 \*4 Audio source screen 2 Abcdefghi Abcdefghi ABC x1 Pops 99999/99999 iPod 6/10 21 48 9999'99" -9999'99" Skips files forward or backward. Switches between playback and pause. Performs fast reverse or fast forward. \*1 Displays the "MIXTRAX" screen.

MIXTRAX on page 36 Selects a file from the list.  Selecting a song in the album (link search) on page 30 Selects a track from the list.  Selecting song or video sources from the playlist screen on page 30 Switches the control mode to "App Mode".  Using this product's iPod function from your iPod on page 30 Sets a repeat play range. : Repeats all in the selected list.

: Repeats the current song or video. \*2 \*3 \*4 Changes the audiobook speed. 1 2 : Normal playback : Fast playback 1/2 : Slow-motion playback p By pressing the or button, you can also skip files forward or backward. p By pressing and hold the or button, you can also perform fast reverse or fast forward. p Changing the wide screen mode.  Common operations on page 50 Connecting your iPod When connecting an iPod to this product, select the method for connecting your device.



[You're reading an excerpt. Click here to read official PIONEER AVH-X7700BT user guide](http://yourpdfguides.com/dref/5793263)

<http://yourpdfguides.com/dref/5793263>

Settings are required according to the connected device. □ Setup for iPod / iPhone or smartphone on page 17 For iPod with a 30-pin connector users Via USB cable p Depending on your iPod, a USB interface cable for iPod / iPhone (CD-IU201V) (sold separately), is required to connect. 29 iPod iPod audio and/or video sources are enabled if either of the cables is connected. □ For details on how to connect an iPhone with 30-pin connector, refer to the installation manual.

Via Bluetooth wireless technology □ Registering your Bluetooth devices on page 13 If you use English as the system language, the alphabet search function is available. Touch the initial search bar to use this function. If you can not find the desired song or video, try to search again according to the above steps. 4 Touch the title of the list that you want to play. 5 Start playback of the selected list. For iPod / iPhone with a Lightning connector users Via USB cable p With a USB interface cable for iPod/iPhone (CD-IU52) (sold separately), iPod audio source is available. However, functions related to iPod video files are not available. □ For details on how to connect an iPhone with Lightning connector, refer to the installation manual. Via Bluetooth wireless technology □ Registering your Bluetooth devices on page 13 p Depending on the generation or version of the iPod, some functions may not be available. p You can play playlists created with the MusicSphere application.

The application is available on our website. CAUTION For safety reasons, video images cannot be viewed while your vehicle is in motion. To view video images, stop in a safe place and apply the parking brake. Using this product's iPod function from your iPod You can control this product's iPod function from the iPod on "App Mode". The application screen of the iPod can be displayed on this product, and the music files and video files are played back with this product.

p While this function is in use, the iPod will not turn off even if the ignition key is turned off. Operate the iPod to turn off the power. Starting procedure □ Connecting your iPod on page 29 The source changes and then playback will start. p If connecting an iPhone or iPod touch, quit applications before. 1 Connect your iPod.

1 Touch . 2 Display the "AV source selection" screen. p Some functions are still accessible from this product even if the control mode is set to "App Mode". However, the operation will depend on your applications. p Touch to switch the control mode. 2 Operate the connected iPod to select a video or song and play. 3 Touch [iPod]. Selecting a song in the album (link search) 1 Touch the artwork to open the list of songs. 2 Touch the song to play back. Selecting song or video sources from the playlist screen You can search for the song or video you want to play from the playlist screen.

1 Touch . to switch the music or video 2 Touch or category list. 3 Touch the category you want to search for. 30 iPhone or smartphone applications Displays the launcher application screen. Displays the previous screen. AppRadio Mode/MirrorLink p In this chapter, iPhone and iPod touch will be referred to as "iPhone". p The compatible finger gestures vary depending on the application for an iPhone or a smartphone. p Even though an application is not compatible with AppRadioMode, depending on the application an image may be displayed. But you can not operate the application. To use AppRadioMode, install the AppRadio app on the iPhone or smartphone in advance.

For details about the AppRadio app, visit the following site: <http://www.pioneer.eu/AppRadioMode> p Be sure to read Using app-based connected content before you perform this operation. □ Using app-based connected content on page 60 □ Pioneer is not liable for any issues that may arise from incorrect or flawed app-based content. □ The content and functionality of the supported applications are the responsibility of the App providers.

□ In AppRadioMode, functionality through the product is limited while driving, with available functions determined by the App providers. □ Availability of AppRadioMode functionality is determined by the App provider, and not determined by Pioneer. □ AppRadioMode allows access to applications other than those listed (subject to limitations while driving), but the extent to which content can be used is determined by the App providers. The AppRadio Mode screen (Application menu screen) appears. 5 Touch [OK].

For smartphone users p Be sure that the registered device is selected as the priority device. □ Registering your Bluetooth devices on page 13 Abcdefg Abcdefg Abcdefg Abcdefg p The cable connection method varies depending on your device. p For details on how to connect an Android™ device, refer to the installation manual. 1 Unlock your smartphone and connect it to this product via USB. 2 Press . 6/10 21 48 The AppRadio app is launched, and the AppRadioMode screen (Application menu screen) appears. 3 Touch [APPS]. Common operation of all device p If you connect your device while an AppRadioModecompatible application is already running, the application operation screen will appear on this product. Touch the desired application icon after The AppRadio app is launched. The desired application is launched, and the application operation screen appears.

Press to go back to the Top menu screen. Displays the current source. Displays the menu screen. p In AppRadioMode and MirrorLink Mode, App control side bar will appear. p Press the DISP button to hide the App control side bar. Press the DISP button again to display it again. p and are not available depending on the type of device. Starting procedure When connecting an iPhone or smartphone to this product, you must select the method for connecting your device.

Settings are required according to the connected device. □ Setup for iPod / iPhone or smartphone on page 17 Using the keyboard When you tap the text input area of an application for iPhone, a keyboard will be displayed on the screen.

You can input the desired text directly from this product. WARNING Certain uses of an iPhone or a smartphone may not be legal while driving in your jurisdiction, so you must be aware of and obey any such restrictions. If in doubt as to a particular function, only perform it while the car is parked. No feature should be used unless it is safe to do so under the driving conditions you are experiencing. For iPhone users p For details on how to connect an iPhone, refer to the installation manual.

CAUTION For your safety, the keyboard functionality is only available when the vehicle is stopped and the parking brake is engaged. p This function is only available in AppRadioMode on the iPhone. □ Starting procedure on page 31 1 Connect your iPhone. 2 Press . Using AppRadioMode You can control applications for an iPhone or a smartphone directly from the screen (AppRadioMode).



[You're reading an excerpt. Click here to read official PIONEER AVH-X7700BT user guide](http://yourpdfguides.com/dref/5793263)  
<http://yourpdfguides.com/dref/5793263>