



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for PIONEER BDP-150-K. You'll find the answers to all your questions on the PIONEER BDP-150-K in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual PIONEER BDP-150-K
User guide PIONEER BDP-150-K
Operating instructions PIONEER BDP-150-K
Instructions for use PIONEER BDP-150-K
Instruction manual PIONEER BDP-150-K

Pioneer

BDP-450
BDP-150
BDP-150-K
BDP-150-S

Blu-ray 3D™ PLAYER

For customers in Europe:
Discover the benefits of registering your product online at
<http://www.pioneer.co.uk> (or <http://www.pioneer.eu>)
Download an electronic version of this manual from our website.

Operating Instructions

Blu-ray
3D

Blu-ray Disc

BD-LIVE™

DVD
VIDEO

HD
AUDIO CD

home
THEATRE

dlna
CERTIFIED

HDMI



[You're reading an excerpt. Click here to read official PIONEER BDP-150-K user guide](http://yourpdfguides.com/dref/5473503)
<http://yourpdfguides.com/dref/5473503>

Manual abstract:

operating Instructions BDP-450_VXE8_IBD_EN. @@@@ @@@@ **IMPORTANT CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN** The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons. The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

D3-4-2-1-1_A1_En **CAUTION** This product is a class 1 laser product classified under the Safety of laser products, IEC 60825-1:2007. Operating Environment Operating environment temperature and humidity: +5 °C to +35 °C (+41 °F to +95 °F); less than 85 %RH (cooling vents not blocked) Do not install this unit in a poorly ventilated area, or in locations exposed to high humidity or direct sunlight (or strong artificial light) D3-4-2-1-7c*_A1_En **CLASS 1 LASER PRODUCT** D58-5-2-2a_A1_En **WARNING** This equipment is not waterproof. To prevent a fire or shock hazard, do not place any container filled with liquid near this equipment (such as a vase or flower pot) or expose it to dripping, splashing, rain or moisture. D3-4-2-1-3_A1_En **WARNING** Before plugging in for the first time, read the following section carefully. The voltage of the available power supply differs according to country or region. Be sure that the power supply voltage of the area where this unit will be used meets the required voltage (e. g.

, 230 V or 120 V) written on the rear panel. D3-4-2-1-4*_A1_En If the AC plug of this unit does not match the AC outlet you want to use, the plug must be removed and appropriate one fitted. Replacement and mounting of an AC plug on the power supply cord of this unit should be performed only by qualified service personnel. If connected to an AC outlet, the cut-off plug can cause severe electrical shock. Make sure it is properly disposed of after removal.

The equipment should be disconnected by removing the mains plug from the wall socket when left unused for a long period of time (for example, when on vacation). D3-4-2-2-1a_A1_En **VENTILATION CAUTION** When installing this unit, make sure to leave space around the unit for ventilation to improve heat radiation (at least 10 cm at top, 10 cm at rear, and 10 cm at each side). **WARNING** Slots and openings in the cabinet are provided for ventilation to ensure reliable operation of the product, and to protect it from overheating. To prevent fire hazard, the openings should never be blocked or covered with items (such as newspapers, table-cloths, curtains) or by operating the equipment on thick carpet or a bed. D3-4-2-1-7b*_A1_En **CAUTION** The □ **STANDBY/ON** switch on this unit will not completely shut off all power from the AC outlet.

Since the power cord serves as the main disconnect device for the unit, you will need to unplug it from the AC outlet to shut down all power. Therefore, make sure the unit has been installed so that the power cord can be easily unplugged from the AC outlet in case of an accident. To avoid fire hazard, the power cord should also be unplugged from the AC outlet when left unused for a long period of time (for example, when on vacation). d3-4-2-2-2a*_A1_En This product is for general household purposes. Any failure due to use for other than household purposes (such as long-term use for business purposes in a restaurant or use in a car or ship) and which requires repair will be charged for even during the warranty period. k041_A1_En BDP-450_VXE8_IBD_EN. Book 3 □□□□ □□□□□□□□□□□□□□□□□□□□□□□□ **POWER-CORD CAUTION** Handle the power cord by the plug. Do not pull out the plug by tugging the cord and never touch the power cord when your hands are wet as this could cause a short circuit or electric shock. Do not place the unit, a piece of furniture, etc. , on the power cord, or pinch the cord.

Never make a knot in the cord or tie it with other cords. The power cords should be routed such that they are not likely to be stepped on. A damaged power cord can cause a fire or give you an electrical shock. Check the power cord once in a while. When you find it damaged, ask your nearest PIONEER authorized service center or your dealer for a replacement. S002*_A1_En **WARNING** To prevent a fire hazard, do not place any naked flame sources (such as a lighted candle) on the equipment. D3-4-2-1-7a_A1_En For Taiwan exclusively Taiwanese two pin flat-bladed plug K056_A1_En Information for users on collection and disposal of old equipment and used batteries Symbol for equipment These symbols on the products, packaging, and/or accompanying documents mean that used electrical and electronic products and batteries should not be mixed with general household waste. For proper treatment, recovery and recycling of old products and used batteries, please take them to applicable collection points in accordance with your national legislation. Symbol examples for batteries By disposing of these products and batteries correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling. For more information about collection and recycling of old products and batteries, please contact your local municipality, your waste disposal service or the point of sale where you purchased the items. These symbols are only valid in the European Union. For countries outside the European Union: If you wish to discard these items, please contact your local authorities or dealer and ask for the correct method of disposal. Pb K058a_A1_En Cautions on 3D Viewing • If you should experience any fatigue or discomfort while viewing 3D images, stop viewing them. □ Children, particularly those under 6, may be more prone to sensitivity, so guardians should watch for any signs of fatigue or discomfort. • When viewing 3D images , rest periodically.

Extended viewing of 3D images without rest periods could cause fatigue or discomfort. bDP-450_VXE8_IBD_EN. Book 4 □□□□ □□□□□□□□□□□□□□□□□□□□ Contents 01 Before you start What’s in the box . 5 Putting the batteries in the remote control. 6 About operation of this player from a mobile device (iPod, iPhone, iPad etc.

Playing from a specific time (Time Search) . Playing a specific title, chapter, track or file (Search) . Playing specified range of discs, titles or chapter (track/file) in random order . Playing in the desired order (Playlist) . 22 Connecting to the network through LAN interface. Restoring all the settings to the factory default settings. About how digital audio formats are output . 24 Operating the TV with the player’s remote control (BDP-450 only) . 50 Turn the power off when not using the player . 50 Caution for when the unit is installed in a rack with a glass door.



[You're reading an excerpt. Click here to read official PIONEER BDP-150-K user guide](http://yourpdfguides.com/dref/5473503)
<http://yourpdfguides.com/dref/5473503>

Playing in slow motion . Step forward and step reverse . Playing a specific section within a title or track repeatedly (A-B Repeat) . Playing in the desired order (Programmed Play) . Switching the CD/SACD playback area . Book 5 Before you start What's in the box • Remote control x 1 • Video/audio cable (yellow/white/red plugs) x 1 (BDP-150 only) • AAA/R03 dry cell batteries x 2 • Warranty card (European and Russian models only) • Power cord • Operating instructions (this document) Press lightly on this part and slide into the direction of the arrow. chapter 1 01 BDP-450 1 Open the rear cover. Putting the batteries in the remote control The batteries included with the player have been provided to allow you to check product operation and may not last long. We recommend using alkaline batteries that have a longer life. WARNING • Do not use or store batteries in direct sunlight or other excessively hot place, such as inside a car or near a heater.

This can cause batteries to leak, overheat, explode or catch fire. It can also reduce the life or performance of batteries. Caution • Do not use any batteries other than the ones specified. Also, do not use a new battery together with an old one. When loading the batteries into the remote control, set them in the proper direction, as indicated by the polarity marks (and).

When inserting the batteries, make sure not to damage the springs on the battery's terminals. this can cause batteries to leak or overheat. Do not heat batteries, disassemble them, or throw them into flames or water. Batteries may have different voltages, even if they look similar. Do not use different kinds of batteries together.

To prevent leakage of battery fluid, remove the batteries if you do not plan to use the remote control for a long period of time (1 month or more). If the fluid should leak, wipe it carefully off the inside of the case, then insert new batteries. If a battery should leak and the fluid should get on your skin, flush it off with large quantities of water. When disposing of used batteries, please comply with governmental regulations or environmental public institution's rules that apply in your country/area. 2 Insert the batteries (AAA/R03 x 2). Insert as indicated by the marks into the battery compartment. Close securely (a click should be heard). Insert as indicated by the marks into the battery compartment. 3 Close the rear cover. Close securely (a click should be heard).

5 En BDP-450_VXE8_IBD_EN. Book 6 Software Update Product information on this player is provided on the Pioneer website. Check this website for update and service information on your Blu-ray disc player. Au/ About operation of this player from a mobile device (iPod, iPhone, iPad etc.) The player can be controlled from a mobile device by installing the special application onto the mobile device. For details, see the product information on the Pioneer website. This special application may be changed or discontinued without notice. 6 En BDP-450_VXE8_IBD_EN. Book 7 Types of discs/files that can be played Playable discs Discs with the logo marks below indicated on the disc label, package or jacket can be played. Caution • Only the discs that have been finalized can be played.

Discs on which video, image or audio files are recorded. This player does not support multisection discs or multiborder recording. Finalize them before playing them on this player. Book 8 • “Blu-ray Disc”, “Blu-ray” and “Blu-ray Disc” logo are trademarks of Blu-ray Disc Association. • “Dolby” and the double-D symbol are trademarks of Dolby Laboratories.

DTS-HD, the Symbol, & DTS-HD and the Symbol together are registered trademarks & DTS Master Audio \ Essential is a trademark of DTS, Inc. Discs that cannot be played • HD DVDs • DVD-RAM discs It is possible that some discs other than the ones listed above may not be playable either. Note • Some discs cannot be played, even if one of the logo marks on the previous page is indicated. To play 8 cm discs, set the disc in the 8 cm disc depression in the center of the disc tray. Playing BDs • BDs (BDMV) compatible with the formats below can be played.

– Blu-ray Disc Read-Only (ROM) Format Version 2 – Blu-ray Disc Recordable (R) Format Version 2 – Blu-ray Disc Rewritable (RE) Format Version 3 This player supports BD-ROM Profile 5. About playback of unauthorized copies Cinavia Notice This product uses Cinavia technology to limit the use of unauthorized copies of some commercially-produced film and videos and their soundtracks. When a prohibited use of an unauthorized copy is detected, a message will be displayed, contact the dealer. It may not be possible to play discs recorded using a computer or a BD/DVD recorder, if burn quality is not good due to characteristics of the disc, scratches, dirt on the disc, dirt on the recorder's lens, etc. About region numbers Blu-ray Disc Player and BD-ROM or DVD-Video discs are assigned region numbers according to the region in which they are sold. This player's region numbers are: • BD-ROM: – Europe, Australia and New Zealand models: B – Russia models: C – Others: A • DVD-Video: – Europe models: 2 – Australia and New Zealand models: 4 – Russia models: 5 – Others: 3 9 En BDP-450_VXE8_IBD_EN. Book 10 About video, audio, and image files and folders Audio and image files can be played on this player when the folders on the disc or USB device are created as described below. Mp3 01 Folder Folder ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Com for more information on how to complete your registration.

Mp3 DivX®, DivX Certified®, DivX Plus™ HD and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under license. Note • This DivX® Certified device must be registered in order to play DivX Video-on-Demand (VOD) content. First generate the DivX VOD registration code for your device and submit it during the registration process. important: DivX VOD content is protected by a DivX DRM (Digital Rights Management) system that restricts playback to registered DivX Certified devices.



You're reading an excerpt. [Click here to read official PIONEER BDP-150-K user guide](http://yourpdfguides.com/dref/5473503)

□ Operating the player with the Flat Screen TV's remote control. Such player operations as starting and stopping playback and displaying the menus can be performed from the Flat Screen TV. □ The player's playback picture is displayed on the Flat Screen TV's screen. (Auto-select function) The input switches automatically on the Flat Screen TV and AV system (AV receiver or amplifier, etc.) when playback is started on the player or the HOME MENU is displayed.

When the input is switched, the playback picture, the HOME MENU appears on the Flat Screen TV. π Sound Retriever Link About Sound Retriever Link
Sound Retriever Link is a sound quality correction control technology that automatically adjusts the compressed sound quality for the connected AV receiver using HDMI control function. Sound Retriever Link function allows you to enjoy higher quality audio by setting the connected AV receiver's Sound Retriever function automatically. Sound Retriever Link function on this player works exclusively with the following situations.

□ When playing via a network or playing PC contents stored on a USB device. □ The Pioneer AV receiver compatible with Sound Retriever Link function is connected to this player through an HDMI cable and the player's setting is set as shown below (page 42). control: On 18 En BDP-450_VXE8_IBD_EN. Book 19 □□□ □□□□□□□□□□□□□□□□□□□□□□□□□□□□ □ Also refer to the instructions of the AV receiver. □ See Pioneer website about AV receivers compatible with Sound Retriever Link function.

Caution • Connect the player directly to the Pioneer AV receiver compatible with Sound Retriever Link function. Interrupting a direct connection with an amplifier or AV converter (such as an HDMI switch) can cause malfunction. π About the PQLS function (Only for BDP-450) PQLS (Precision Quartz Lock System) is a digital audio transfer control technology using the HDMI control function. The player's output signals are controlled from the AV receiver to achieve high sound quality playback using the receiver's quartz oscillator. This eliminates the influence of the jitter generated during signal transfer which can adversely affect the sound quality.

□ This player supports the functions below. □ The "PQLS 2ch Audio" function that is activated when playing music CDs (CD-DAs) – The "PQLS Multi Surround" function that is activated when playing all discs (BDs, DVDs, etc.) with linear PCM audio output – The "PQLS Bitstream" function that is activated when playing with bitstream audio output • The various PQLS functions are activated when a Pioneer AV receiver supporting the PQLS functions is connected directly to the HDMI OUT terminal with an HDMI cable and the player's settings are set as shown below (page 42). control: On • Also refer to the AV receiver's operating instructions. □ See the Pioneer website for AV receivers supporting the PQLS function. **Caution •** The PQLS function may stop working when the video output resolution is switched. The PQLS function will start working again once playback is stopped then restarted. □ When the PQLS 2ch function is activated, the output from the player's VIDEO OUTPUT jacks may not have the proper colors. If this happens, connect the TV and AV receiver's HDMI terminals to view the picture. □ Turn on the power of the AV receiver connected to the HDMI OUT terminal, then start playback of the disc.

Note • PQLS indicator on the player's front panel display lights when the PQLS function is activated (page 15). 02 □ Stream Smoother (only for BDP-450) Stream Smoother is a function that automatically improves picture quality when playing network video contents by using a built-in high picture quality circuit to reduce mosquito noise, block noise, etc. Stream Smoother function on this player works exclusively with the following situations. • When playing a video distribution service on a network or PC contents stored on a medium. **Note •** On the BDP-450, this function is activated even when no AV receiver is connected. π Stream Smoother Link (only for BDP-150) About Stream Smoother Link Stream Smoother Link is a function that improves picture quality of network video contents using the control function with HDMI. Stream Smoother Link function allows you to enjoy a high quality picture with less noise by setting the connected AV receiver's Stream Smoother function automatically. Stream Smoother Link function on this player works exclusively with the following situations. • When playing a video distribution service on a network or PC contents stored on a medium. □ The Pioneer AV receiver with Stream Smoother Link function is connected to this player through an HDMI cable and the player's setting is set as shown below (page 42).

Also refer to the instructions for the AV receiver. Control: On See Pioneer website about AV receivers compatible with Stream Smoother Link function. **Caution •** Connect the player directly to the Pioneer AV receiver compatible with Stream Smoother Link function. Interrupting a direct connection with an amplifier or AV converter (such as HDMI switch) can cause malfunction. 19 En BDP-450_VXE8_IBD_EN.

Book 20 □□□ □□□□□□□□□□□□□□□□□□□□□□□□□□□□ 02 Connecting a TV See Connecting an AV receiver or amplifier on the right column to connect an AV receiver or amplifier using an HDMI cable. **Caution •** Hold the plug when connecting and disconnecting the cable. □ Placing a load on the plug could result in faulty contact and no video signals being output. Connecting an AV receiver or amplifier Connect to an AV receiver or amplifier in order to enjoy the surround sound of Dolby TrueHD, Dolby Digital Plus, Dolby Digital, DTS-HD Master Audio, DTS-HD High Resolution Audio or DTS Digital Surround. For instructions on connecting the TV and speakers to the AV receiver or amplifier, refer to the operating instructions for AV receiver or amplifier.

Caution • Hold the plug when connecting and disconnecting the cable. □ Placing a load on the plug could result in faulty contact and no video signals being output. See Connecting an AV receiver or amplifier on the right column. **caution •** Make sure to set HDMI Mode to Dual (page 41). π BDP-150 BDP-150's rear panel TV Direction of signal flow HDMI cable (commercially available) HDMI cable (commercially available) To HDMI input terminal Match the direction of the plug to the terminal and insert straight. It is also possible to connect to an AV receiver or amplifier using an HDMI cable (on the right column). Direction of signal flow Match the direction of the plug to the terminal and insert straight. HDMI cable (commercially available) To HDMI input terminal AV receiver or amplifier TV AV receiver or amplifier HDMI cable (commercially available) From HDMI output terminal to HDMI input terminal Match the direction of the plug to the terminal and insert straight.



[You're reading an excerpt. Click here to read official PIONEER BDP-150-K user guide](http://yourpdfguides.com/dref/5473503)
<http://yourpdfguides.com/dref/5473503>

