



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for PIONEER BDP170. You'll find the answers to all your questions on the PIONEER BDP170 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual PIONEER BDP170
User guide PIONEER BDP170
Operating instructions PIONEER BDP170
Instructions for use PIONEER BDP170
Instruction manual PIONEER BDP170

Pioneer

BDP-170
BDP-170-K
BDP-170-S
BDP-170-W

Blu-ray 3D™ PLAYER

For customers in Europe:
Discover the benefits of registering your product online at
<http://www.pioneer.co.uk> (or: <http://www.pioneer.eu>)
Download an electronic version of this manual from our website.

Operating Instructions

Blu-ray
3D™

Blu-ray Disc

BD-LIVE™

DVD
VIDEO

MP3, AAC, WMA

home
THEATRE

dlna
CERTIFIED

HDMI



[You're reading an excerpt. Click here to read official PIONEER BDP170 user guide](http://yourpdfguides.com/dref/5736136)
<http://yourpdfguides.com/dref/5736136>

Manual abstract:

NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL. Operating Environment Operating environment temperature and humidity: +5 °C to +35 °C (+41 °F to +95 °F); less than 85 %RH (cooling vents not blocked) Do not install this unit in a poorly ventilated area, or in locations exposed to high humidity or direct sunlight (or strong artificial light) D3-4-2-1-7c*_A1_En D3-4-2-1-1_B1_En CAUTION This product is a class 1 laser product classified under the Safety of laser products, IEC 60825-1:2007, but this product contains a laser diode higher than Class 1. To ensure continued safety, do not remove any covers or attempt to gain access to the inside of the product. Refer all servicing to qualified personnel. WARNING

This equipment is not waterproof. To prevent a fire or shock hazard, do not place any container filled with liquid near this equipment (such as a vase or flower pot) or expose it to dripping, splashing, rain or moisture. D3-4-2-1-3_A1_En CLASS 1 LASER PRODUCT The following caution label appears on your unit. Location: inside of the unit CAUTION The □ STANDBY/ON switch on this unit will not completely shut off all power from the AC outlet. Since the power cord serves as the main disconnect device for the unit, you will need to unplug it from the AC outlet to shut down all power.

Therefore, make sure the unit has been installed so that the power cord can be easily unplugged from the AC outlet in case of an accident. To avoid fire hazard, the power cord should also be unplugged from the AC outlet when left unused for a long period of time (for example, when on vacation). D3-4-2-2-2a*_A1_En D58-5-2-2b*_B1_En WARNING To prevent a fire hazard, do not place any naked flame sources (such as a lighted candle) on the equipment. D3-4-2-1-7a_A1_En VENTILATION CAUTION When installing this unit, make sure to leave space around the unit for ventilation to improve heat radiation (at least 10 cm at top, 10 cm at rear, and 10 cm at each side). This product is for general household purposes.

Any failure due to use for other than household purposes (such as long-term use for business purposes in a restaurant or use in a car or ship) and which requires repair will be charged for even during the warranty period. K041_A1_En WARNING Slots and openings in the cabinet are provided for ventilation to ensure reliable operation of the product, and to protect it from overheating. To prevent fire hazard, the openings should never be blocked or covered with items (such as newspapers, table-cloths, curtains) or by operating the equipment on thick carpet or a bed. D3-4-2-1-7b*_A1_En

BDP-170_72-BDP170-GBRB1_En.book 3 □□□ □□□□□□□□□□□□□□□□□□□□□□□□ POWER-CORD CAUTION Handle the power cord by the plug. Do not pull out the plug by tugging the cord and never touch the power cord when your hands are wet as this could cause a short circuit or electric shock. Do not place the unit, a piece of furniture, etc., on the power cord, or pinch the cord. Never make a knot in the cord or tie it with other cords. The power cords should be routed such that they are not likely to be stepped on. A damaged power cord can cause a fire or give you an electrical shock. Check the power cord once in a while. When you find it damaged, ask your nearest PIONEER authorized service center or your dealer for a replacement. S002*_A1_En Condensation If the player is moved suddenly from a cold place into a warm room (in winter, for example) or if the temperature in the room in which the player is installed rises suddenly due to a heater, etc., water droplets (condensation) may form inside (on operating parts and the lens).

When condensation is present, the player will not operate properly and playback is not possible. Let the player stand at room temperature for 1 or 2 hours with the power turned on (the time depends on the extent of condensation). The water droplets will dissipate and playback will become possible. Condensation can also occur in the summer if the player is exposed to the direct wind from an air-conditioner. If this happens, move the player to a different place.

S005_A1_En [Taiwan model only] Taiwanese two pin flat-bladed plug K056_A1_En [European model only] Information for users on collection and disposal of old equipment and used batteries Symbol for equipment These symbols on the products, packaging, and/or accompanying documents mean that used electrical and electronic products and batteries should not be mixed with general household waste. For proper treatment, recovery and recycling of old products and used batteries, please take them to applicable collection points in accordance with your national legislation. Symbol examples for batteries By disposing of these products and batteries correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling. For more information about collection and recycling of old products and batteries, please contact your local municipality, your waste disposal service or the point of sale where you purchased the items. These symbols are only valid in the European Union.

For countries outside the European Union: If you wish to discard these items, please contact your local authorities or dealer and ask for the correct method of disposal. Pb K058a_A1_En Cautions on 3D Viewing • If you should experience any fatigue or discomfort while viewing 3D images, stop viewing them. • Children, particularly those under 6, may be more prone to sensitivity, so guardians should watch for any signs of fatigue or discomfort. • When viewing 3D images, rest periodically. Extended viewing of 3D images without rest periods could cause fatigue or discomfort.

BDP-170_72-BDP170-GBRB1_En.book 4 □□□ □□□□□□□□□□□□□□□□□□□□□ Contents 01 Before you start What's in the box

.....
.....
.....
.....
. 5 Putting the batteries in the remote control
. . . . 5 Software Update
.....
.....
.....
.....
6 About operation of this player from a mobile device (iPod, iPhone, iPad etc.). . . .
.....
.....
.....
. 6 Types of discs/files that can be played
.....
. 7 Playable discs .
.....

.....
.....
.....
..... 7 Playable files
.....
.....
.....
.....
.....
..... 10 Part Names and Functions
.....
.....
..... 13 Remote Control
.....
.....
.....
.....
..... 13 Front Panel
.....
.....
.....
.....
..... 14 Rear Panel
.....
.....
.....
..... 14 About Home Media Gallery
.....
.....
..... 29 About network playback
.....
.....
.....
..... 29 Playback file on the network
.....
.....
..... 30 Disc/USB playback
.....
.....
.....
..... 30 Playing back image files
.....
.....
..... 31 Playing in the desired order (Playlist).
.....
.....
..... 31 Adding tracks/files



**You're reading an excerpt. Click here to read official PIONEER
BDP170 user guide**
<http://yourpdfguides.com/dref/5736136>

17 Connecting audio cables
.....
.....
... 18 Connecting an AV receiver or amplifier using an coaxial digital audio cable . .
.....
.....
..... 18 Connecting components to the USB port
.....
.....
18 About USB devices
.....
.....
.....
. 18 Connecting the USB device
.....
.....
18 Connecting to the network through LAN interface
.. 19 Connecting with a LAN cable (wired LAN)
.....
..... 19 Connecting to a wireless LAN
.....
.....
..... 19 Connecting the power cord
.....
.....
.....
.. 19 06 Playing the web contents 07 Advanced settings Available web contents
.....
.....
.....
. 35 Playing the items
.....
.....
.....
..... 35 Changing the settings
.....
.....
.....
..... 36 Operating the Initial Setup screen
.....
..... 36 Software updating .
.....
.....
.....
.....
..... 42 Restoring all the settings to the factory default settings
.....
.....
.....
..... 42 Wireless network connection
.....
.....
.....
..... 43 Wireless network setup

.....
....	43 WPS setup (Wi-Fi Protected Setup) .
.....
.....	44 WPS connection setting . .
.....
.....
.....	44 About how digital audio formats are output
.....
..	45 Language Code Table and Country/Area Code Table . . .
..	46 Language Code Table
.....
.....
.....	46 Country/Area Code Table
.....
.....
..	46 03 Getting Started 04 Playback Making settings using the Setup Navigator menu . . .
.....
.....	20 Playing discs or files
.....
.....
.....	21 Quick view (Quick view with audio)
.....
.....	21 Forward and reverse scanning .
.....
.....
.....	22 Playing specific chapters, tracks or files
.....
.....
.....	22 Skipping content
.....
.....
.....	22 To return to a position a short while ago
.....
.....	22 To advance to a position slightly ahead . . .
.....
.....
.....	22 Playing in slow motion
.....
.....
.....
.....	22 Step forward and step reverse
.....
.....
..	22 Playing a specific section within a title or track repeatedly (A-B Repeat) . . .
.....
.....
.....	22 Playing repeatedly (Repeat Play) .
.....
.....
.....	22 Playing in the desired order (Programmed Play) .
.....
.....	23 Making bookmarks

.....
.....
.....
..... 23 Zoom
.....
.....

...ge the springs on the battery's terminals. This can cause batteries to leak or overheat. •Do not heat batteries, disassemble them, or throw them into flames or water. •Batteries may have different voltages, even if they look similar. Do not use different kinds of batteries together. •To prevent leakage of battery fluid, remove the batteries if you do not plan to use the remote control for a long period of time (1 month or more). If the fluid should leak, wipe it carefully off the inside of the case, then insert new batteries.

If a battery should leak and the fluid should get on your skin, flush it off with large quantities of water. •When disposing of used batteries, please comply with governmental regulations or environmental public institution's rules that apply in your country/area. 2 Insert (2 x AAA 700 size) batteries that are supplied.

Insert first from the side. 3 Close the rear cover. Close securely (a click should be heard). About the function for restricting access to harmful information on the Internet •This unit is equipped with a function for restricting viewing of web contents, etc., you do not want your children or others to see.

•To use this restriction function, change the Internet settings (page 39). 5 En BDP-170_72-BDP170-GBRB1_En.

book 6 01 Software Update Product information on this player is provided on the Pioneer website. Check this website for update and service information on your Blu-ray disc player. IN Europe: <http://www.pioneer.eu/> IN U.

K.: <http://www.pioneer.eu/> <http://www.pioneer.com.sg/>

co.uk/ IN Hong Kong: <http://www.pioneerhongkong.com.hk/> IN Singapore: <http://www.pioneer.com.sg/firmwaredownload> IN Australia: <http://www.pioneer.com>

au/ About operation of this player from a mobile device (iPod, iPhone, iPad etc.) The player can be controlled from a mobile device by installing the special application onto the mobile device. For details, see the product information on the Pioneer website. This special application may be changed or discontinued without notice. 6 En BDP-170_72-BDP170-GBRB1_En.

book 7 Types of discs/files that can be played Playable discs Discs with the logo marks below indicated on the disc label, package or jacket can be played. Caution •Only the discs that have been finalized can be played. Application format Disc type BD-ROM BD2 BD-R BD-RE 01 Logo BDMV BDAV DVDAudio DVDAudio DVD VR CD-DA DTS-CD

DATADISC1 DVD-ROM DVD-R2,3,4 DVD-R2,3,4 DVD-RW3,7 DVD-RW3,7 DVD+R2,3 DVD+RW3 CD-DA (Audio CD)8 CD CD-R3 CD-RW3 CD-ROM 1. 2. 3.

4. 5. 6. 7. 8.

Discs on which video, image or audio files are recorded. Including dual-layered discs. Finalize them before playing them on this player. DVD-R for Authoring discs (3.95 GB and 4.

7 GB) cannot be played. Including the AVCHD format. Including the AVCREC format. Version 1.0 DVD-RW discs cannot be played. Including Video CDs. •

“Blu-ray Disc”, “Blu-ray” and “Blu-ray Disc” logo are trademarks of Blu-ray Disc Association. • is a trademark of DVD Format/Logo Licensing Corporation. 7 En BDP-170_72-BDP170-GBRB1_En.book 8 Discs that cannot be played • HD DVDs • DVD-RAM discs It is possible that some discs other than the ones listed above may not be playable either.



[You're reading an excerpt. Click here to read official PIONEER BDP170 user guide](#)
<http://yourpdfguides.com/dref/5736136>

• The scanning speed switches each time the button is pressed. The speed steps depend on the disc or file (the speed is displayed on the TV screen). □ To resume normal playback • Press □. Step forward and step reverse □ While playback is paused, press /□. • The picture moves a step forward each time the button is pressed. • Step reversing is not possible. □ To resume normal playback □ Press □. Playing specific chapters, tracks or files □ During playback, input the number of the chapter/track/file you want to select. • Use the number buttons (0 to 9) to input the number, then press ENTER. • Press CLEAR to clear the values you have input.

□ To resume normal playback • Press □. Playing a specific section within a title or track repeatedly (A-B Repeat) Use this procedure to play a specific section within a title or track repeatedly. 1 During playback, press A-B to select the starting point. • [A-] is displayed on the TV screen. 2 During playback, press A-B to select the ending point. • A-B Repeat playback starts. Skipping content □ During playback, press □ or □. • When □ is pressed, the playback skips ahead to the beginning of the next chapter/track/file. • When □ is pressed while a video or audio file is playing, the playback skips back to the beginning of the currently playing chapter/track/file. Press twice to skip back to the beginning of the previous chapter/ track/file.

• When □ is pressed while an image file is playing, playback returns to the previous file. □ To cancel A-B Repeat play • Press A-B during the A-B Repeat play. Note • A-B Repeat play is canceled in the following cases: – When you search outside of the repeat range. – When you start other Repeat Play or Random Play. To return to a position a short while ago Press during playback to return to a position 10 seconds earlier.

□ During playback, press REPLAY. Playing repeatedly (Repeat Play) Use this procedure to play the currently playing disc, title, chapter, track or file repeatedly. □ During playback, press REPEAT. • Each time you press REPEAT the type of repeat modes changes as shown below. BD Current chapter □ Current title DVD Current chapter □ Current title □ All titles CD/Video file/Audio file/Image file Current track/file □ All tracks/All files in folder To advance to a position slightly ahead Press during playback to forward to a position 30 seconds later.

□ During playback, press SHORT SKIP. Playing in slow motion □ While playback is paused, press and hold /□. • The speed switches each time the button is pressed (the speed is displayed on the TV screen). • Reverse slow motion playback is not possible. 22 En BDP-170_72-BDP170-GBRB1_En.book 23 □□□ □□□□□□□□□□□□□□□□□□□□□□□□ □ To cancel Repeat Play • Press REPEAT several times during Repeat Play. Note • Repeat Play is canceled in the following cases: – When you search outside the repeat range. – When you start other Repeat Play or Random Play. □ Deleting the bookmark □ Select the bookmark you want to delete, then press CLEAR. • Bookmarks may not be allowed to make for some discs.

• Bookmarks are canceled in the following cases: – When the player's power turned off. – When the disc tray is opened. 04 Playing in the desired order (Programmed Play) 1 During playback, press PROGRAM. • The program screen is displayed. Zoom □ During playback, press ZOOM. • Each time you press ZOOM, the zoom level changes as shown below. [Zoom 2x] □ [Zoom 3x] □ [Zoom 4x] □ [Zoom 1/2] □ [Zoom 1/3] □ [Zoom 1/4] □ Normal (not displayed) Note • This function does not work with some discs. 2 Select the program number. Use □/□ to select, then press ENTER. 3 Select the track/title/chapter you want to play.

Use □/□/□/□ to select, then press ENTER. 4 Press □. • Playback starts. □ Editing the program 1 Select the program number you want to edit, then press ENTER. 2 Select title/chapter, then press ENTER.

Playing photos as slideshows This function plays the photos, switching them automatically. □ During playback, press INDEX. • Display the thumbnail of image files. The maximum number is 12 at once. • If you select one of the image and press ENTER, slideshow will start from the image you selected. □ Deleting the program □ Select the program number you want to delete, then press CLEAR. • To delete all the programs, press Note • When you use audio CDs for Programmed Play, enter the track number in step 3. • This function does not work with BDs. RETURN. □ Rotating/inverting photos When a slideshow is playing or paused, the display switches as shown below when the □/□/□/□ buttons are pressed. □ button: Rotates 90° clockwise □ button: Rotates 90° counterclockwise □ button: Flips horizontally □ button: Flips vertically Making bookmarks You can make bookmarks on the video currently playing and play back the scene later. □ During playback, press BOOKMARK. • The bookmark is made. • Maximum number of bookmarks are 12. Switching the camera angles For BD-ROM and DVD-Video discs on which multiple angles are recorded, the angles can be switched during playback.

1 2 During playback, press FUNCTION. Select Angle from the FUNCTION menu. • The current angle and total number of recorded angles are displayed on the TV screen. • If the angles are not switched, switch them from the disc menu screen. Note • Some discs cannot switch angles. □ Playing the bookmarked scene 1 Press and hold BOOKMARK for a few seconds. • The list of bookmarks is displayed. 2 Select the bookmark you want to play. Use □/□ to select, then press ENTER. 23 En BDP-170_72-BDP170-GBRB1_En.

book 24 □□□ □□□□□□□□□□□□□□□□□□□□□□□□ 04 Switching the subtitles For discs or files on which multiple subtitles are recorded, the subtitles can be switched during playback. Caution • The subtitles cannot be switched for discs recorded by a DVD or BD recorder. Also refer to the operating instructions for the device used for recording. □ During playback, press SUBTITLE. • The current subtitle and total number of recorded subtitles are displayed on the TV screen.

To switch the subtitle, press SUBTITLE again. • The subtitles can also be switched by selecting Subtitle from the FUNCTION menu. • If the subtitles are not switched when SUBTITLE is pressed, switch them from the disc menu screen. Moving subtitles The position of the subtitles displayed while playing BDRoms or DVDs can be moved. 1 Play the BD-ROM or DVD video and display the subtitles on the TV screen.

2 Press and hold the SUBTITLE button for at least 2 seconds. • The Subtitle shift mode is set. • [Subtitle shift mode] is displayed on the TV screen. 3 Use the □/□ buttons to move the position of the subtitles.



[You're reading an excerpt. Click here to read official PIONEER](http://yourpdfguides.com/dref/5736136)

[BDP170 user guide](http://yourpdfguides.com/dref/5736136)

<http://yourpdfguides.com/dref/5736136>

• Use the buttons to move the position of the subtitles. • Once the setting is complete, press ENTER. 4 Cancel the Subtitle shift mode. Press the ENTER button. Turning the subtitles off Press SUBTITLE several times or select Subtitle from the FUNCTION menu to switch the setting to Off. Switching the audio For discs or files on which multiple audio streams/ channels are recorded, audio streams/channels can be switched during playback.

During playback, press AUDIO. • The current audio and total number of recorded audio streams are displayed on the TV screen. To switch the audio, press AUDIO again. • The audio can also be switched by selecting Audio from the FUNCTION menu. • If the audio is not switched when AUDIO is pressed, switch it from the disc menu screen. About displaying external subtitle files while playing DivX media files In addition to the subtitles recorded in DivX media files, this player also supports the display of external subtitle files. If a file has the same name as that of a DivX media file aside from the file extension and the extension is one of the extensions listed below, the file is treated as an external subtitle file. Note that DivX media files and external subtitle files must be located in the same folder. Only one external subtitle file can be displayed on this player. Use a computer, etc.

, to delete any external subtitle files you do not want to display from the disc. Text files with the extensions “.smi”, “.srt”, “.sub” and “.txt” are supported. Note • Depending on the file, the external subtitles may not be displayed properly. Switching the CD/SACD playback area 1 Select the area you want to play. In the stop mode, press CD/SACD. The playback area switches on the front panel display window each time the button is pressed. [CD AREA] [SACD 2CH] [SACD MCH] (back to beginning) • During playback, press STOP twice to cancel continuous play before selecting the playback area. Displaying the disc information Press DISPLAY. The disc information appears on the TV screen. To switch off the information display, press DISPLAY again. The information display differs between during playback and when playback is stopped. 24 En BDP-170_72-BDP170-GBRB1_En.book 25 Enjoying BONUSVIEW or BD-LIVE This player is compatible with BD-Video BONUSVIEW and BD-LIVE. When using BD-Video discs compatible with BONUSVIEW, you can enjoy such functions as secondary video (picture in picture) (page 27) and secondary audio (page 27). With BD-Video discs supporting BD-LIVE, special video images and other data can be downloaded from the Internet. Data recorded on BD video and downloaded from BDLIVE is stored on the USB flash drive (external memory).

To enjoy these functions, connect a USB flash drive (minimum 1 GB capacity, 2 GB or greater recommended) supporting USB 2.0 High Speed (480 Mbit/s) to the USB port. • When you insert or remove a USB flash drive, be sure to turn the player's power off. • To recall data stored in the USB flash drive, first insert the disc media that was being used at the time the data was downloaded (if a different disc is loaded, the data stored on the USB flash drive cannot be played). • If a USB flash drive containing other data (previously recorded) is used, the video and audio may not play back properly. • Do not disconnect the USB flash drive while playback is in progress. • Some time may be required for the data to load (read/ write). Caution • It may not be possible to use the BONUSVIEW and BD-LIVE functions if there is insufficient space on the USB flash drive. In this case, refer to Erasing data that has been added to BDs and application data on page 41 for erasing the Virtual Package data and the BD-LIVE data in the USB flash drive. Note • Operation of USB flash drives is not guaranteed. • Playback of BD-LIVE function data differs depending on the disc used. For details, consult the user instructions supplied with the disc. • To enjoy the BD-LIVE function, a network connection and settings are required (pages 19 and 40). • BD-LIVE is a function that provides for connection to the Internet. Discs supporting the BD-LIVE function may send ID codes identifying this player and the disc to the contents provider via the Internet.

04 25 En BDP-170_72-BDP170-GBRB1_En.book 26 04 Playback functions The functions that can be used differ according to the type of disc and file. In some cases, some of the functions cannot be used. Check the usable functions on the table below. Disc/file type Function1 BD-R /-RE 3 DVDVideo 3 DVD-R /-RW (VR format) BD-ROM 3 AVCREC AVCHD 3 Video file Image file Audio file 4 Audio CD 4 Quick playback2 Forward and reverse scanning Short Skip/Replay Playing specific titles, chapters or tracks Skipping content Slow motion play 5, 6 3 Step forward and step reverse7, 8 A-B Repeat play7 Repeat Play Zoom Angle9 Subtitle10 Audio11 Disc information 1.

2. 3. 4. 5. 6. 7. 8. 9. 10. Some functions may not work for some discs or files, even if indicated [] on the table.

Depending on the audio format, such as Dolby TreHD and DTS-HD Master Audio, there might be no sound output during fast-forward. Sound is not produced during forward and reverse scanning. Sound is produced during forward and reverse scanning. No sound is output during slow motion playback. Reverse slow motion playback is not possible. If a chapter is switched, some discs will cause an automatic return to normal playback. Reverse step playback is not possible. Angle mark is displayed for scenes at which multiple angles are recorded if Angle Mark is set to On (page 39). • The types of recorded subtitles depend on the disc and file. • In some cases, the subtitle may switch or the switching screen provided on the disc may be displayed immediately, without the current subtitle or the total number of subtitles recorded on the disc being displayed.

11. The types of recorded audio streams depend on the disc and file. 26 En BDP-170_72-BDP170-GBRB1_En.book 27

Using the FUNCTION menu Various functions can be called out according to the player's operating status.



[You're reading an excerpt. Click here to read official PIONEER BDP170 user guide](#)
<http://yourpdfguides.com/dref/5736136>