



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for PIONEER DEH-150MP. You'll find the answers to all your questions on the PIONEER DEH-150MP in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual PIONEER DEH-150MP  
User guide PIONEER DEH-150MP  
Operating instructions PIONEER DEH-150MP  
Instructions for use PIONEER DEH-150MP  
Instruction manual PIONEER DEH-150MP

CD RDS RECEIVER  
AUTORADIO CD RDS  
SINTOLETTORE CD RDS  
REPRODUCOR DE CD CON RECEPTOR RDS  
CD RDS-EMPFÄNGER  
CD RDS-ONTVANGER  
CD RDS ПРИЕМНИК

**DEH-150MP**  
**DEH-150MPG**

**Pioneer**

Owner's Manual  
Mode d'emploi  
Manuale d'istruzioni  
Manual de instrucciones  
Bedienungsanleitung  
Handleiding  
Руководство пользователя

English  
Français  
Italiano  
Español  
Duits  
Nederlands  
Русский



[You're reading an excerpt. Click here to read official PIONEER DEH-150MP user guide](http://yourpdfguides.com/dref/5480726)  
<http://yourpdfguides.com/dref/5480726>

### Manual abstract:

The RDS (radio data system) function only operates in areas with broadcasting RDS signals for FM stations. Head unit 1 2 3 4 5 6 1 Indicator (list) Sub information section TA (traffic announcements) TP (traffic program identification) (sound retriever) LOC (repeat) (random) State The list function is being operated. sub information is displayed. 2 7 8 CAUTION This product is a class 1 laser product classified under the Safety of laser products, IEC 60825-1:2007. If you want to dispose this product, do not mix it with general household waste. There is a separate collection system for used electronic products in accordance with legislation that requires proper treatment, recovery and recycling. Track or folder repeat is on. CD player: elapsed playback time and text information Appears when a lower tier of folder or menu exists. CAUTION! Do not allow this unit to come into contact with liquids. electrical shock could result.

Also, damage to this unit, smoke, and overheating could result from contact with liquids. ! The Pioneer CarStereo-Pass is for use only in Germany. ! Always keep the volume low enough to hear outside sounds. If the battery is disconnected or discharged, any preset memory will be erased. Note Function setting operations are completed even if the menu is canceled before the operations are confirmed.

4 5 6 7 Private households in the member states of the EU, in Switzerland and Norway may return their used electronic products free of charge to designated collection facilities or to a retailer (if you purchase a similar new one). For countries not mentioned above, please contact your local authorities for the correct method of disposal. By doing so you will ensure that your disposed product undergoes the necessary treatment, recovery and recycling and thus prevent potential negative effects on the environment and human health. aUX input jack (3. 5 mm stereo jack) Detach button Display indication 1 2 3 4 5 6 8 7 9 Main information section a 9 a In case of trouble Should this unit fail to operate properly, please contact your dealer or nearest authorized PIONEER Service Station.

Set up menu When you turn the ignition switch to ON after installation, set up menu appears on the display. You can set up the menu options below. 2 En Section Operating this unit Operating this unit 02 1 After installation of this unit, turn the ignition switch to ON. FM STEP (FM tuning step) Normally, the FM tuning step employed by seek tuning is 50 kHz. When AF or TA is on, the tuning step automatically changes to 100 kHz. It may be preferable to set the tuning step to 50 kHz when AF is on. ! The tuning step remains at 50 kHz during manual tuning. # If you do not operate for 30 seconds, the set up menu will not be displayed. # If you prefer not to set up at this time, turn M. If you select NO, you cannot set up in the set up menu.

Removing the front panel to protect your unit from theft 1 Press the detach button to release the front panel. 2 Push the front panel upward (M) and then pull it toward (N) you. English CAUTION For safety reasons, park your vehicle when removing the front panel. 3 Always keep the detached front panel in a protection device such as a protection case. Re-attaching the front panel 1 Slide the front panel to the left. Make sure to insert the tabs on the left side of the head unit into the slots on the front panel. 4 Perform the following procedures to set the menu. To proceed to the next menu option, you need to confirm your selection. LANGUAGE (multi-language) This unit can display the text information from a compressed audio file even for information embedded in English or Russian. ! If the embedded language and the selected language setting are not the same, text information may not display properly.

! Some characters may not be displayed properly. 5 To finish your settings, turn M. # If you prefer to change your setting again, turn M. Note When this unit's blue/white lead is connected to the vehicle's auto-antenna relay control terminal, the vehicle's antenna extends when this unit's source is turned on. To retract the antenna, turn the source off.

You can set up the menu options from the system menu. For details about the settings, refer to System menu on page 6. Frequently used menu operations Returning to the previous display Returning to the previous list (the folder one level higher) 1 Press /DIMMER. Returning to the ordinary display Canceling the main menu 1 Press BAND. Returning to the ordinary display from the list 1 Press BAND.

basic operations Important ! Handle gently when removing or attaching the front panel. Keep the front panel out of direct sunlight and high temperatures. ! To avoid damaging the device or vehicle interior, remove any cables and devices attached to the front panel before detaching it. 2 Press the right side of the front panel until it is firmly seated. If you cannot attach the front panel to the head unit successfully, make sure that you are placing the front panel onto the head unit correctly. Forcing the front panel into place may result in damage to the front panel or head unit. Turning the unit on 1 Press SRC/OFF to turn the unit on. Turning the unit off 1 Press and hold SRC/OFF until the unit turns off. En 3 Section 02 Operating this unit Operating this unit Tuner Basic operations 2 Press one of the preset tuning buttons (1/ to 6/) to select the desired station. Switching the display Selecting a band 1 Press BAND until the desired band (FM1, FM2, FM3 for FM or MW/LW) is displayed.

For details about the settings, refer to SEEK (left/right key setting) on the next page. For details about the settings, refer to SEEK (left/right key setting) on the next page. While pressing and holding c or d, you can skip stations. Seek tuning starts as soon as you release c or d. Selecting the desired text information 1 Press DISP to cycle between the following: ! If the program service name cannot be acquired in FREQUENCY, the broadcast frequency is displayed instead.

If the program service name is detected, the program service name will be displayed. Depending on the band, text information can be changed. ! Text information items that can be changed depend on the area. Searching for an RDS station by PTY information You can search for general types of broadcasting programs, such as those listed in the following section. The unit searches for a station broadcasting that type of program.

When a station is found, its program service name is displayed. The program of some stations may differ from that indicated by the transmitted PTY. ! If no station is broadcasting the type of program you searched for, NOT FOUND is displayed for about two seconds and then the tuner returns to the original station. Once selected, the following functions can be adjusted. # If MW/LW band is selected, only BSM, LOCAL and SEEK are available.

bSM (best stations memory) PTY list NEWS/INFO (news and information) NEWS (News) , AFFAIRS (Current affairs) , INFO (Information) , SPORT (Sports) , WEATHER (Weather) , FINANCE (Finance) POPULAR (popular) POP MUS (Popular music) , ROCK MUS (Rock music) , EASY MUS (Easy listening) , OTH MUS (Other music) , JAZZ (Jazz) , COUNTRY (Country music) , NAT MUS (National music) , OLDIES (Oldies music) , FOLK MUS (Folk music) CLASSICS (classics) LOCAL (local seek tuning) L.



[You're reading an excerpt. Click here to read official PIONEER](http://yourpdfguides.com/dref/5480726)

[DEH-150MP user guide](http://yourpdfguides.com/dref/5480726)

<http://yourpdfguides.com/dref/5480726>

CLASS (Light classical), CLASSIC (Classical) REGION (regional) When AF is used, the regional function limits the selection of stations to those broadcasting regional programs. BSM (best stations memory) automatically stores the six strongest stations in the order of their signal strength. Using PTY functions You can tune in to a station using PTY (program type) information. Note This unit's AF (alternative frequencies search) function can be turned on and off.

AF should be off for normal tuning operation (refer to AF (alternative frequencies search) on the next page). Storing and recalling stations for each band Using preset tuning buttons 1 When you find a station that you want to store in memory, press one of the preset tuning buttons (1/ to 6/ ) and hold until the preset number stops flashing. 4 En Section Operating this unit Operating this unit 02 Local seek tuning lets you tune in to only those radio stations with sufficiently strong signals for good reception. FM: OFF—LV1—LV2—LV3—LV4 MW/LW: OFF—LV1—LV2 The highest level setting allows reception of only the strongest stations, while lower levels allow the reception of weaker stations. SEEK (left/right key setting) You can assign a function to the left and right keys of the unit. Select MAN (manual tuning) to tune up or down manually or select PCH (preset channel) to switch between preset channels. When playing compressed audio, there is no sound during fast forward or reverse. Depending on the version of iTunes used to write MP3 files to a disc or media file types, incompatible text stored within an audio file may be displayed incorrectly. ! Text information items that can be changed depend on the media. Rtrv to cycle between: 1—2—OFF (off) 1 is effective for low compression rates, and 2 is effective for high compression rates.

English Selecting and playing files/ tracks from the name list 1 Press list mode. Switching the display Selecting the desired text information 1 Press DISP to cycle between the following: CD-DA ! Playing 1 When a file or track is selected, press M. c. Viewing a list of the files (or folders) in the selected folder 1 When a folder is selected, press M. c. Playing a song in the selected folder 1 When a folder is selected, press and hold M. Once selected, the function below can be adjusted. For details, refer to Enhancing compressed audio and restoring rich sound (sound retriever) on this page. Operations using special buttons

Selecting a repeat play range to cycle between the following: 1 Press 6/ ! aLL—Repeat all tracks ! ONE—Repeat the current track ! FLD—Repeat the current folder Playing tracks in random order to turn random play on or off. 1 Press 5/ Tracks in a selected repeat range are played in random order. ! To change songs during random play, press d to switch to the next track. Pressing c restarts playback of the current track from the beginning of the song. Once selected, the following audio functions can be adjusted. ! FADER is not available when SUB. CD/CD-R/CD-RW Basic operations Playing a CD/CD-R/CD-RW 1 Insert the disc into the disc loading slot with the label side up.

En 5 Section 02 Operating this unit Operating this unit ! W CTRL and HPF SETTING are not available when REAR/REAR is selected in SP-P/O MODE. @@W CTRL and HPF SETTING are not available when SUB. @@To return to the previous display. ! CUSTOM1 can be set separately for each source. ! CUSTOM2 is a shared setting used in common for all sources.

@@@You can also switch the equalizer by pressing repeatedly. @@@@Cut-off frequency: OFF—50HZ—63HZ—80HZ—100HZ—125HZ—160HZ—200HZ Slope level: -6—-12 SLA (source level adjust input jack. 2 Press SRC/OFF to select AUX as the source. @@@@Secure the wiring with cable clamps or adhesive tape. @@@@Cover any disconnected cable connectors with insulating tape. Do not shorten any cables. @@The current capacity of the cable is limited. @@Connect this cable to the system remote control of an external power amp or the vehicle's auto-antenna relay control terminal (max. 300 mA 12 V DC). If the vehicle is equipped with a glass antenna, connect it to the antenna booster power supply terminal.

! Never connect the blue/white cable to the power terminal of an external power amp. Also, never connect it to the power terminal of the auto antenna. Doing so may result in battery drain or a malfunction. Ground cables for this unit and other equipment (especially, high-current products such as power amps) must be wired separately. If they are not, an accidental detachment may result in a fire or malfunction. OF STAR If an unwanted display appears Turn off the unwanted display using the procedures listed below. Section Installation Installation 03 Power cord 3 4 2 5 6 1 3 7 5 8 4 6 a 9 e b c d 1 To power cord input 2 Depending on the kind of vehicle, the function of 3 and 5 may be different. In this case, be sure to connect 4 to 5 and 6 to 3. 7 Connect leads of the same color to each other. 8 Black (chassis ground) 9 Blue/white The pin position of the ISO connector will differ depending on the type of vehicle. connect 9 and b when Pin 5 is an antenna control type. In another type of vehicle, never connect 9 and b. C Yellow/black If you use an equipment with Mute function, wire this lead to the Audio Mute lead on that equipment. If not, keep the Audio Mute lead free of any connections. D Speaker leads White: Front left + White/black: Front left \* Gray: Front right + Gray/black: Front right \* Green: Rear left + or subwoofer + Green/black: Rear left \* or subwoofer \* Violet: Rear right + or subwoofer + Violet/black: Rear right \* or subwoofer \* e ISO connector In some vehicles, the ISO connector may be divided into two. In this case, be sure to connect to both connectors. notes ! Change the initial menu of this unit. refer to SP-P/O MODE (rear output and preout setting) on page 7. The subwoofer output of this unit is monaural. ! When using a subwoofer of 70 W (2 W), be sure to connect the subwoofer to the violet and violet/black leads of this unit.

Do not connect anything to the green and green/ black leads. Power amp (sold separately) Perform these connections when using the optional amplifier. 1 5 Do not use unauthorized parts as this may cause malfunctions. Consult your dealer if installation requires drilling of holes or other modifications to the vehicle. Do not install this unit where: — it may interfere with operation of the vehicle. Do not use parts when installing. DIN Front-mount 1 Insert the mounting sleeve into the dashboard.



[You're reading an excerpt. Click here to read official PIONEER DEH-150MP user guide](http://yourpdfguides.com/dref/5480726)  
<http://yourpdfguides.com/dref/5480726>

For installation in shallow spaces, use the supplied mounting sleeve. If there is enough space, use the mounting sleeve that came with the vehicle. 2 Secure the mounting sleeve by using a screwdriver to bend the metal tabs (90°) into place. Install this unit away from hot places such as near the heater outlet. !

Optimum performance is obtained when the unit is installed at an angle of less than 60°. 60° 2 1 Dashboard En 9 Section 03 Installation Additional information 2 Mounting sleeve # Make sure that the unit is installed securely in place. An unstable installation may cause skipping or other malfunctions. ! When reattaching the trim ring, point the side with the notched tab down. troubleshooting Symptom The display automatically returns to the ordinary display. The repeat play range changes unexpectedly.

Cause You did not perform any operation within about 30 seconds. action Perform operation again. Error messages When you contact your dealer or your nearest Pioneer Service Center, be sure to note the error message. If the message fails to disappear even after the engine is switched off/on, contact your dealer or an authorized Pioneer Service Station for assistance. DIN Rear-mount 1 Determine the appropriate position where the holes on the bracket and the side of the unit match.

2 Insert the supplied extraction keys into both sides of the unit until they click into place. 3 Pull the unit out of the dashboard. 2 Tighten two screws on each side. Removing and re-attaching the front panel You can remove the front panel to protect your unit from theft. Press the detach button and push the front panel upward and pull it toward you.

For details, refer to Removing the front panel to protect your unit from theft and Re-attaching the front panel on page 3. 1 3 Depending on Select the repeat the repeat play range again. Range, the selected range may change when another folder or track is being selected or during fast forwarding/reversing. Select another repeat play range. 2 1 Tapping screw (5 mm × 8 mm) 2 Mounting bracket 3 Dashboard or console A subfolder is Subfolders cannot be played not be played back. Display is changed (NO TITLE, for example). You are using a device, such as a cellular phone, that transmits electric waves near the unit. CD player Message Cause Action Removing the unit 1 Remove the trim ring. Switch the display or play another track/file. Back ON, or switch to a different source, then back to the CD player.

Move electrical devices that may be causing the interference away from the unit. eRROR-15 ERROR-23 1 Trim ring 2 Notched tab ! Releasing the front panel allows easier access to the trim ring. 10 En Appendix Additional information Additional information Message FORMAT READ Cause Sometimes there is a delay between the start of playback and when you start to hear any sound. The inserted disc does not contain any playable files. the inserted disc contains DRM protected files. All the files on the inserted disc are embedded with DRM. Action Wait until the message disappears and you hear sound. When using discs that can be printed on label surfaces, check the instructions and the warnings of the discs. Depending on the discs, inserting and ejecting may not be possible. Using such discs may result in damage to this equipment.

Do not attach commercially available labels or other materials to the discs. ! The discs may warp making the disc unplayable. ! The labels may come off during playback and prevent ejection of the discs, which may result in damage to the equipment. sampling frequency: 32 kHz, 44. 1 kHz, 48 kHz English Windows Media Audio Professional, Lossless, Voice/DRM Stream/Stream with video: Not compatible Do not insert anything other than a CD into the CD loading slot.

replace the disc. Do not use cracked, chipped, warped, or otherwise damaged discs as they may damage the player. Unfinalized CD-R/RW discs cannot be played back. Do not touch the recorded surface of the discs. Store discs in their cases when not in use.

replace the disc. Do not attach labels, write on or apply chemicals to the surface of the discs. To clean a CD, wipe the disc with a soft cloth outward from the center. Condensation may temporarily impair the player's performance. Let it rest for about one hour to adjust to a warmer temperature. Also, wipe any damp discs off with a soft cloth. Playback of discs may not be possible because of disc characteristics, disc format, recorded application, playback environment, storage conditions, and so on. Road shocks may interrupt disc playback. Read the precautions for discs before using them. DualDiscs DualDiscs are two-sided discs that have a recordable CD for audio on one side and a recordable DVD for video on the other.

@@@Serious scratches can lead to playback problems on this unit. @@@@Please refer to the information from the disc manufacturer for more detailed information about DualDiscs. 1 kHz (MS ADPCM) Handling guidelines Discs and player Use only discs that feature either of the following two logos. compressed audio compatibility WMA Use 12-cm discs. Do not use 8-cm discs or an adapter for 8-cm discs. file extension: . Wma Bit rate: 48 kbps to 320 kbps (CBR), 48 kbps to 384 kbps (VBR) En 11 Appendix Additional information Additional information Supplemental information Only the first 32 characters can be displayed as a file name (including the file extension) or a folder name. Russian text to be displayed on this unit should be encoded in one of the following character sets: ! unicode (UTF-8, UTF-16) ! A character set other than Unicode that is used in a Windows environment and is set to Russian in the multi-language setting This unit may not operate correctly depending on the application used to encode WMA files. Example of a hierarchy 01 02 MP3 Supply of this product only conveys a license for private, non-commercial use and does not convey a license nor imply any right to use this product in any commercial (i. e.

Revenue-generating) real time broadcasting (terrestrial, satellite, cable and/or any other media), broadcasting/ streaming via internet, intranets and/or other networks or in other electronic content distribution systems, such as pay-audio or audio-on-demand applications. An independent license for such use is required. For details, please visit <http://www.1kg030405.com> Level 1 Level 2 Level 3 Level 4 : Folder : Compressed audio file 01 to 05: Folder number 1 to 6: Playback sequence Disc Folder selection sequence or other operation may differ depending on the encoding or writing software. WMA Windows Media is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.

This product includes technology owned by Microsoft Corporation and cannot be used or distributed without a license from Microsoft Licensing, Inc. Disc Playable folder hierarchy: up to eight tiers (A practical hierarchy is less than two tiers. ) Playable folders: up to 99 Playable files: up to 999 File system: ISO 9660 Level 1 and 2, Romeo, Joliet Multi-session playback: Compatible Packet write data transfer: Not compatible Regardless of the length of blank sections between the songs from the original recording, compressed audio discs play with a short pause between songs.



[You're reading an excerpt. Click here to read official PIONEER DEH-150MP user guide](http://yourpdfguides.com/dref/5480726)  
<http://yourpdfguides.com/dref/5480726>

Russian character chart D: C :A : E, Ё :Л :P :X :Ы D: C :Б :Ж :М :С :Ц :Ь D: C :B :З :H :T :Ч :Э D: C :Г : И, Ы :O :У : Ш, Щ :Ю D: C :Д :K :П :Ф :Ъ :Я Audio Maximum power output . 50 W × 4 70 W × 1/2 W (for subwoofer) Continuous power output .

22 W × 4 (50 Hz to 15 000 Hz, 5 % THD, 4 W load, both channels driven) Load impedance . Normal/Reverse D: Display C: Character CAUTION Do not leave discs in any place that is subject to high temperatures. Sequence of audio files The user cannot assign folder numbers and specify playback sequences with this unit. 62 dB (IEC-A network) Note Specifications and the design are subject to modifications without notice. Een lijst van de bestanden (mappen) in de geselecteerde map weergeven | Selecteer een map en druk op M. c. Een song in de geselecteerde map afspelen | Selecteer een map en houd M. .



[You're reading an excerpt. Click here to read official PIONEER](#)

[DEH-150MP user guide](#)

<http://yourpdfguides.com/dref/5480726>