



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for PIONEER DEH-1600UB. You'll find the answers to all your questions on the PIONEER DEH-1600UB in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual PIONEER DEH-1600UB
User guide PIONEER DEH-1600UB
Operating instructions PIONEER DEH-1600UB
Instructions for use PIONEER DEH-1600UB
Instruction manual PIONEER DEH-1600UB

CD RDS RECEIVER
AUTORADIO CD RDS
SINTOLETTORE CD RDS
REPRODUCER DE CD CON RECEPTOR RDS
CD RDS-EMPFÄNGER
CD RDS-ONTVANGER
CD RDS ПРИЕМНИК

DEH-1600UB
DEH-1600UBG
DEH-1600UBA
DEH-1600UBB

Pioneer

English
Franca
Italiano
Español
Deutsch
Dutch
Mandarin
Русский

Owner's Manual
Mode d'emploi
Manuale d'istruzioni
Manual de instrucciones
Bedienungsanleitung
Handleiding
Руководство пользователя



[You're reading an excerpt. Click here to read official PIONEER DEH-1600UB user guide](http://yourpdfguides.com/dref/5480710)
<http://yourpdfguides.com/dref/5480710>

Manual abstract:

The RDS (radio data system) function only works in areas that broadcast RDS signals for FM stations. CAUTION This product is a class 1 laser product classified under the Safety of laser products, IEC 60825-1:2007. wARNING ! Do not attempt to install or service this product by yourself. Installation or servicing of this product by persons without training and experience in electronic equipment and automotive accessories may be dangerous and could expose you to the risk of electric shock, injury or other hazards. ! Do not attempt to operate the unit while driving. Make sure to pull off the road and park your vehicle in a safe location before attempting to use the controls on the device. If you experience problems Should this unit fail to work properly, please contact your dealer or nearest authorized PIONEER Service Station. If you want to dispose this product, do not mix it with general household waste. There is a separate collection system for used electronic products in accordance with legislation that requires proper treatment, recovery and recycling. Private households in the member states of the EU, in Switzerland and Norway may return their used electronic products free of charge to designated collection facilities or to a retailer (if you purchase a similar new one).

For countries not mentioned above, please contact your local authorities for the correct method of disposal. By doing so you will ensure that your disposed product undergoes the necessary treatment, recovery and recycling and thus prevent potential negative effects on the environment and human health. cAUTION ! Do not allow this unit to come into contact with liquids. electrical shock could result. Also, damage to this unit, smoke, and overheating could result from contact with liquids.

! The Pioneer CarStereo-Pass is for use only in Germany. ! Always keep the volume low enough to hear outside sounds. 2 En <QRD3204-A>2 Black plate (3,1) Section Using this unit Using this unit 02 Head unit 12 3 4 5 6 7 Display indication 1 2 3 4 5 6 8 7 # If you prefer not to set up at this time, turn M. 5 To finish your settings, turn M. # If you prefer to change your setting again, turn M.

9 89 1 2 3 4 5 6 7 8 9 a b c d e a 4 Follow these steps to set the menu. To proceed to the next menu option, you need to confirm your selection. LANGUAGE (multi-language) This unit can display the text information from a compressed audio file even for information embedded in English, Russian or Turkish. ! If the embedded language and the selected language setting are not the same, text information may not display properly. ! Some characters may not be displayed properly. CD player and USB storage device: elapsed playback time and text information Appears when a lower tier of folder or menu exists. You can set up the menu options from the system menu and initial menu. For details about the settings, refer to System menu on page 7 and Initial menu on page 7. Handle the front panel with care when removing or attaching it. Keep the front panel out of direct sunlight and high temperatures.

! To avoid damaging the device or vehicle interior, remove any cables and devices attached to the front panel before detaching it. 9 AUX input jack (3.5 mm stereo jack) Detach button a FM STEP (FM tuning step) Use FM STEP to set FM tuning step options (seek step settings). The manual tuning step is fixed at 50 kHz. ! When AF and TA are turned off, the seek step is fixed at 50 kHz, even if set to 100. CAUTION Use an optional Pioneer USB cable (CD-U50E) to connect the USB storage device as any device connected directly to the unit will protrude out from the unit, which could be dangerous. Set up menu 1 After installation of this unit, turn the ignition switch to ON. # If you do not use the unit for 30 seconds, the set up menu will not be displayed. En 3 <QRD3204-A>3 Black plate (4,1) Section 02 Using this unit Using this unit Removing the front panel 1 Press the detach button to release the front panel. 2 Push the front panel upward (M) and then pull it toward (N) you.

Note When this unit's blue/white lead is connected to the vehicle's auto-antenna relay control terminal, the vehicle's antenna extends when this unit's source is turned on. To retract the antenna, turn the source off. While pressing and holding c or d, you can skip stations. Seek tuning starts as soon as you release c or d. Frequently used menu operations 3 Always store the detached front panel in a protective case or bag.

Re-attaching the front panel 1 Slide the front panel to the left. Returning to the previous display Returning to the previous list (the folder one level higher) 1 Press /DIMMER. Returning to the ordinary display Canceling the main menu 1 Press BAND. Returning to the ordinary display from the list 1 Press BAND. 2 Press the right side of the front panel until it is firmly seated.

Forcing the front panel into place may result in damage to the front panel or head unit. Turning the unit on 1 Press SRC/OFF to turn the unit on. Turning the unit off 1 Press and hold SRC/OFF until the unit turns off. If the program service name cannot be acquired in FREQUENCY, the broadcast frequency is displayed instead. If the program service name is detected, the program service name will be displayed. ! Depending on the band, text information can be changed. ! Text information items that can be changed depend on the area. Using PTY functions You can tune in to a station using PTY (program type) information. The unit searches for a station broadcasting that type of program. When a station is found, its program service name is displayed.

The program of some stations may differ from that indicated by the transmitted PTY. ! If no station is broadcasting the type of program you searched for, NOT FOUND is displayed for about two seconds and then the tuner returns to the original station. notes ! For details about SEEK, refer to SEEK (left/ right key setting) on page 5. ! This unit's AF (alternative frequencies search) function can be turned on and off. AF should be off for normal tuning operation (refer to AF (alternative frequencies search) on page 5). Radio Basic operations Selecting a band 1 Press BAND until the desired band (FM1, FM2, FM3 for FM or MW/LW) is displayed. Storing and recalling stations for each band Using preset tuning buttons 1 To store: Press and hold down one of the preset tuning buttons (1/ to 6/) until the number stops flashing. 2 To recall: Press one of the preset tuning buttons (1/ to 6/). Switching the display Selecting the desired text information 1 Press DISP to cycle between the following: ! CLOCK (source name and clock) PTY list For more details about PTY list, visit the following site: <http://www.> 4 En <QRD3204-A>4 Black plate (5,1) Section Using this unit Using this unit 02 2 Turn M.

Once selected, the following functions can be adjusted. # If MW/LW band is selected, only BSM, LOCAL and SEEK are available. FM SETTING (FM sound quality settings) The sound quality level can be set to match the broadcast signal conditions of the FM band signal.



[You're reading an excerpt. Click here to read official PIONEER](#)

[DEH-1600UB user guide](#)

<http://yourpdfguides.com/dref/5480710>

2 Insert the supplied extraction keys into both sides of the unit until they click into place. 3 Pull the unit out of the dashboard. The display automatically returns to the ordinary display. You did not perform any operation within about 30 seconds. perform operation again.

The repeat play range changes unexpectedly. Depending on the repeat play range, the selected range may change when another folder or track is being selected or during fast forwarding/reversing. Select the repeat play range again. a subfolder is not played back. Subfolders cannot be played when FLD (folder repeat) is selected.

Select another repeat play range. NO XXXX appears when a display is changed (NO TITLE, for example). there is no embedded text information. Switch the display or play another track/file. You are using a device, such as a cellular phone, that may cause audible interference.

Move electrical devices that may be causing the interference away from the unit. 2 Tighten two screws on each side. Removing and re-attaching the front panel You can remove the front panel to protect your unit from theft. For details, refer to Removing the front panel and Re-attaching the front panel on page 4. Turn the ignition switch OFF and back ON, or switch to a different source, then back to the CD player. 1 3 2 1 Tapping screw (5 mm × 8 mm) 2 Mounting bracket 3 Dashboard or console Removing the unit 1 Remove the trim ring. 1 Trim ring 2 Notched tab ! Releasing the front panel allows easier access to the trim ring. Error messages When you contact your dealer or your nearest Pioneer Service Center, be sure to note the error message. 10 En <QRD3204-A>10 Black plate (11,1) Appendix Additional information Additional information FORMAT READ Sometimes there is a delay between the start of playback and when you start to hear any sound. Wait until the message disappears and you hear sound.

NO AUDIO The inserted disc does not contain any playable files. The protected files are skipped. PROTECT All the files on the inserted disc are embedded with DRM. replace the disc. PROTECT All the files on the connected USB storage device are embedded with DRM. replace the USB storage device. N/A USB The connected USB device is not supported by this unit. Disconnect your device and replace it with a compatible USB storage device. cCHECK USB The USB connector or USB cable has shortcircuited. Check that the USB connector or USB cable is not caught in something or damaged.

The connected USB storage device consumes more than maximum allowable current. Disconnect the USB storage device and do not use it. Turn the ignition switch to OFF, then to ACC or ON and then connect only compliant USB storage devices. Turn the ignition switch OFF and back ON. Then, return to the USB source.

ERROR-23 USB storage device was not formatted with FAT12, FAT16 or FAT32. USB storage device should be formatted with FAT12, FAT16 or FAT32.

STOP There are no songs in the current list. select a list that contains songs. Condensation may temporarily impair the player's performance.

Let it rest for about one hour to adjust to a warmer temperature. Also, wipe any damp discs off with a soft cloth. Playback of discs may not be possible because of disc characteristics, disc format, recorded application, playback environment, storage conditions, and so on. Road shocks may interrupt disc playback. When using discs that can be printed on label surfaces, check the instructions and the warnings of the discs. Depending on the discs, inserting and ejecting may not be possible. Using such discs may result in damage to this equipment. Do not attach commercially available labels or other materials to the discs. ! The discs may warp making the disc unplayable. ! The labels may come off during playback and prevent ejection of the discs, which may result in damage to the equipment.

English Handling guidelines Discs and player Use only discs that feature either of the following two logos. The following types of discs cannot be used with this unit: ! dualDiscs ! 8-cm discs: Attempts to use such discs with an adaptor may cause the unit to malfunction. ! Oddly shaped discs USB storage device FORMAT READ Sometimes there is a delay between the start of playback and when you start to hear any sound. Wait until the message disappears and you hear sound. nO AUDIO There are no songs. Transfer the audio files to the USB storage device and connect. The connected USB storage device has security enabled. Follow the USB storage device instructions to disable the security. sKIPPED The connected USB storage device contains DRM protected files. The protected files are skipped.

uSB storage device Connections via USB hub are not supported. Do not connect anything other than a USB storage device. CD-R/RW discs that have not been finalized Do not touch the recorded surface of the discs. Store discs in their cases when not in use. Do not attach labels, write on or apply chemicals to the surface of the discs.

To clean a CD, wipe the disc with a soft cloth outward from the center. Firmly secure the USB storage device when driving. Do not let the USB storage device fall onto the floor, where it may become jammed under the brake or accelerator pedal. Depending on the USB storage device, the following problems may occur. The storage device may not be recognized.

! Files may not be played back properly. ! The device may cause audible interference when you are listening to the radio. 1 kHz, 48 kHz Windows Mediaä Audio Professional, Lossless, Voice/DRM Stream/Stream with video: Not compatible Supplemental information Only the first 32 characters can be displayed as a file name (including the file extension) or a folder name. Russian text to be displayed on this unit should be encoded in one of the following character sets: ! unicode (UTF-8, UTF-16) ! A character set other than Unicode that is used in a Windows environment and is set to Russian in the multi-language setting This unit may not work properly depending on the application used to encode WMA files. @@@@To specify the playback sequence, the following method is recommended. 1 Create a file name that includes numbers that specify the playback sequence (e. 2 Put those files into a folder. 3 Save the folder containing files on the USB storage device. However, depending on the system environment, you may not be able to specify the playback sequence. For USB portable audio players, the sequence is different and depends on the player.

cAUTION ! Pioneer cannot guarantee compatibility with all USB mass storage devices and assumes no responsibility for any loss of data on media players, smart phones, or other devices while using this product. ! Do not leave discs or a USB storage device in any place that is subject to high temperatures.) M3u playlist: Not compatible MP3i (MP3 interactive), mp3 PRO: Not compatible Russian character chart D: C :A D: C :Б :Ж :М :С :Ц :Б D: C :B :3 :H :T :Ч :Э D: C :Г : И, Ё :O :У : Ш, Щ :Ю D: C :Д :K :П :Ф :Ъ :Я Disc Playable folder hierarchy: up to eight tiers (A practical hierarchy is less than two tiers.



[You're reading an excerpt. Click here to read official PIONEER DEH-1600UB user guide](http://yourpdfguides.com/dref/5480710)
<http://yourpdfguides.com/dref/5480710>

) Playable folders: up to 99 Playable files: up to 999 Sequence of audio files The user cannot assign folder numbers and specify playback sequences with this unit. 1 kHz (MS ADPCM) :BI 03 Packet write data transfer: Not compatible Regardless of the length of blank sections between the songs from the original recording, compressed audio discs play with a short pause between songs. 04 05 Level 1 Level 2 Level 3 Level 4 USB storage device Playable folder hierarchy: up to eight tiers (A practical hierarchy is less than two tiers.) Playable folders: up to 500 : Folder : Compressed audio file 01 to 05: Folder number 1 to 6: Playback sequence D: Display C: Character Copyright and trademark MP3 Supply of this product only conveys a license for private, non-commercial use and does not convey a license nor imply any right to use this product in any commercial (i. e. Revenue-generating) real time broadcasting (terrestrial, satellite, cable and/or any other media), broadcasting/ ! You cannot use this function with USB MTP. Disc Folder selection sequence or other operation may differ depending on the encoding or writing software.

12 En <QRD3204-A>12 Black plate (13,1) Appendix Additional information Additional information streaming via internet, intranets and/or other networks or in other electronic content distribution systems, such as pay-audio or audio-on-demand applications. An independent license for such use is required. For details, please visit <http://www.LinearPCM.com> & MS ADPCM (Non-compressed) WMA Windows Media is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries. This product includes technology owned by Microsoft Corporation and cannot be used or distributed without a license from Microsoft Licensing, Inc.

22 W × 4 (50 Hz to 15 000 Hz, 5 % THD, 4 W load, both channels driven) Load impedance . Compact disc audio system Compact disc 94 dB (1 kHz) (IEC-A network) 2 (stereo) MPEG-1 & 2 Audio Layer 3 Note Specifications and the design are subject to modifications without notice. SPEANA (spectrumalyzer) Een lijst van de bestanden (mappen) in de geselecteerde map weergeven 1 Selecteer een map en druk op M. c. Een song in de geselecteerde map afspelen 1 Selecteer een map en houd M.



[You're reading an excerpt. Click here to read official PIONEER](#)

[DEH-1600UB user guide](#)

<http://yourpdfguides.com/dref/5480710>