



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for PIONEER DEH-2350UB. You'll find the answers to all your questions on the PIONEER DEH-2350UB in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual PIONEER DEH-2350UB
User guide PIONEER DEH-2350UB
Operating instructions PIONEER DEH-2350UB
Instructions for use PIONEER DEH-2350UB
Instruction manual PIONEER DEH-2350UB

CD RDS RECEIVER
REPRODUCTOR DE CD CON RECEPTOR RDS
RECEPTOR DE CD RDS
CD RDS 接收機
RDS وی‌دار عم CD تان‌اوطسرا لغشرم
دستگاه گیرنده CD RDS

DEH-2350UB
DEH-2350UBG
DEH-2350UBSW

Pioneer

English

Español

Português (B)

中文

العربية

فارسی

Owner's Manual
Manual de instrucciones
Manual do proprietário
用戶手冊
کتیب المالك
راهنما



[You're reading an excerpt. Click here to read official PIONEER DEH-2350UB user guide](http://yourpdfguides.com/dref/3623571)
<http://yourpdfguides.com/dref/3623571>

Manual abstract:

@@@ electrical shock could result. Also, damage to this unit, smoke, and overheating could result from contact with liquids. ! Always keep the volume low enough to hear outside sounds. If the battery is disconnected or discharged, any preset memory will be erased. CAUTION This product is a class 1 laser product classified under the Safety of laser products, IEC 60825-1:2007, and contains a class 1M laser module. To ensure continued safety, do not remove any covers or attempt to gain access to the inside of the product. Note Function setting operations are completed even if the menu is cancelled before the operations are confirmed. Press and hold to recall the initial setting menu when the sources are off. Failure to connect the red lead (ACC) of this unit to a terminal coupled with ignition switch on/off operations may lead to battery drain. ! Remember that if the feature demo continues operating when the car engine is turned off, it may drain battery power.

Use an optional Pioneer USB cable (CD-U50E) to connect the USB audio player/USB memory as any device connected directly to the unit will protrude out from the unit and may be dangerous. The demo automatically starts when the ignition switch is set to ACC or ON while the unit is turned off. Turning off the unit does not cancel demo mode. To cancel the demo mode, operate the function in the initial setting menu. Operating the demo while the ignition switch is set to ACC may drain battery power.

Keep the front panel out of direct sunlight and high temperatures. ! To avoid damage to the device or vehicle interior, remove any cables and devices attached to the front panel before detaching it. Turning the display off and on 1 Press /DISP OFF and hold until the display turns off and on. @@ Do not handle the battery with metallic tools. ! Do not store the battery with metallic objects.

! @@ ! @@@@ Removing the front panel to protect your unit from theft 1 Press the detach button to release the front panel. 2 Push the front panel upward and pull it toward you. For safety reasons, park your vehicle when removing the front panel. Note When this unit's blue/white lead is connected to the vehicle's auto-antenna relay control terminal, the vehicle's antenna extends when this unit's source is turned on. Track or folder repeat is on. 2 Press the right side of the front panel until it is firmly seated. If you cannot attach the front panel to the head unit successfully, make sure that you are placing the front panel onto the head unit correctly. Forcing the front panel into place may result in damage to the front panel or head unit. Turning the unit on 1 Press S (SRC/OFF) to turn the unit on. 3 Always keep the detached front panel in a protection device such as a protection case.

Re-attaching the front panel 1 Slide the front panel to the left. Make sure to insert the tabs on the left side of the head unit into the slots on the front panel. Use and care of the remote control Using the remote control 1 Point the remote control in the direction of the front panel to operate. When using for the first time, pull out the film protruding from the tray. Replacing the battery 1 Slide the tray out on the back of the remote control. Keep the battery out of the reach of children. Batteries (battery pack or batteries installed) must not be exposed to excessive heat such as sunshine, fire or the like. Handle gently when removing or attaching the front panel. @@ While pressing and holding c or d, you can skip stations. Seek tuning starts as soon as you release c or d.

Note Depending on the area, you cannot switch the display. @@@@ Playing 1 When a file or track is selected, press M.

@@@@@ Tracks in a selected repeat range are played in random order. Note Disconnect USB storage devices from the unit when not in use. 1 When you find a station that you want to store in memory, press one of the preset tuning buttons (1 to 6) and hold until the preset number stops flashing.

2 Press one of the preset tuning buttons (1 to 6) to select the desired station. # You can also recall stored radio stations by pressing a or b during the frequency display. Playing a CD/CD-R/CD-RW 1 Insert the disc into the disc loading slot with the label side up. Depending on the version of iTunes used to write MP3 files to a disc or media file types, incompatible text stored within an audio file may be displayed incorrectly. ! Text information items that can be changed depend on the media.

Selecting and playing files/ tracks from the name list @@ To turn random play on or off. SUBWOOFER1 (subwoofer on/off setting) This unit is equipped with a subwoofer output which can be turned on or off. SUBWOOFER2 (subwoofer adjustment) The cut-off frequency and output level can be adjusted when the subwoofer output is on. Only frequencies lower than those in the selected range are outputted from the subwoofer. To cycle between the cut-off frequency and output level of the subwoofer. cut-off frequency (Cut-off frequency display flashes.)--Output level (Output level display flashes. @@ ! Settings are based on the FM volume level, which remains unchanged. ! The AM/MW/SW volume level can also be adjusted with this function. ! When selecting FM as the source, you cannot switch to SLA.

@@@@@ 1 Press S (SRC/OFF) and hold until the unit turns off. @@@@ Tune in the stations with manual tuning or use seek tuning again. ! The tuning step remains at 50 kHz during manual tuning. @@ To turn the plug and play function on or off. @@@@ @@@@ @@@@ @@@@ ! @@ To turn the ever scroll on or off. @@@@ @@@@ @@@@ -- Cover any disconnected cable connectors with insulating tape. -- Do not shorten any cables. @@@@ Connect this cable to the system remote control of an external power amp or the vehicle's auto-antenna relay control terminal (max. 300 mA 12 V DC). If the vehicle is equipped with a glass antenna, connect it to the antenna booster power supply terminal.

! Never connect the blue/white cable to the power terminal of an external power amp. Also, never connect it to the power terminal of the auto antenna. Doing so may result in battery drain or a malfunction. Use speakers over 50 W (output value) and between 4 W to 8 W (impedance value). Do not use 1 W to 3 W speakers for this unit.

When installing this unit or power amp (sold separately), make sure to connect the ground wire first. Ensure that the ground wire is properly connected to metal parts of the car's body. The ground wire of the power amp and the one of this unit or any other device must be connected to the car separately with different screws. If the screw for the ground wire loosens or falls out, it could result in fire, generation of smoke or malfunction. @@@@ Use this unit with a 12-volt battery and negative grounding only.

@@@@@ Do not connect anything to the green and green/black leads. Perform these connections when using the optional amplifier. @@@@ @@@@ Do not use unauthorized parts as this may cause malfunctions. ! @@ ! Do not install this unit where: -- it may interfere with operation of the vehicle.



[You're reading an excerpt. Click here to read official PIONEER DEH-2350UB user guide](http://yourpdfguides.com/dref/3623571)
<http://yourpdfguides.com/dref/3623571>

-- it may cause injury to a passenger as a result of a sudden stop. Install this unit away from hot places such as near the heater outlet. ! Optimum performance is obtained when the unit is installed at an angle of less than 60°. Perform these connections when using a subwoofer without the optional amplifier USB storage device and connect. ! Connect a USB portable audio player or USB memory that is USB Mass Storage Class compliant. ! Disconnect your device and replace it with a compatible USB storage device.

Check that the USB connector or USB cable is not caught in something or damaged. Disconnect the USB portable audio player/USB memory and do not use it. Turn the ignition switch to OFF, then to ACC or ON and then connect a compliant USB portable audio player/USB memory. @@ Do not connect anything other than a USB storage device. firmly secure the USB storage device when driving. @@@@Files may not be played back properly. ! The device may generate noise in the radio. @@@@Do not insert anything other than a CD into the CD loading slot. @@@@There may be a slight delay at the start of playback of audio files embedded with image data or audio files stored on a USB storage device that has numerous folder hierarchies. The user cannot assign folder numbers and specify playback sequences with this unit.

Playable folder hierarchy: up to eight tiers (A practical hierarchy is less than two tiers.) Playable folders: up to 99 Playable files: up to 999 File system: ISO 9660 Level 1 and 2, Romeo, Joliet Multi-session playback: Compatible Packet write data transfer: Not compatible Regardless of the length of blank section between the songs of the original recording, compressed audio discs play with a short pause between songs. MP3 Supply of this product only conveys a license for private, non-commercial use and does not convey a license nor imply any right to use this product in any commercial (i. e. Revenue-generating) real time broadcasting (terrestrial, satellite, cable and/or any other media), broadcasting/streaming via internet, intranets and/ or other networks or in other electronic content distribution systems, such as pay-audio or audio-on-demand applications.

WMA Windows Media and the Windows logo are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries. This product includes technology owned by Microsoft Corporation and cannot be used or distributed without a license from Microsoft Licensing, Inc. Disc Folder selection sequence or other operation may differ depending on the encoding or writing software. 2 Put those files into a folder. 22 W × 4 (50 Hz. .



[You're reading an excerpt. Click here to read official PIONEER DEH-2350UB user guide](http://yourpdfguides.com/dref/3623571)
<http://yourpdfguides.com/dref/3623571>