



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for PIONEER DEH-2600UI. You'll find the answers to all your questions on the PIONEER DEH-2600UI in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual PIONEER DEH-2600UI
User guide PIONEER DEH-2600UI
Operating instructions PIONEER DEH-2600UI
Instructions for use PIONEER DEH-2600UI
Instruction manual PIONEER DEH-2600UI

CD RDS RECEIVER
AUTORADIO CD RDS
SINTOLETTORE CD RDS
REPRODUCOR DE CD CON RECEPTOR RDS
CD RDS-EMPFÄNGER
CD RDS-ONTVANGER
CD RDS ПРИЕМНИК

DEH-X3600UI
DEH-2600UI

Pioneer



English
Franca
Italiano
Español
Deutsch
Nederlands
Русский

Owner's Manual
Mode d'emploi
Manuale d'istruzioni
Manual de instrucciones
Bedienungsanleitung
Handleiding
Руководство пользователя



[You're reading an excerpt. Click here to read official PIONEER DEH-2600UI user guide](http://yourpdfguides.com/dref/5480827)
<http://yourpdfguides.com/dref/5480827>

Manual abstract:

The RDS (radio data system) function only works in areas that broadcast RDS signals for FM stations. CAUTION This product is a class 1 laser product classified under the Safety of laser products, IEC 60825-1:2007. **wARNING ! Do not attempt to install or service this product by yourself. Installation or servicing of this product by persons without training and experience in electronic equipment and automotive accessories may be dangerous and could expose you to the risk of electric shock, injury or other hazards. ! Do not attempt to operate the unit while driving. Make sure to pull off the road and park your vehicle in a safe location before attempting to use the controls on the device. If you experience problems Should this unit fail to work properly, please contact your dealer or nearest authorized PIONEER Service Station. If you want to dispose this product, do not mix it with general household waste. There is a separate collection system for used electronic products in accordance with legislation that requires proper treatment, recovery and recycling. Private households in the member states of the EU, in Switzerland and Norway may return their used electronic products free of charge to designated collection facilities or to a retailer (if you purchase a similar new one).**

For countries not mentioned above, please contact your local authorities for the correct method of disposal. By doing so you will ensure that your disposed product undergoes the necessary treatment, recovery and recycling and thus prevent potential negative effects on the environment and human health. **CAUTION ! Do not allow this unit to come into contact with liquids. electrical shock could result. Also, damage to this unit, smoke, and overheating could result from contact with liquids.**

! The Pioneer CarStereo-Pass is for use only in Germany. ! Always keep the volume low enough to hear outside sounds. 2 En <QRD3200-A>2 Black plate (3,1) Section Using this unit Using this unit 02 Head unit DEH-X3600UI c d 1/ to 6/ AUX input jack (3. 5 mm stereo jack) Detach button 1 123 4 5 6 e CAUTION Use an optional Pioneer USB cable (CD-U50E) to connect the USB storage device as any device connected directly to the unit will protrude out from the unit, which could be dangerous. CD player, USB storage device and iPod: elapsed playback time and text information Appears when a lower tier of folder or menu exists.

(list) Sub information section LOC (local seek tuning) TP (traffic program identification) TA (traffic announcements) (sound retriever) (random/shuffle) (repeat) (iPod control) This unit's iPod function is operated from your iPod. 4 Follow these steps to set the menu. To proceed to the next menu option, you need to confirm your selection. LANGUAGE (multi-language) This unit can display the text information from a compressed audio file even for information embedded in English, Russian or Turkish. ! If the embedded language and the selected language setting are not the same, text information may not display properly. ! Some characters may not be displayed properly.) (list) Disc loading slot USB port MIX (MIXTRAX) DEH-X3600UI FM STEP (FM tuning step) Use FM STEP to set FM tuning step options (seek step settings). The manual tuning step is fixed at 50 kHz. ! When AF and TA are turned off, the seek step is fixed at 50 kHz even if set to 100. B 3 4 7 6 5 9 8 a Set up menu 1 2 1 After installation of this unit, turn the ignition switch to ON.

7 iPod DEH-2600UI BAND/ (iPod control) 8 9 a b (back)/DIMMER (dimmer) c/d DISP # If you do not use the unit for 30 seconds, the set up menu will not be displayed. # If you prefer not to set up at this time, turn M. 5 To finish your settings, turn M. # If you prefer to change your setting again, turn M. En 3 <QRD3200-A>3 Black plate (4,1) Section 02 Using this unit Using this unit Notes ! You can set up the menu options from the system menu and initial menu. For details about the settings, refer to System menu on page 9 and Initial menu on page 11. Removing the front panel 1 Press the detach button to release the front panel. 2 Push the front panel upward (M) and then pull it toward (N) you. basic operations Important ! Handle the front panel with care when removing or attaching it. Keep the front panel out of direct sunlight and high temperatures.

! To avoid damaging the device or vehicle interior, remove any cables and devices attached to the front panel before detaching it. 3 Always store the detached front panel in a protective case or bag. Re-attaching the front panel 1 Slide the front panel to the left. Only for DEH-2600UI When there is an iPod connected and a source other than iPod is selected, you can switch to iPod by pressing iPod. Radio Basic operations Selecting a band 1 Press BAND/ until the desired band (FM1, FM2, FM3 for FM or MW/LW) is displayed.

While pressing and holding c or d, you can skip stations. Seek tuning starts as soon as you release c or d. Note When this unit's blue/white lead is connected to the vehicle's auto-antenna relay control terminal, the vehicle's antenna extends when this unit's source is turned on. To retract the antenna, turn the source off. 2 Press the right side of the front panel until it is firmly seated.

Forcing the front panel into place may result in damage to the front panel or head unit. Turning the unit on 1 Press SRC/OFF to turn the unit on. Turning the unit off 1 Press and hold SRC/OFF until the unit turns off. Frequently used menu operations Returning to the previous display Returning to the previous list (the folder one level higher) 1 Press /DIMMER. Returning to the ordinary display Canceling the main menu 1 Press BAND/. Returning to the ordinary display from the list 1 Press BAND/. notes ! For details about SEEK, refer to SEEK (left/ right key setting) on page 5. ! This unit's AF (alternative frequencies search) function can be turned on and off. AF should be off for normal tuning operation (refer to AF (alternative frequencies search) on page 5). Storing and recalling stations for each band Using preset tuning buttons 1 To store: Press and hold down one of the preset tuning buttons (1/ to 6/) until the number stops flashing.

2 To recall: Press one of the preset tuning buttons (1/ to 6/). 4 En <QRD3200-A>4 Black plate (5,1) Section Using this unit Using this unit 02 Switching the display Selecting the desired text information 1 Press DISP to cycle between the following: ! CLOCK (source name and clock) PTY list For more details about PTY list, visit the following site: [http://www. Html](http://www.Html) When AF is used, the regional function limits the selection of stations to those broadcasting regional programs. LOCAL (local seek tuning) Local seek tuning allows you to tune in to only those radio stations with sufficiently strong signals for good reception. FM: OFF—LV1—LV2—LV3—LV4 MW/LW: OFF—LV1—LV2 The highest level setting allows reception of only the strongest stations, while lower levels allow the reception of weaker stations.



[You're reading an excerpt. Click here to read official PIONEER DEH-2600UI user guide](http://yourpdfguides.com/dref/5480827)
<http://yourpdfguides.com/dref/5480827>

SEEK (left/right key setting) You can assign a function to the left and right keys of the unit. Select **MAN** (manual tuning) to tune up or down manually or select **PCH** (preset channel) to switch between preset channels. 0 or higher can be connected by MTP connection using the USB source. To connect an Android device, use the cable that came with the device. notes ! This function is not compatible with **MIXTRAX**.

! This function is not compatible with **WAV**. If the program service name cannot be acquired in **FREQUENCY**, the broadcast frequency is displayed instead. If the program service name is detected, the program service name will be displayed. ! Depending on the band, text information can be changed. ! Text information items that can be changed depend on the area.

Once selected, the following functions can be adjusted. # If **MW/LW** band is selected, only **BSM**, **LOCAL** and **SEEK** are available. **FM SETTING** (FM sound quality settings) The sound quality level can be set to match the broadcast signal conditions of the FM band signal. **HI-FI** – This is the setting to use to prioritize the high quality of stereo sound. ! **STABLE** – This is the setting to use to prioritize the low noise of monaural sound.

BSM (best stations memory) **BSM** (best stations memory) automatically stores the six strongest stations in the order of their signal strength. **REGIONAL** (regional) Basic operations Playing a **CD/CD-R/CD-RW** 1 Insert the disc into the disc loading slot with the label side up. ejecting a **CD/CD-R/CD-RW** 1 Press h. Playing songs on a USB storage device 1 Open the USB port cover. 2 Plug in the USB storage device using a USB cable. Stopping playback of files on a USB storage device 1 You may disconnect the USB storage device at any time. When playing compressed audio, there is no sound during fast forward or reverse. returning to root folder 1 Press and hold **BAND/**. En Using **PTY** functions You can tune in to a station using **PTY** (program type) information. The unit searches for a station broadcasting that type of program.

When a station is found, its program service name is displayed. The program of some stations may differ from that indicated by the transmitted **PTY**. ! If no station is broadcasting the type of program you searched for, **NOT FOUND** is displayed for about two seconds and then the tuner returns to the original station. 5 <QRD3200-A>5 Black plate (6,1) Section 02 Using this unit Using this unit Switching between compressed audio and **CD-DA** 1 Press **BAND/**. Switching between playback memory devices You can switch between playback memory devices on USB storage devices with more than one Mass Storage Device-compatible memory device. You can switch between up to 32 different memory devices. Switching the display Selecting the desired text information 1 Press **DISP** to cycle between the following: **CD-DA** ! **SPEANA** (spectrum analyzer) Viewing a list of the files (or folders) in the selected folder 1 When a folder is selected, press **M. c**. Playing a song in the selected folder 1 When a folder is selected, press and hold **M**. Once selected, the function below can be adjusted. **RTRV** is not available when **MIXTRAX** is turned on. For details, refer to Enhancing compressed audio and restoring rich sound (sound retriever) on page 6. Operations using special buttons Selecting a repeat play range to cycle between the following: 1 Press **6/ CD/CD-R/CD-RW** ! **aLL** – Repeat all tracks ! **ONE** – Repeat the current track ! **FLD** – Repeat the current folder Playing tracks in random order to turn random play on or off. 1 Press **5/ Tracks** in a selected repeat range are played in random order. ! To change songs during random play, press **d** to switch to the next track.

Pressing **c** restarts playback of the current track from the beginning of the song. **Rtrv** to cycle between: 1—2—**OFF** (off) 1 is effective for low compression rates, and 2 is effective for high compression rates. ! Key operation is disabled when **MIXTRAX** is on. Note Disconnect USB storage devices from the unit when not in use. Operations using the **MIXTRAX** button Turning **MIXTRAX** on or off Only for **DEH-X3600UI** You can use this function when USB is selected as the source.

You cannot use this function with **USB MTP**. For more details about **MIXTRAX**, refer to About **MIXTRAX** on page 10. ! When **MIXTRAX** is in use, the sound retriever function is disabled. Selecting and playing files/ tracks from the name list 1 Press list mode. Playing 1 When a file or track is selected, press **M**. The iPod cannot be turned on or off when the control mode is set to **CONTROL AUDIO/CTRL AUDIO**. ! Disconnect headphones from the iPod before connecting it to this unit. ! The iPod will turn off about two minutes after the ignition is switched off. 6 En <QRD3200-A>6 Black plate (7,1) Section Using this unit Using this unit 02 Operations using the **MIXTRAX** button Turning **MIXTRAX** on or off Only for **DEH-X3600UI** 1 Press **MIX** to turn **MIXTRAX** on or off. ! For more details about **MIXTRAX**, refer to About **MIXTRAX** on page 10.

Playing a song in the selected category 1 When a category is selected, press and hold **M. c**. Searching the list by alphabet 1 When a list for the selected category is displayed. Once selected, the following audio functions can be adjusted. ! **FADER** is not available when **SUB. W CTRL** are not available when **REAR/REAR** is selected in **SP-P/O MODE**. **W CTRL** is not available when **SUB. SLA** is not available when **FM** is selected as the source. **FADER** (fader adjustment) Switching the display Information for compatibility of connected devices The following is the detailed information regarding the terminals required to use the application for iPhone on this unit. Selecting the desired text information 1 Press **DISP** to cycle between the following: ! **SPEANA** (spectrum analyzer) For iPhone users Using connected device applications You can use this unit to perform streaming playback of and control tracks in iPhone applications or just for streaming playback.

! This function is compatible with iPhone and iPod touch. Please check our website for a list of supported iPhone applications for this unit. ! Pioneer is not liable for any issues that may arise from incorrect or flawed app-based content. ! The content and functionality of the supported applications are the responsibility of the App providers. Once selected, the following functions can be adjusted.

BALANCE (balance adjustment) 8 En <QRD3200-A>8 Black plate (9,1) Section Using this unit Using this unit 02 1 Press **M**.

POWERFUL—NATURAL—VOCAL—CUSTOM1—CUSTOM2—FLAT—SUPER BASS The equalizer band and equalizer level can be customized when **CUSTOM1** or **CUSTOM2** is selected. To return to the previous display. ! **CUSTOM1** can be set separately for each source. However, **USB**, **iPod** and **APP** are all set to the same setting automatically.

! **CUSTOM2** is a shared setting used in common for all sources. To cycle between the following: Equalizer band—Equalizer level 5 Turn **M**. **5KHZ—8KHZ** Equalizer level: +6 to -6 **LOUDNESS** (loudness) Loudness compensates for deficiencies in the lowfrequency and high-frequency ranges at low volume.



[You're reading an excerpt. Click here to read official PIONEER](http://yourpdfguides.com/dref/5480827)

[DEH-2600UI user guide](http://yourpdfguides.com/dref/5480827)

<http://yourpdfguides.com/dref/5480827>

W (subwoofer on/off setting) This unit is equipped with a subwoofer output which can be turned on or off. W CTRL (subwoofer adjustment) Only frequencies lower than those in the selected range are outputted from the subwoofer. To cycle between the following: Cut-off frequency—Output level—Slope level Rates that can be adjusted will flash. HPF SETTING (high pass filter adjustment) Use this function when wanting to listen only to high-frequency sounds. Only frequencies higher than the high-pass filter (HPF) cutoff are output from the speakers. To cycle between the following: Cut-off frequency—Slope level 3 Turn M. Cut-off frequency: OFF—50HZ—63HZ—80HZ —100HZ—125HZ—160HZ—200HZ Slope level: -12— -24 SLA (source level adjustment) This function prevents the volume from changing too dramatically when the source switches.

! Settings are based on the FM volume level, which remains unchanged. ! The MW/LW volume level can also be adjusted with this function. ! USB, iPod and APP are all set to the same setting automatically. Adjustment range: +4 to -4 LANGUAGE (multi-language) English This unit can display the text information from a compressed audio file even for information embedded in English, Russian or Turkish. ! If the embedded language and the selected language setting are not the same, text information may not display properly. ! Some characters may not be displayed properly. ENG (English)—PYC (Russian)—TUR (Turkish) CLOCK SET (setting the clock) System menu Important PW SAVE (power saving) is canceled if the vehicle battery is disconnected and will need to be turned back on once the battery is reconnected. When PW SAVE (power saving) is off, depending on connection methods, the unit may continue to draw power from the battery if your vehicle's ignition doesn't have an ACC (accessory) position. To select the segment of the clock display you wish to set. 12H (12-hour clock)—24H (24-hour clock) INFO DISPLAY (sub information) The type of text information displayed in the sub information section can be toggled.

The signal bar indicator displays for SPEANA or LEVEL METER when the source is set to RADIO. AUTO PI (auto PI seek) The unit can automatically search for a different station with the same programming, even during preset recall. Once selected, the following system menu functions can be adjusted. ! INFO DISPLAY and BRIGHTNESS are not available for DEH-2600UI. ! MUTE MODE is not available for DEHX3600UI.

9 <QRD3200-A>9 Black plate (10,1) Section 02 Using this unit Using this unit Activate this setting when using an auxiliary device connected to this unit. You can also change the dimmer setting by pressing and holding /DIMMER. BRIGHTNESS (brightness adjustment) You can use this setting to adjust the display brightness. The range of settings available for BRIGHTNESS will vary depending on whether DIMMER is on or off. DIMMER on: 1 to 4 DIMMER off: 1 to 5 MUTE MODE (mute mode) Sound from this system is automatically muted or attenuated when a signal from equipment with a mute function is received.

10dB ATT – Attenuation PW SAVE (power saving) Switching this function on enables you to reduce the consumption of battery power. ! Turning on the source is the only operation allowed when this function is on. To turn the power save on or off. ILLUMI FX (illumination effect mode) In this mode, an illumination effect can be seen on the display at certain times such as when the ACC power is turned on/off or a CD is inserted/ ejected. The illumination effect will activate when the ACC power is turned on/off regardless of whether the ILLUMI FX setting is on or off. Note You cannot create a custom illumination color while SCAN is selected. Once selected, the following audio functions can be adjusted. KEY COLOUR (key section color setting) You can select desired colors for the keys of this unit. CUSTOM (customized illumination color) DISP COLOUR (display section color setting) You can select the desired colors for the display of this unit. CUSTOM (customized illumination color) BOTH COLOUR (key and display color setting) You can select the desired colors for the keys and display of this unit.

SCAN (cycle through a variety of colors automatically) About MIXTRAX Only for DEH-X3600UI MIXTRAX technology is used to insert a variety of sound effects in between songs, allowing you to experience your music as a nonstop mix complete with visual effects. notes ! Depending on the file/song, sound effects may not be available. ! @@ refer to Operations using the MIXTRAX button on page 6. Note When CUSTOM is selected, the customized color saved is selected. @@@@#@# You can also perform the same operation on other colors. Once selected, the following MIXTRAX functions can be adjusted. The function is enabled when MIXTRAX is on. @@@@#@#@#@#@#@#@#@#@#@#@#@#@ ! @@@@#@#@#@#@#@2 Press and hold SRC/OFF until the main menu appears in the display. Once selected, the following initial menu functions can be adjusted. @@@@#@#@ ! @@@@#@ w or REAR/REAR.

System menu 1 Press and hold SRC/OFF until the unit turns off. 2 Press and hold SRC/OFF until the main menu appears in the display. @@Sound is muted automatically if you make or receive a phone call with a device equipped with a mute function. note Phone source displays when you receive a call. Using an AUX source 1 Insert the stereo mini plug into the AUX input jack.

2 Press SRC/OFF to select AUX as the source. Note AUX cannot be selected unless the auxiliary setting is turned on. for more details , refer to AUX (auxiliary input) on page 9. Switching the display Selecting the desired text information 1 Press DISP to cycle between the following: ! source name ! Source name and clock If an unwanted display appears Turn off the unwanted display using the procedures listed below. When installing this unit in a vehicle without an ACC (accessory) position on the ignition switch, failure to connect the red cable to the terminal that detects operation of the ignition key may result in battery drain.

Use of this unit in conditions other than the following could result in fire or malfunction. To prevent a short-circuit, overheating or malfunction, be sure to follow the directions below. Disconnect the negative terminal of the battery before installation. Secure the wiring with cable clamps or adhesive tape. Wrap adhesive tape around wiring that comes into contact with metal parts to protect the wiring. Place all cables away from moving parts, such as the shift lever and seat rails. Place all cables away from hot places, such as near the heater outlet. Do not connect the yellow cable to the battery by passing it through the hole to the engine compartment. Cover any disconnected cable connectors with insulating tape. Do not shorten any cables.

Never cut the insulation of the power cable of this unit in order to share the power with other devices. The current capacity of the cable is limited.



[You're reading an excerpt. Click here to read official PIONEER](http://yourpdfguides.com/dref/5480827)

[DEH-2600UI user guide](http://yourpdfguides.com/dref/5480827)

<http://yourpdfguides.com/dref/5480827>

When this unit is on, control signals are sent through the blue/white cable. Connect this cable to the system remote control of an external power amp or the vehicle's auto-antenna relay control terminal (max. 300 mA 12 V DC). If the vehicle is equipped with a glass antenna, connect it to the antenna booster power supply terminal. ! Never connect the blue/white cable to the power terminal of an external power amp. Also, never connect it to the power terminal of the auto antenna. Doing so may result in battery drain or a malfunction. Ground cables for this unit and other equipment (especially, high-current products such as power amps) must be wired separately.

If they are not, an accidental detachment may result in a fire or malfunction. power cord 3 4 2 5 6 1 3 7 5 8 4 6 a 9 e b c d This unit 1 2 3 4 5 6 7 1 Power cord input 2 AUX2 input jack (3.5 mm stereo jack) (DEHX3600UI only) A dedicated input jack designed exclusively for use with devices equipped with a mute function. 3 Rear output or subwoofer output 4 Front output 5 Antenna input 6 Fuse (10 A) 7 Wired remote input 1 To power cord input 2 Depending on the kind of vehicle, the function of 3 and 5 may be different. In this case, be sure to connect 4 to 5 and 6 to 3.

7 Connect leads of the same color to each other. 8 Black (chassis ground) 9 Blue/white The pin position of the ISO connector will differ depending on the type of vehicle. connect 9 and b when Pin 5 is an antenna control type. In another type of vehicle, never connect 9 and b. C Yellow/black If you use an equipment with Mute function, wire this lead to the Audio Mute lead on that equipment.

If not, keep the Audio Mute lead free of any connections. D Speaker leads White: Front left + White/black: Front left * Gray: Front right + Gray/black: Front right * Green: Rear left + or subwoofer + Green/black: Rear left * or subwoofer * Violet: Rear right + or subwoofer + Violet/black: Rear right * or subwoofer * e ISO connector In some vehicles, the ISO connector may be divided into two. In this case, be sure to connect to both connectors. notes ! Change the initial menu of this unit. refer to SP-P/O MODE (rear output and preout setting) on page 11. The subwoofer output of this unit is monaural. ! When using a subwoofer of 70 W (2 W), be sure to connect the subwoofer to the violet and violet/black leads of this unit. Do not connect anything to the green and green/black leads. OF STAR 12 En T <QRD3200-A> 12 Black plate (13,1) Section Installation Installation 03 Power amp (sold separately) Perform these connections when using the optional amplifier. 1 5 1 7 □ □ □ □ ! Optimum performance is obtained when the unit is installed at an angle of less than 60°.

60° 2 Secure the mounting sleeve by using a screwdriver to bend the metal tabs (90°) into place. 1 Removing the unit English 1 Remove the trim ring. 3 2 □ □ 4 5 3 6 7 2 □ □ ! When installing, to ensure proper heat dispersal when using this unit, make sure you leave ample space behind the rear panel and wrap any loose cables so they are not blocking the vents. 2 1 Dashboard 2 Mounting sleeve # Make sure that the unit is installed securely in place. An unstable installation may cause skipping or other malfunctions. 1 Trim ring 2 Notched tab ! Releasing the front panel allows easier access to the trim ring. ! When reattaching the trim ring, point the side with the notched tab down. 1 System remote control Connect to Blue/white cable. 2 Power amp (sold separately) 3 Connect with RCA cables (sold separately) 4 To Front output 5 Front speaker 6 To Rear output or subwoofer output 7 Rear speaker or subwoofer Leave ample 5 cm space 5 cm 5cm cm DIN Rear-mount 1 Determine the appropriate position where the holes on the bracket and the side of the unit match. 2 Insert the supplied extraction keys into both sides of the unit until they click into place.

3 Pull the unit out of the dashboard. Do not use unauthorized parts as this may cause malfunctions. Consult your dealer if installation requires drilling of holes or other modifications to the vehicle. Do not install this unit where: — it may interfere with operation of the vehicle. □ it may cause injury to a passenger as a result of a sudden stop.

DIN front/rear mount This unit can be properly installed using either front-mount or rear-mount installation. Use commercially available parts when installing. 2 Tighten two screws on each side. DIN Front-mount 1 Insert the mounting sleeve into the dashboard. For installation in shallow spaces, use the supplied mounting sleeve.

If there is enough space, use the mounting sleeve that came with the vehicle. 1 3 Removing and re-attaching the front panel You can remove the front panel to protect your unit from theft. For details, refer to Removing the front panel and Re-attaching the front panel on page 4. Install this unit away from hot places such as near the heater outlet. Common AMP ERROR This unit fails to operate or the speaker connection is incorrect; the protective circuit is activated. check the speaker connection. If the message fails to disappear even after the engine is switched off/on, contact your dealer or an authorized Pioneer Service Station for assistance. FORMAT READ Sometimes there is a delay between the start of playback and when you start to hear any sound. Wait until the message disappears and you hear sound. NO AUDIO The inserted disc does not contain any playable files.

The protected files are skipped. PROTECT PROTECT All the files on the connected USB storage device are embedded with DRM. You did not perform any operation within about 30 seconds. perform operation again. The repeat play range changes unexpectedly. Depending on the repeat play range, the selected range may change when another folder or track is being selected or during fast forwarding/reversing. Select the repeat play range again. a subfolder is not played back. Subfolders cannot be played when FLD (folder repeat) is selected. Select another repeat play range.

NO XXXX appears when a display is changed (NO TITLE, for example). there is no embedded text information. Switch the display or play another track/file. You are using a device, such as a cellular phone, that may cause audible interference. Move electrical devices that may be causing the interference away from the unit.

The connected USB device is not supported by this unit. Disconnect your device and replace it with a compatible USB storage device. cCHECK USB The USB connector or USB cable has shortcircuited. Check that the USB connector or USB cable is not caught in something or damaged. Turn the ignition switch OFF and back ON, or switch to a different source, then back to the CD player.

All the files on the inserted disc are embedded with DRM. replace the disc. USB storage device/iPod FORMAT READ Sometimes there is a delay between the start of playback and when you start to hear any sound. Wait until the message disappears and you hear sound. nO AUDIO There are no songs.



[You're reading an excerpt. Click here to read official PIONEER](http://yourpdfguides.com/dref/5480827)

[DEH-2600UI user guide](http://yourpdfguides.com/dref/5480827)

<http://yourpdfguides.com/dref/5480827>

Transfer the audio files to the USB storage device and connect. The connected USB storage device has security enabled. Follow the USB storage device instructions to disable the security. SKIPPED The connected USB storage device contains DRM protected files. The protected files are skipped.

The connected USB storage device consumes more than maximum allowable current. Disconnect the USB storage device and do not use it. Turn the ignition switch to OFF, then to ACC or ON and then connect only compliant USB storage devices. CHECK USB The iPod operates correctly but does not charge. Make sure the connection cable for the iPod has not shorted out (e. After checking, turn the ignition switch OFF and back ON, or disconnect the iPod and reconnect. Turn the ignition switch OFF and back ON. Then, return to the USB source. Error messages When you contact your dealer or your nearest Pioneer Service Center, be sure to note the error message. 14 En <QRD3200-A>14 Black plate (15,1) Appendix Additional information Additional information iPod failure.

Disconnect the cable from the iPod. Once the iPod's main menu is displayed, reconnect the iPod and reset it. ERROR-23 USB storage device was not formatted with FAT12, FAT16 or FAT32. USB storage device should be formatted with FAT12, FAT16 or FAT32. Disconnect the cable from the iPod. Once the iPod's main menu is displayed, reconnect the iPod and reset it. STOP There are no songs in the current list. Handling guidelines Discs and player Use only discs that feature either of the following two logos. Playback of discs may not be possible because of disc characteristics, disc format, recorded application, playback environment, storage conditions, and so on. Road shocks may interrupt disc playback. When using discs that can be printed on label surfaces, check the instructions and the warnings of the discs. Depending on the discs, inserting and ejecting may not be possible. Using such discs may result in damage to this equipment. Do not attach commercially available labels or other materials to the discs. ! The discs may warp making the disc unplayable. ! The labels may come off during playback and prevent ejection of the discs, which may result in damage to the equipment. iPod English Do not leave the iPod in places with high temperatures. Firmly secure the iPod when driving. Do not let the iPod fall onto the floor, where it may become jammed under the brake or accelerator pedal. about iPod settings ! When an iPod is connected, this unit changes the EQ (equalizer) setting of the iPod to off in order to optimize the acoustics.

When you disconnect the iPod, the EQ returns to the original setting. ! You cannot set Repeat to off on the iPod when using this unit. Repeat is automatically changed to All when the iPod is connected to this unit. Incompatible text saved on the iPod will not be displayed by the unit. The following types of discs cannot be used with this unit: ! dualDiscs ! 8-cm discs: Attempts to use such discs with an adaptor may cause the unit to malfunction. Do not connect anything other than a USB storage device. Firmly secure the USB storage device when driving. Do not let the USB storage device fall onto the floor, where it may become jammed under the brake or accelerator pedal. Depending on the USB storage device, the following problems may occur. The storage device may not be recognized.

! Files may not be played back properly. ! The device may cause audible interference when you are listening to the radio. CD-R/RW discs that have not been finalized Do not touch the recorded surface of the discs. Store discs in their cases when not in use. Do not attach labels, write on or apply chemicals to the surface of the discs.

To clean a CD, wipe the disc with a soft cloth outward from the center. Condensation may temporarily impair the player's performance. Let it rest for about one hour to adjust to a warmer temperature. Also, wipe any damp discs off with a soft cloth. Apps START UP APP The application has not started running yet.

Follow the instructions that appear on the screen.) M3u playlist: Not compatible MP3i (MP3 interactive), mp3 PRO: Not compatible Disc Playable folder hierarchy: up to eight tiers (A practical hierarchy is less than two tiers.) Playable folders: up to 99 Playable files: up to 999 File system: ISO 9660 Level 1 and 2, Romeo, Joliet Multi-session playback: Compatible ! Do not leave discs or a USB storage device in any place that is subject to high temperatures. About the fileformat compatibility, refer to the iPod manuals. Audiobook, Podcast: Compatible iPod compatibility This unit supports only the following iPod models. supported iPod software versions are shown below. Older versions may not be supported. iPhone Depending on the generation or version of the iPod, some functions may not be available. Operations may vary depending on the software version of iPod. CAUTION Pioneer accepts no responsibility for data lost on the iPod, even if that data is lost while this unit is used.

1 kHz (MS ADPCM) Packet write data transfer: Not compatible Regardless of the length of blank sections between the songs from the original recording, compressed audio discs play with a short pause between songs. Sequence of audio files The user cannot assign folder numbers and specify playback sequences with this unit. Example of a hierarchy 01 02 USB storage device Playable folder hierarchy: up to eight tiers (A practical hierarchy is less than two tiers.) Playable folders: up to 500 Playable files: up to 15 000 Playback of copyright-protected files: Not compatible Partitioned USB storage device: Only the first partition can be played. There may be a slight delay when starting playback of audio files on a USB storage device with numerous folder hierarchies. ! You cannot use this function with USB MTP. 03 04 Supplemental information Only the first 32 characters can be displayed as a file name (including the file extension) or a folder name. Russian text to be displayed on this unit should be encoded in one of the following character sets: ! unicode (UTF-8, UTF-16) ! A character set other than Unicode that is used in a Windows environment and is set to Russian in the multi-language setting This unit may not work properly depending on the application used to encode WMA files. There may be a slight delay at the start of playback of audio files embedded with image data or audio files stored on a USB storage device that has numerous folder hierarchies. 05 Level 1 Level 2 Level 3 Level 4 : Folder : Compressed audio file 01 to 05: Folder number 1 to 6: Playback sequence Disc Folder selection sequence or other operation may differ depending on the encoding or writing software. USB storage device Playback sequence is the same as recorded sequence in the USB storage device. @@@@2 Put those files into a folder. cAUTION ! @@@@Users of iPod with the Dock Connector should use CD-IU51. For details, consult your dealer. 16 En <QRD3200-A>16 Black plate (17,1) Appendix Additional information Additional information 3 Save the folder containing files on the USB storage device.



[You're reading an excerpt. Click here to read official PIONEER DEH-2600UI user guide](http://yourpdfguides.com/dref/5480827)
<http://yourpdfguides.com/dref/5480827>

However, depending on the system environment, you may not be able to specify the playback sequence. For USB portable audio players, the sequence is different and depends on the player. Streaming via internet, intranets and/or other networks or in other electronic content distribution systems, such as pay-audio or audio-on-demand applications. An independent license for such use is required. For details, please visit <http://www>.

English WMA Russian character chart D: C :A : E, Ę :Л :P :X :Ы D: C :Б :Ж :М :C :Ц :Б D: C :B :З :H :T :Ч :Э D: C :Г : И, Ё :O :Y : Ш, Щ :Ю D: C :Д :K :П :Ф :Б :Я Windows Media is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries. This product includes technology owned by Microsoft Corporation and cannot be used or distributed without a license from Microsoft Licensing, Inc. □Made for iPod” and “Made for iPhone” mean that an electronic accessory has been designed to connect specifically to iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance. MP3 Supply of this product only conveys a license for private, non-commercial use and does not convey a license nor imply any right to use this product in any commercial (i. e. Revenue-generating) real time broadcasting (terrestrial, satellite, cable and/or any other media), broadcasting/ Androidä Android is a trademark of Google Inc. 22 W × 4 (50 Hz to 15 000 Hz, 5 % THD, 4 W load, both channels driven) Load impedance . 62 dB (IEC-A network) Note Specifications and the design are subject to modifications without notice.

Les accessoires électroniques portant la mention « Made for iPod » et « Made for iPhone » ont été conçus pour fonctionner respectivement avec un iPod ou un iPhone et sont certifiés conformes aux exigences d'Apple par le fabricant. □Made for iPod” y “Made for iPhone” significan que un accesorio electrónico ha sido diseñado para ser conectado específicamente a un iPod o a un iPhone, respectivamente, y ha sido homologado por quien lo desarrolló para cumplir con las normas de funcionamiento de Apple. Die Kennzeichnungen „Made for iPod” und „Made for iPhone” bedeuten, dass ein elektronisches Zubehörteil spezifisch zum Anschluss an iPod oder iPhone konstruiert wurde und entsprechend vom Entwickler als die Leistungsstandards von Apple erfüllend zertifiziert wurde. Een lijst van de bestanden (mappen) in de geselecteerde map weergeven 1 Selecteer een map en druk op M. c. Een song in de geselecteerde map afspelen 1 Selecteer een map en houd M. De geselecteerde song of het geselecteerde album wordt na de huidige song afgespeeld. Afhankelijk van de geselecteerde song is het mogelijk dat het einde van de huidige song en het begin van de geselecteerde song (album) worden afgesneden. □Made for iPod” u “Made for iPhone” 03 .



[You're reading an excerpt. Click here to read official PIONEER DEH-2600UI user guide](http://yourpdfguides.com/dref/5480827)
<http://yourpdfguides.com/dref/5480827>