



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for PIONEER DEH-3300UB. You'll find the answers to all your questions on the PIONEER DEH-3300UB in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual PIONEER DEH-3300UB  
User guide PIONEER DEH-3300UB  
Operating instructions PIONEER DEH-3300UB  
Instructions for use PIONEER DEH-3300UB  
Instruction manual PIONEER DEH-3300UB

CD RDS RECEIVER  
AUTORADIO CD RDS  
SINTOLETTORE CD RDS  
REPRODUCTOR DE CD CON RECEPTOR RDS  
CD RDS-EMPFÄNGER  
CD RDS-ONTVANGER  
CD RDS ПРИЕМНИК

**DEH-3300UB**  
**DEH-4300UB**

**Pioneer**

English

Francés

Italiano

Español

Deutsch

Nederlands

Русский

Owner's Manual  
Mode d'emploi  
Manuale d'istruzioni  
Manual de instrucciones  
Bedienungsanleitung  
Handleiding  
Руководство пользователя



[You're reading an excerpt. Click here to read official PIONEER DEH-3300UB user guide](http://yourpdfguides.com/dref/3963579)  
<http://yourpdfguides.com/dref/3963579>

**Manual abstract:**

@@@ middle East , Africa and Oceania. Use in other areas may result in poor reception. @CAUTION This product is a class 1 laser product classified under the Safety of laser products, IEC 60825-1:2007, and contains a class 1M laser module. To ensure continued safety, do not remove any covers or attempt to gain access to the inside of the product. Failure to connect the red lead (ACC) of this unit to a terminal coupled with ignition switch on/off operations may lead to battery drain. ! Remember that if the feature demo continues operating when the car engine is turned off, it may drain battery power.

@@@@@Turning off the unit does not cancel demo mode. @Operating the demo while the ignition switch is set to ACC may drain battery power.

Private households in the member states of the EU, in Switzerland and Norway may return their used electronic products free of charge to designated collection facilities or to a retailer (if you purchase a similar new one). For countries not mentioned above, please contact your local authorities for the correct method of disposal.

By doing so you will ensure that your disposed product undergoes the necessary treatment, recovery and recycling and thus prevent potential negative effects on the environment and human health. Do not allow this unit to come into contact with liquids. electrical shock could result. Also, damage to this unit, smoke, and overheating could result from contact with liquids. Always keep the volume low enough to hear outside sounds.

If the battery is disconnected or discharged, any preset memory will be erased. notes ! Function setting operations are completed even if the menu is cancelled before the operations are confirmed. Should this unit fail to operate properly, please contact your dealer or nearest authorized PIONEER Service Station. The tuner frequencies on this unit are allocated for use in Western Europe, Asia, the Operating this unit Head unit Handle gently when removing or attaching the front panel. Keep the front panel out of direct sunlight and high temperatures.

! To avoid damaging the device or vehicle interior, remove any cables and devices attached to the front panel before detaching it. Removing the front panel to protect your unit from theft 1 Press the detach button to release the front panel. 2 Push the front panel upward and pull it toward you. Turning the unit off 1 Press and hold S (SRC/OFF) until the unit turns off. It flashes when a song/album related to the song currently playing is selected from iPod. Track or folder repeat is on. For safety reasons, park your vehicle when removing the front panel. Note When this unit's blue/white lead is connected to the vehicle's auto-antenna relay control terminal, the vehicle's antenna extends when this unit's source is turned on. Use an optional Pioneer USB cable (CD-U50E) to connect the USB audio player/USB memory as any device connected directly to the unit will protrude out from the unit and may be dangerous. 3 Always keep the detached front panel in a protection device such as a protection case.

Re-attaching the front panel 1 Slide the front panel to the left. Make sure to insert the tabs on the left side of the head unit into the slots on the front panel. 2 Press the right side of the front panel until it is firmly seated. If you cannot attach the front panel to the head unit successfully, make sure that you are placing the front panel onto the head unit correctly. Forcing the front panel into place may result in damage to the front panel or head unit. Turning the unit on 1 Press S (SRC/OFF) to turn the unit on. While pressing and holding c or d, you can skip stations. Seek tuning starts as soon as you release c or d. REGION (regional) When AF is used, the regional function limits the selection of stations to those broadcasting regional programs. LOCAL (local seek tuning) Local seek tuning lets you tune in to only those radio stations with sufficiently strong signals for good reception.

FM: OFF--LEVEL 1--LEVEL 2--LEVEL 3--LEVEL 4 MW/LW: OFF--LEVEL 1--LEVEL 2 The highest level setting allows reception of only the strongest stations, while lower levels allow the reception of weaker stations. PTY SEARCH (program type selection) You can tune in to a station using PTY (program type) information. When a station is found, its program service name is displayed. for PTY (program type ID code) information , refer to the previous page.

The program of some stations may differ from that indicated by the transmitted PTY.

If no station is broadcasting the type of program you searched for, NOT FOUND is displayed for about two seconds and then the tuner returns to the original station. Receiving traffic announcements Regardless of the source you are listening to, you can receive traffic announcements automatically with TA (traffic announcement standby). 4 Press TA/NEWS while a traffic announcement is being received to cancel the announcement. the tuner returns to the original source but remains in the standby mode until TA/NEWS is pressed again. Using news program interruption When a news program is broadcast from a PTY code news station, the unit automatically switches to the news broadcast station.

When the news program ends, reception of the previous program resumes. 1 Press and hold TA/NEWS to turn news program interruption on or off. A news program can be canceled by pressing TA/ NEWS. Note This unit's AF (alternative frequencies search) function can be turned on and off. AF should be off for normal tuning operation (refer to the next page). 1 When you find a station that you want to store in memory, press one of the preset tuning buttons (1 to 6) and hold until the preset number stops flashing. @@@@ # If MW/LW band is selected , only BSM or LOCAL is available. @@@@ ejecting a CD/CD-

R/CD-RW 1 Press h. @@@@ @@@@ To turn random play on or off. Selecting a repeat play range to cycle between the following: 1 Press 6/ CD/CD-R/CD-RW ! FOLDER Repeat the current folder Playing tracks in random order to turn random play on or off.

1 Press 5/ Tracks in a selected repeat range are played in random order. Playing a song in the selected category 1 When a category is selected, press and hold M. Note Disconnect USB storage devices from the unit when not in use. Selecting a repeat play range to cycle between the following: 1 Press 6/ ! oNE Repeat the current song ! ALL Repeat all songs in the selected list Playing all songs in random order (shuffle all) to turn shuffle all on. 1 Press 5/! When the control mode is set to CTRL iPod/CTRL APP, shuffle play is on. Depending on the version of iTunes used to write MP3 files to a disc or media file types, incompatible text stored within an audio file may be displayed incorrectly. ! Text information items that can be changed depend on the media. The iPod cannot be turned on or off when the control mode is set to CTRL AUDIO. ! Disconnect headphones from the iPod before connecting it to this unit. Playing songs related to the currently playing song You can play songs from the following lists.



[You're reading an excerpt. Click here to read official PIONEER](#)

[DEH-3300UB user guide](#)

<http://yourpdfguides.com/dref/3963579>

Song list of the currently playing album · ALBUM Plays a song from the album currently being played. ! GENRE Plays an album from the genre currently being played. The selected song/album will be played after the currently playing song. The selected song/album may be canceled if you operate functions other than link search (e. Depending on the song selected to play, the end of the currently playing song and the beginning of the selected song/album may be cut off.

Operating this unit's iPod function from your iPod You can listen to the sound from your iPod applications using your car's speakers, when CTRL APP is selected. This function is not compatible with the following iPod models. iPod 5th generation APP mode is compatible with the following iPod models. @@ !

CTRL APP Play back the sound from your iPod applications. ! @@@@ALBUMS Play back songs from a randomly selected album in order.

@@FASTER Playback at a speed faster than normal ! nNORMAL Playback at normal speed ! SLOWER Playback at a speed slower than normal 3 Press M.

@@@@@@@@-- The browse function cannot be operated from this unit. @@@@@@@@@@ cut-off frequency (Cut-off frequency display flashes.

)--Output level (Output level display flashes. @@ ! Settings are based on the FM volume level, which remains unchanged. ! The MW/LW volume level can also be adjusted with this function. ! When selecting FM as the source, you cannot switch to SLA. @@@@@@It may be preferable to set the tuning step to 50 kHz when AF is on. ! The tuning step remains at 50 kHz during manual tuning. @@@@@@To turn the plug and play function on or off.

@@@@@To turn the ever scroll on or off. TITLEconnectors with insulating tape. -- Do not shorten any cables. @@@@@@If not, keep the Audio Mute lead free of any connections. @@In this case, be sure to connect to both connectors. @@Do not connect anything to the green and green/black leads. Do not use unauthorized parts as this may cause malfunctions. ! @@ ! @@-- it may cause injury to a passenger as a result of a sudden stop. @@ ! @@@@1 To power

cord input 2 Depending on the kind of vehicle, the function of 3 and 5 may be different. In this case, be sure to connect 4 to 5 and 6 to 3.

In another type of vehicle, never connect 9 and b. This unit can be properly installed using either front-mount or rear-mount installation. Use commercially available parts when installing. Perform these connections when using the optional amplifier. If there is enough space, use the mounting sleeve that came with the vehicle.

1 Nut 2 Firewall or metal support 3 Metal strap 4 Screw 5 Screw (M4 x 8) # Make sure that the unit is installed securely in place. An unstable installation may cause skipping or other malfunctions. 1 Determine the appropriate position where the holes on the bracket and the side of the unit match. Tighten two screws on each side. For details, refer to Removing the front panel to protect your unit from theft and Re-attaching the front panel on page 5.

Cause Action You did not per- Perform operation form any opera- again. Select the repeat The repeat play Depending on play range again. Range changes the repeat play unexpectedly. Range, the selected range may change when selecting another folder or track, or when fast forwarding/reversing. a subfolder is not played back. Subfolders cannot be played when FOLDER (folder repeat) is selected. Select another repeat play range. A0 to a different source, then back to connected, this unit changes the EQ (equalizer) setting of the iPod to off in order to optimize the acoustics. You cannot set Repeat to off on the iPod when using this unit. Repeat is automatically changed to All when the iPod is connected to this unit.

Incompatible text saved on the iPod will not be displayed by the unit. Playable folder hierarchy: up to eight tiers (A practical hierarchy is less than two tiers. Pioneer accepts no responsibility for data lost on the iPod even if that data is lost while using this unit. Playback of copyright-protected files: Not compatible

Partitioned USB storage device: Only the first partition can be played. @@@@@@Serious scratches can lead to playback problems on this unit. @@To prevent this, we recommend you refrain from using DualDisc with this unit. Please refer to the information from the disc manufacturer for more detailed information about DualDiscs. The user cannot assign folder numbers and specify playback sequences with this unit. Only the first 32 characters can be displayed as a file name (including the file extension) or a folder name. @@ unicode (UTF-8, UTF-16) ! @@@@@@This unit supports only the following iPod models.

supported iPod software versions are shown below. Older versions may not be supported. 2) Depending on the generation or version of the iPod, some functions may not be available. Playable folder hierarchy: up to eight tiers (A practical hierarchy is less than two tiers. ) Playable folders: up to 99 Playable files: up to 999 File system: ISO 9660 Level 1 and 2, Romeo, Joliet Multi-session playback: Compatible Packet write data transfer: Not compatible

Regardless of the length of blank sections between the songs from the original recording, compressed audio discs play with a short pause between songs. Disc Folder selection sequence or other operation may differ depending on the encoding or writing software. 2 Put those files into a folder. However, depending on the system environment, you may not be able to specify the playback sequence. For USB portable audio players, the sequence is different and depends on the player. "Made for iPod" and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards.

Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. MP3 Supply of this product only conveys a license for private, non-commercial use and does not convey a license nor imply any right to use this product in any commercial (i. e. Revenue-generating) real time broadcasting (terrestrial, satellite, cable and/or any other media), broadcasting/streaming via internet, intranets and/ or other networks or in other electronic content distribution systems, such as pay-audio or audio-on-demand applications. WMA Windows Media and the Windows logo are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries. This product includes technology owned by Microsoft Corporation and cannot be used or distributed without a license from Microsoft Licensing, Inc. 22 W x 4 (50 Hz to 15 000 Hz, 5 % THD, 4 W load, both channels driven) Load impedance . Note Specifications and the design are subject to modifications without notice. Knippert wanneer een song of album dat gerelateerd is met de nu spelende song in de iPod wordt geselecteerd. Een lijst van de bestanden (mappen) in de geselecteerde map weergeven 1 Selecteer een map en druk op M.

Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. MP3 Supply of this product only conveys a license for private, non-commercial use and does not convey a license nor imply any right to use this product in any commercial (i. e. Revenue-generating) real time broadcasting (terrestrial, satellite, cable and/or any other media), broadcasting/streaming via internet, intranets and/ or other networks or in other electronic content distribution systems, such as pay-audio or audio-on-demand applications. WMA Windows Media and the Windows logo are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries. This product includes technology owned by Microsoft Corporation and cannot be used or distributed without a license from Microsoft Licensing, Inc. 22 W x 4 (50 Hz to 15 000 Hz, 5 % THD, 4 W load, both channels driven) Load impedance . Note Specifications and the design are subject to modifications without notice. Knippert wanneer een song of album dat gerelateerd is met de nu spelende song in de iPod wordt geselecteerd. Een lijst van de bestanden (mappen) in de geselecteerde map weergeven 1 Selecteer een map en druk op M.

Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. MP3 Supply of this product only conveys a license for private, non-commercial use and does not convey a license nor imply any right to use this product in any commercial (i. e. Revenue-generating) real time broadcasting (terrestrial, satellite, cable and/or any other media), broadcasting/streaming via internet, intranets and/ or other networks or in other electronic content distribution systems, such as pay-audio or audio-on-demand applications. WMA Windows Media and the Windows logo are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries. This product includes technology owned by Microsoft Corporation and cannot be used or distributed without a license from Microsoft Licensing, Inc. 22 W x 4 (50 Hz to 15 000 Hz, 5 % THD, 4 W load, both channels driven) Load impedance . Note Specifications and the design are subject to modifications without notice. Knippert wanneer een song of album dat gerelateerd is met de nu spelende song in de iPod wordt geselecteerd. Een lijst van de bestanden (mappen) in de geselecteerde map weergeven 1 Selecteer een map en druk op M.



[You're reading an excerpt. Click here to read official PIONEER](#)

[DEH-3300UB user guide](#)

<http://yourpdfguides.com/dref/3963579>

*c. Een song in de geselecteerde map afspelen 1 Selecteer een map en houd M. De geselecteerde song of het geselecteerde album wordt na de huidige song afgespeeld. de geselecteerde song of het geselecteerde album kan worden geannuleerd als u een andere functie dan gekoppeld zoeken gebruikt (bijvoorbeeld snel vooruit of achteruit spoelen). Afhankelijk van de geselecteerde song is het mogelijk dat het einde van de huidige song en het begin van de geselecteerde song (album) worden afgesneden. .*



[You're reading an excerpt. Click here to read official PIONEER DEH-3300UB user guide](http://yourpdfguides.com/dref/3963579)  
<http://yourpdfguides.com/dref/3963579>